


OPERATION GUIDE

 **SPRAYMATE**

TORNADO TOOL ONLY

4-Gallon Battery Powered Backpack
Sprayer with Battery Adapters

Model #: SMSASM-2TO

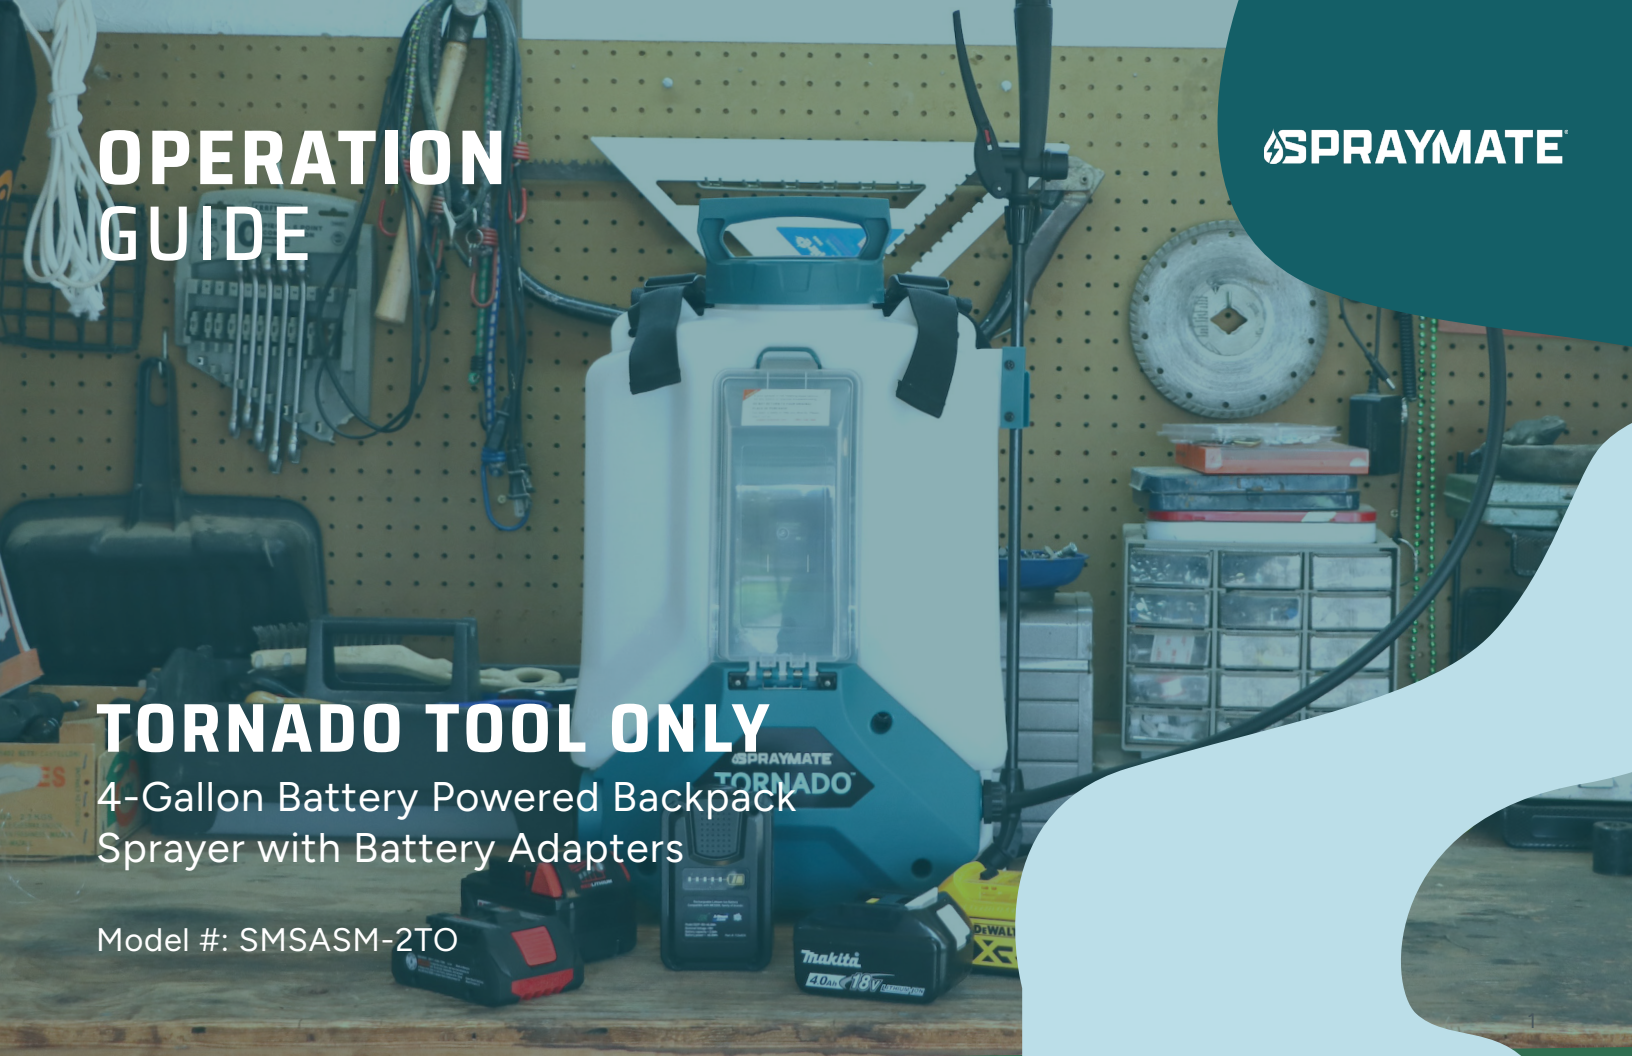



ATTENTION

Please read the following information carefully. User must read and understand the entire manual before operating the sprayer. Failure to follow instructions or improper use could lead to sprayer failure and possible serious injuries.

- **DO NOT RETURN SPRAYER TO STORE.** If you experience issues or have questions, contact our Support Team M-F 9am-5pm EST at 1-803-339-2500 or email support@wessol.com.
- Never spray flammable, caustic, acidic, heat, pressure, or gas producing chemicals.
- Always read and follow chemical manufacturer's instructions before use with this sprayer as some chemicals may be hazardous when used with this sprayer.
- Never leave chemicals or solutions sitting in your sprayer after using.
- After using sprayer with chemicals, it is important to spray with fresh water for 3-5 minutes to ensure residual chemicals in the gun, wand, tank, pump, and hose are cleaned out.
- Read and follow all instructions and cautions on label of products used in this sprayer.
- Do not store your sprayer in extremely high temperatures. Heat can lead to the build-up of pressure within the sprayer, resulting in a possible explosion.
- Do not try to make modifications to the sprayer. Always use SprayMate® branded replacement parts from the manufacturer.
- Do not use batteries that are wet or have been damaged.
- Inspect sprayer hose, power knob, wand, and gun for damage or loose connections before each use.
- Do not lift or carry the sprayer by the hose, or wand. Carry by the handle only.
- Only spray when the air is calm

(no wind or air movement) to prevent chemical spray from drifting into unintended areas.

- Keep sprayer and all chemicals out of the reach of children.
- Remove chemicals and thoroughly clean the sprayer after each use. Failure to clean the sprayer may cause contamination of subsequent applications, will cause premature spray wear, and void the sprayer warranty.

NEVER spray petroleum oil distillates, or acetone through your sprayer. If using essential oils, thoroughly clean the sprayer after each use with warm, soapy water.

NOTES

- The sprayer may have residual water in it when first opened. This is due to quality testing every sprayer undergoes before leaving our factory.
- Some parts may be located under the tank lid or in the battery compartment when first assembling the sprayer.
- **THIS SPRAYER IS DESIGNED TO OPERATE WITH ONLY SprayMate® BRANDED BATTERIES AND ADAPTERS. ANY OTHER BATTERIES COULD CAUSE SERIOUS HARM OR INJURY TO THE OPERATOR AND SERIOUS DAMAGE TO THE SPRAYER.**

This product contains chemicals, including lead, known to the state of California to cause birth defects and other reproductive harm.



When using chemicals, always wear protective clothing, including respiratory protection masks, gloves, eye protection, etc.



Do not dispose of Lithium-ion batteries with household waste; recycle where facilities exist.

OPERATING

- Do not allow familiarity with products to make you careless. Remember that a single moment of carelessness is sufficient to cause serious injury.
- Always wear eye protection with side shields when handling or operating this sprayer. Failure to do so could result in serious injury from chemical contact or flying dirt or debris.
- The Lithium-ion battery pack can be used in temperatures down to 32°F. When operating in cold temperatures, put the battery pack in the battery compartment and use the sprayer in a light duty application. After about a minute the battery pack will warm up and begin operating normally.
- Always use the correct power setting for your application. Using the correct PSI and flow rate will result in a safer and more thorough treatment. For calibration resources please contact SprayMate® technical support. (Note: Always refer to local, state, and federal laws

and regulations regarding your application.)

- Do not use the sprayer if the power switch is not functioning correctly. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- Remove battery before making any adjustments, changing accessories, or storing the sprayer. Disconnect the sprayer from the power source by removing the battery pack. These preventative safety measures reduce the risk of starting the sprayer accidentally.

STORING

- Store sprayer out of reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the sprayer. Power tools are dangerous in the hands of untrained users.
- Maintain sprayers and accessories. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the sprayers

SAFETY

- Use the sprayer and accessories in accordance with these instructions, taking into consideration the working conditions and the work to be performed. Use of this sprayer for applications that it was not intended for could result in a hazardous situation.
- Keep handles and lift points dry, clean and free from oil and grease. Slippery handles and lift points do not allow for safe handling and control of the sprayer.
- Risk of fire or explosion: Never use this sprayer with liquids such as gasoline, ethanol, methanol, or any other flammable or gas producing chemicals. Do not use sprayer around sparks, flame, or smoke. Failure to adhere to these instructions may cause ignition, resulting in potential injury and damage to property.
- To reduce the risk of fire, personal injury, and product damage from a short circuit, never immerse the sprayer, battery, or charger in fluids. Do not place or store sprayer where it could fall or be pulled into a tub or sink. Corrosive or conductive fluids, such as seawater, certain industrial chemicals, and bleach or bleach containing products, etc., can cause a short circuit.
- Electric shock hazard: Never spray toward electrical outlets.
- Spray area must be well ventilated to avoid hazardous fume build-up. Always refer to the product label of the chemical being used for safety instructions and proper use practices.
- Avoid spraying on windy days. Spraying in windy conditions could cause chemicals to be blown onto persons, plants, or objects that are not intended to be sprayed.

DO NOT RETURN SPRAYER TO STORE, if you experience problems or have questions contact our Customer Support, M-F 9am-5pm EST at **+1 (803) 339-2500**, or **email: support@wessol.com**, or find more information at **buyspraymate.com/pages/troubleshoot**.

SAFETY CONT.

- Do not store chemicals in the tank. Chemicals can degrade seals and hoses. Drain and clean sprayer after each use. Failure to do so may void the sprayer warranty.
- Remove gloves before handling battery pack. Chemicals may be damaging to plastics.
- Thoroughly inspect the interior, exterior, and all components of the sprayer before each use. Check for cracked and deteriorated hoses, leaks, clogged nozzles and missing or damaged parts. If damaged, ensure the sprayer is repaired before use. Many accidents are caused by poor maintenance.
- Always remove the battery pack from the sprayer before performing any maintenance, storing or draining of the sprayer.
- Do not eat or smoke while handling or operating the sprayer. Refer to the product label of the chemical being used for user safety practices.
- Do not use the battery compartment for storage.
- Always use common sense and be cautious when using the sprayer. It is not possible to anticipate every situation that could result in a dangerous outcome. Do not use this sprayer if you do not understand these operating instructions or if you feel the work is beyond your capability.
- Maintain labels and nameplates. These carry important information. If unreadable or missing, contact SprayMate® Support.

Manuals are subject to updates. Scan the QR code to view the most updated manual online!



or visit: www.buyspraymate.com/pages/operation-guides

REGISTER YOUR SPRAYER!

To take advantage of the 1-year Limited Warranty from WESSOL, LLC. Register your sprayer at the website below:

www.buyspraymate.com/pages/register

Please read and follow this manual carefully to ensure that you get the most out of your new sprayer. If you need assistance with the assembly or operation of your sprayer, please don't hesitate to contact WESSOL, LLC via the support methods below:

www.buyspraymate.com

support@wessol.com

+1 803.339.2500

LET'S
GET
SPRAYING!

TABLE OF CONTENTS

ABOUT		page 7-8
1.1	specifications.....	page 7
1.2	what's in the box.....	page 8
SET UP		page 9-14
2.1	sprayer assembly.....	page 9
2.2	spraying.....	page 13
2.3	aftercare.....	page 14
TROUBLESHOOT		page 15-19
3.1	common solutions.....	page 16
3.2	replacement parts.....	page 17
3.3	warranty.....	page 19



WHAT ARE THE CAPABILITIES OF YOUR SPRAYER?

A SprayMate® is a highly efficient sprayer that is suitable for spraying many kinds of water-soluble chemicals.

This includes fertilizers, pesticides, cleaning products, etc. With the included battery adapters, you can now power your sprayer using Milwaukee®, DeWalt®, Makita®, or Bosch® power tool batteries already in your home. The Tornado results in 2-3x more efficiency than a manual sprayer. This 4-gallon unit sprays distances up to 25 feet.

SprayMate® Tornado Specifications

Model Number	SMSASM-2TO	Tank Capacity	4 gallons
Adapter Compatibility	Milwaukee®, DeWalt®, Makita®, Bosch®	Flow Rate	0.20 gal/min
Pump Type	Diaphragm	Pump Life	500 hours
Seals	Viton™	Pressure	40 psi
Distance	25-feet	Total Output	Up to 30-gallons/charge



WHAT'S IN THE BOX?

#	Name	#	Name	#	Name
1	4-Gallon Tank	6	Makita® Battery Adapter	11	Adjustable Nozzle
2	Tank Strainer	7	Bosch® Battery Adapter	12	0° Pin Stream Nozzle
3	Tank Lid	8	5-Ft. UV-Resistant Hose	13	80° Fan Nozzle
4	Backpack Straps	9	Bottom Holster	14	Inline Spray Handle
5	Milwaukee®/Dewalt® Battery Adapter	10	45° Fan Nozzle w/ 45° Nozzle Holder	15	Carbon Fiber Wand

STEP 1

ASSEMBLING YOUR SPRAYER

Tools Needed: Phillips head screwdriver, Pliers

1




Begin by inserting the bottom strap (4) through the designated hole at the bottom of the tank (1) blow mold.

2



Once inserted, tilt the buckle upward and insert on the underside of the buckle and pull through.

3

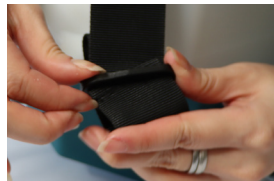

Once pulled through, insert again through the top side of the buckle and pull through.

4



The bottom strap can then be tightened once attached. Repeat Steps 1-4 on the other side.

5



Slide the top strap through the designated blow mold opening found on top of the tank.

6



Insert the top strap through the underside of the buckle and pull through completely.

7



Loop the strap back through the opening located on the upper side of the buckle.

8



Tighten once inserted by pulling upward on the strap and repeat on the other side.

9



To connect the padded strap to the lower strap, begin by inserting the lower strap through the upper side of the buckle.

10



Loop the strap over and through the buckle, the strap should come out underneath the tab on the buckle. Pull through to tighten.

11



Place the bottom holster (9) on the proper location on tank. While holding the holster, place a nut on one side of the hexagonal slot and screw the

bolt through the other side until it fastens into the nut. Repeat for other slot on bottom holster. The wand can be placed in the holster until ready to spray.

12



Open the battery door to reveal the battery holster. Using a Philip's head screwdriver, remove the screws on the four corners.

13




Flip the battery holster over to reveal the wires. Using pliers, gently pinch the top of the connectors to disconnect them from the holster.

14



Select one of the three included battery adapters depending on what brand of tool batteries you have.

15

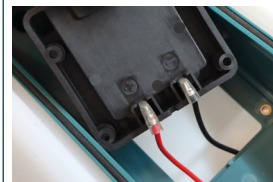

Connect the wires to the back of the battery adapter. Make sure the red wire goes into the positive (+) and the black wire into the negative (-).

16



Gently tuck the wires back into the space between the tank and holster and put the battery adapter in place.

17



Secure the battery adapter in place with the screws.

18



Attach the hose (8) by threading it onto the inline spray handle (13).

19



Attach the carbon fiber spray wand (14) onto the inline spray handle. Slide the wand gasket down to meet the threads on the inline handle.

20



Twist the wand collar onto the threads of the inline handle to secure the spray wand in place.

21



Slide the nozzle of your choice onto the carbon fiber wand. Adjust the wand gasket so it meets the threads on the nozzle.

22



Twist the wand collar onto the threads on the nozzle holster to secure it in place.

23



To change the nozzle included with your sprayer, begin by unscrewing the nozzle collar from the 45° adapter base.

24



Remove the nozzle tip along with the o-ring gasket from inside the nozzle collar.

25



Select a nozzle tip and place it inside the nozzle collar.

26



Place the o-ring gasket inside the nozzle collar on top of the nozzle tip.

27



Screw the assembled nozzle collar back onto the 45° adapter base.

STEP 2

PREPARING TO SPRAY

1. In a separate container, prepare the solution you want to spray according to the manufacturer's instructions. Open the tank lid and carefully pour the solution through the intake filter. Securely tighten the tank lid.
2. Determine which nozzle is appropriate for your project. Attach the nozzle by threading it onto the carbon fiber wand.
3. Insert your battery into the battery holster located underneath the battery door cover and snap the cover in place.
4. Turn the pump on by flipping the power switch on the side of the unit.
5. Begin spraying by squeezing the trigger on the in-line spray handle.

Priming your sprayer

NOTE: Although rare, when spraying for the first time or after storing the sprayer for an extended amount of time, the sprayer may need help priming. If the sprayer turns on and you can hear the pump running, but no liquid is passing through the sprayer, you will need to manually prime the sprayer according to the steps below:

1. With the sprayer off, remove the battery and make sure the battery cover is shut.
2. Remove the tank lid and take the tank strainer out to reveal the inside of your sprayer tank.
3. Locate the inlet filter at the bottom of the sprayer tank (See diagram 3 on page 15 for a visual representation). Gently wiggle the inlet filter until it comes apart from the pump connection. Set aside.
4. Using a garden hose or similar delivery method, rapidly run clean water into the connection where the inlet filter was.
5. Reinstall the inlet filter with the mesh screen facing the bottom of the tank, fill the sprayer with some water, and insert a charged battery. Test the sprayer by activating the spray trigger.

AFTERCARE

Sprayer maintenance






CAUTION: Failure to properly rinse out the sprayer may cause chemical residue build-up that can clog or damage internal and external components. Leaving chemical liquids in the sprayer when not in use can lead to premature wear and voiding of the warranty. Never store the sprayer with chemical inside.

1. With the sprayer off, dispose of extra product based on the manufacturer's instructions. Rinse out any residual solution in the spray tank with warm soapy water. Then, spray fresh water through the sprayer for 3-5 minutes to clear the sprayer of chemicals.
2. Disconnect the spray gun from the hose and allow the hose to hang down towards the ground; draining the hose of liquid.
3. Thoroughly dry the sprayer tank and clear the nozzles and inlet filter of any build-up.
4. Store the sprayer in a dry, clean, and shaded place to protect it from extreme heat or frost.

Cleaning the inlet filter

NOTE: It is recommended you clean your inlet filter at least every other time your sprayer is used. Buildup at the inlet filter can cause damage to the pump and reduce spraying pressure.

1. With the sprayer off and battery removed, take off the tank lid.
2. Lift the tank strainer out of the mouth of the sprayer tank and set aside.
3. Reach into the sprayer tank and gently pry the inlet filter from the pump connection at the bottom of the tank.
4. Rinse the inlet filter with fresh water and get rid of any debris or particles.
5. Taking a clean cloth, wipe down the filter screen and dry the inlet filter. Reassemble the sprayer with the inlet filter and store the unit in a protected area

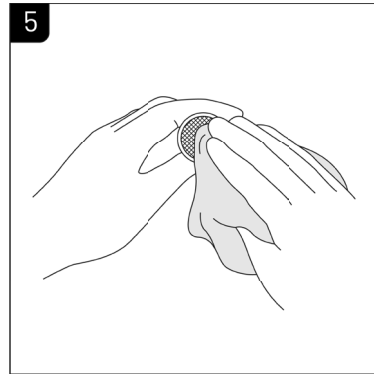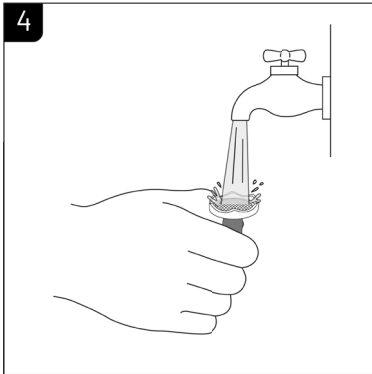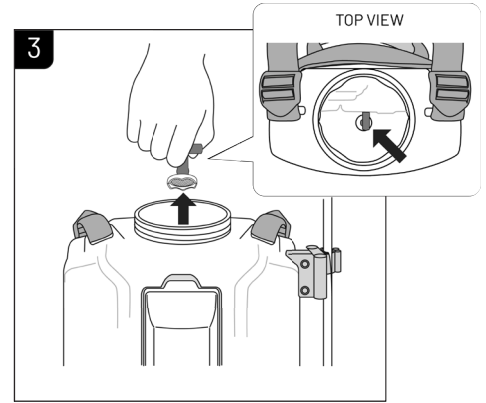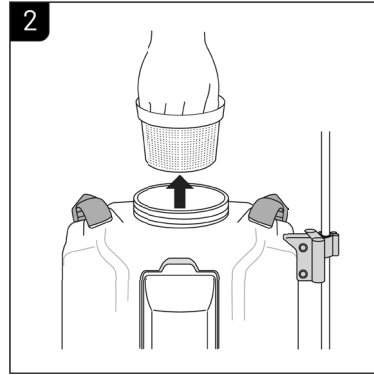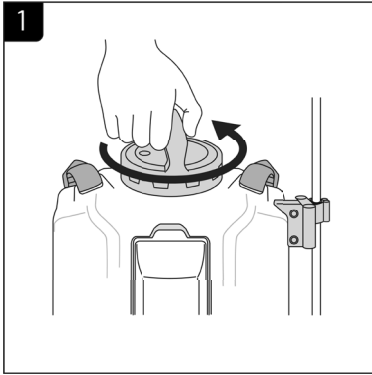

TROUBLESHOOTING YOUR SPRAYER

To contact Technical Support, message support@wessol.com or call 1 (803) 339-2500

PROBLEM	POSSIBLE REASON(S)	SOLUTION
Sprayer is not turning on and there is no sound coming from the sprayer.	Dead battery	Charge the battery. If the battery will not charge, test the charger or contact Support for a replacement if under warranty.
	Loose/worn connections on power switch	Remove front plate. Using pliers, move all three wires on the power switch over to the neighboring side, to the extra set of wire contacts.
	Defective micro-switch	Purchase replacement part or contact Support for help.
	Defective circuit board	Purchase replacement part or contact Support for help.
Leaks from gun/nozzle area.	Loose connection	Ensure spray handle is fully tightened onto threaded end of the hose.
	Missing or worn gasket	Contact Support or go to buyspraymate.com to purchase replacement gaskets.
Clogged pump / hose / gun / wand / nozzle.	Not rinsing tank / pump / hose / gun / nozzle(s) with water after use.	Rinse sprayer thoroughly with warm, soapy water after each use.
Leak from sprayer tank	Loose hose-pump connection	Open front cover plate and identify the hose clamps. Use a flathead screwdriver to tighten.
	Damage on tank	Replace the sprayer tank.
	Damage on pump	Replace the pump.
Pump makes a sound when sprayer is on and output is limited	Clog in filter or nozzle	Check filter or nozzles for clog. Using warm water, thoroughly clean the components.
	Clog in pump	Open the pump and clean. Contact Support for assistance.



SMRATN



FZRASV




FZRADK




SMAASQ



SMRASU



SMRASP

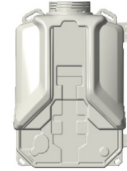

FZRAGU



FZRABW



SMRASR



SMRATQ



FZRACM



SMRASS



SMRAEK



FZAATB



FZAATC



FZAATD



FZAATA

REPLACEMENT PARTS & ACCESSORIES

Visit buyspraymate.com to view
and purchase parts.

SKU	Name	SKU	Name
SMRATN	Inline Spray Handle	SMRATQ	Diaphragm Pump
FZRASV	Nozzle Kit	FZRACM	Inlet Filter
FZRADK	Carbon Fiber Wand	SMRASS	Top Holster
SMAASQ	Backpack Straps	SMRAEK	Bottom Holster
SMRASU	5-Ft. UV-Resistant Hose	FZAATB	Milwaukee/Dewalt Adapter
SMRASP	Front Cover Plate	FZAATC	Makita Adapter
FZRAGU	4-Gallon Tank	FZAATD	Bosch Adapter
FZRABW	Tank Strainer	FZAATA	FlowZone Battery Holster
SMRASR	Tank Lid w/ Wand Holster		



WESSOL, LLC

LIMITED WARRANTY

WARRANTY COVERAGE

WESSOL, LLC warrants to the original purchaser that the SprayMate® product will function as intended under normal use and consistent maintenance, subject to certain limitations and exclusions. At the discretion of WESSOL, LLC, we will repair or replace any parts found to be defective in material or workmanship without charge, apart from shipping and handling costs, during the covered warranty period.

WARRANTY PERIOD

The warranty period will begin from the date of retail purchase and exist for one (1) year, regardless of when the unit is placed in service. The warranty period is not extended if we opt to repair or replace the product in question.

WARRANTY CLAIMS

WESSOL, LLC reserves the right to require the return of the defective product, proof of purchase, and established product registration to file a claim under this warranty.

If the product fails to function as intended **DO NOT RETURN IT TO THE STORE**, call our Technical Support hotline at **+1 803-339-2500**,

or email warranty@wessol.com

PRODUCT REGISTRATION

All sprayers purchased from FlowZone or an authorized distributor must be registered online to validate the warranty and allow for warranty claim processing. Sprayers can be registered at buyspraymate.com/pages/register.

EXCLUSIONS AND LIMITATIONS

WESSOL, LLC only warrants products purchased from authorized distributors. Products purchased from unauthorized resellers or distributors are not subject to warranty services.

The limited warranty does not cover damages, loss, or injury resulting from transportation, storage, accident, improper use, neglect, modifications, normal wear, or operation not in accordance with the instruction manual. WESSOL, LLC reserves the right to change the design or specifications of any product without obligation to modify previously produced units.

ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY

AND FITNESS FOR CONSUMER USE, ARE LIMITED TO THE DURATION SPECIFIED ABOVE. WESSOL, LLC'S LIABILITY IS LIMITED SOLELY TO THE REPAIR OR REPLACEMENT OF THE NON-FUNCTIONING PRODUCT OR PART. WESSOL, LLC EXCLUDES LIABILITY UNDER THIS WARRANTY FOR ANY AND ALL INCIDENTAL AND CONSEQUENTIAL LOSS OR DAMAGE.

In no event shall WESSOL, LLC be liable for any incidental, special, consequential or punitive damages, or for any costs, attorney fees, expenses, losses or delays alleged to be as a consequence of any damage to, failure of, or defect in any product including, but not limited to, any claims for loss of profits.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so these limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may have other rights which vary from state to state.



To file a warranty claim, visit:
buyspraymate.com/pages/warranty



SPRAYMATE®

buyspraymate.com
hello@buyspraymate.com