

**DX Series 72 in. W x 21 in. D x 65 in. H
Powder-Coated Steel Hutch
with Power Tool Rack Accessory
and
17-Drawer Roller Cabinet Combination**

DX Series 72 in. Extreme Power Workstation & 17-Drawer Roller Cabinet

Combination Models:

DX722118HR


DX7218HR

Extreme Tools, Inc.
740 Frontenac Road
Naperville, Illinois 60563
630.369.9303

www.ExtremeTools.com

Sales@extremetools.net
CustomerService@extremetools.net

Extreme Power Workstation Hutch Parts for DX722101HC, DX7201HC

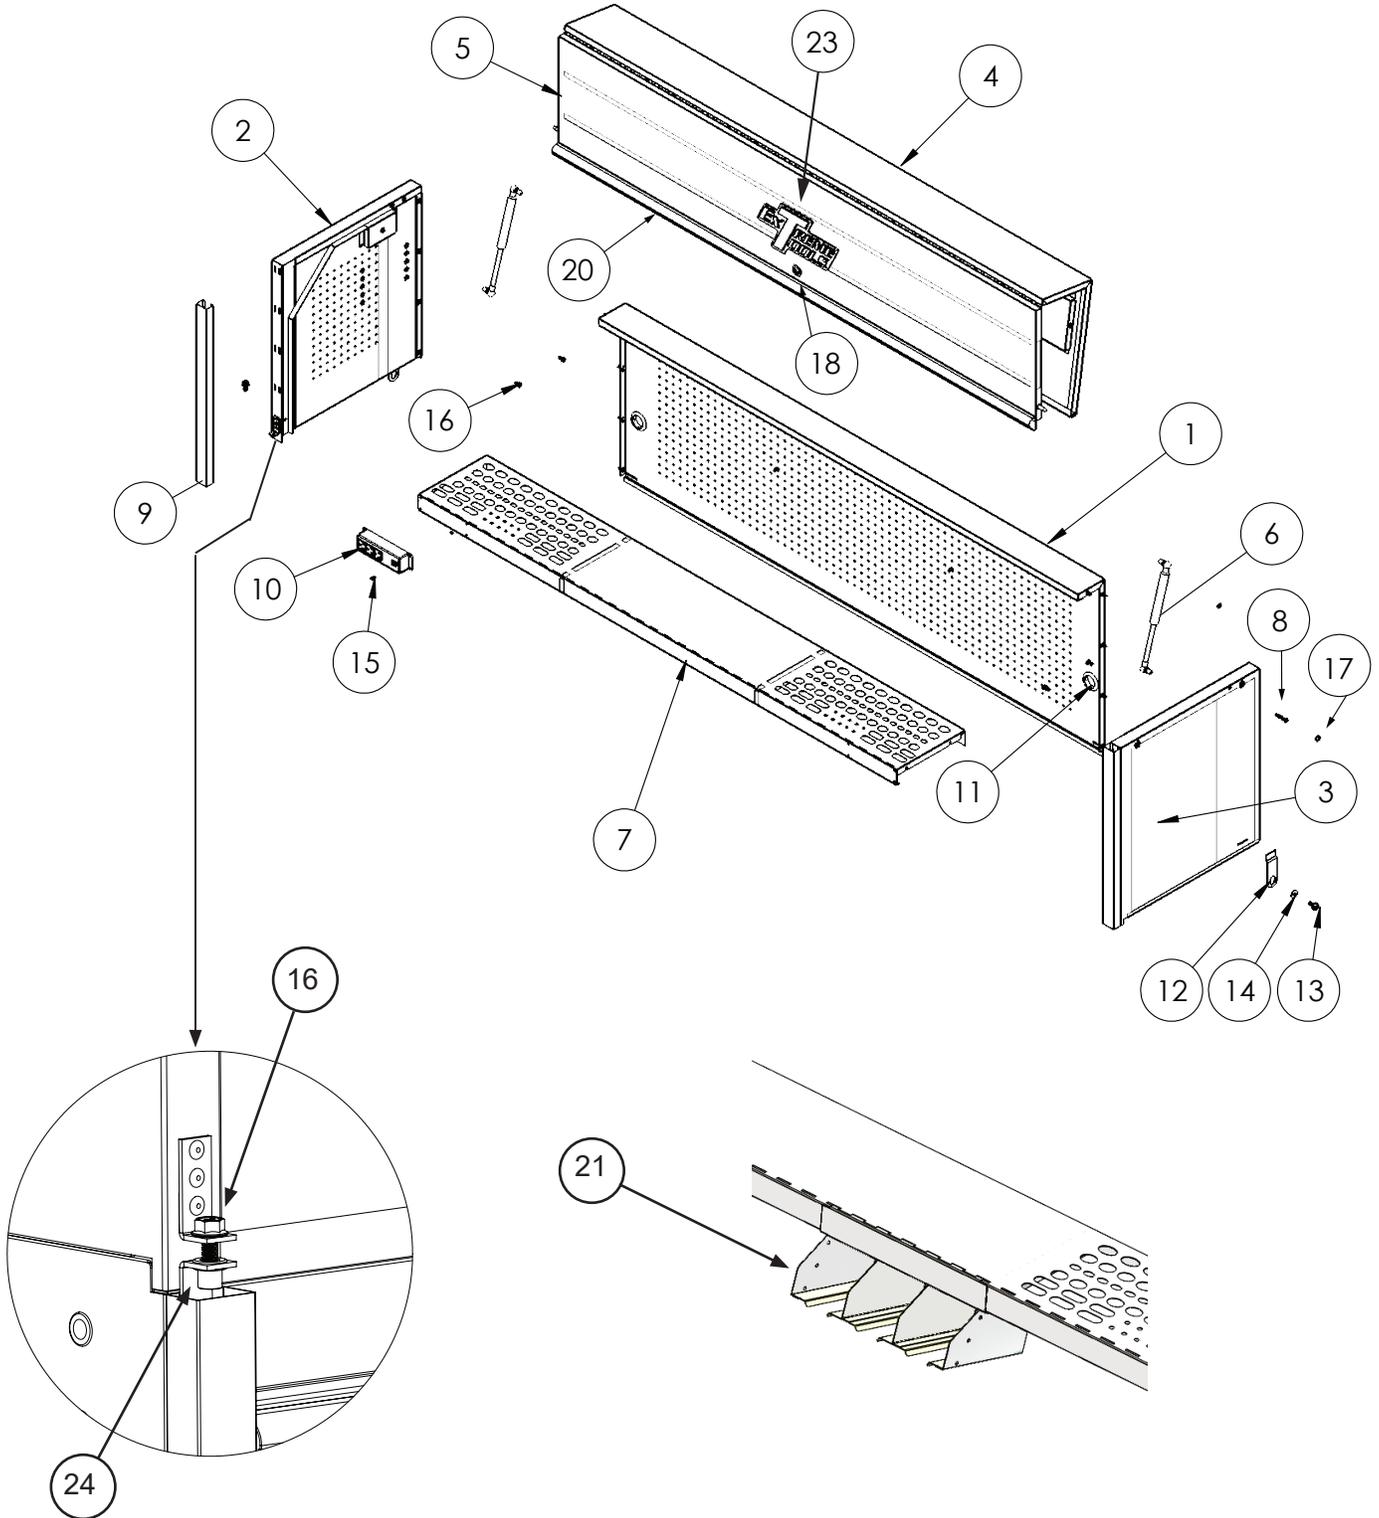

Replacement keys may be ordered using the code that appears on the face of the lock.

To order replacement parts, have the part number, tool box color and quantity ready. If under warranty, the serial number is **REQUIRED** to get replacement parts.

Not all parts are available under warranty and may be purchased separately.

Extreme Power Workstation (DX722101HC, DX7201HC)

PARTS LIST


ITEM #	PART NUMBER	DESCRIPTION	QTY.
1	Z-7221HC-01 BK	7221 Hutch Top-Back panel, BK	1
1	Z-7221HC-01 BL	7221 Hutch Top-Back panel, BL	1
1	Z-7221HC-01 GN	7221 Hutch Top-Back panel, GN	1
1	Z-7221HC-01 MB	7221 Hutch Top-Back panel, MB	1
1	Z-7221HC-01 OR	7221 Hutch Top-Back panel, OR	1
2	Z-7221HC-02 BK	DX 21" Side panel, Left, Black	1
2	Z-7221HC-02 BL	DX 21" Side panel, Left, Blue	1
2	Z-7221HC-02 GN	DX 21" Side panel, Left, Green	1
2	Z-7221HC-02 MB	DX 21" Side panel, Left, Matte Black	1
2	Z-7221HC-02 OR	DX 21" Side panel, Left, Orange	1
3	Z-7225HC-08 BK	DX 21" Side panel, Right, Black	1
3	Z-7225HC-08 BL	DX 21" Side panel, Right, Blue	1
3	Z-7225HC-08 GN	DX 21" Side panel, Right, Green	1
3	Z-7225HC-08 MB	DX 21" Side panel, Right, Matte Black	1
3	Z-7225HC-08 OR	DX 21" Side panel, Right, Orange	1
4	Z-7225HC-10 BK	7225 Hutch Top-Front panel, Black	1
4	Z-7225HC-10 BL	7225 Hutch Top-Front panel, Blue	1
4	Z-7225HC-10 GN	RX7225 Hutch Top-Front panel, Green	1
4	Z-7225HC-10 MB	7225 Hutch Top-Front panel, Matte Black w/ black handle	1
4	Z-7225HC-10 OR	7225 Hutch Top-Front panel, Orange	1
5	Z-DX7221HC-13 BKBL	DX7221 Hutch Lower-Front Lid Assy, BKBL	1
5	Z-DX7221HC-13 BKRD	DX7221 Hutch Lower-Front Lid Assy, BKRD	1
5	Z-DX7221HC-13 BLBK	DX7221 Hutch Lower-Front Lid Assy, BLBK	1
5	Z-DX7221HC-13 GNBK	DX7221 Hutch Lower-Front Lid Assy, GNBK	1
5	Z-DX7221HC-13 MBBK	DX7221 Hutch Lower-Front Lid Assy, MBBK	1
5	Z-DX7221HC-13 ORBK	DX7221 Hutch Lower-Front Lid Assy, ORBK	1
6	ZST300400M6	Strut door support for a RX722501, RX723001HC & DX722101HC hutch, M6 stud ball joint, 40 kg. force (Older design)	2
6	ZST300400M8	Strut door support for a RX722501, RX723001HC & DX722101HC hutch, M8 stud ball joint, 40 kg. force (New design)	2
*	ZRB-10 OD	Rubber bumper, 10 mm OD	2
7	Z-7225HC-19 BK	Hutch adjustable shelf for 21 or 25 deep, BK	1
7	Z-7225HC-19 BL	Hutch adjustable shelf for 21 or 25 deep, BL	1
7	Z-7225HC-19 GN	Hutch adjustable shelf for 21 or 25 deep, GN	1
7	Z-7225HC-19 MB	Hutch adjustable shelf for 21 or 25 deep, MB	1
7	Z-7225HC-19 OR	Hutch adjustable shelf for 21 or 25 deep, OR	1
8	ZM6SCSH-35	M6 x 35 mm Socket Head Screw, for RX/DX HC door hinge	2
9	Z-TRFDX560-BL	DX CH/HC FRONT TRIM, 560 MM LG, BLUE	2
9	Z-TRFDX560-RD	DX CH/HC FRONT TRIM, 560 MM LG, RED	2
9	Z-TRFDX560-BK	DX CH/HC FRONT TRIM, 560 MM LG, BLACK	2

Extreme Power Workstation Hutch (DX722101HC, DX7201HC)

PARTS LIST Continued

ITEM #	PART NUMBER	DESCRIPTION	QTY.
10	Z-PS333032	POWER STRIP, 2.1A USBX2, 120VX3	1
11	ZRG-38	RUBBER GROMMET - 38 MM ID	2
12	Z-7225HC-22 BK	Hutch-RC Connecting Bracket for sides, BK	2
12	Z-7225HC-22 BL	Hutch-RC Connecting Bracket for sides, BL	2
12	Z-7225HC-22 GN	Hutch-RC Connecting Bracket for sides, GN	2
12	Z-7225HC-22 MB	Hutch-RC Connecting Bracket for sides, MB	2
12	Z-7225HC-22 OR	Hutch-RC Connecting Bracket for sides, OR	2
13	ZM8SCHX-16 BK	M8X16 Hex Bolts, Black	2
13	ZM8SCHX-16 BL	M8X16 Hex Bolts, Blue	2
13	ZM8SCHX-16 GN	M8X16 Hex Bolts, Green	2
13	ZM8SCHX-16 MB	M8X16 Hex Bolts, Matte Black	2
13	ZM8SCHX-16 OR	M8X16 Hex Bolts, Orange	2
14	ZM8WAFT-BK	M8 flat washer, Black	2
14	ZM8WAFT-BL	M8 flat washer, Blue	2
14	ZM8WAFT-GN	M8 flat washer, Green	2
14	ZM8WAFT-MK	M8 flat washer, Matte Black	2
14	ZM8WAFT-OR	M8 flat washer, Orange	2
15	ZM4SCPH-12	PAN HEAD M4 SCREWS, 12 MM LONG for power strip	4
16	ZM6SCPH-12	M6 X 12MM SCREW, Pan head	20
17	Z-ECM13	Hole plug for RX/DX hutch pivot hole	2
18	Z-LK EX01-04	SEE KEY CODE ON LOCK (EX01-04)	1
19	Z-7221HC-07 BL	DX Hutch/Chest Vertical Trim, BL	2
19	Z-7221HC-07 RD	DX Hutch/Chest Vertical Trim, RD	2
19	Z-7221HC-07 BK	DX Hutch/Chest Vertical Trim, BK	2
20	Z-DPDX1739-BL	DX72 Hutch lid pull, Blue	1
20	Z-DPDX1739-RD	DX72 Hutch lid pull, Red	1
20	Z-DPDX1739-BK	DX72 Hutch lid pull, Black	1
20A	ZM4NTSR	M4 Serrated nut for DX drawer pull handle/chest lid handle	8
*	ZM5MSPH-16	M5 X 16 MM Pan Head Mach. Screw for power tool adaptor	1
21	ACPTRBK	Adjustable Power Tool Rack, Black	1
21	ACPTRBL	Adjustable Power Tool Rack, Blue	1
21	ACPTRGN	Adjustable Power Tool Rack, Green	1
21	ACPTRMB	Adjustable Power Tool Rack, Matte Black	1
21	ACPTROR	Adjustable Power Tool Rack, Orange	1
23	Z-LGL	Extreme Tools Logo	1
24	Z-BRJHOOKDXHC	J hook bracket for mounting DX HC side panel to DXRC,	2
		*Not Shown on Drawing	

DX Series 72 in. 17-Drawer Roller Cabinet Parts List (DX722117RC, DX7217RC)

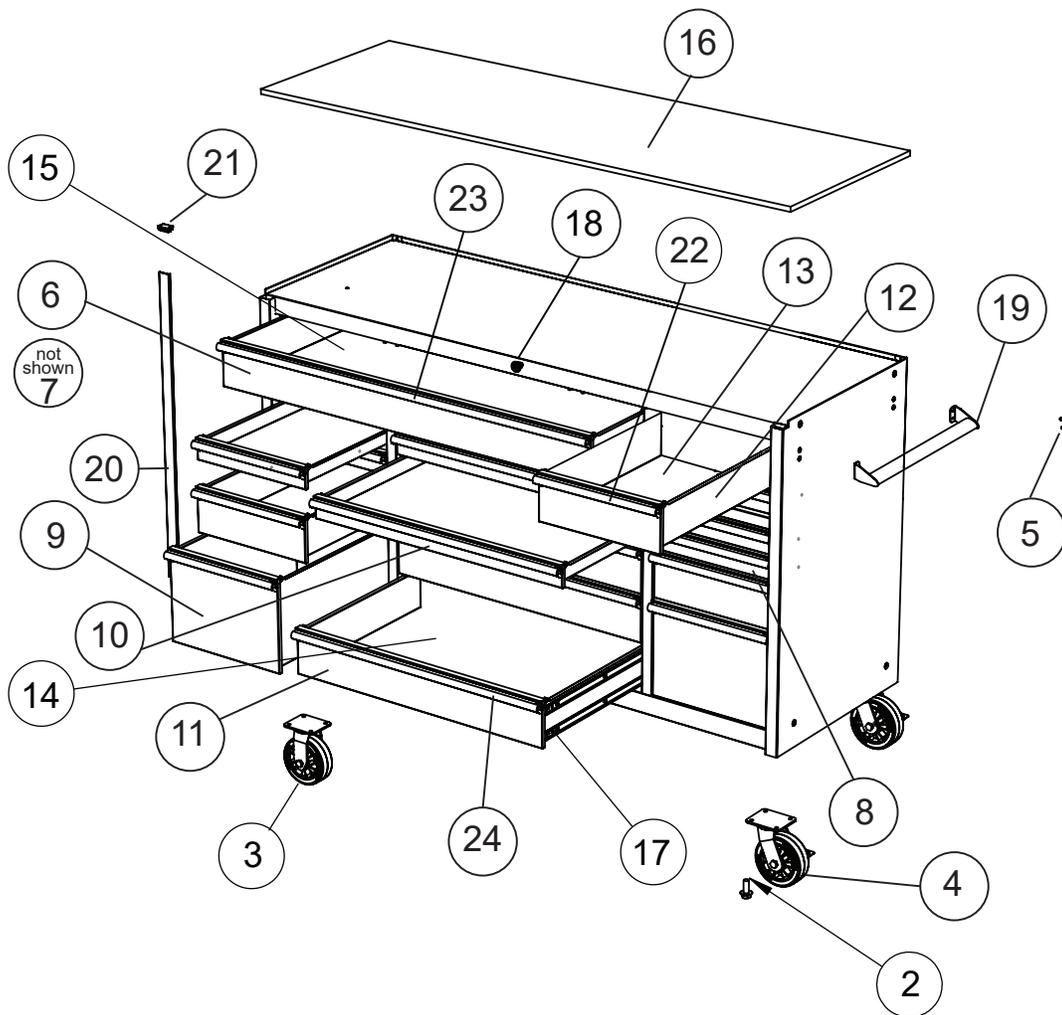

Replacement keys may be ordered using the code that appears on the face of the lock.

To order replacement parts, have the part number, tool box and drawer pull color and quantity ready.

If under warranty, the serial number is **REQUIRED** to get replacement parts.

Not all parts are available under warranty and may be purchased separately.

DX Series 72 in. Roller Cabinet Parts List (DX722117RC, DX7217RC)

Item	Part number	Description	Qty
2	Z-BTM10X25SHH	M10X25 Serrated Hex Head Bolt	16
3	ZCA62MR	6X2" Mag Wheel Rigid Caster, 900 Lb Rating	2
4	ZCA62MS	6X2" Mag Wheel Swivel Caster with Brake, 900 Lb Rating	2
5	ZM6SCHX-16 BK	M6X16 Hex Bolts, Black	4
21	ZECDX	DX Plastic End Caps for Vertical Trim, Black	2
6	ZDRD1305C2QWKU	DX7221RC Drawer 1305 mm Wide, 100 Lb Slides, Double Deep, Black with Blue Drawer	1
6	ZDRD1305C2QWKR	DX7221RC Drawer 1305 mm Wide, 100 Lb Slides, Double Deep, Black with Red Drawer	1
6	ZDRD1305C2QWUK	DX7221RC Drawer 1305 mm Wide, 100 Lb Slides, Double Deep, Blue with Black Drawer	1
6	ZDRD1305C2QWGK	DX7221RC Drawer 1305 mm Wide, 100 Lb Slides, Double Deep, Green with Black Drawer	1
6	ZDRD1305C2QWMK	DX7221RC Drawer 1305 mm Wide, 100 Lb Slides, Double Deep, Matte Black with Black Drawer	1
6	ZDRD1305C2QWOK	DX7221RC Drawer 1305 mm Wide, 100 Lb Slides, Double Deep, Orange with Black Drawer	1
7	ZDRD1305C1QWKU	DX7221RC Drawer 1305 mm Wide, 100 Lb Slides, Single Deep, Black with Blue Drawer	1
7	ZDRD1305C1QWKR	DX7221RC Drawer 1305 mm Wide, 100 Lb Slides, Single Deep, Black with Red Drawer	1
7	ZDRD1305C1QWUK	DX7221RC Drawer 1305 mm Wide, 100 Lb Slides, Single Deep, Blue with Black Drawer	1
7	ZDRD1305C1QWGK	DX7221RC Drawer 1305 mm Wide, 100 Lb Slides, Single Deep, Green with Black Drawer	1
7	ZDRD1305C1QWMK	DX7221RC Drawer 1305 mm Wide, 100 Lb Slides, Single Deep, Matte Black with Black Drawer	1
7	ZDRD1305C1QWOK	DX7221RC Drawer 1305 mm Wide, 100 Lb Slides, Single Deep, Orange with Black Drawer	1
8	ZDRD398C1QWKU	DX7221RC Drawer 398 mm Wide, 100 Lb Slides, Single Deep, Black with Blue Drawer	7
8	ZDRD398C1QWKR	DX7221RC Drawer 398 mm Wide, 100 Lb Slides, Single Deep, Black with Red Drawer	7
8	ZDRD398C1QWUK	DX7221RC Drawer 398 mm Wide, 100 Lb Slides, Single Deep, Blue with Black Drawer	7
8	ZDRD398C1QWGK	DX7221RC Drawer 398 mm Wide, 100 Lb Slides, Single Deep, Green with Black Drawer	7
8	ZDRD398C1QWMK	DX7221RC Drawer 398 mm Wide, 100 Lb Slides, Single Deep, Matte Black with Black Drawer	7
8	ZDRD398C1QWOK	DX7221RC Drawer 398 mm Wide, 100 Lb Slides, Single Deep, Orange with Black Drawer	7
9	ZDRD398C4QWKU	DX7221RC Drawer 398 mm Wide, 100 Lb Slides, Quadruple Deep, Black with Blue Drawer	2
9	ZDRD398C4QWKR	DX7221RC Drawer 398 mm Wide, 100 Lb Slides, Quadruple Deep, Black with Red Drawer	2
9	ZDRD398C4QWUK	DX7221RC Drawer 398 mm Wide, 100 Lb Slides, Quadruple Deep, Blue with Black Drawer	2
9	ZDRD398C4QWGK	DX7221RC Drawer 398 mm Wide, 100 Lb Slides, Quadruple Deep, Green with Black Drawer	2
9	ZDRD398C4QWMK	DX7221RC Drawer 398 mm Wide, 100 Lb Slides, Quadruple Deep, Matte Black with Black Drawer	2
9	ZDRD398C4QWOK	DX7221RC Drawer 398 mm Wide, 100 Lb Slides, Quadruple Deep, Orange with Black Drawer	2
10	ZDRD865C1QWKU	DX7221RC Drawer 865 mm Wide, 100 Lb Slides, Single Deep, Black with Blue Drawer	3
10	ZDRD865C1QWKR	DX7221RC Drawer 865 mm Wide, 100 Lb Slides, Single Deep, Black with Red Drawer	3
10	ZDRD865C1QWUK	DX7221RC Drawer 865 mm Wide, 100 Lb Slides, Single Deep, Blue with Black Drawer	3
10	ZDRD865C1QWGK	DX7221RC Drawer 865 mm Wide, 100 Lb Slides, Single Deep, Green with Black Drawer	3
10	ZDRD865C1QWMK	DX7221RC Drawer 865 mm Wide, 100 Lb Slides, Single Deep, Matte Black with Black Drawer	3
10	ZDRD865C1QWOK	DX7221RC Drawer 865 mm Wide, 100 Lb Slides, Single Deep, Orange with Black Drawer	3
11	ZDRD865C2QWKU	DX7221RC Drawer 865 mm Wide, 100 Lb Slides, Double Deep, Black with Blue Drawer	2
11	ZDRD865C2QWKR	DX7221RC Drawer 865 mm Wide, 100 Lb Slides, Double Deep, Black with Red Drawer	2
11	ZDRD865C2QWUK	DX7221RC Drawer 865 mm Wide, 100 Lb Slides, Double Deep, Blue with Black Drawer	2
11	ZDRD865C2QWGK	DX7221RC Drawer 865 mm Wide, 100 Lb Slides, Double Deep, Green with Black Drawer	2
11	ZDRD865C2QWMK	DX7221RC Drawer 865 mm Wide, 100 Lb Slides, Double Deep, Matte Black with Black Drawer	2
11	ZDRD865C2QWOK	DX7221RC Drawer 865 mm Wide, 100 Lb Slides, Double Deep, Orange with Black Drawer	2

DX Series 72 in. Roller Cabinet Parts List Continued (DX722117RC, DX7217RC)


Item	Part number	Description	Qty
12	ZDRD398C2QWKU	DX7221RC Drawer 398 mm Wide, 100 Lb Slides, Double Deep, Black with Blue Drawer	1
12	ZDRD398C2QWKR	DX7221RC Drawer 398 mm Wide, 100 Lb Slides, Double Deep, Black with Red Drawer	1
12	ZDRD398C2QWUK	DX7221RC Drawer 398 mm Wide, 100 Lb Slides, Double Deep, Blue with Black Drawer	1
12	ZDRD398C2QWGK	DX7221RC Drawer 398 mm Wide, 100 Lb Slides, Double Deep, Green with Black Drawer	1
12	ZDRD398C2QWMK	DX7221RC Drawer 398 mm Wide, 100 Lb Slides, Double Deep, Matte Black with Black Drawer	1
12	ZDRD398C2QWOK	DX7221RC Drawer 398 mm Wide, 100 Lb Slides, Double Deep, Orange with Black Drawer	1
13	ZDL1283X459 PVC	DX722117RC, Drawer liner, Large, 1283x459, PVC, Black	2
14	ZDL845X459 PVC	DX722117RC, Drawer liner, Medium, 845x459, PVC, Black	5
15	ZDL360X459 PVC	DX722117RC, Drawer liner, Small, 360x459, PVC, Black	10
16	ZMDF722125MM	72"x21"x1" Laminated MDF work surface	1
17	ZSLW400F387	DX722117RC Drawer Slide Set, 100 lb, 400/387 mm Length	23 sets
17A	ZDTEX56	Detents for Slides (come with slides)	46
18	Z-LK EX01-04	EX01-EX04 Mix Lock Sets	1
*	Z-LGS	Extreme Tools name plate	1
*	Z-LGL	Extreme Tools Logo	1
20	ZTRD868U	DX72/41RC Vertical Trim, 868 mm, Powder Coat Blue	2
20	ZTRD868R	DX72/41RC Vertical Trim, 868 mm, Powder Coat Red	2
20	ZTRD868K	DX72/41RC Vertical Trim, 868 mm, Powder Coat Black	2
19	ZHDD381OSR	DX7221RC Side Push Handle Oval, 381mm, Steel, Powder Coat Red (15"MHD)	1
19	ZHDD381OSK	DX7221RC Side Push Handle Oval, 381mm, Steel, Powder Coat Black (15"MHD)	1
19	ZHDD381OSU	DX7221RC Side Push Handle Oval, 381mm, Steel, Powder Coat Blue (15"MHD)	1
*	ZM4SCSD-D5H4	M4 Shoulder screw for DX drawer pull handle, Dia: 50, Height: 40	45
*	ZM4NTSR	M4 Serrated nut for DX drawer pull handle/chest lid handle	45
23	ZDPDQ1301K	DX7221RC Quick Release Drawer Pull, C Shape 1301 mm, Powder Coat Black	2
23	ZDPDQ1301U	DX7221RC Quick Release Drawer Pull, C Shape 1301 mm, Powder Coat Blue	2
23	ZDPDQ1301R	DX7221RC Quick Release Drawer Pull, C Shape 1301 mm, Powder Coat Red	2
24	ZDPDQ861K	DX7221RC Quick Release Drawer Pull, C Shape 861 mm, Powder Coat Black	5
24	ZDPDQ861U	DX7221RC Quick Release Drawer Pull, C Shape 861 mm, Powder Coat Blue	5
24	ZDPDQ861R	DX7221RC Quick Release Drawer Pull, C Shape 861 mm, Powder Coat Red	5
22	ZDPDQ395K	DX7221RC Quick Release Drawer Pull, C Shape 395 mm, Powder Coat Black	4
22	ZDPDQ395U	DX7221RC Quick Release Drawer Pull, C Shape 395 mm, Powder Coat Blue	
22	ZDPDQ395R	DX7221RC Quick Release Drawer Pull, C Shape 395 mm, Powder Coat Red	
option	Z-DL DX722117RC-Kit	DX722117RC Drawer liner kits, PVC, Black, LG x 2; MED x 5; SM x 10	1 set

ASSEMBLY


Handle Installation

NOTE: Assemble the handle first to make it easier to move the tool cabinet.

Position the handle over the holes in the cabinet and attach with the provided (4) M6 socket head screws. Tighten securely.

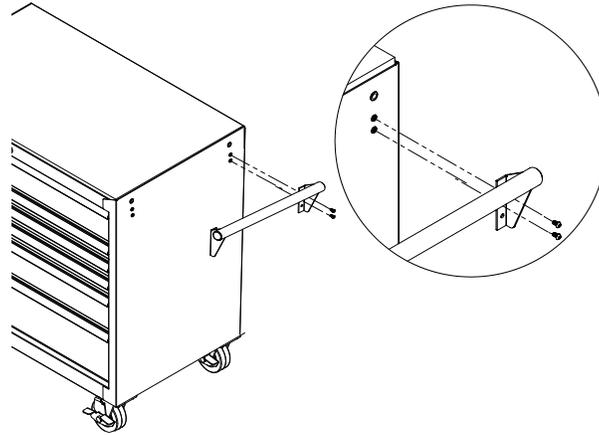

OPERATING PROCEDURE

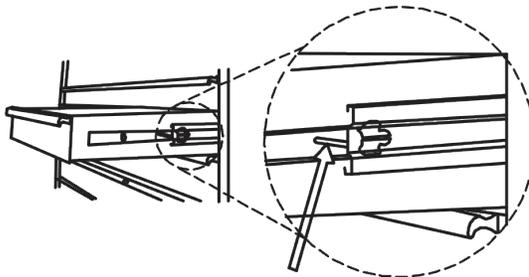


Drawer Removal

Pull drawer out so that it is almost fully extended.

Push up on the black lever on one drawer slide and at the same time push down on the lever on the other side.

With the levers in these positions, pull the drawer out until it releases from the drawer slides.

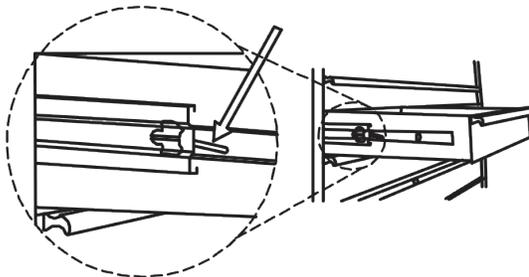

Drawer Replacement

Extend the drawer slides.


Careful align the brackets on the sides of the drawers with the slots of the cabinet slides. Insert the brackets on the side of each drawer into the slots of the cabinet slides.

Once properly inserted, completely close the drawer to set the slides into their properly functioning positions.

HUTCH ASSEMBLY INSTRUCTIONS


STEP 1: Remove End Caps

- a. IMPORTANT! Engage the brakes on the casters of the roller cabinet!
- b. Remove plastic end caps from the top of the trim on the roller cabinet.
- c. Set aside to re-install later.

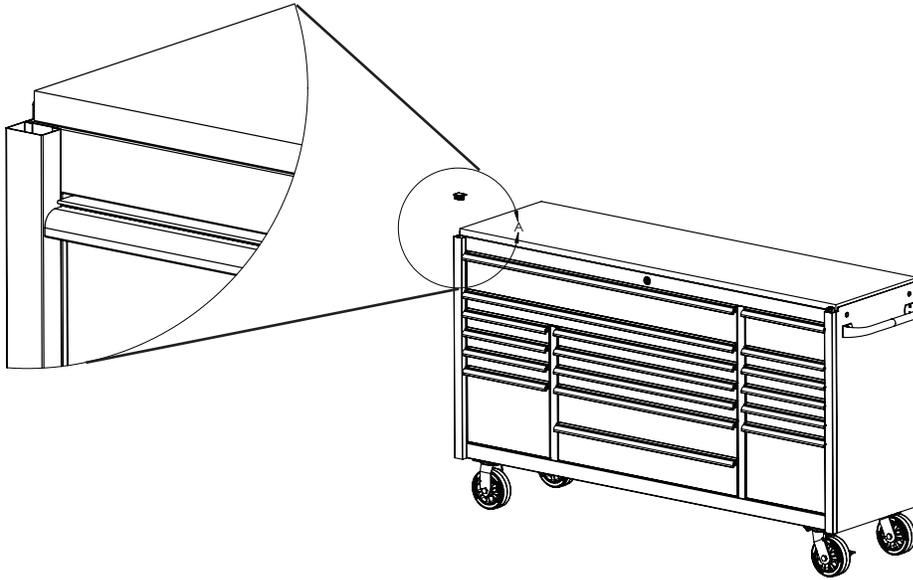

STEP 2: Remove Trim from Side Panels

- a. Detach the covers from the vertical trim of the hutch side panel assemblies.
- b. Set aside to re-attach after hutch is assembled.

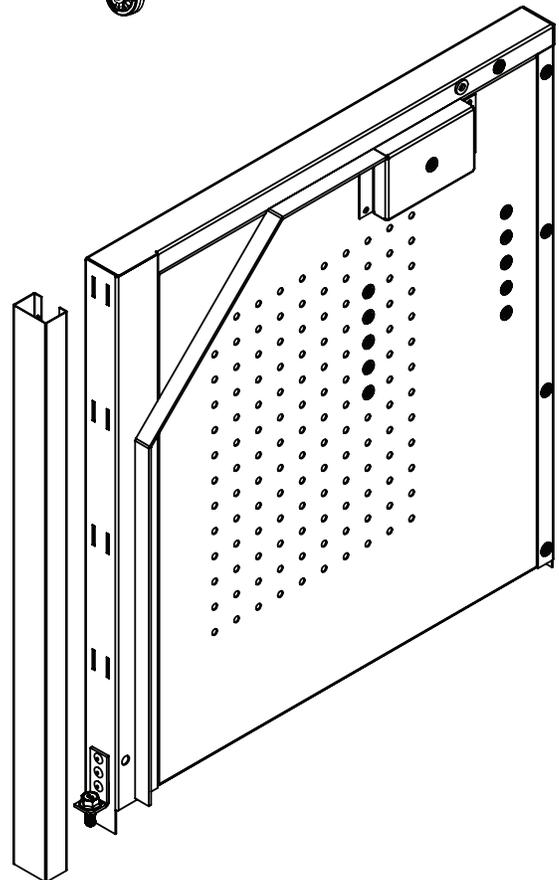


STEP 3: Install Left & Right Side Panel Assembly


- a. Insert the "J" end of the J-Connector into the rectangular opening at the top of the trim of the roller cabinet where the end cap was removed. The "J" end of the connector should be facing the body of the tool box. The top end with the threaded insert should be oriented to the front of the trim.
- b. Insert M8 Hex Bolt through top of the "L" Bracket and screw into the top of the threaded insert of the J-Connector.
- c. Attach the side mounting bracket through the opening on side panel. Use Flat Washer and M8 Bolt to secure to the roller cabinet.
- d. Repeat Steps a, b, c for the other side panel.

If attaching side locker,
remove side mounting
bracket


Side mounting
bracket secures
side panel to roller
cabinet

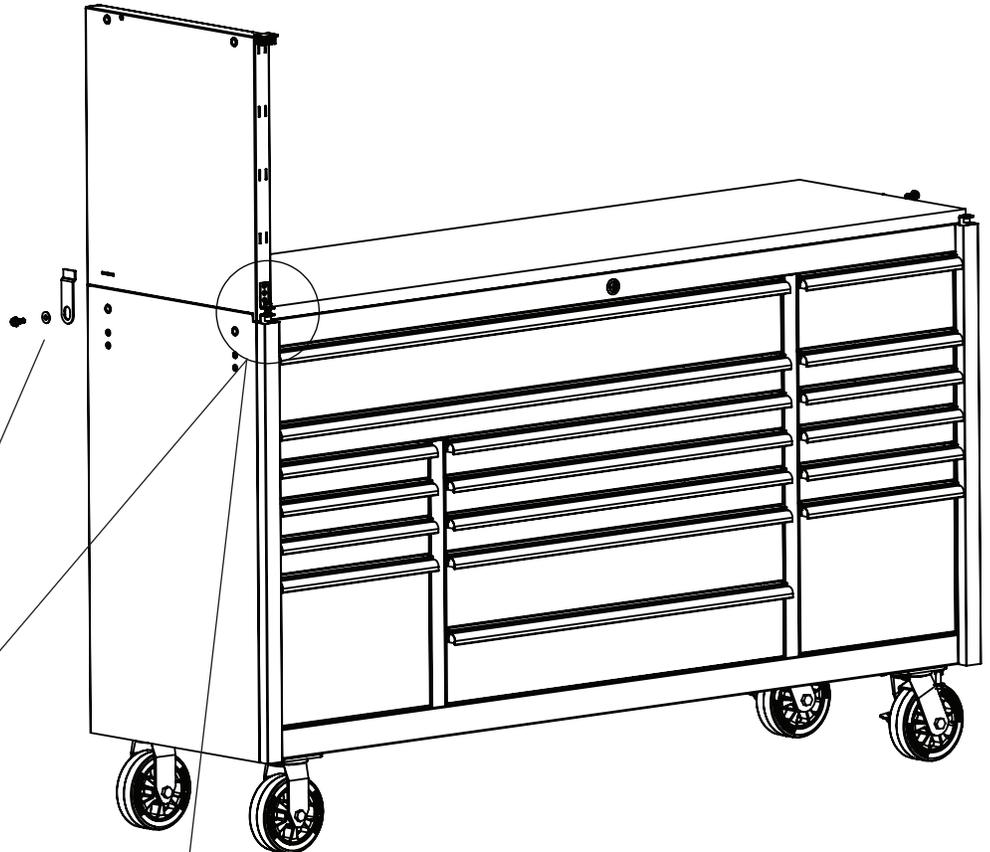

Insert M8 Hex Bolt through
"L" bracket hole and
into threaded insert of
J-Connector.



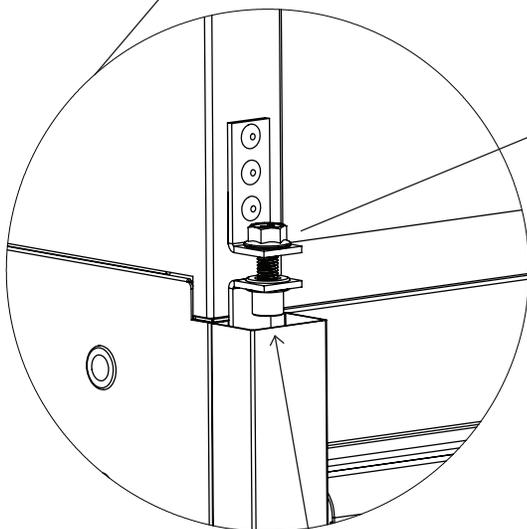


J-Connector installation into trim
piece on roller cabinet

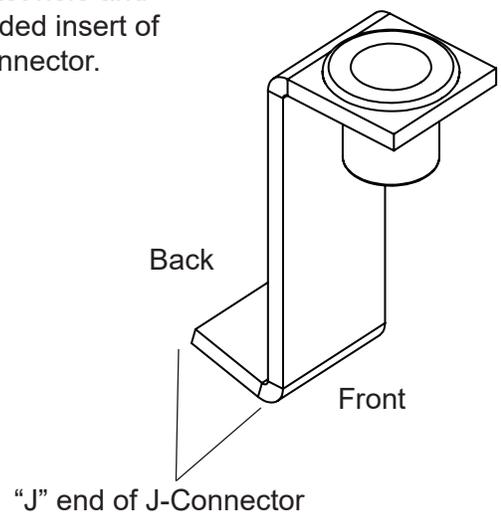


STEP 4: Install Adjustable Shelf

- a. Determine the desired height for the Adjustable Shelf. Pre-thread (2) screws (#11) about halfway in on left-hand and right-hand sides.
- b. Locate the (2) cutouts on each side of the shelf. Line up the open slots with the (4) threaded screws that were installed in Step 5d. Lay down shelf so that (4) open slots fit on top of the (4) screws.
- c. Loosely tighten (4) screws.

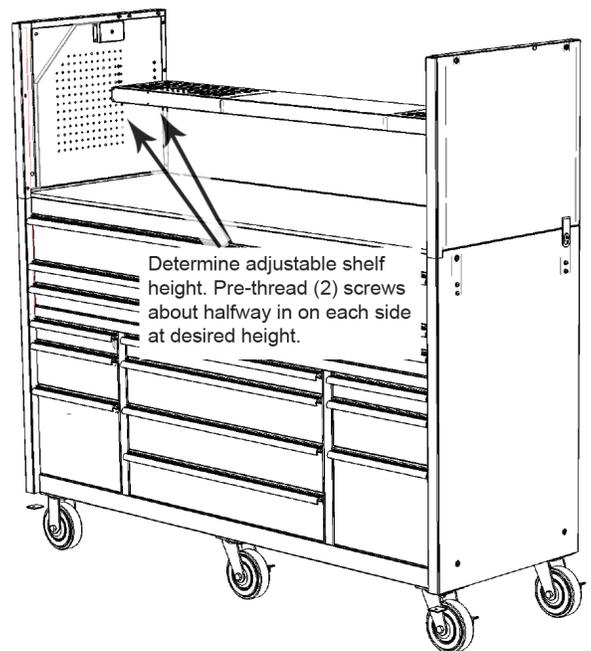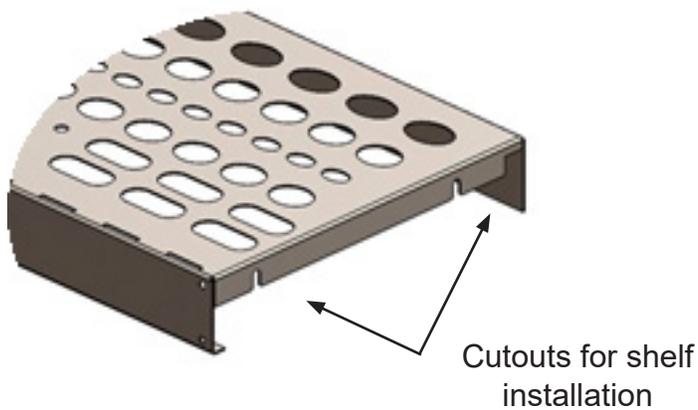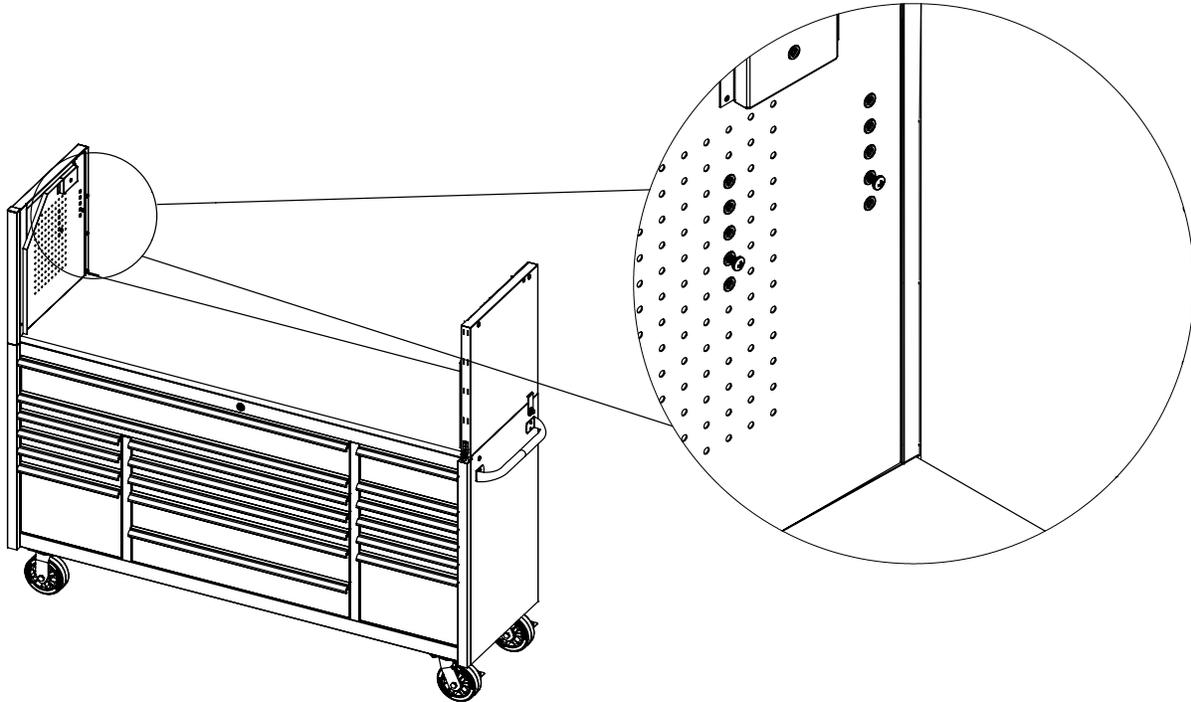


STEP 5: Install Back Panel

- a. Pull MDF board/Stainless Steel Top forward approximately 1/8" from Back Raised Edge (aka: Fence Rail.)
- b. Lift Back Panel into place behind the two side panels. (BACK PANEL is HEAVY and requires 2 people to place!) Slide the bottom edge of the Back Panel between the MDF/Stainless Steel Top and rear fence rail of roller cabinet. Flange on left and right sides of back panel should be resting against the inside back edges of both side panels.

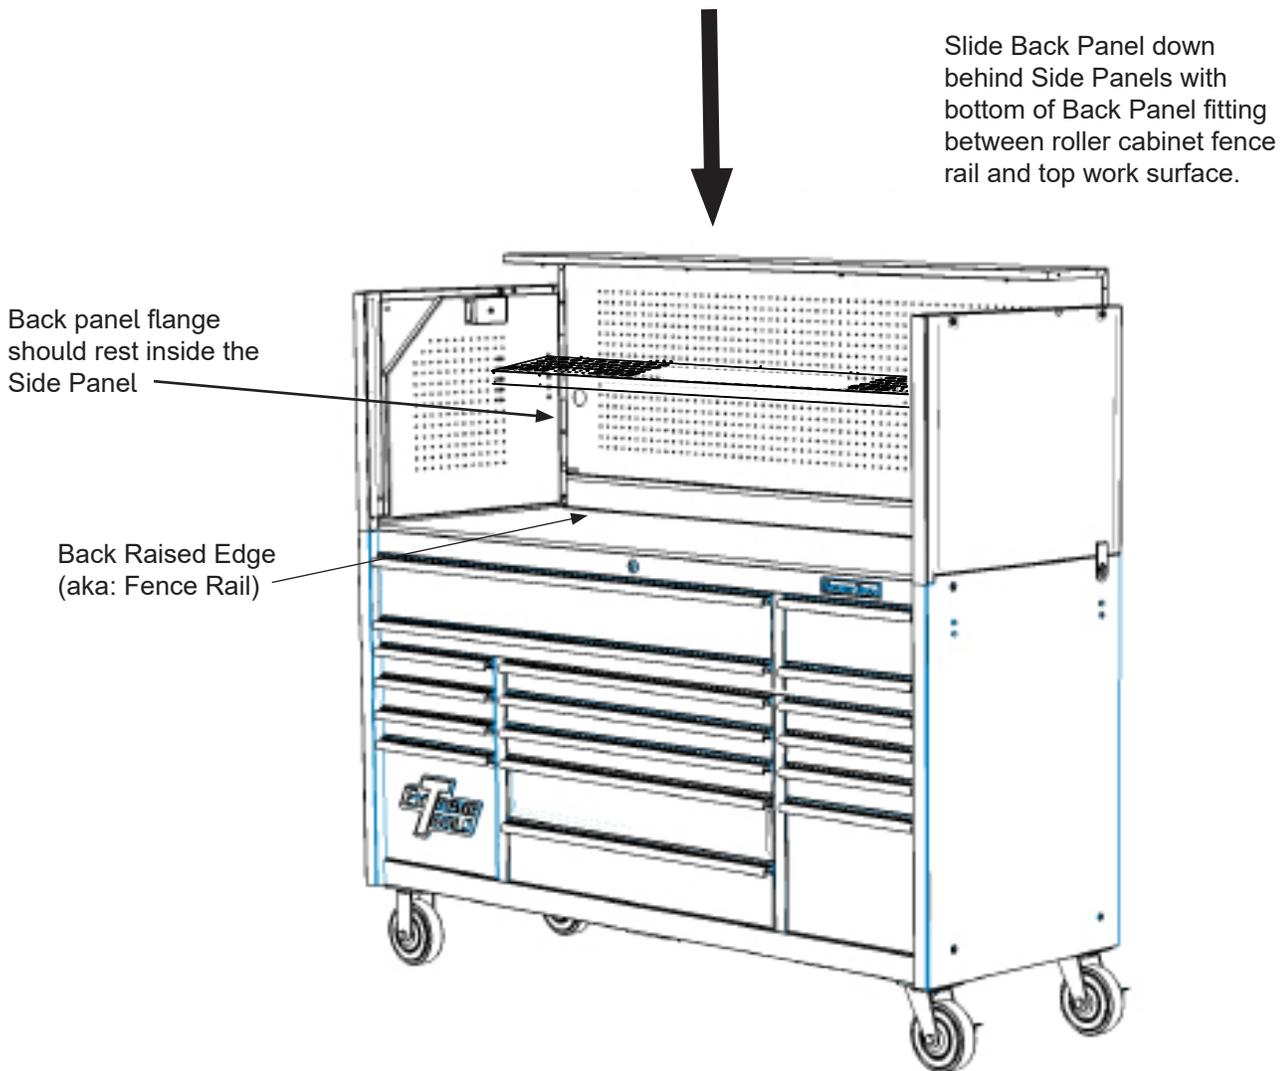


STEP 6: Secure Shelf to Back Panel

- a. Locate (2) threaded inserts on the back of the shelf. From the back of the Back Panel, insert (2) screws through the back of the pegboard and through the threaded inserts of the shelf and tighten.
- b. Tighten the Screws on both side panels to secure the shelf in place.

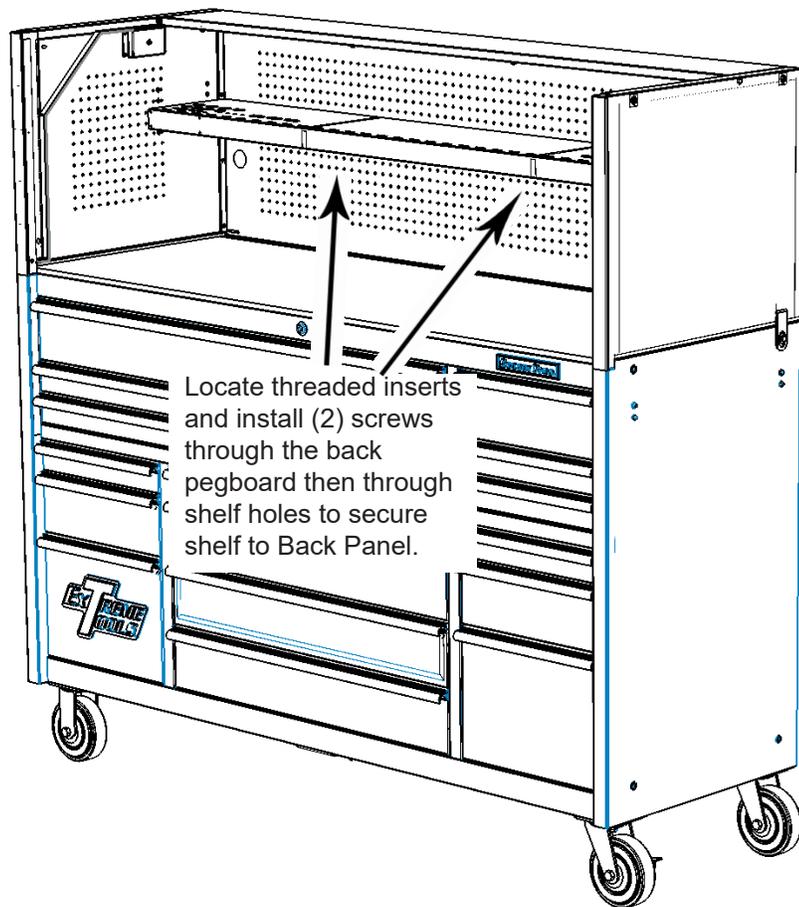


STEP 7: Attach Gas Struts to Lid

- a. Lay the lid down on packaging material so that the front of the lid is face down. Use a soft surface or packaging material under the lid so that it does not get scratched or damaged.
- b. Locate the middle hinge of the front/top lid assembly.
- c. Using a Phillips screw driver, remove 3 screw holding hinge in place.
- d. Disengage the other hinges that hold the front lid panel to the hood assembly by sliding the front lid panel to the side. Remove front lid panel and lay down with the inner stiffener panel facing up onto a soft surface to prevent scratching.

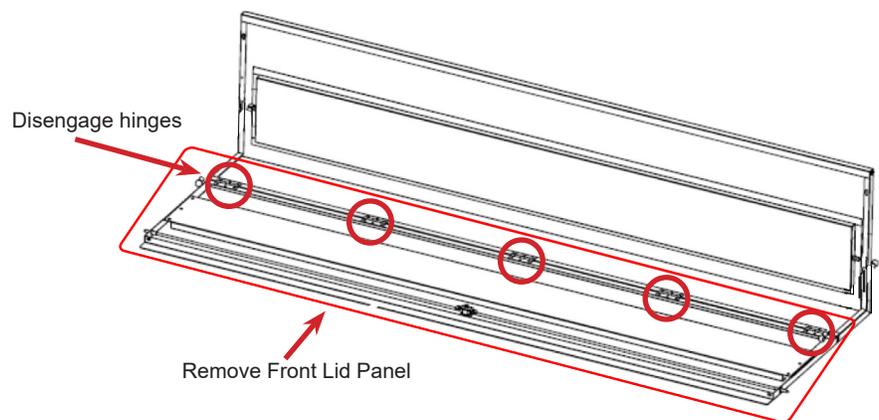


- e. Install the piston side of the gas strut into ball joint which is located at the end of the stiffener of the top lid panel. Repeat procedure for the other side.

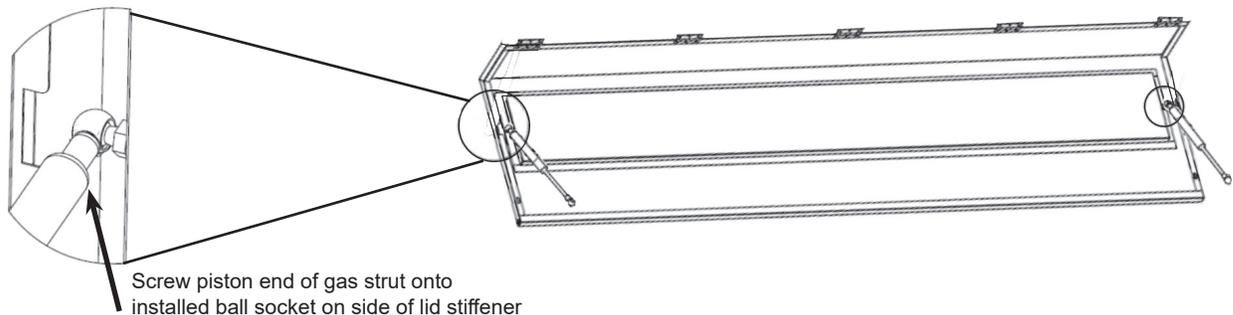

- f. Install M6x35mm socket head screw (ZM6SCSH-35) onto both side panels. Make sure the screw head is flush with the inner side panel.

STEP 8: Secure Lid to Body of Hutch - may require assistance of another adult



- a. Position the top front panel so that it rests on top of the side and back panels and holes on lid and side panels are aligned as shown below.
- b. Use the Allen wrench (supplied with the parts) to drive the pre-threaded M6x35mm Sock Head Screw (#15) into the round opening on the side of the lid. Repeat on the other side.
- c. Insert one plastic hole plug (#17) in each of the socket head screw openings.

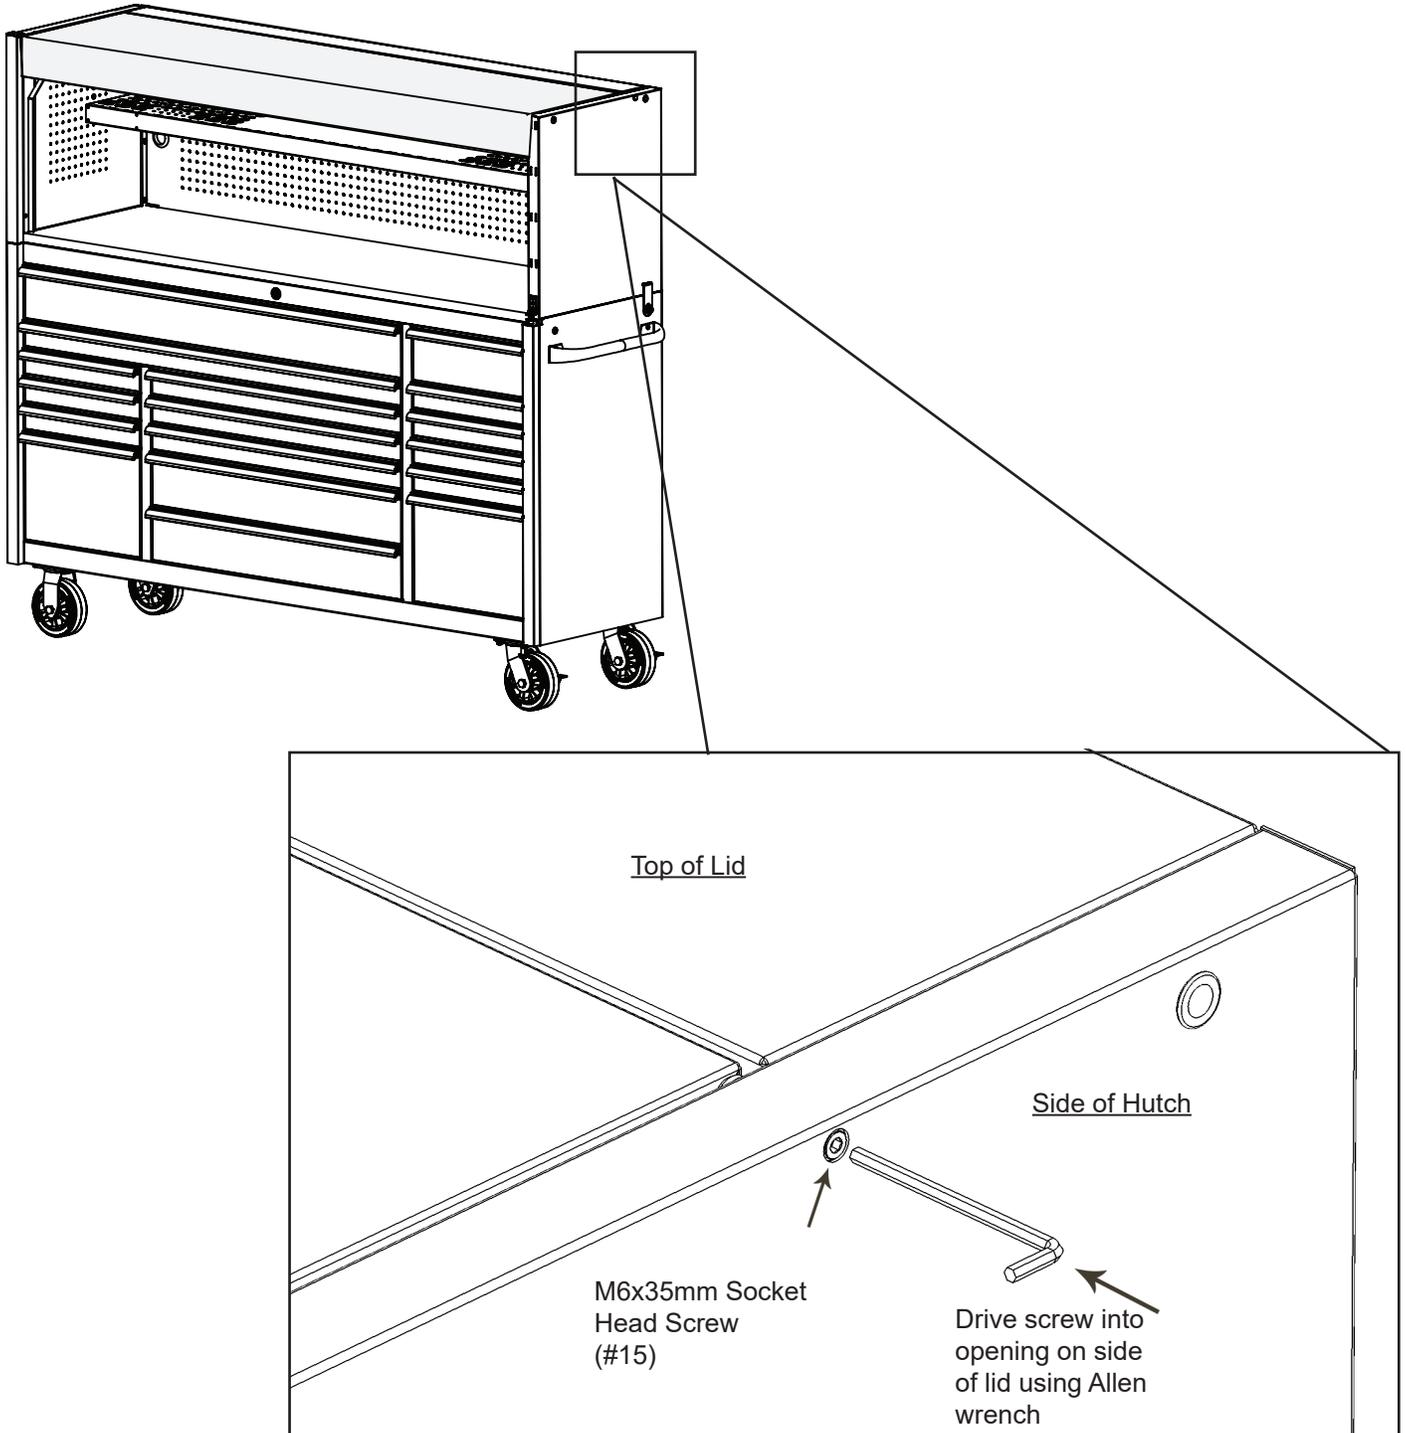

STEP 9: Secure Gas Strut to Side of Hutch


- a. Lift top/front panel so that the unattached ball joint on the gas strut is lined up with the rivet nut hole on the side panel.
- b. Hand-tighten the male stud into the rivet nut opening. Strut must be fully engaged with the ball stud. Open and close the lid to confirm alignment. You should feel some tension when engaging the strut.
- c. Securely tighten socket in place using M12 Box wrench.
- d. Repeat for the gas strut (#6) on the other side.
- e. Test lid function by opening and closing several times.
- e. **Confirm that gas struts are holding lid securely in open position before proceeding.**

Align ball joint with rivet nut hole on side panel. Secure the male end of the piston into the opening on the side of the hutch. Secure with M12 box wrench.

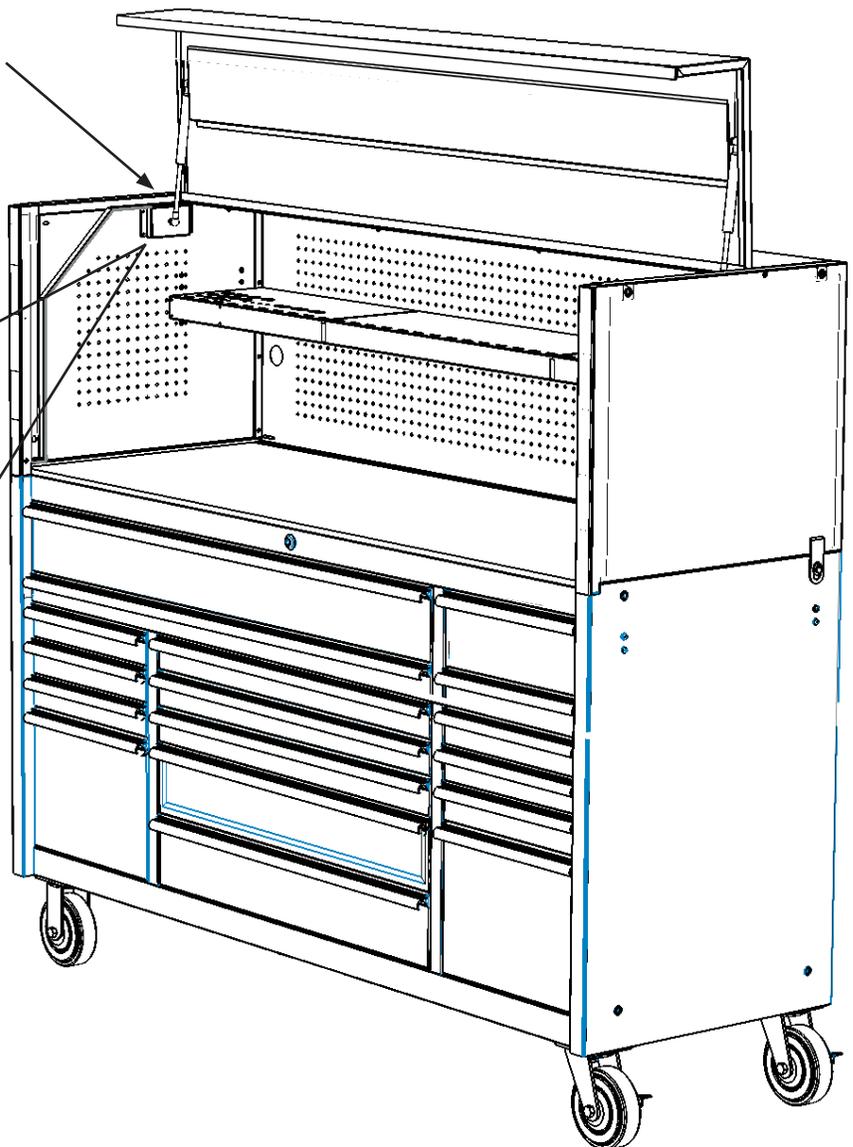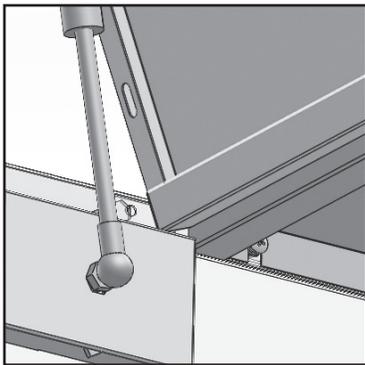


STEP 10: Re-Attach Front Panel to Lid


- a. Lift front panel into place to re-attach to lid. Align the hinges on the top panel with the hinges on the lid and slide into place. Smooth side of lid should face out - panel stiffener should be on the inside.
- b. Replace and secure the front panel to lid with 3 Phillip screws that were removed in Step 8.
- c. Securely tighten the screws.
- d. Open and close the lid several times to confirm that lid is secure and aligned.

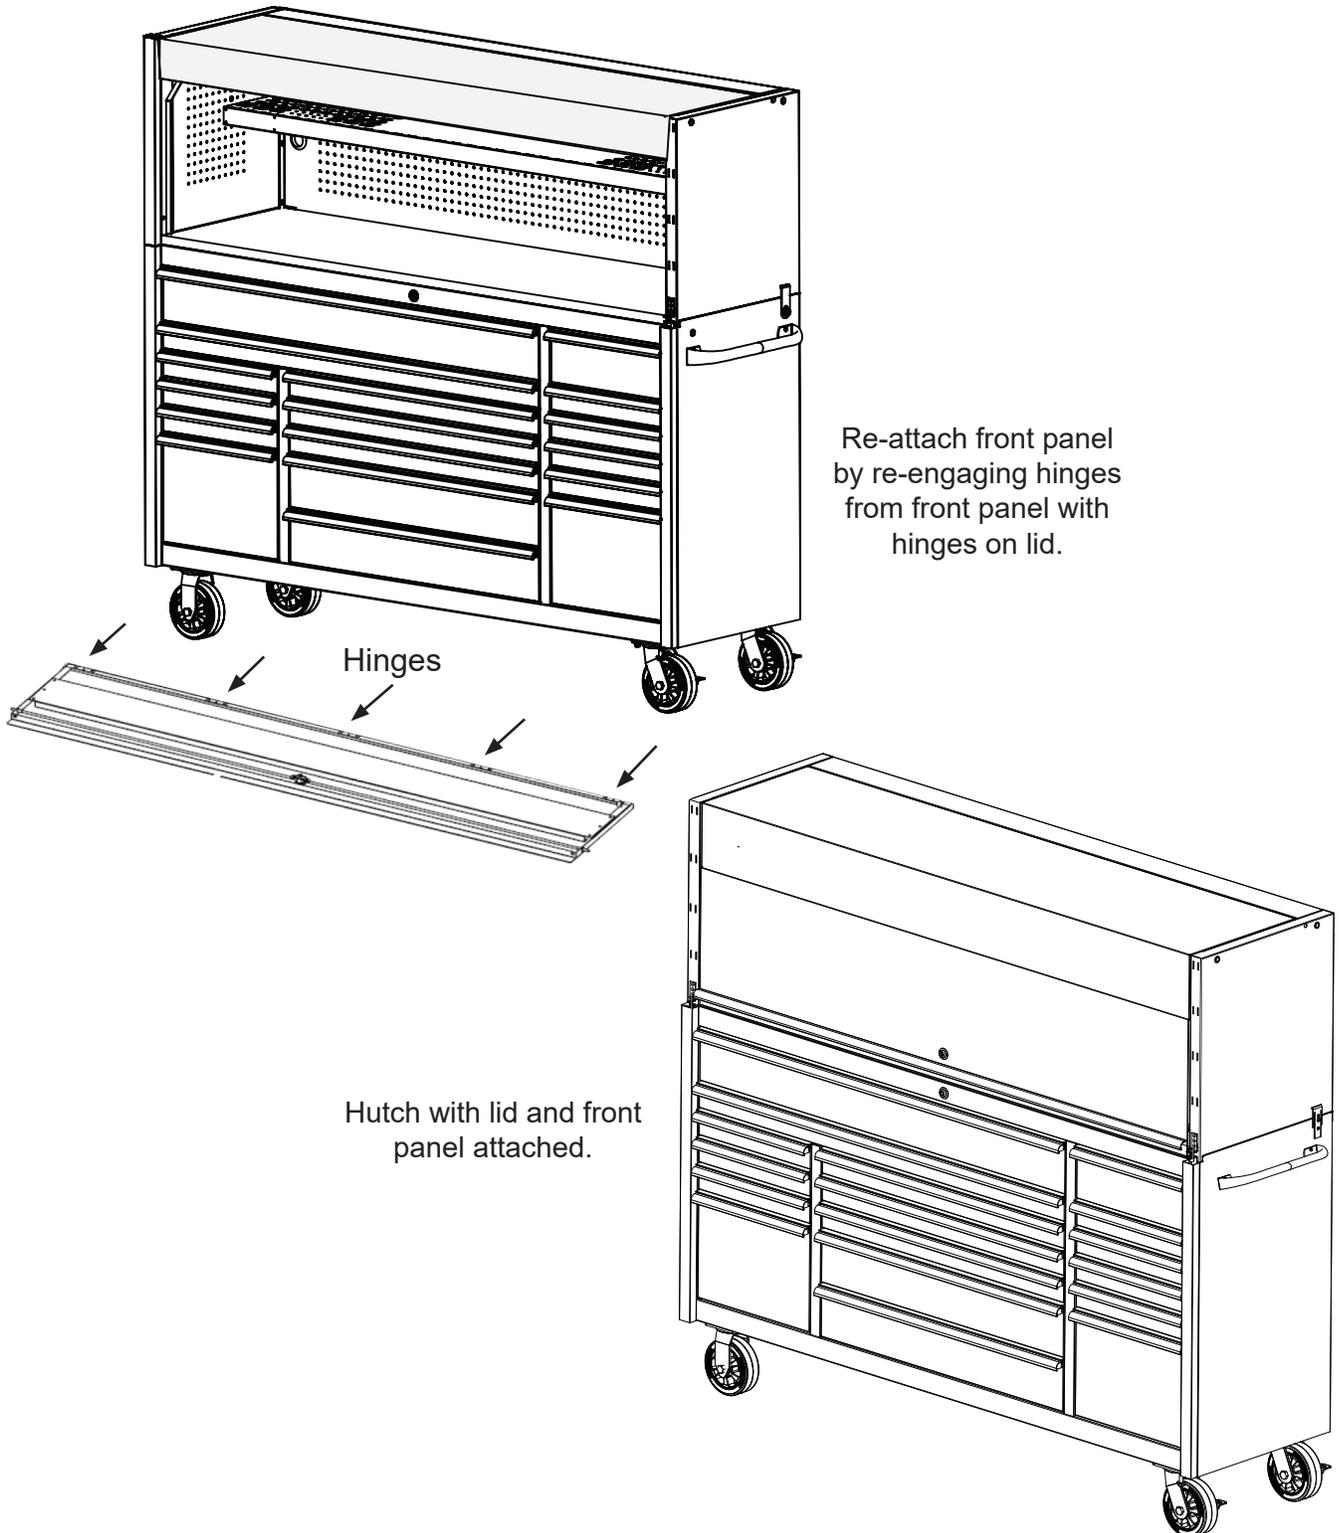


Step 11: Final Assembly

- a. Re-attach the Vertical Trim Covers to the front of the Hutch Side Panels.
- b. Insert the End Caps into the openings at the top of the Vertical Trim Covers.
- c. Use the supplied hardware to attach the Power Strip on either the right or left side of the face of the adjustable shelf.

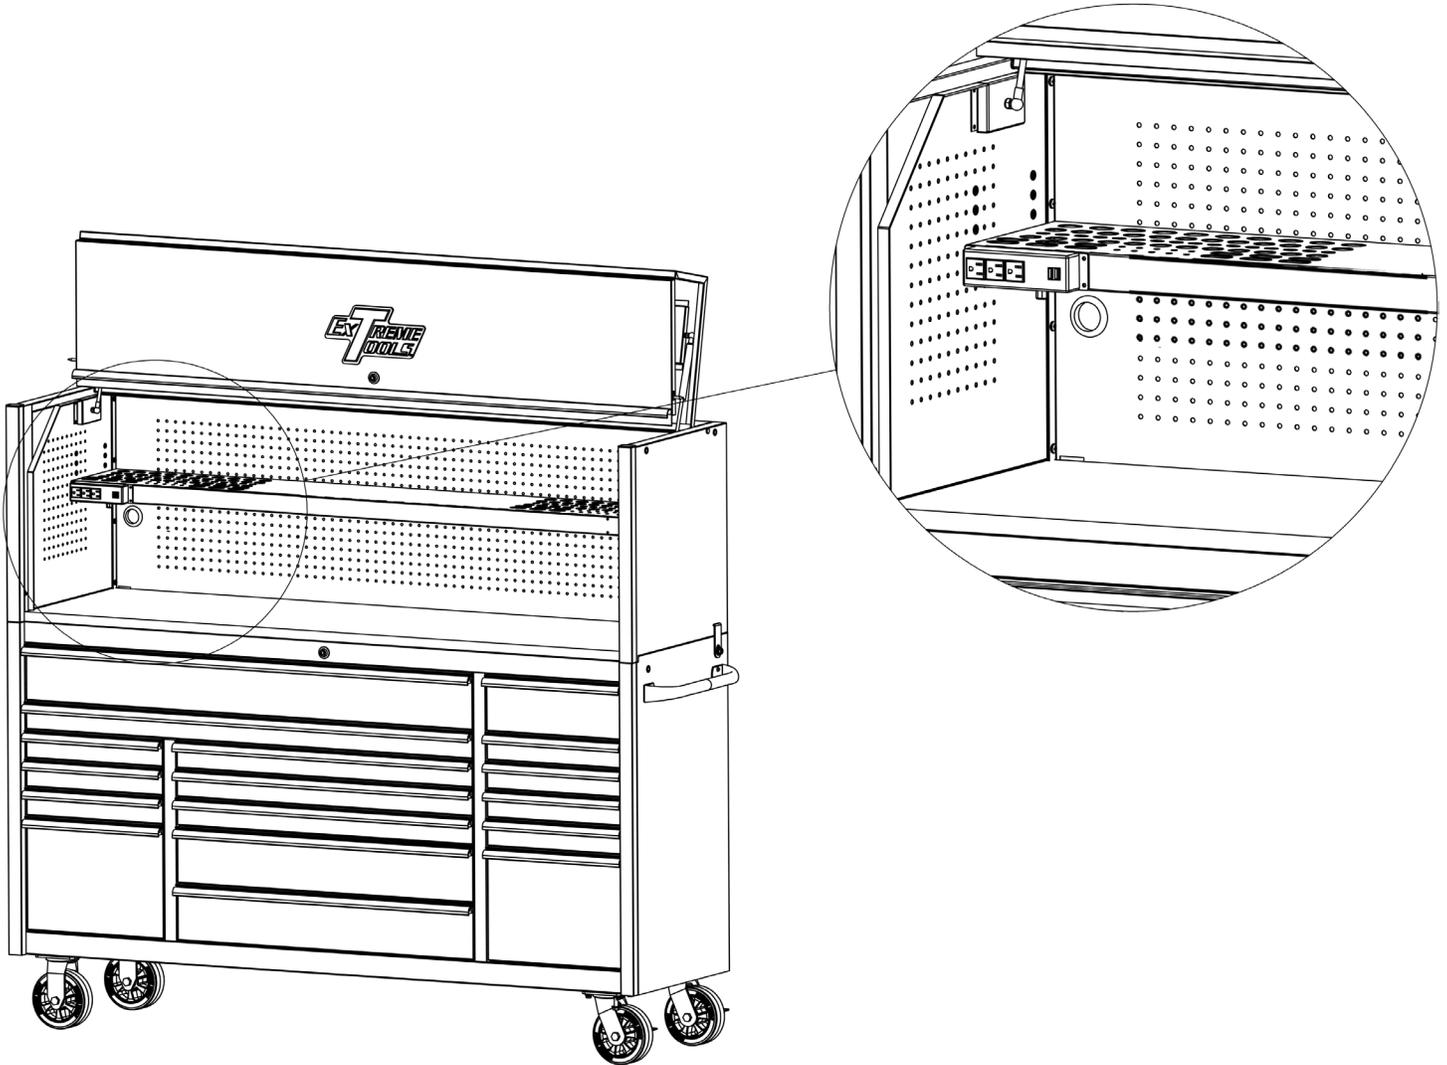

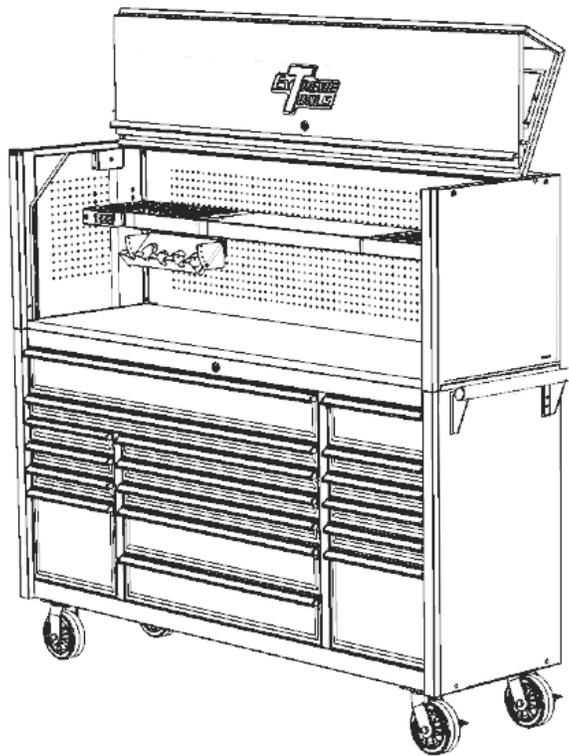

**DX Series 72 in. Extreme Power Workstation® Hutch
shown assembled on Roller Cabinet**

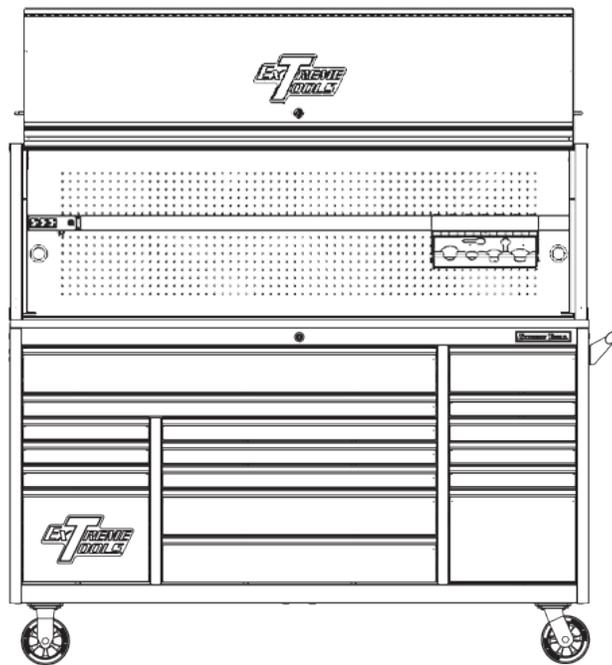

MAINTENANCE

Lubricate the casters once a year with high quality ball bearing grease.

Lubricate the slides twice a year with high quality, petroleum-based lubricant. This may be required more often if operating the tool box in colder climates.

Use mild detergent and water to clean drawer fronts, drawer trim and other surfaces.

Grease and oil can be removed with standard, non-abrasive, non-flammable cleaning products.

Auto wax will help preserve the unit's high gloss finish. Follow directions as provided.

SAFETY



Do not attempt to lift the cabinet by its side handle using chains, ropes or lifting device.

Side handle may fail resulting in personal injury or damage to the product!

Use a forklift or similar lifting device with forks placed under the bottom of the tool box to move if tool box cannot be moved by two people.

Close the drawers and lock the tool box before moving this product! If drawers are not locked they could open and make the product unstable and tip which may cause personal injury or damage to the product.

Do NOT stand on this product or lean on the drawer or work top.

Wear safety glasses when removing or repositioning the slides. The tool box could slip resulting in personal injury.

Do NOT mount this product on a truck bed or other moving object. This may cause personal injury or product damage. Mounting this product on any surface will void the warranty.

Do NOT tow with power equipment. The product could tip which may cause personal injury or product damage.

Do NOT alter this product in any manner or attach electrical equipment. This may cause personal injury or product damage and will void the warranty.

If using the combination top chest and roller cabinet, the top chest MUST be secured to the roller cabinet by following the directions provided. Not securing the top chest to the roller cabinet may cause the product to become unstable which may cause personal injury or damage to the product.



DRAWERS MUST BE CLOSED AND TOOL BOX LOCKED USING KEYS BEFORE MOVING!

The maximum weight for each drawer should not exceed 100 lbs. (45 kg) for single slides and 200 lbs. (90 kg) for drawers with double slides.

Maximum overall weight should not exceed 2,700 lbs. (1,224 kg.)

Use caution when closing the chest lid. Remove hands from the area before closing to prevent personal injury.

Do NOT pull this product. Push the product to prevent personal injury.

ENGAGE THE BRAKES when not moving this product. Locked casters prevent the product from rolling. Rolling may result in personal injury or damage to the product.

This product may become unstable and tip if more than one drawer is open at a time. To prevent personal injury or damage to product, OPEN ONLY ONE DRAWER AT A TIME.

Lock product before moving. Properly secure if moving with a forklift or other device.

Keep the product on a level surface. The product could become unstable and tip if stored or moved on an uneven surface which may result in personal injury or product damage.

Remove the work surface from the roller cabinet before installing top chest.