

# Smart Bedside Table User Manual


New design Multi-functionn smart bedside table and nightstand



# 1.Setting Guidance for Fingerprint Lock of Drawer

见附件内容

2. When the battery is dead, or the battery is loose, or there is no battery inside but it is locked, we need to use this external power supply accessory to temporarily power the lock. Therefore, please make sure to keep this temporary unlocking accessory in a safe place.

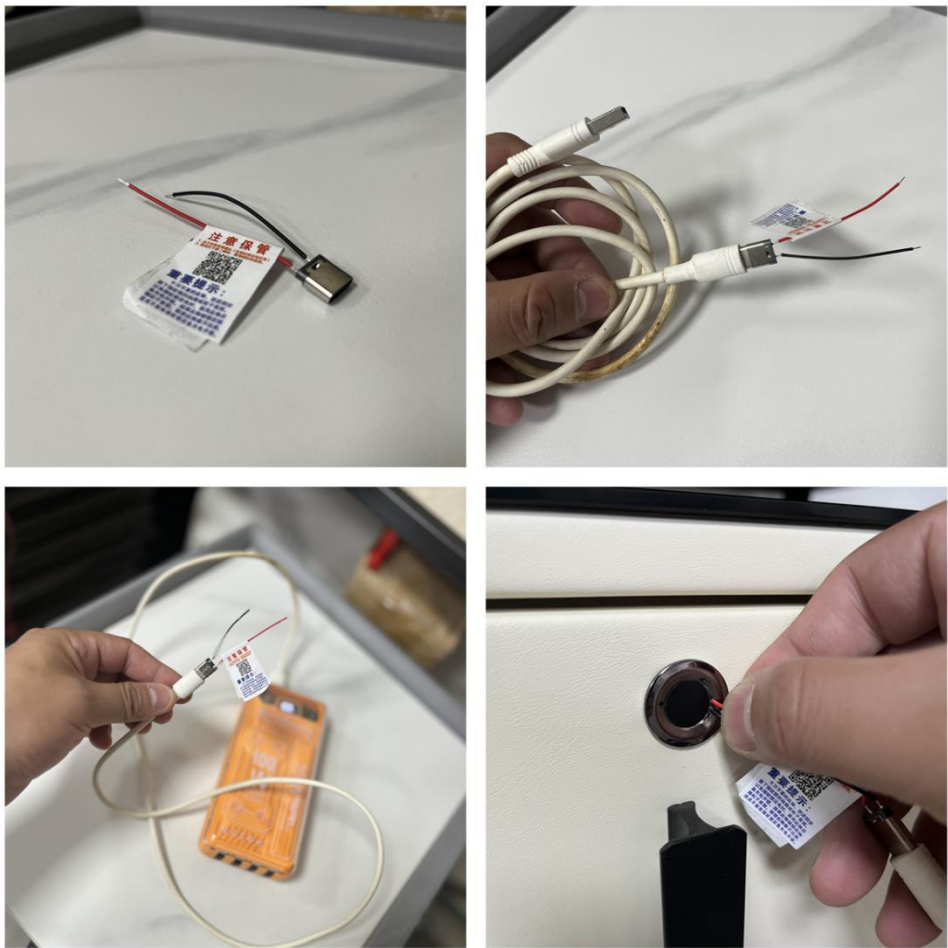

## 3. Technical parameter

|   |              |                                                                 |
|---|--------------|-----------------------------------------------------------------|
| 1 | Power supply | 3 AAA alkaline batteries, 20 times aday, can be used for 1 year |
|---|--------------|-----------------------------------------------------------------|

|   |                               |                                                                                   |
|---|-------------------------------|-----------------------------------------------------------------------------------|
| 2 | emergency power supply        | Use power bank or mobile phone charger to supply power through MicroUSB interface |
| 3 | Static power                  | 1<30ua                                                                            |
| 4 | Dynamic power consumption     | Unlock current/lockcurrent<150mA(400ms)                                           |
| 5 | Number of fingerprints stored | 20pcs                                                                             |
| 6 | Operating temperature         | -5 to 50 degrees Celsius                                                          |
| 7 | Working humidity              | 20%-80%                                                                           |
| 8 | Main structural material      | ABS                                                                               |
| 9 | Service life                  | Switch lock more than 100,000 times                                               |

## 4. Troubleshooting Fingerprint Locks

| Serial number | Fault phenomenon                                                                                              | Possible reason                                                                                                                                              | Exclusion method                                                                                                                 |
|---------------|---------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------|
| 1             | The panel doesn't respond                                                                                     | Battery dead                                                                                                                                                 | Use the power bank for emergency power supply, and reinstall the battery after unlocking                                         |
| 2             | The panel shows a green light, the lock tongue does not move, and the sound of the motor turning is not heard | The connection between the panel and the lock box is loose                                                                                                   | Re-plug the cable, or check whether the cable is broken                                                                          |
| 3             | The panel shows a green light, there is a sound of motor rotation, and the single latch does not move         | The lock tongue does not match the installation position of the lock, resulting in high friction and not smooth expansion and contraction of the lock tongue | Push the door panel inwards, then use your fingerprint to unlock, and then adjust the lock installation position after unlocking |
| 4             | Always show red light when unlocking                                                                          | 1. fingerprint comparison failed<br>2. The battery power is too low                                                                                          | 1. clean your fingers and try again<br>2. Use the power bank to supply power, and replace the battery after unlocking            |
| 5             | Failed to enroll fingerprint                                                                                  | Fingerprint texture is shallow or small area                                                                                                                 | 1. It is recommended to use                                                                                                      |

|   |                                                                          |                                                                                                              |                                                                                                                                                                                                                   |
|---|--------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|   |                                                                          | during registration                                                                                          | <p>fingerprints with clear texture such as thumb and index finger</p> <p>2. Keep your fingers clean before registering</p> <p>Try to press a larger area to facilitate reading enough fingerprint information</p> |
| 6 | When there is no operation,the panel lights up blue or red for no reason | <p>1. It may be caused by the broken skin and short circuit of the connecting wire</p> <p>2. Low battery</p> | <p>1. check whether the connection line between the panel and the lock box is in good condition,and there is no broken skin or short circuit.</p> <p>2. Replace the alkaline battery</p>                          |
| 7 | Fingerprint unlocking is not sensitive after a period of use             | Dry,sweatty,peeling fingers                                                                                  | <p>1. clean your fingers and try again</p> <p>2. Restore factory settings and re-record fingerprints</p>                                                                                                          |
| 8 | No response after battery replacement                                    |                                                                                                              | <p>1. use the power bank for emergency power supply,and change the battery after unlocking</p> <p>2. Replace the alkaline battery</p>                                                                             |

## 5. Introduction of LED lighting

(1) The LED lights come in three colors in total, yellow, white, and warm white

(2) The light switch adopts touch control, and long press can adjust the brightness of the light.



## 6. Bluetooth Speaker

Turn on the Bluetooth of the mobile phone, search for the Bluetooth signal of the machine. and enter the password to connect (Bluetooth name is **YUN CUBE**, Bluetooth PIN code is **1234**.), and then the music can be played. If you purchase 2 cabinets both with Bluetooth audio, the two cabinets are interconnected.

The way to interconnect the two cabinets:

First disconnect all the two cabinets, then turn on the power of the first cabinet, and turn on the power of the second cabinet immediately after hearing the beep. Then wait for about 30 seconds and use your cell phone to open the Bluetooth search Bluetooth, then your cell phone will receive a Bluetooth name for YUN CUBZ1 Bluetooth name, then click on connect and enter the password 1234.

(Note: 1. If the phone has been connected to this Bluetooth, to delete this Bluetooth and then follow the above steps; 2. If the search for two Bluetooth with the same name, re-press the above steps to power on the two cabinets operation)



## 7. Wireless charging and USB charging

(1) Wireless charging: If a mobile phone with wireless charging function is placed in the middle of this sign, the mobile phone will start charging. You need to make sure that your phone is with wireless charging or you will not be able to use the wireless charging feature of your phone. If your cell phone supports wireless charging, however, placed in the wireless charging marking place can not be charged, you need to properly adjust the position of the phone placed, so that the wireless charging module and bedside table wireless charging device overlap basically, due to the difference in the model of the phone, the back of the phone to receive wireless charging position is also there are differences in the position of the phone, some biased upward, but some are biased downward, so it is necessary to appropriately adjust the position of the phone to re-search for charging position, the phone should not be moved too quickly, because the phone receives wireless charging there is a few seconds of delay.



(2) USB charging: There is a USB charging port and a Type-c charging port on the side,

plug in the corresponding charging cable to charge. Note: The ports are only for charging function, USB does not come with the function of reading data.



## 7. Instructions for use of the long strip sensor light

Instructions for use of the long strip sensor light

1 Please charge before use.

2 Products without wiring, easy to install, Section widely used in bedrooms, closets, cabinets, stairs, balconies, carriages, aisle lights need to light the space.

3 This product belongs to the human body sensor light, switch toggle to the middle AUTO for the induction mode, toggle to the top ON for the constant light mode, OF for the off mode. Middle AUTO gear into the sensor mode, when people enter the 0-6 meters scanning area, the night light sensors will automatically light up, people leave 20 seconds after the lights will automatically go out.

4 built-in high-quality lithium batteries, red light when charging, electric full light red light off. Charging time is 1.5-2.5h, can be connected to a 5v cell phone charger or computer usb charging port use. Can not use more than 5v charger for charging, the product comes with a usb charging cable.

5 products with a magnetic piece, iron piece, black is a magnetic piece, attached to the lamp body. The blue color is the iron piece, stick it on the wall of the cabinet and other places you want to install. Remove it when charging. For details, please see the installation picture on the side of the box.

Note: To ensure the battery life, please charge it in time when it becomes obviously dim during use.

