

## Using the SimpleSpa Eco

### 1. Self-cleaning nozzle feature

To clean the bidet nozzle, turn the control dial counter clockwise towards the “nozzle clean” position and water will wash over the nozzles.

### 2. Bidet wash

To wash, turn the control dial to the right towards “wash”.


- The further the dial is turned, the higher the water pressure will be.
- To lower the water pressure, turn the dial back towards the center.

### 3. Adjustable nozzle position

Use the nozzle position lever to find the best angle for the ultimate cleanse.

- Moving the lever forwards will position the nozzle away from you.
- Moving the lever backwards will position the nozzle closer to you.

**TIP:** The nozzle position lever can be used during a wash to create an oscillation motion, providing a wider cleaning action.

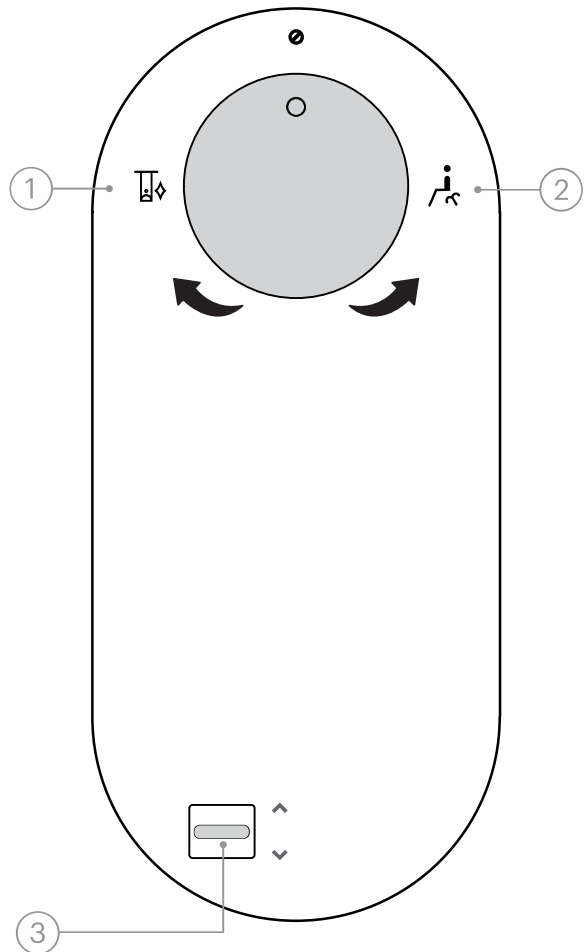

## Using the SimpleSpa Eco (Cont'd)

### **WARNING**

Risk of scalding. High water temperature can cause severe burns. Be sure to set the water temperature for your hot water heater at or below 120°F (49°C) and use extreme caution when mixing hot and cold water during use.

Brondell is not liable for any misuse of product or failure to use caution when connecting to hot water.

#### To adjust temperature (SSE-25 dual temperature model only)


- To increase water temperature, slowly turn the temperature to the right until the desired temperature is reached.
- To decrease water temperature, turn the temperature to the left until the desired temperature is reached.

#### NOTES:

There may be a delay in the warm water reaching the bidet attachment as the cold water in your pipes clears and is replaced with hot water (similar to the delay when you turn your faucet on).

If only connected to cold water, make sure that the temperature dial on the bidet is turned as far to the left as possible for best pressure adjustability.

**TIP:** For a quick and easy way to get warm water to the bidet, run the “nozzle cleaning” function with the warm water turned on for a short time until the water heats up, then use as normal.

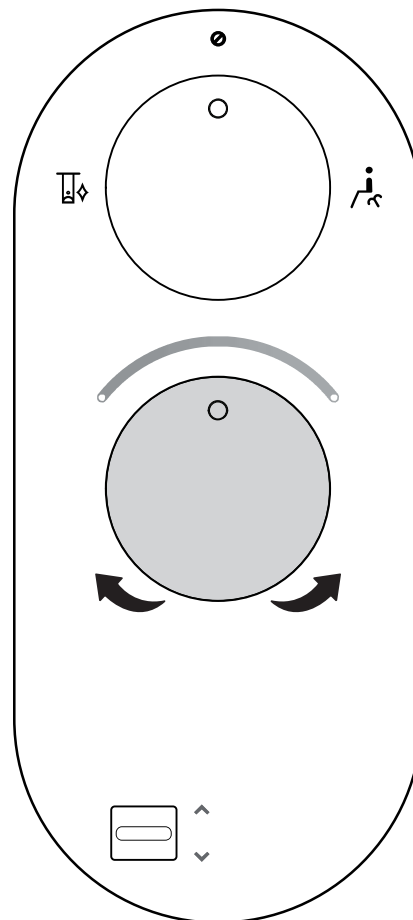

## Maintenance

### **Manual nozzle cleaning**

To deep clean the nozzle, gently turn the Bidet Wash dial towards the wash icon—just enough for the nozzle to appear. Grab and slowly pull the nozzle out of the guard and return the Bidet Wash dial to the “off” position to stop the flow of water. Use a toothbrush or soft cloth and mild detergent (such as dish soap) to clean the nozzle and release when finished.

### **Cleaning the bidet attachment**

To clean the SimpleSpa Eco Adjustable Bidet Attachment, use a mild cleaner such as dish soap or a diluted mix of vinegar and water. Do not scrub or use harsh, abrasive products to clean the SimpleSpa Eco as they may scratch the product.

### **Short term non-use**

If the product will not be used for more than a few weeks, you may consider shutting the water supply off at the wall for extra precaution.

## TECHNICAL INFORMATION

# Product Specifications

SIMPLESPA ECO THINLINE BIDET ATTACHMENT WITH ADJUSTABLE SINGLE NOZZLE	
Models	SSE-15, SSE-25
Supply Water Pressure	14.5 psi–116.03 psi / 0.1 MPa–0.8 MPa
Dimensions (L x W x H)	15.43" x 9.96" x 3.33" / 39.2 cm x 25.3 cm x 8.45 cm
Weight	SSE-15: 1.28 lb / 0.58 kg SSE-25: 1.71 lb / 0.78 kg
Product Thickness	0.33" / 0.85 cm
Incoming Water Temperature Range	32°F–158°F / 0°C–70°C
Flow Rate	0.39 g/min / 1.47 L/min

Note: The specifications listed above are subject to change without prior notice for reasons of improving the product performance.