



E-3000

Installation Manual

Whole House Filter & Softener Combo

kindwater.com



Scan me for 15% off
Autoship Replacement
Cartridges!

Have questions? Call us: 888-614-5559

Congratulations your purchase of the **Kind Water Systems E-3000** Whole House Water Filter & Water Softener Combo! Please visit kindwater.com/educationcenter if you have any questions about your system.

Our friendly water filtration specialists are also available by calling 888-614-5559 during normal business hours!



Max Flow Rate:	up to 15 GPM (Gallons Per Minute)
Max Capacity:	up to 5 Bathrooms
Max Hardness:	1282 PPM or 75 GPG
Connection Size:	1"
Operating Pressure:	25 to 120 PSI
Operating Temp:	36° to 120° F
pH Range:	6.5 to 9.5
Max Iron	= 0 mg/L
Max Hydrogen Sulfide	= 0 mg/L

**Watch our
installation video!**



Contents

Items Included	2
Easy Assembly and Installation	3
Typical Installations.....	5
Regular Maintenance	6
Filter Replacement	6
Installation	7

Items Included:

Kind E-3000

A



Mounting Bracket

B



20" Housings
w/ Cover Manifold

C



Sediment Filter

D



Chlorine/
Chloramine Filter

E



eSoft Cartridge

F



(12) Machine Bolts and
Washers

G



(3) Lag Bolts & Washers

H



(3) Tapcon Screws & Washers

I




Spanner Wrench

J



5mm Allen Wrench

K

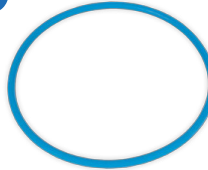

(3) O-Rings

L



(3) Silicone Lubricant

PLEASE NOTE

Ensure all cartridges are centered and properly seated down into housing.



Easy Assembly and Installation

- 1 Open package and account for all items before starting installation.

Note: Remove and recycle all cardboard used for packaging.

- 2 Determine the location and water flow direction for the system.

- 3 Turn off the main water supply line to the home.

- 4 Open the nearest faucet (cold water) and leave it open.

Note: Ensure water comes to a stop, this will help verify the main water supply is off.

- 5 Install mounting bracket **A** horizontally to the wall using supplied fasteners.

Note: Be sure to level mounting bracket and properly attach to a wall stud or cement block, ensuring a secure mount. Lag Bolts (G) require a 1/4" drill bit not included. Tapcons (H) require a 5/32" drill bit not included.

- 6 Once the mounting bracket **A** is level and properly mounted, remove the cartridge housings from the cover manifold and install manifold **B** to the mounting bracket orientating the INLET and OUTLET from left to right as marked on the manifold. Use item **F**, (12) stainless steel machine bolts, and washers to attach.

- 7 Apply a thin layer of lubricant **L** onto each o-ring **K**. Insert the lubricated O-ring into the groove located at the top edge of the cartridge housing. Thread housings back onto the corresponding cover counterclockwise. Snug housings using the supplied wrench **I**, do not over-tighten.

- 8 Adapt your plumbing connections as needed to the INLET and OUTLET (not included).


Note: When making your threaded connections to the INLET and OUTLET it is necessary to use both Teflon Tape and Thread Sealant - We recommend Rectorseal TRU-BLU which is available at all big box stores.

Note: Plumbing a shutoff valve prior to system and a bypass is recommended, see Typical Installation Diagram.

- 9 Slowly turn on the main water supply to fill housings.

- 10 Allow the open faucet to run (cold water) for 10 minutes to flush the system.

- 11 Turn off the faucet and check for leaks, your system is now ready for use!

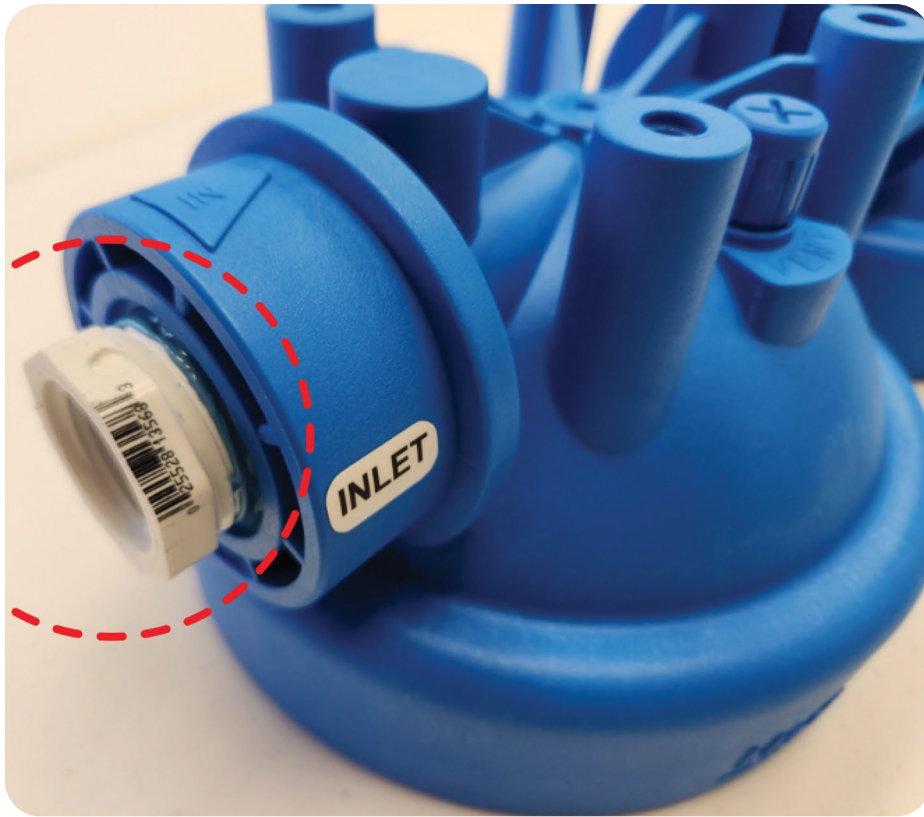


WARNING!

DO NOT OVERTIGHTEN FITTINGS INTO MANIFOLD!

- Per the manual (page 3), we recommend using Teflon tape and thread sealant (we recommend Rectorseal TRU-BLU).
- Overtightening can cause the manifold to split, rendering it useless. Note that fittings do not need to be fully seated into the manifold when using tape and sealant.
- Damage of this sort is NOT covered by warranty.

Need help? Call 888-614-5559

Typical Installations

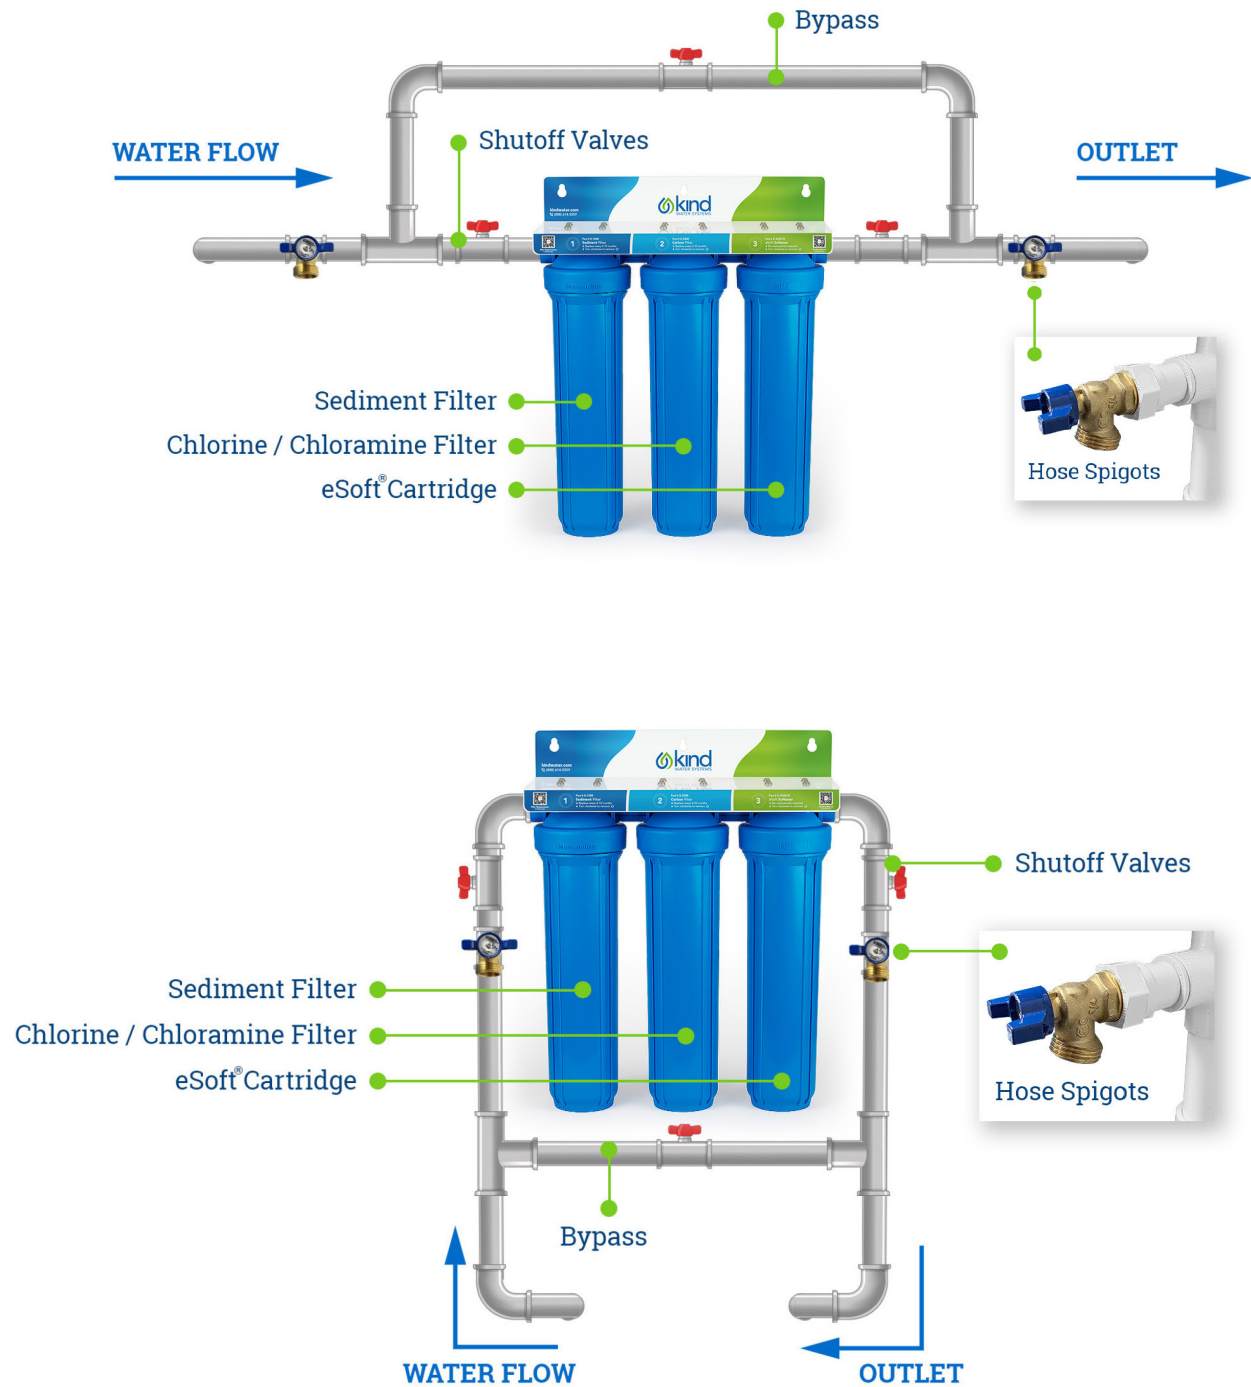

Regular Maintenance

The Sediment and Chlorine/Chloramine Filters will need to be replaced every 12 months.


Note: Depending on water quality



Join our convenient **Kind AutoShip program** at kindwater.com/autoship.

Product Numbers:
E-100R/E-200R

Filter Replacement

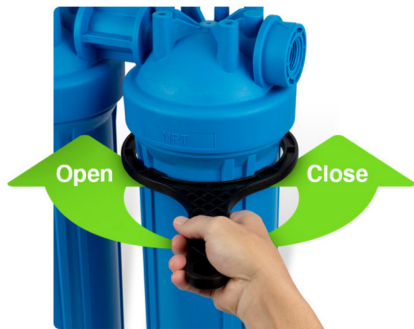

PLEASE NOTE

Ensure all cartridges are centered and properly seated down into housing.



- 1 Turn off main water supply.
- 2 Open the nearest cold water faucet and leave open.
- 3 Apply wrench to cartridge housing & turn clockwise to loosen (to the left).
- 4 Remove and discard used o-ring and cartridge.
- 5 Unwrap and install a new cartridge centering on stand pipe.
- 6 Install a new o-ring lubricated with food grade silicone lubricant (Included).
- 7 Re-install housing cartridge counter clockwise and tighten (do not over tighten).
- 8 Turn main water supply on slowly to allow the system to fill, the air will expel through the open faucet.
- 9 Run water at the nearest cold water faucet for 10 minutes to flush the system.
- 10 Close faucet and check for leaks.

If you are looking for replacement parts, or need help, please visit kindwater.com/replacements, or call [888-614-5559](tel:888-614-5559) during normal business hours.



Warranty Information

Visit kindwater.com/store-policy for all up to date warranty information.

All Kind Water Systems are automatically registered for full warranty upon checkout. There is no additional action needed by the consumer.



 888-614-5559

Monday – Friday:

8:30 AM – 8:00 PM EST

Saturday:

9:00 AM – 5:00 PM EST