



# Commercial Dehumidifier

Please read the manual carefully  
before using the unit


PDGT701BA

## USER MANUAL



# BEFORE FIRST USE:

To prevent any internal damage, it is very important to keep refrigeration units (like this one) upright throughout their journey. Please leave it standing upright and outside the box for **24 HOURS** before plugging it in.

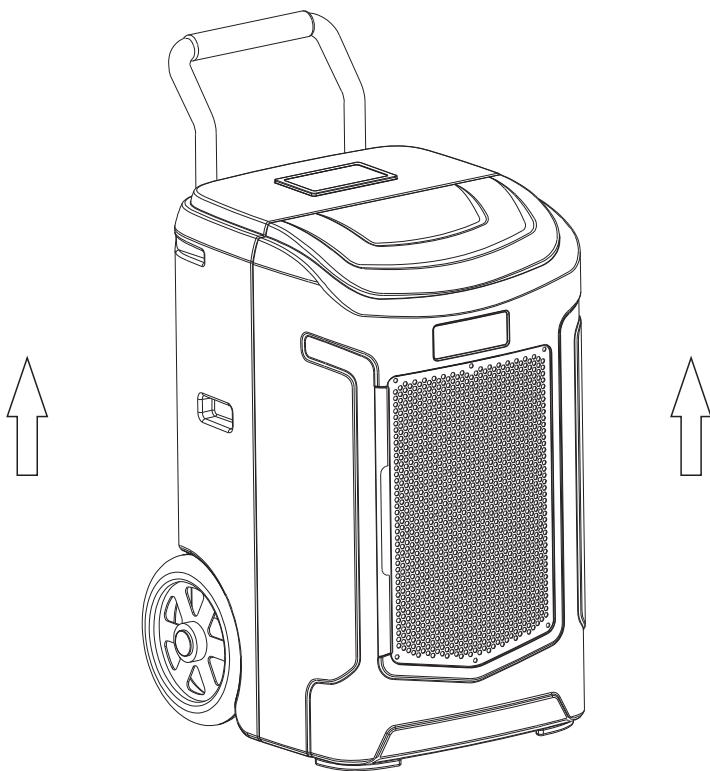

## FOR CUSTOMERS

Thank you for purchasing our dehumidifier.

**Waykar** wishes our products and services can bring convenience to your work and life.

We highly recommend you to keep the manual for reference, in case you encounter unexpected issues using this unit.

Please read the manual carefully to ensure proper use of the dehumidifier.

Our dehumidifiers are widely used in family bedrooms, bathrooms, basements, offices and storage rooms, etc.

It can be operated quickly and efficiently to reduce the room's humidity and bring you a healthy and comfortable life.

## To Access Customer Support Faster

If there is any problems of the product, please contact Waykar Customer Service at [support@waykar.com](mailto:support@waykar.com) with your Purchase Order ID, we will dedicate our efforts to help you address the problems.

# CATALOG

Precaution For Use.....01

Product Structure..... 02

Control Interface.....03

Operation Instructions.....04

Cleaning and Maintenance.....12

Common Faults and Solutions ..... 13

Safety Note..... 15

Technical Parameters.....16

Warranty & Contact Information .....17

## Statement

The graphics and functions provided in this manual may not be the same as the actual product. Please always refer to the actual product.

The model of the machine on the manual is for reference only. Please operate the machine based on the actual product.


The right to interpret the relevant terms belongs to the company.

## PRECAUTIONS FOR USE


### Safety Notes:

For your safety, please read the manual carefully and keep the manual before you use the product for reference. Please use this product according to the installation and operation instructions of this manual.


- Install the dehumidifier on flat surface to minimize vibration and/or noise.
- Inspect the power cord before use. Never operate the dehumidifier when the power cord or plug is damaged.
- Insert the three-prong plug on the power cord into a matching electrically grounded outlet (120V/60Hz, 15A at least). Do not use an adapter. Never cut off the third prong. Do not use an extension cord.
- Do not operate the dehumidifier in standing water. Keep motor and wiring dry.
- Never immerse the dehumidifier into water or other liquids.
- Do not put the dehumidifier close to heat-generating devices, including flammable or dangerous materials.
- Unplug the power supply before cleaning or storing the dehumidifier. Always grasp the plug (not the cord) to unplug.
- Do not put fingers or other items into air inlet or air outlet.
- Never insert any other objects into the dehumidifier body.
- Do not sit, stand or put heavy objects on the dehumidifier.
- This dehumidifier should only be used by adults who have read the manual and understand the operating procedure of the dehumidifier.
- The dehumidifier is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction by an adult.
- Never repair or remove plug and or power cord.  
Any repairs should be completed by qualified electrician or distributor.

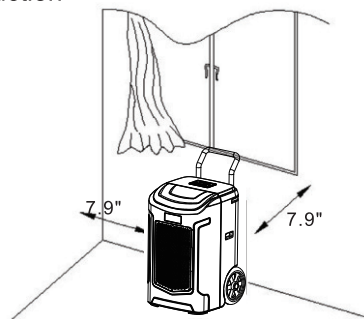


PRODUCT  
STRUCTURE

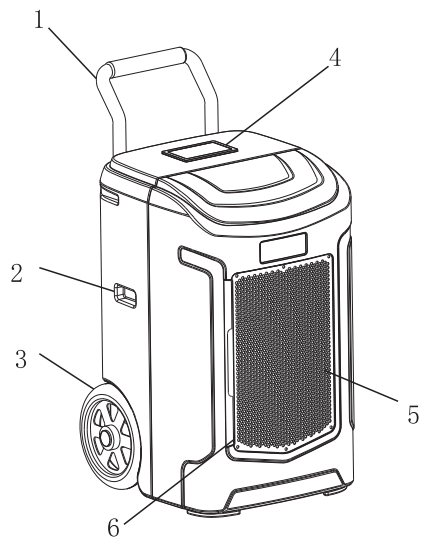


- |                 |             |              |
|-----------------|-------------|--------------|
| 1.Handle Bar    | 2.Handle    | 3.Wheels     |
| 4.Control Panel | 5.Air Inlet | 6.Air Filter |

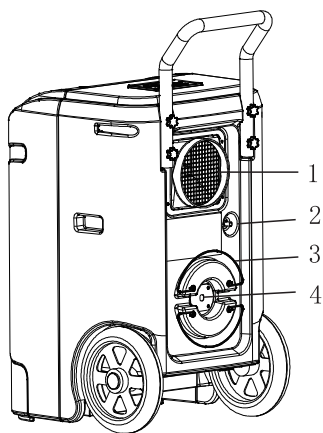

- |                   |                     |                          |
|-------------------|---------------------|--------------------------|
| 1.Air Outlet      | 2.Pump Drain Outlet | 3.Cord Winder            |
| 4.Power Cord Port | 5.Pump Reservoir    | 6.Emergency Drain Outlet |

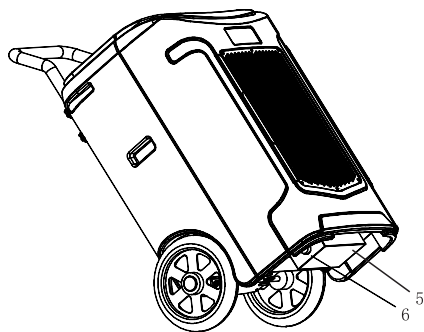

# 1.Understand the Control Panel

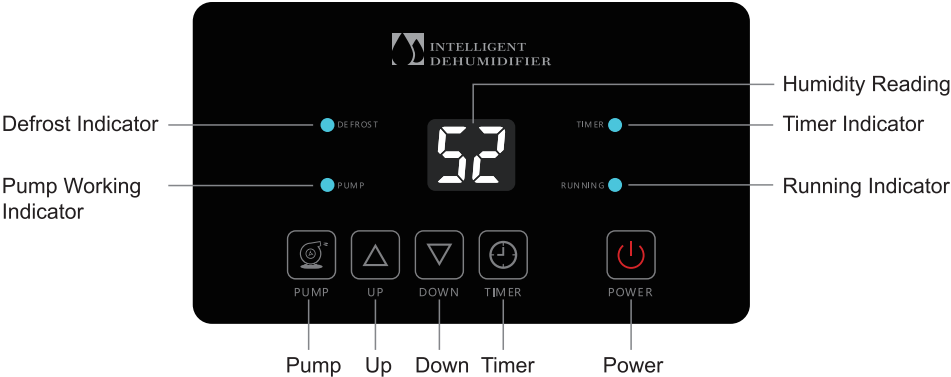

| Button Instruction |                                                                                                                       |
|--------------------|-----------------------------------------------------------------------------------------------------------------------|
|                    | <b>Up Button</b><br>Setting the humidity up.                                                                          |
|                    | <b>TIMER Button</b><br>Press to enable the timer function or confirm the timer settings.                              |
|                    | <b>DOWN Button</b><br>Press to decrease the set-point of humidity level or timer.                                     |
|                    | <b>PUMP Button</b><br>Press and hold the PUMP button for 3-5 seconds to empty water from the pump reservoir manually. |
|                    | <b>POWER Button</b><br>Press to turn ON or OFF.                                                                       |



## 2.Setting

### Setting Humidity

- The humidity level can be set within a range of 10%RH to 98%RH in 1% increments.
- When it starts work, it will first automatically detect and show the room's humidity. Press the "UP" button to change the humidity selection in 1% increments. Press "DOWN" to make it decrease by 1%RH. "52" Flash and show the setting humidity.
- When the humidity level is set at 30%RH, the dehumidifier will work at continuous dehumidifying mode.
- Press the "function" button once or no button operation for a few seconds will automatically exit the humidity setting state.

### Timer Setting

In the power on or standby state, press the "Timer" button once to enter the timer setting state: Timing indicator light up and the digital number "52" flashes to show the time.

In the timing setting state, press the "Up" or "Down" button to set the desired time (setting range: 01-24h, can be cycled).

Press the button once again or no button operation for a few seconds, the timing setting state will automatically be exited.

If the time is set to be 00, the time setting is invalid.

### Pump Function

- When water tank is full, the PUMP will automatically start pumping water, and the indicator light will flash.
- When the water level in the water tank is too low, the PUMP will automatically stop pumping water, and the indicator light goes out.
- In the power-on state, long press the "PUMP" button for 3 seconds, the PUMP function is forced to open, the indicator PUMP will flash.  
When the water tank is empty, the pump does not start forcibly and the indicator light does not light up.

### **Auto Defrost**

When the frost builds up on the evaporator coils, the compressor will cycle off and the fan will continue to run until the frost disappears.

### **Auto-Restart**

If the dehumidifier shuts off unexpectedly due to power being cut, the dehumidifier will restart with the previous function setting automatically when the power resumes.

### **Auto Drain**

Thanks to the built-in pump, the dehumidifier will drain the condensation water automatically.

### **Wait 3 Minutes before Resuming Operation**

To avoid any damage to the dehumidifier, the dehumidifier will not start operation following a complete cycle until after 3 minutes. Operation will automatically start after 3 minutes.

**Note:** If the dehumidifier has been turned off before power outage, the dehumidifier will not auto restart after the power resumes.

### 3. Display Status Description

- When the machine is defrosting, the defrost indicator ● DEFROST will be flashing, defrosting end the light goes out.
- When the pump is draining, PUMP Indicator ● PUMP will be flashing.
- When set or check the timer, the timer indicator ● TIMER will be flashing.
- When the timer is setup properly the indicator ● TIMER will light up, light goes out when timer function is not activated.
- When the fan delays to start, running indicator ● RUNNING will be flashing; it will light up when the fan is running.
- 1. Digital number will be flashing when the target humidity is setting or the room humidity is lower than the set humidity.  
2. When the setting value is read out to be lower than the room humidity, the digital number will remain illuminated.

## 4.Error & Protection Code

| Number | Error Code | Name of The Fault     | Note                                                                                                                                                                                                                                                                                                                                                    |
|--------|------------|-----------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1      | EP         | Water pump failure    | <p>1.Turn off the dehumidifier and unplug it;</p> <p>2. Find the gravity drain outlet at the bottom of the dehumidifier and connect the emergency hose to drain;</p> <p>3.After emptying the reservoir, close the gravity drain outlet;</p> <p>4.Connect the pump drain hose;</p> <p>Re-plug and start the dehumidifier to check the pump function.</p> |
| 2      | EC         | Control Panel Failure | <p>The dehumidifier will not be ready for operation.</p>                                                                                                                                                                                                                                                                                                |

### Attention

When the machine signals the alarm, it will flash or display the alarm, in case there are multiple errors on the unit, it will display the errors in turn.

When one of above malfunctions occurs, the buzzer will alarm for a few seconds, press any key during the alarm to release the alarm sound.


If the malfunction is still present, please don't hesitate to contact Waykar Customer Service email: [support@waykar.com](mailto:support@waykar.com) for help.

#### Note:


Before starting the machine, please ensure that the air outlet has been opened, otherwise the machine will overheat. Do not pull out the power cord directly to stop the machine.

## 5.Installing the Handle

1. Take out 4 screws and a handle from the accessories, and put the handle into the groove at the back of the humidifier, making the screws correspond to the screw holes.
2. Tighten all the four screws on the hands respectively, the installation is finished.

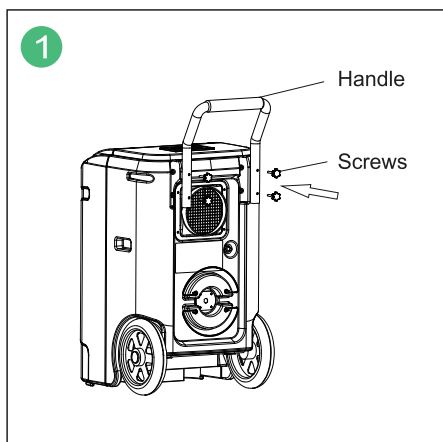

Put the handle into the groove at the back of the dehumidifier, making the 4 screws correspond to the screw hole.

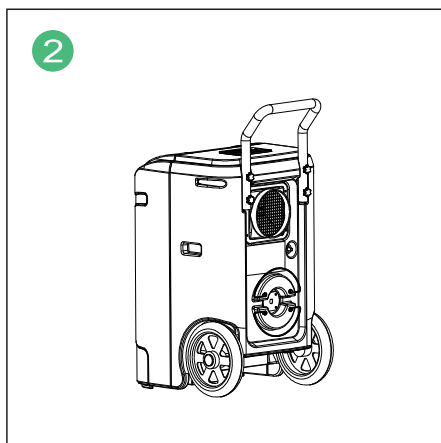

Tighten all the four hand screws , complete the installation.

## 6. Continuous Drainage

This dehumidifier has an internal pump that will automatically drain the condensate out via the long drain hose. Before turning on the dehumidifier, make sure the hose has been connected to the drain outlet properly.


1. Uncoil the entire hose;
2. Attach the hose to the drain outlet;
3. Place the unattached end of the hose in a sink, drain bucket or outdoors: Anywhere that the water can drain out safely (Please ensure that no kinks or other obstructions will stop the water to flow).

### NOTE:

- Ensure that water which runs to outdoors does NOT create a slip hazard.
- If you use a bucket or other container for water collection, check it regularly to prevent overflows.
- The drain hose for the water pump can drain up to 15ft vertically. More than 15ft may cause water back up to the pump resulting in leakage.
- When turning off the dehumidifier, please take the hose out from the water collection container to avoid the water back-flow and cause water leakage.

## 7.Manual Drainage

In power-disconnected status, tilt the dehumidifier as the figure shown, pull out the rubber plug and put the dehumidifier straight to drain the sewage in the water tank.

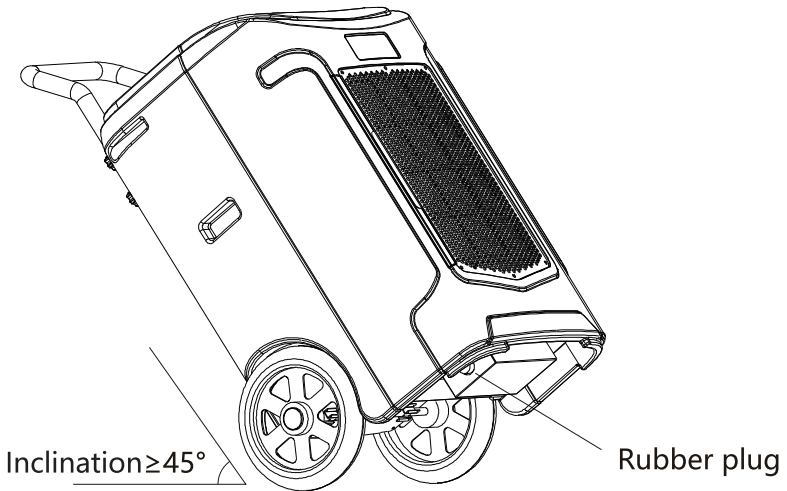



## CLEANING AND MAINTENANCE

### ⚠ WARNING:

Turn the dehumidifier off and remove the plug from the wall outlet before cleaning.

### A-Cleaning the Dehumidifier


Clean the dehumidifier housing with a soft damp cloth. Do not submerge or place water on the dehumidifier or control panel. Water may damage the electronic components of the dehumidifier. Do not use chemical solvents such as benzene, alcohol, gasoline or other heavy-duty cleaners. The surface may become damaged or deformed.

### B-Cleaning the Air Filter

The working performance of the dehumidifier will be greatly reduced if the filters become blocked. Please check and clean the filter regularly.

To Clean the Filter

- 1) Slide the filter out.
- 2) Vacuum any dirt from the filter using the vacuum cleaner and air gun attachment.
- 3) Immerse the filter into lukewarm water (about 104°F) with a mild detergent, and then wash it and allow it to dry.
- 4) Once dry, re-install the filter into the dehumidifier.

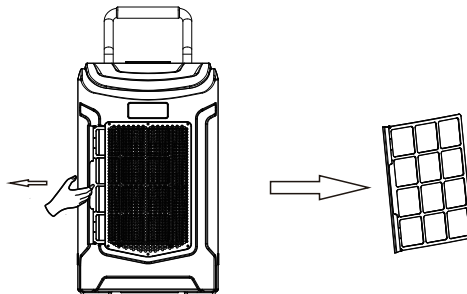

### C-Dehumidifier Storage & Transportation

When you want to store the dehumidifier because you don't use it for a long time. Please pay attention to the following steps:

- 1) Press and hold the PUMP button for 3-5 seconds to empty the water in the pump reservoir before transportation or storage.
- 2) Transport and store the dehumidifier upright.

# COMMON FAULTS AND SOLUTIONS

Check the information below for troubleshooting steps that will save you time to resolve issues that may happen with the unit.

The list includes most issues but not the results of defective unit, crafts or materials in the unit. If all the troubleshooting steps have been exhausted and issue is stilling occuring, feel free to get in touch with Waykar Customer Service to get further assistance.

| Problem                                 | Reason                                               | Method                                                  |
|-----------------------------------------|------------------------------------------------------|---------------------------------------------------------|
| Dehumidifier does not operate           | Lack of electrical power                             | Check the power supply                                  |
|                                         | Not turned on                                        | Turn it on                                              |
|                                         | Unit has ever been turned off in 3 minutes           | Wait for about 3 minutes till the unit auto start       |
|                                         | Target humidity setting is higher than room humidity | Set a lower target humidity value                       |
| Dehumidifier removes little water       | Insufficient working time                            | Allow more working time                                 |
|                                         | Filter is blocked                                    | Clean filter                                            |
|                                         | Low room temperature                                 | Heat up the room                                        |
|                                         | Airflow has been blocked                             | Make sure the air inlet and outlet is away from objects |
| Dehumidifier operating but room not dry | Doors and windows are open                           | Seal room from external areas                           |

# COMMON FAULTS AND SOLUTIONS

|                                                                                   |                                                                          |                                                                                                                                                             |
|-----------------------------------------------------------------------------------|--------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Leaking                                                                           | The dehumidifier is titled.                                              | Place the dehumidifier on flat surface.                                                                                                                     |
|                                                                                   | Drain hose connection is not tight                                       | Make sure the drain hose connection is tight                                                                                                                |
|                                                                                   | The drain hose is blocked                                                | Check hose for restrictions                                                                                                                                 |
| Noise                                                                             | The dehumidifier is titled                                               | Install the dehumidifier on flat surface to minimize vibration and noise                                                                                    |
|                                                                                   | The filter is blocked                                                    | Clean the filter                                                                                                                                            |
| The pump does not drain                                                           | The pump reservoir is not in place                                       | Place the pump reservoir at the correct position                                                                                                            |
|                                                                                   | The pump is defective                                                    | Replace the pump                                                                                                                                            |
|                                                                                   | The pump reservoir gets dirty                                            | Clean the pump reservoir                                                                                                                                    |
| Humidity always shows "10%RH"(there is a big difference from the actual humidity) | Humidity sensor failure?                                                 | Set the humidity to 10%RH,the dehumidifier can still continue to work, and can be used normally.                                                            |
|                                                                                   |                                                                          | Repair and replace the humidity sensor.                                                                                                                     |
| Humidity always shows "99%RH"(there is a big difference from the actual humidity) | 1.Water on the surface of humidity sensor?<br>2.Humidity sensor failure? | The dehumidifier is not affected and can continue towork, and can be used normally.                                                                         |
|                                                                                   |                                                                          | Please let the dehumidifier keeps working for a period of time, after the water on the surface of the humidity sensor is removed, it will return to normal. |
|                                                                                   |                                                                          | Repair and replace the humidity sensor.                                                                                                                     |


## Warning:

If the dehumidifier is still not working properly as expected and the troubleshooting steps or solutions above may not resolve the issues, please unplug the power and shut down the dehumidifier, then contact Waykar customer service via [support@waykar.com](mailto:support@waykar.com).


# SAFETY NOTE



- ① When using, make sure doors and windows are closed to get the best humidity removal effect.

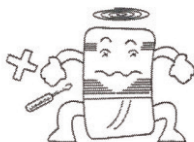

- ② Do not insert thin rods and hard objects into the fuselage to avoid malfunction and danger.

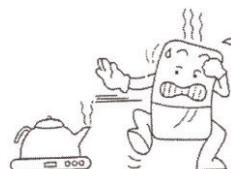

- ③ When using, please keep the machine away from heating furnace, electric kettle and other heat sources.



- ④ When cleaning the dehumidifier fuselage, please use wet cloth or textile to wipe the unit's surface gently, do not splash water on the unit directly.




- ⑤ Please do not put objects around the body. If the ventilation is blocked, the dehumidification effect will be affected.



- ⑥ If do not use the product for a long time, please unplug the power cord.



- ⑦ When on continuous drainage, make sure the drainage pipe is placed horizontally on the ground. Avoid the pipe to be on uneven surface or in an arch position.

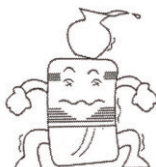

- ⑧ Please do not put any object on the dehumidifier.



- ⑨ Please clean the filter every two weeks (do not use hot water above 104°F, gasoline or toluene).



- ⑩ When continuous drainage, the drainage pipe must be placed horizontally, cannot be an uneven and winding situation.



- ⑪ After cleaning the filter, do not dry the unit under direct sunlight to avoid filter deformation.



- ⑫ Before moving and carrying the machine, please first pour out the water in the tank.

TECHNICAL  
PARAMETERS

|                              |                        |
|------------------------------|------------------------|
| MODEL NO.                    | PDGT701BA              |
| POWER SOURCE                 | 120V~ 60Hz             |
| RATED POWER(95°F,90%RH)      | 1150W                  |
| RATED CURRENT(95°F,90%RH)    | 10.3A                  |
| MOISTURE REMOVAL(65°F,60%RH) | 50 Pints/Day           |
| MOISTURE REMOVAL(80°F,60%RH) | 90 Pints/Day           |
| MOISTURE REMOVAL(86°F,80%RH) | 150 Pints/Day          |
| MOISTURE REMOVAL(95°F,90%RH) | 180 Pints/Day          |
| INPUT POWER(65°F,60%RH)      | 610W                   |
| INPUT CURRENT(65°F,60%RH)    | 5.5A                   |
| IEF (65°F,60%RH)             | 1.60 liters/kWh        |
| MOTOR FLA                    | 0.92A                  |
| MOTOR COMPRESSOR             | RLA:6.25A LRA:39.0A    |
| REFRIGERANT                  | R410A(20.11ozs) (570g) |
| MAXIMUM ALLOWABLE PRESSURE   | 6.2MPa                 |
| HIGH PRESSURE                | 4.0MPa                 |
| LOW PRESSURE                 | 1.7MPa                 |

 WARNING:

This product can expose you to chemicals including Styrene and its compounds, which is known to the State of California to cause cancer and birth defects or other reproductive harm.

For more information, please visit: [www. P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)

## Warranty

---

Waykar offers a 12-month warranty to all of our products together with the original proof of purchase when a defect occurred, including those newly purchased and unused, from Waykar or through an authorized reseller, wholly or substantially, or as a result of faulty manufacturing parts, or workmanship during the Warranty Period.

The warranty does not apply if damage is caused by other factors, including but without limitation of:

- (a) Normal wear and tear;
- (b) Abuse, mishandling, accident or failure to follow operating instructions;
- (c) Exposure to liquid or infiltration of foreign particles;
- (d) Servicing or modification of the product other than by Waykar.

These are our general terms for the warranty service, but we always suggest our customers to reach out to us with any issue, regardless of warranty terms. If you experience an issue with a Waykar product, please contact us at [support@waykar.com](mailto:support@waykar.com), we will dedicate our efforts to resolve it for you.

## Extend Your Warranty by 1 Year

---

Register your product at **[www.waykar.com](http://www.waykar.com)** to extend your 1-year warranty by an additional year.

\*Please fill out all required fields and include your Order ID, Date of Purchased if applicable.

## Customer Support

---

If you have any questions or concerns about your product, please feel free to contact our expert support team. Waykar customer service is here to help.

### Waykar Office

805 Victory Trail Rd, Gaffney, SC, 29340 USA

Email: [support@waykar.com](mailto:support@waykar.com)

Live Chat: [www.waykar.com](http://www.waykar.com)

### Support Hours

24 Hours available

\*Please have your order number before contacting customer support.





# waykar

For FAQs and more information please visit:  
**[www.waykar.com](http://www.waykar.com)**



**@Waykar**



**@Waykar**



**@Waykar**



**@Waykar**



(Scan the QR Code for Live Chat)

We are expecting to see our products fulfill your life and hear your voice.

Your satisfaction means a lot to us.

Please tag us if you share a snap on your social media.

**[www.waykar.com](http://www.waykar.com)**