ASSEMBLY AND INSTALLATION INSTRUCTIONS

OX-CHU009 / OX-CHU012

WARNING: BE SURE TO SHUT OFF POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE INSTALLING OR SERVICING THIS FIXTURE.

NOTE: 1. Before installing, consult local electrical codes for wiring and grounding requirements.
2. READ AND SAVE THIS INSTRUCTION.

1. Attach the nipple to the mounting strap, then secure it with a washer and hex nut.
2. Attach the mounting strap to the outlet box by using two mounting screws.
3. Secure the top loop to the nipple.
4. Secure the short threaded side of the stem into the coupling of the holder.
5. Slip the cover, a cap with the open side facing upward, center pipe, another cap with the open side facing downward, fixture canopy and big metal pad through the stem, secure them together with a washer, coupling and loop.
6. Take a decorative arm and thread one end through the holes in fixture canopy and big metal pad, secure it with a small metal pad and hex nut. Then align the hole in the other end of the decorative arm with the stud on the lower arm, secure it with a bolt nut. See the graph for correct position. Repeat with other decorative arms.
7. Choose the length of the chain you need, then weave the fixture wire and the fixture grounding wire through the chain, collar and canopy.
8. Connect one end of the chain with the loop by using a loop lock.
9. Connect the other end of the chain with the top loop by using another loop lock.
10. Thread the fixture wire and fixture grounding wire through the top loop, nipple and mounting strap.
11. Pull out the outlet wires and house grounding wire from the outlet box. Make wire connections using the wire nuts:
    ---The smooth wire (marked) from the fixture to the black wire from the power source.
    ---The ridged wire (unmarked) from the fixture to the white wire from the power source.
    ---Attach the fixture grounding wire to the mounting strap with the green grounding screw. Then connect it to the house grounding wire with a wire nut.
    Carefully put the wires back into the outlet box.
12. Attach the canopy to the mounting strap by inserting the top loop, then secure it with the collar.
13. Attach the glass shades and spacers to the glass holders, then secure them with socket rings, using supplied socket ring fixer.
14. Install bulbs (not included). See relamping label at socket area or packaging for maximum allowed wattage.
15. Turn on the power at the main fuse or circuit breaker box.

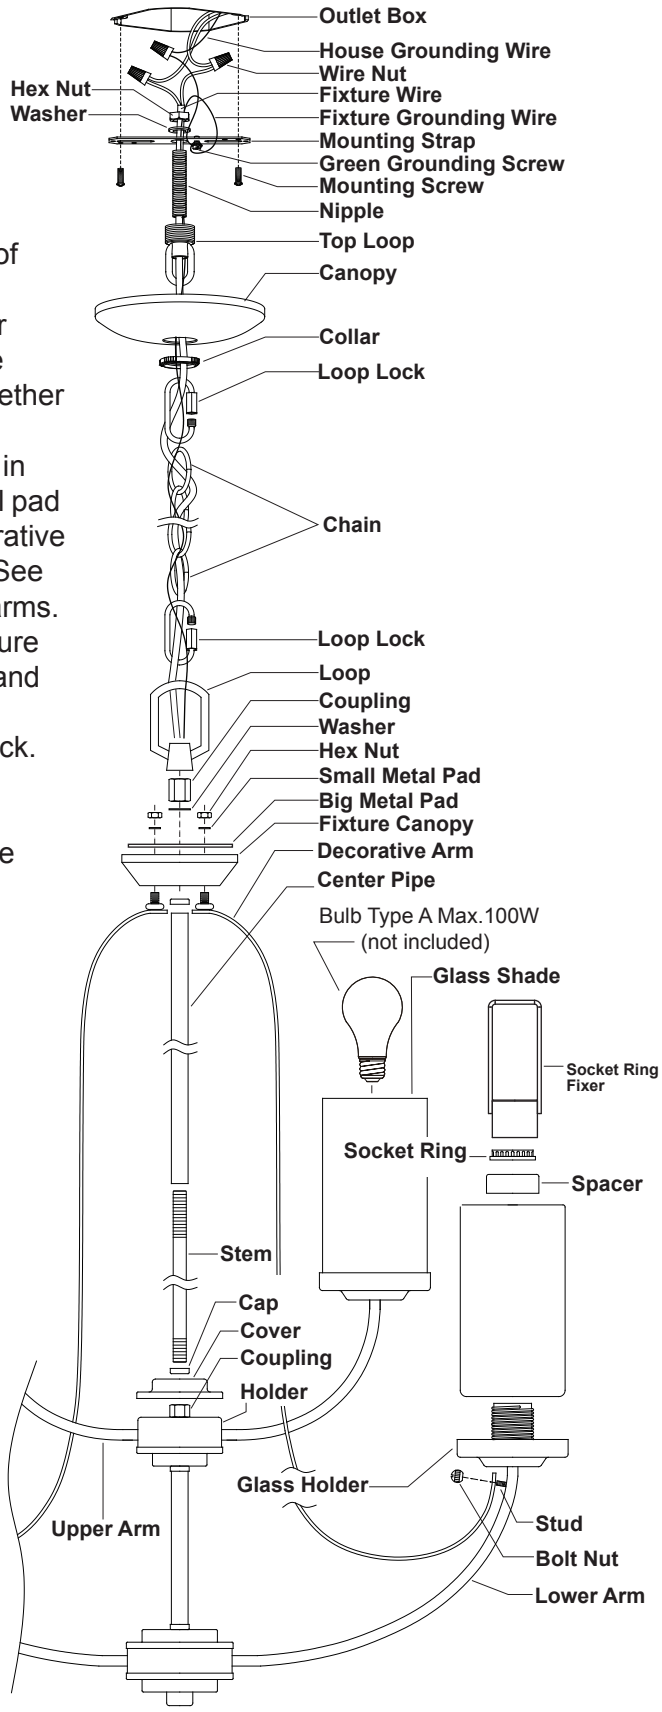

VAXCEL LIGHTING

081203