INSTRUCTION MANUAL

Model: A02

Please scan the code to watch the installation video

PARTS LIST

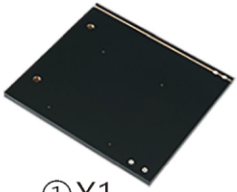

①X1
Left side panel
14.4*13.1*0.6in

②X1
Right side panel
14.4*13.1*0.6in

③X1
Left trim panel
13.1*1.96*0.6in

④X1
Right trim panel
13.1*1.96*0.6in

⑤X1
Rear trim panel
18.03*1.96*0.6in

⑥X1
Main panel
19.3*13.1*0.6in

⑦X1
Front trim panel
19.3*2.56*0.6in

⑧X2
Support panel-1
7.1*4.92*0.6in

⑨X2
Support panel-2
13*4.92*0.6in

⑩X1
Fixed panel
19.3*13.1*0.6in

⑪X1
Front skirting panel
18.03*3.15*0.6in

⑫X1
Rear skirting panel
18.03*2.36*0.6in

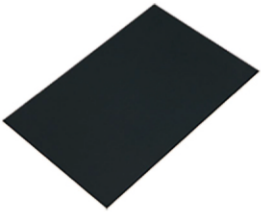

⑬X1
Back panel
18.43*12.44*0.16in

⑭X2
Drawer left
9.85*3.15*0.6in

⑮X2
Drawer right
9.85*3.15*0.6in

⑯X2
Drawer back
15.83*3.15*0.6in

⑰X2
Drawer bottom
16.22*9.6*0.16in

⑱X2
Drawer front
19.05*5.9*0.6in

HARDWARE LIST

A	51+2 set

Cam Bolt & Cam Lock
F7*31 F15*11

B	15+2 set

Wood Dowel
F8*30

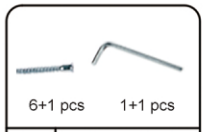

C	1 set (8 pcs)

Screw &Allen Key
F5*40

D	2 set (8 pcs)

Slide rail
F20*250

E	16+2 pcs

Screw
F3.5*14

F	6+1 set

Rear panel hook&Screw
F3*14

G	51+1 pcs

Hole cover
F20

H	1 pcs

Screw driver

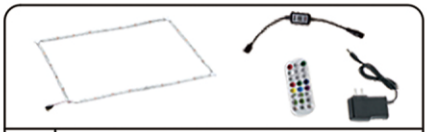

I	1 set

Light strip

Spare	5 pcs

Insert nut
F10*11
If the nut is missing from the panel,
use a hammer to drive in the spare nut.

Attention:

1.Please place the product on the carpet or carton to assemble to avoid scratching the floor;
2.During the installation process,keep away from children and pets,and avoid accidentally swallowing spare parts;
3.It is recommended to use a low-speed electric drill for installation.

Step 1

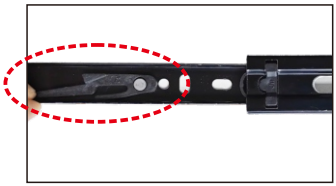

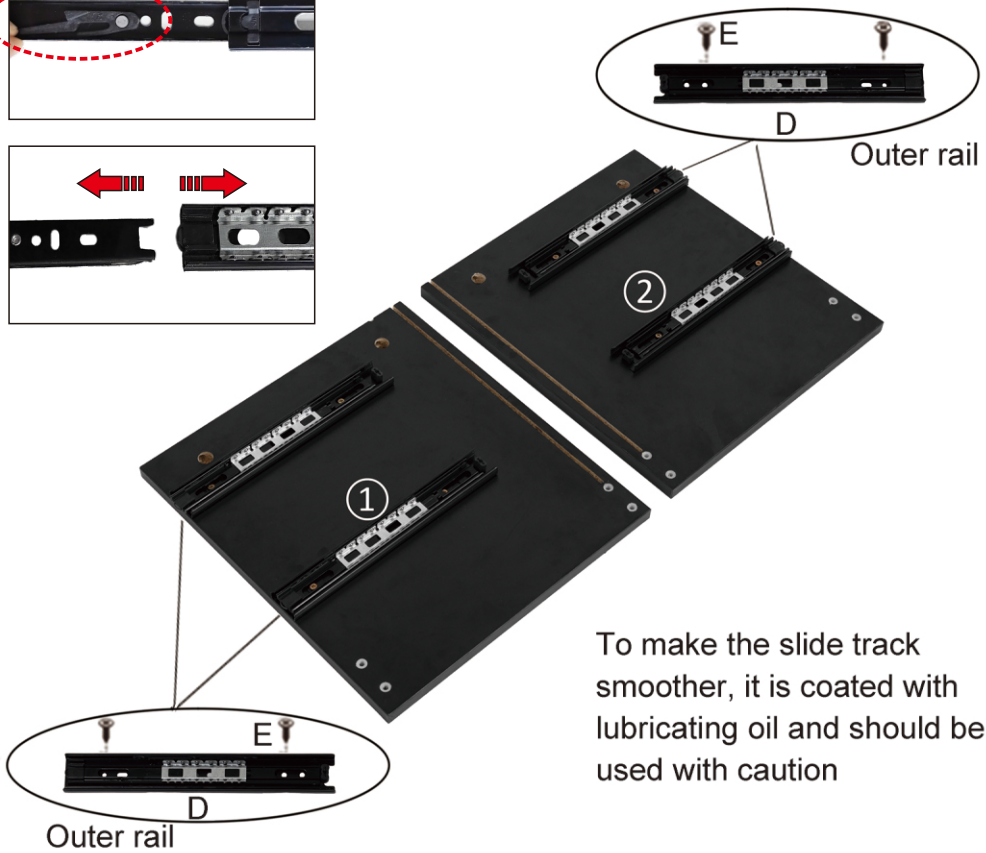

To make the slide track smoother, it is coated with lubricating oil and should be used with caution

D	4 pcs

E	8 pcs

Step 2

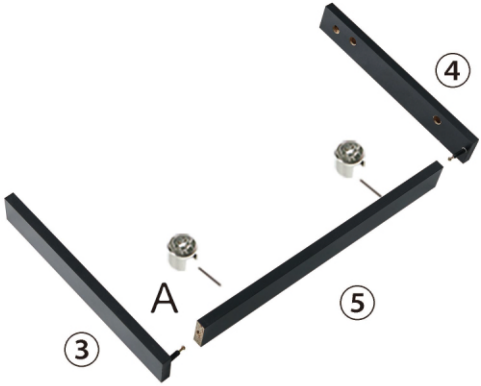

(Attention:Cam bolt & Insert nut need to be put together)

Step 3

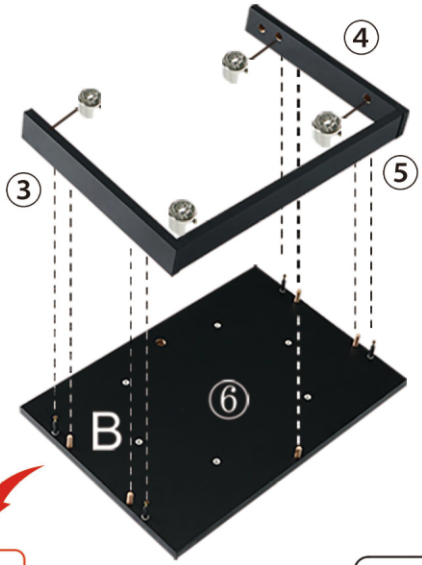

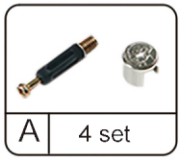

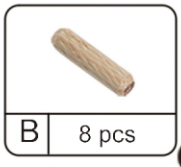

Step 4

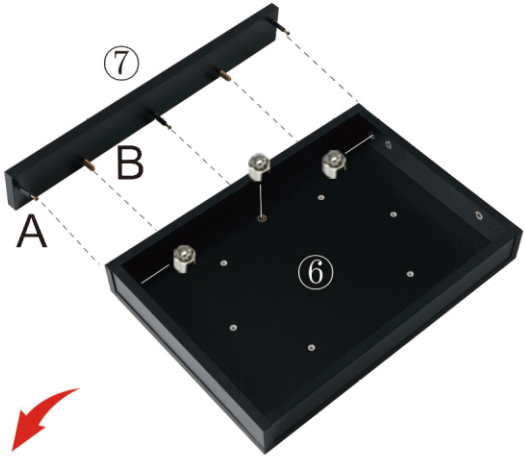

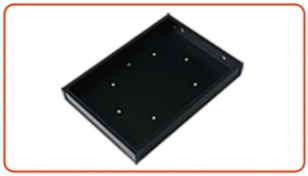

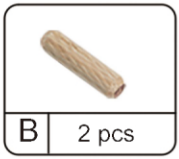

Step 5

Note:the direction of ⑧, ⑨

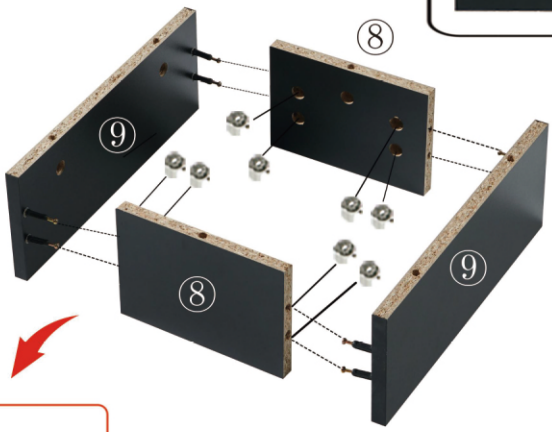

Step 6

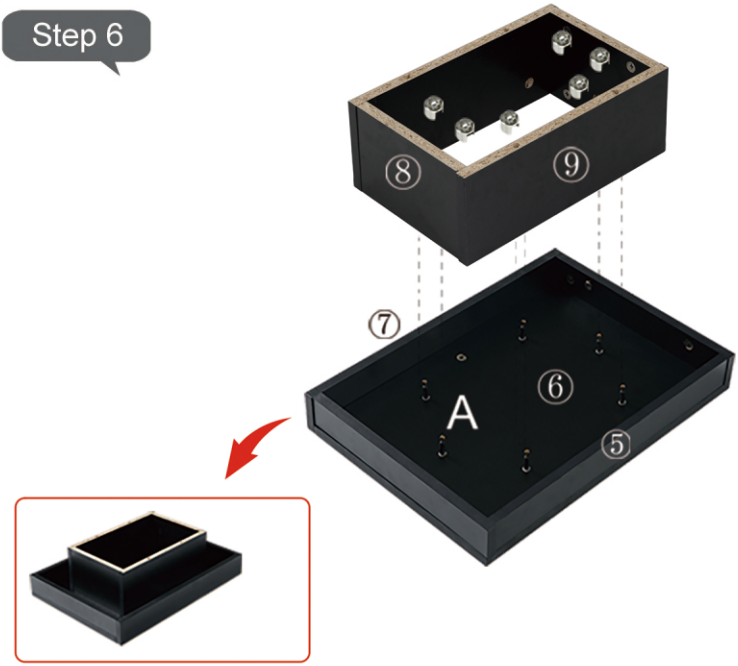

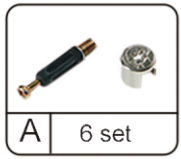

A	6 set

Step 7

Stick light strip to the ⑥
Note1:The direction of the light strip.
Note2:After the Light strip is pasted incorrectly, it should be gently removed to prevent damage.
Note3:When the light strips are connected to each other,the plus sign"+" must correspond,please ignore the letter "RGB.

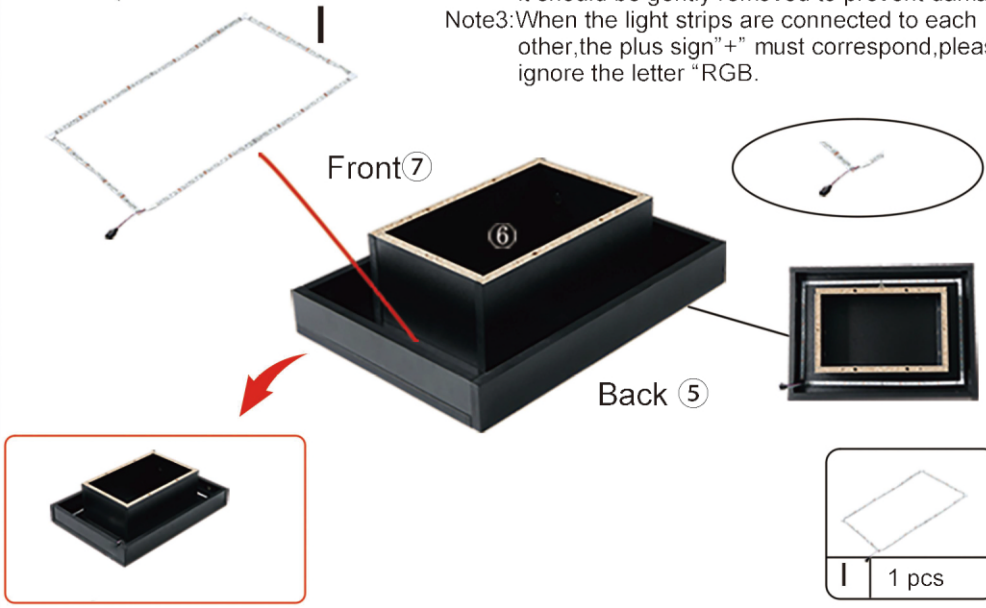

I	1 pcs

Step 8

Use the Allen key from the parts kit to screw the screws into the plate in a clockwise direction.

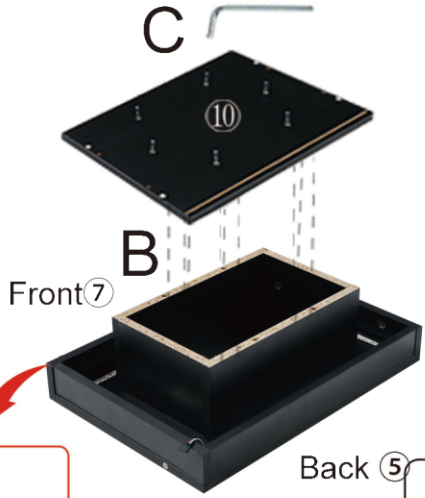

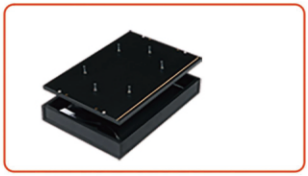

B	4pcs

C	1 set

Step 9

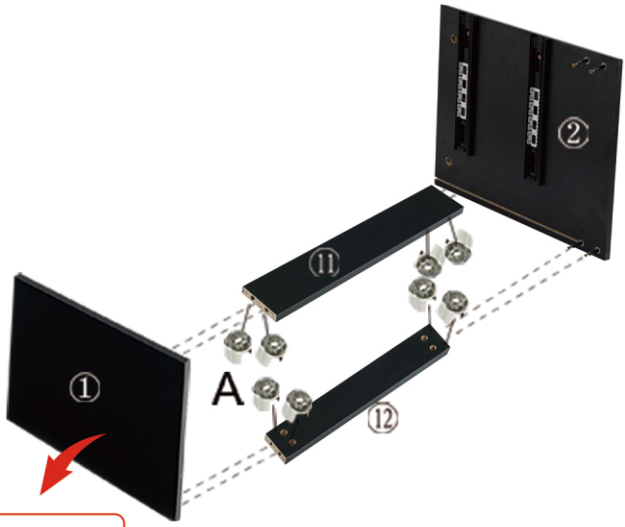

A	8 set

Step 10

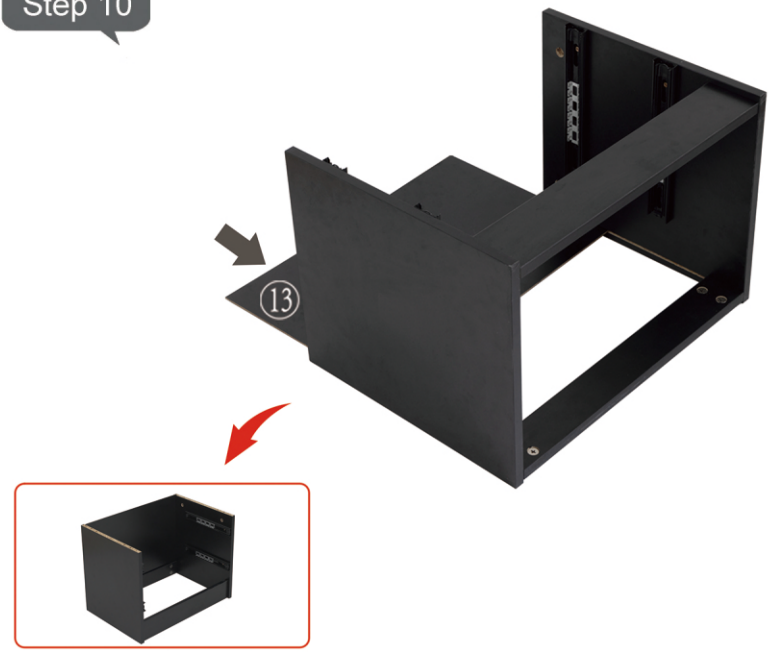

Step 11

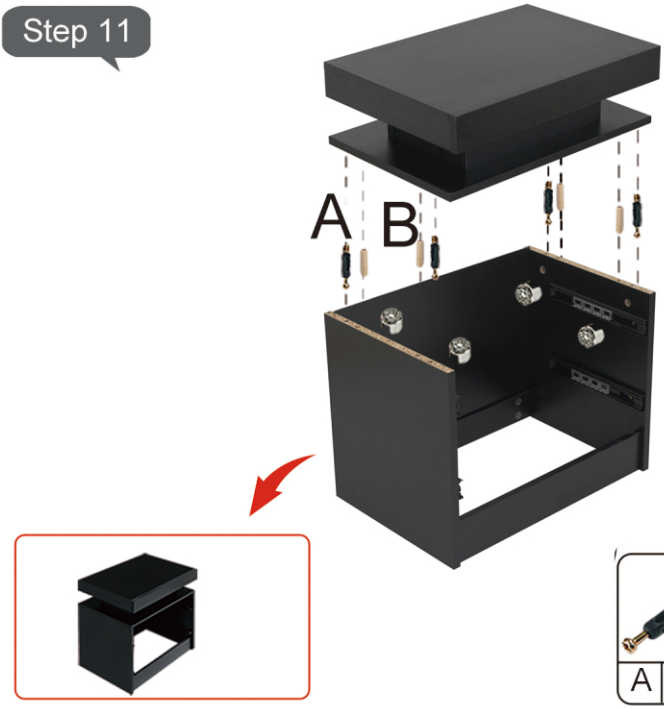

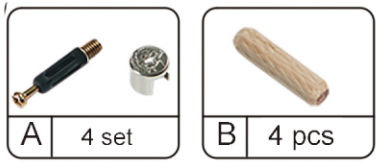

Step 12 X2

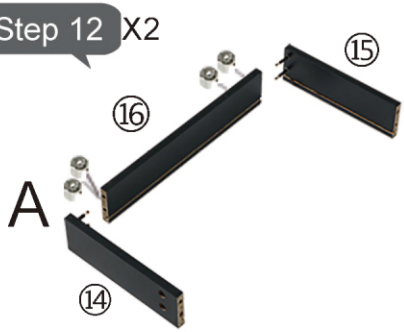

1.Connect part 14&15 to 16

2.Insert part 17

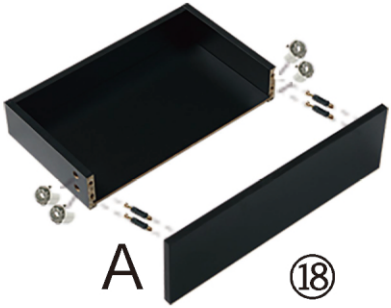

3.Connect part 18

4.Install hardware"D" to part 14 &15 according to the pre-drilled holes

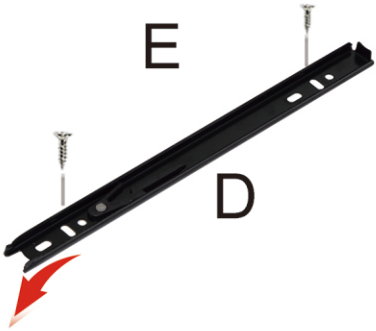

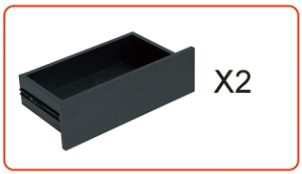

A	16 set

D	4 pcs

E	8 pcs

Step 13

Step 14

As the picture shows,
fix hardware “F” into the gap with screws
to make the back panel more stable.

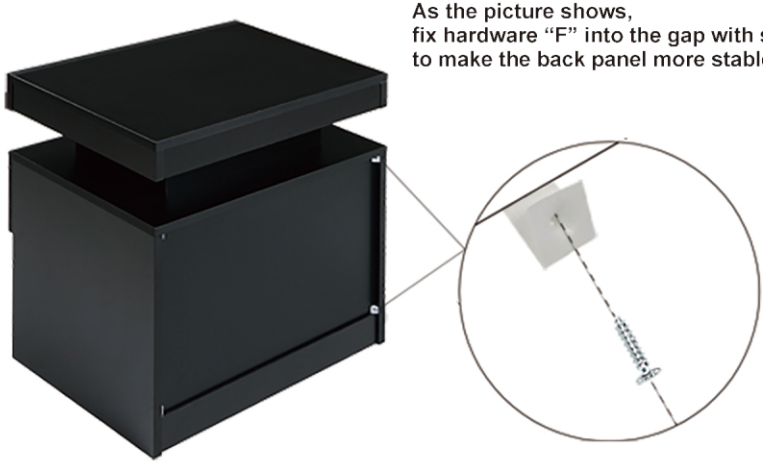

F	6 set

Step 15

Attention:

-The plastic cover prevents the light strip interface from falling off from the controller.
-You can operate the advanced remote control in any direction to switch mode or light.

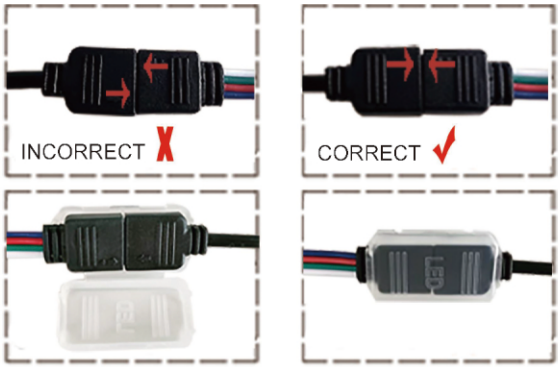

1.If the plastic cover falls off, connect the light strip plug to the adapter socket correctly

2.Take out the remote control gasket

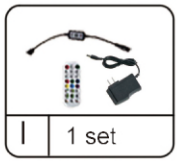

Step 16

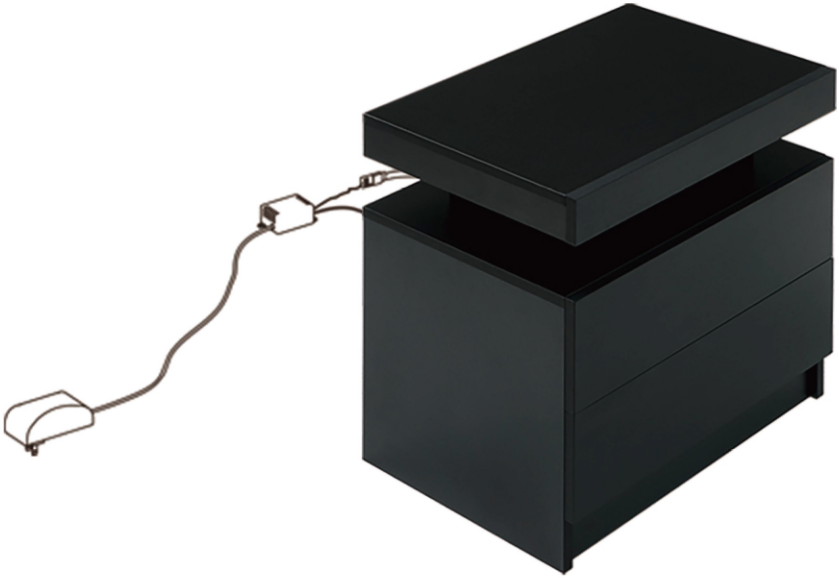

Please stick the hardware"G" on the exposed
cam lock hole that makes your product more beautiful.

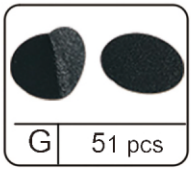

-

Congratulations on successful installation!!!