


Wall-Mounted Instructions


A	 x1	B	 x1	C	 x1 +1 pc spare screw	D	 x1	E	 x2	F	 x2

1

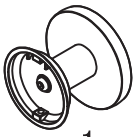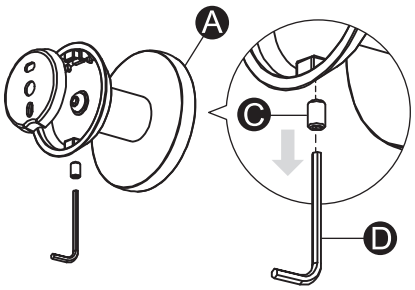


Use part D to remove part C, then take part B out of part A.

2

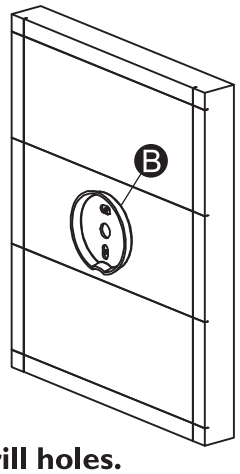


Position part B where you want to install it on the wall. Use a marker to mark the drill holes.

3

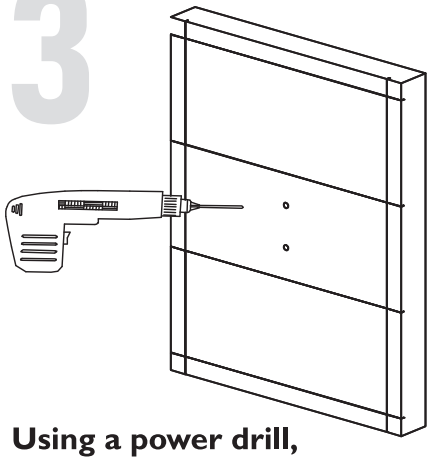


Using a power drill, drill holes at the marked positions.

4

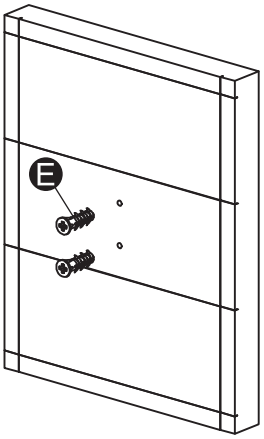


Insert part E into the drilled holes.

5

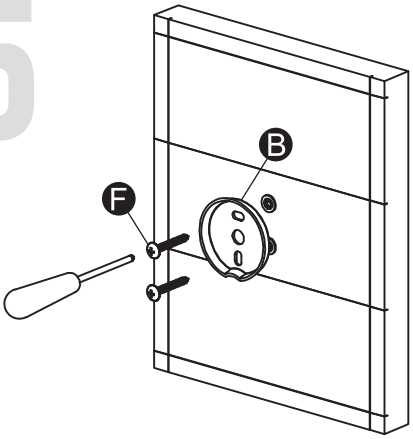


Use part F and a screwdriver to attach part B to the wall.

6

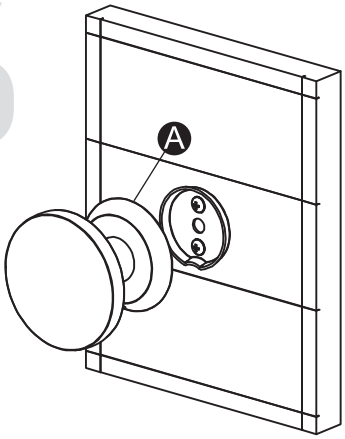


Snap part A into part B until it clicks into place.

7

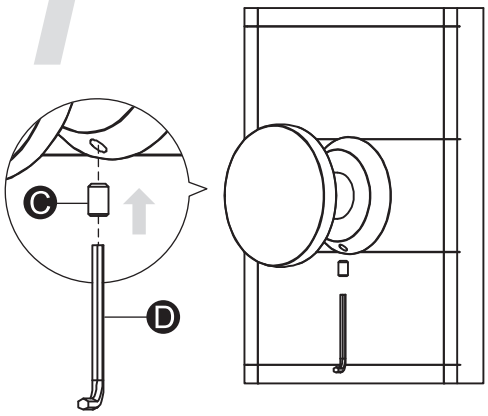

Use part D to screw part C into part A, ensuring part A is securely fastened to part B.

8

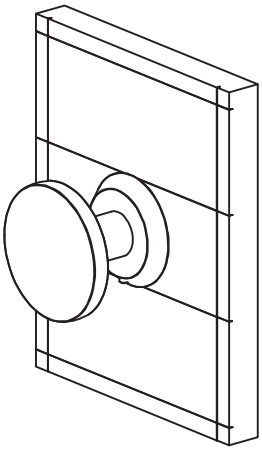

Installation is complete.