# DEADBOLT INSTALLATION INSTRUCTIONS

Tools required for installation:

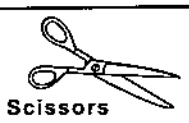
Scissors


Hammer


Centerpunch


Screwdriver (Phillips)

Drill with 3/32" Bit 5/16" Bit



*If replacing an existing deadbolt, reuse the holes from your previous deadbolt. If necessary drill new holes.*

1. Cut out the drill template then tape in place, centered above the lever.
2. Centerpunch and drill the holes using a 5/16" bit.

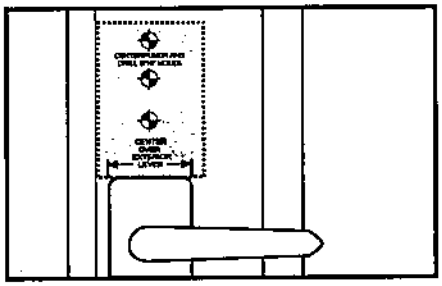

3. Determine your screw and spindle lengths based on your door thickness.

| | | |
|---|---|---|
| For Doors: 3/4" up to 1" |  | #6-32 x 1-3/4" Phillips Pan |
| |  | 2-1/8" |
| For Doors: 1" up to 1-1/4" |  | #6-32 x 2" Phillips Pan |
| |  | 2-3/8" |
| For Doors: Over 1-1/4" |  | #6-32 x 2-1/4" Phillips Pan |
| |  | 2-5/8" |

4. Assemble deadbolt components onto the door and secure with screws (see chart).

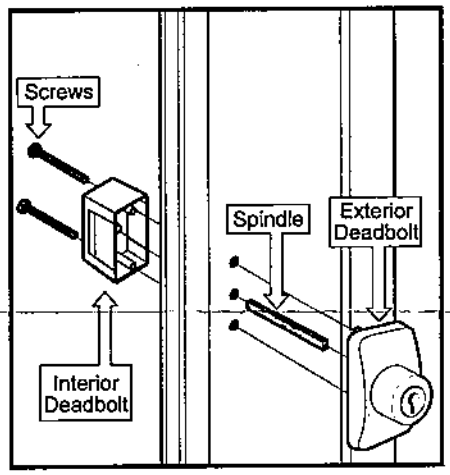


5. Close the door and extend the deadbolt.
6. Position the strike behind the deadbolt
7. Mark the centers of the slotted holes and predrill using a 3/32" bit.
8. Secure with screws.


#6 x 1-1/4" Phillips Pan

*Note: Shims are included if necessary to build out the strike.*

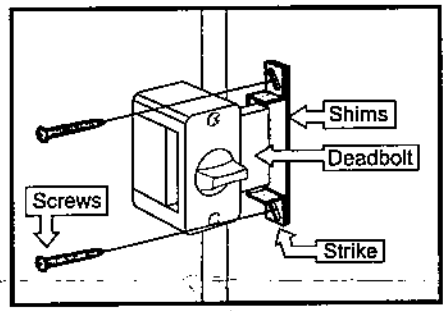


Pella®
2109 4TH AVENUE SOUTH
CLEAR LAKE, IA 50428 USA

DRILL TEMPLATE

Centerpunch and Drill 5/16" Holes

CENTER OVER EXTERIOR LEVER