
D8L241-01

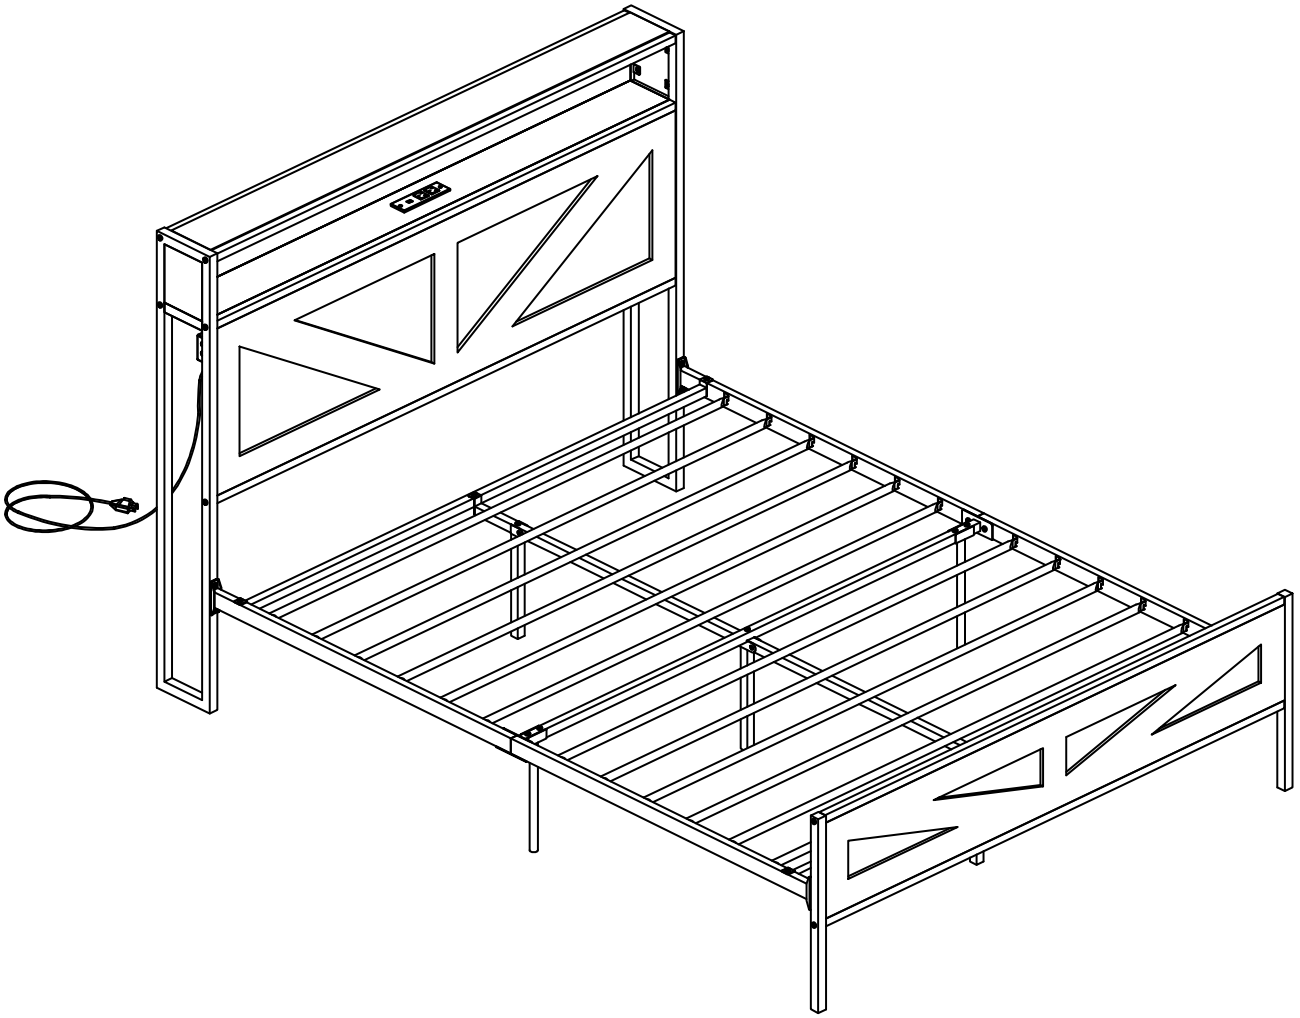


As this item contains many parts, please read the installation instruction carefully before installation and complete the installation with the cooperation of your partner. Please use tools properly and carefully. If you have any questions about the product and installation, please contact us.

hosoteservice@gmail.com

Our professional after-sales team will serve you online all day.

Before You Start

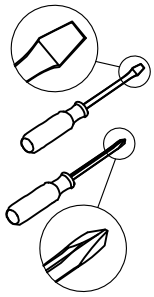

- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw.

Helpful Hints

PEOPLE NEEDED FOR ASSEMBLY: **1-2**

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.



- Identify, sort and count the parts before attempting assembly.



- Do NOT use harsh chemicals or abrasive cleaners on this item.


















- Never push, pull, or drag your furniture.




Parts Identification

Not actual size

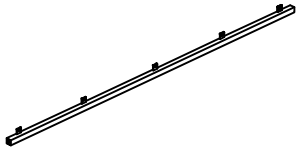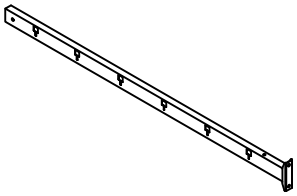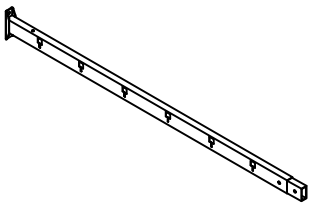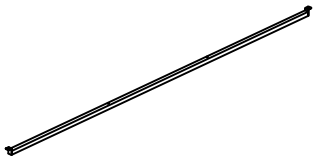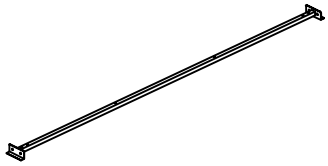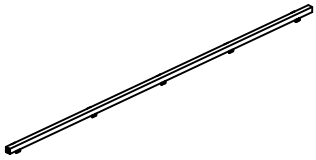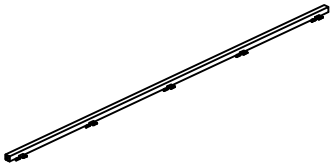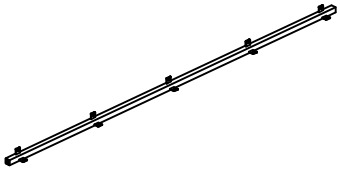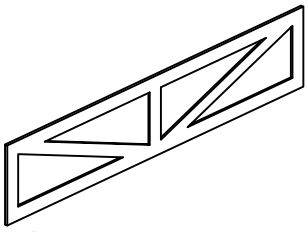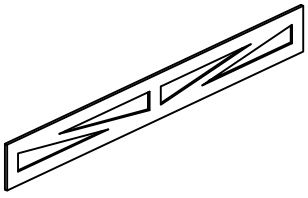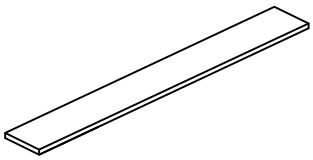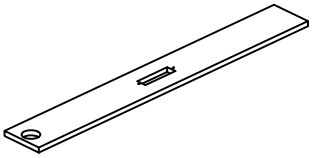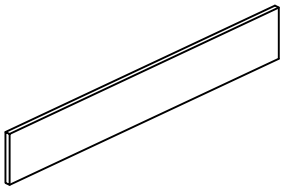 Ⓐ x 1	 Ⓑ x 1	 Ⓒ x 2	 Ⓓ x 4
 Ⓔ x 2	 Ⓕ x 2	 Ⓖ x 1	 Ⓗ x 2
 Ⓘ x 1	 Ⓙ x 2	 Ⓚ x 12	 Ⓛ x 1
 Ⓜ x 1	 Ⓝ x 1	 Ⓞ x 1	 Ⓟ x 1
 Ⓠ x 1	 Ⓡ x 1	 Ⓢ x 1	


Parts Identification

Not actual size

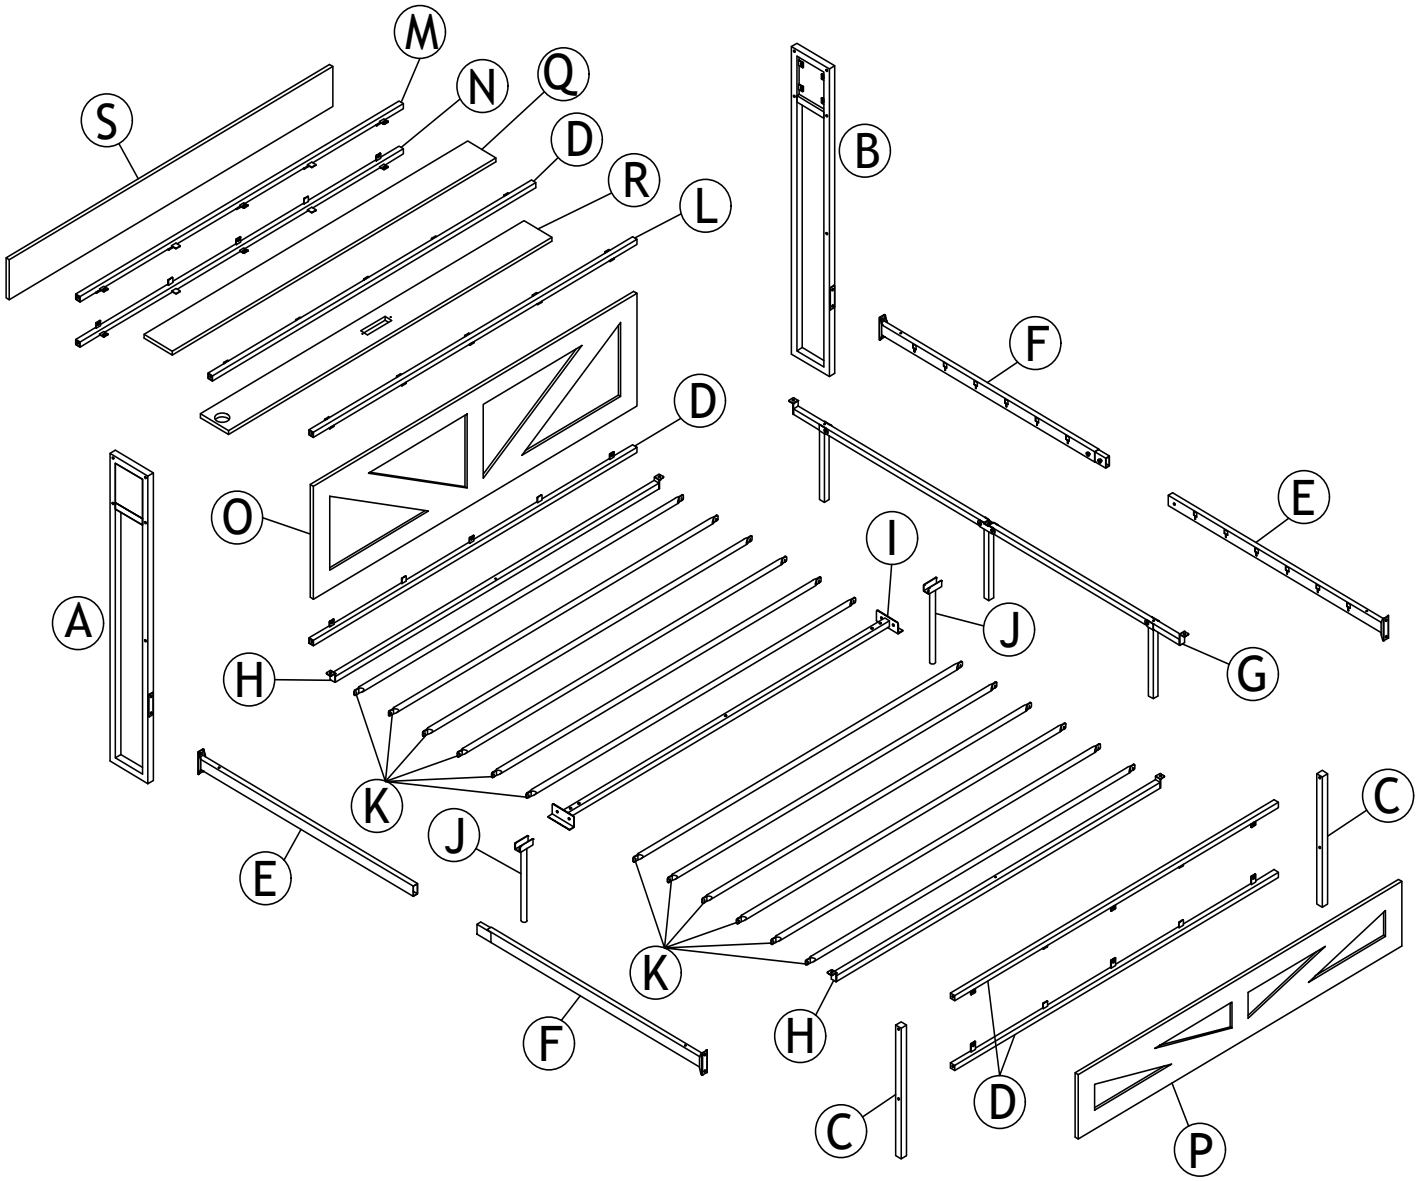

Hardware List

BOLT




M8 x 13mm

①	x 4

spare: 1

BOLT




1/4" x 13mm

②	x 44

spare: 3

BOLT




1/4" x 25mm

③	x 4

spare: 1

BOLT




1/4" x 35mm

④	x 2

spare: 1

BOLT




1/4" x 50mm

⑤	x 15

spare: 2


SCREW



Ø3.5 x 12mm

⑥	x 9

spare: 1

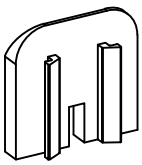


Plastic buckle

⑦	x 24


spare: 3

WIRE CLIP

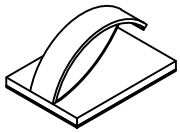


⑧	x 2

LED STRIP CLIPS



⑨	x 7


ALLEN KEY



M4

⑩	x 1


ALLEN KEY

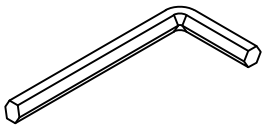

M5


⑪	x 1

SOCKET

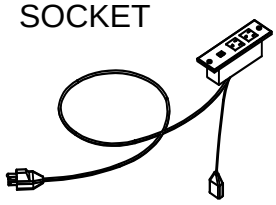


⑫	x 1

LED STRIP

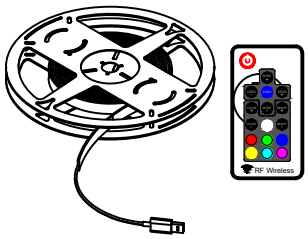



CABLE HOLE COVER




⑬ x 1 x 1

STEP 1 Pls do not tighten all bolts until the bed is assembled completely

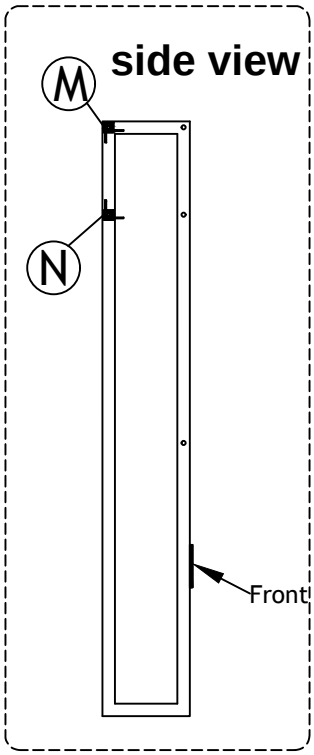


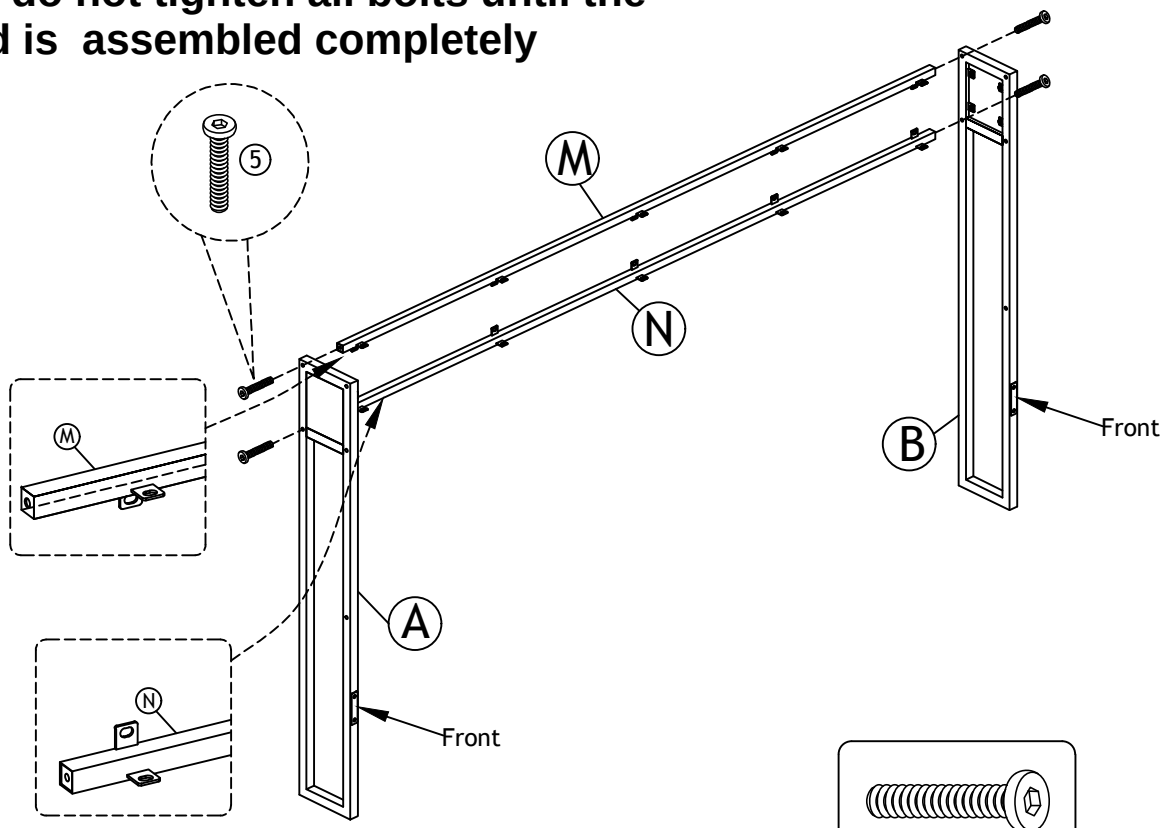


Please pay attention to the direction of the metal bolt plate.

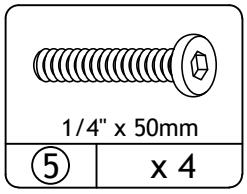


STEP 2

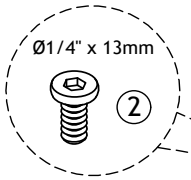


Before you install this bolt, please make sure the bolt size is Ø1/4"*13mm.

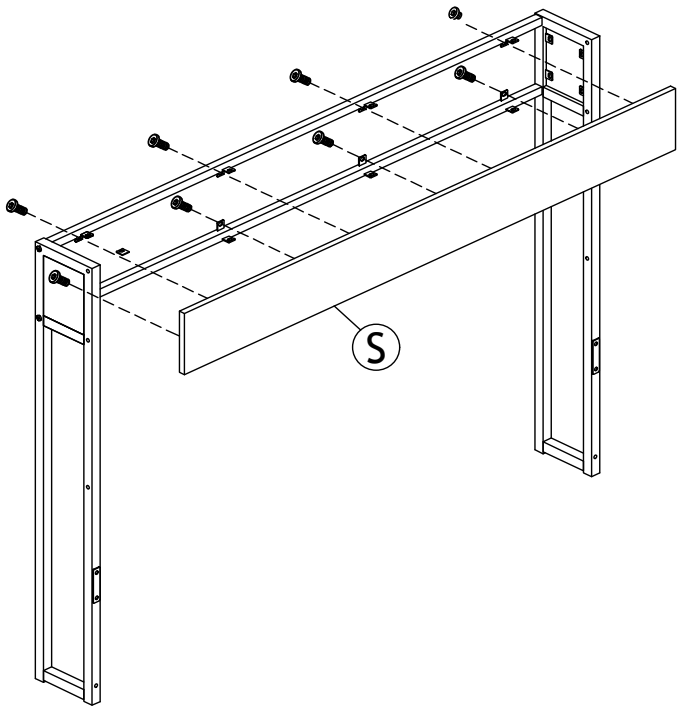


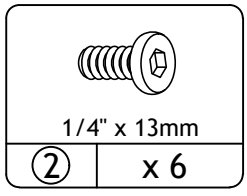


STEP 3

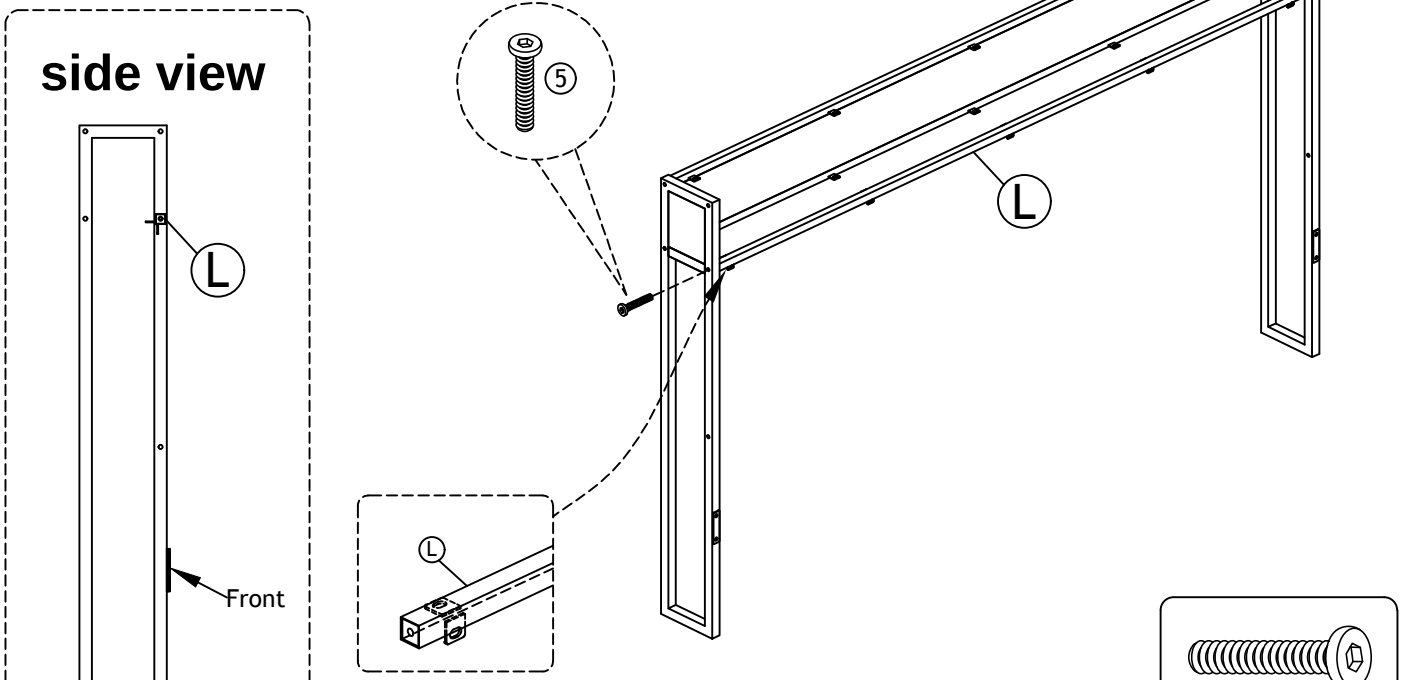



Please pay attention to the direction of the metal bolt plate.

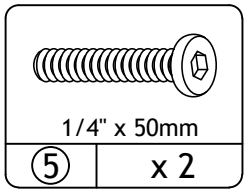


STEP 4

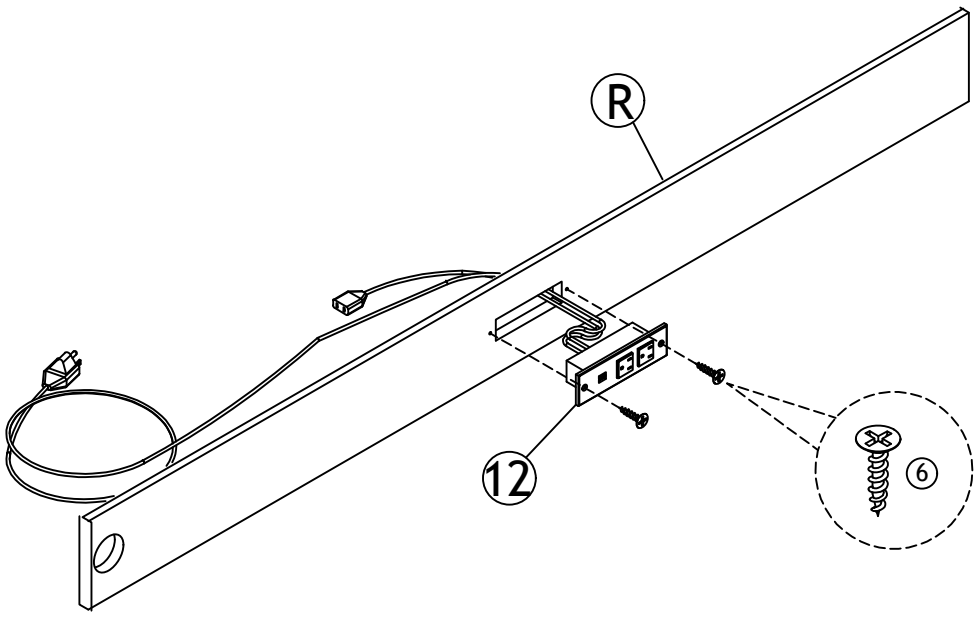

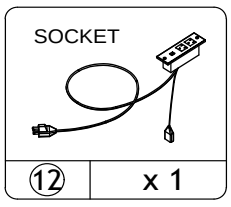


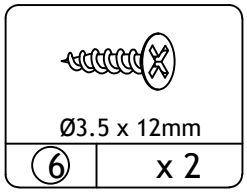


STEP 5

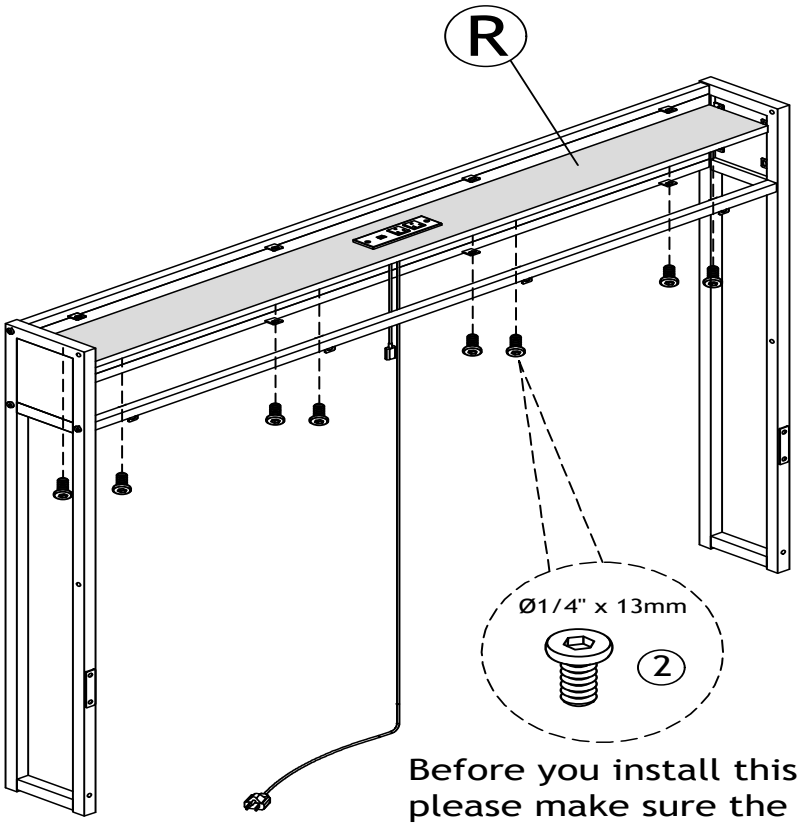


Before you install this bolt, please make sure the bolt size is Ø1/4"*13mm.

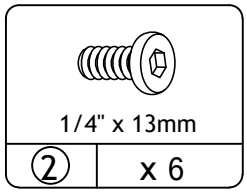


STEP 6

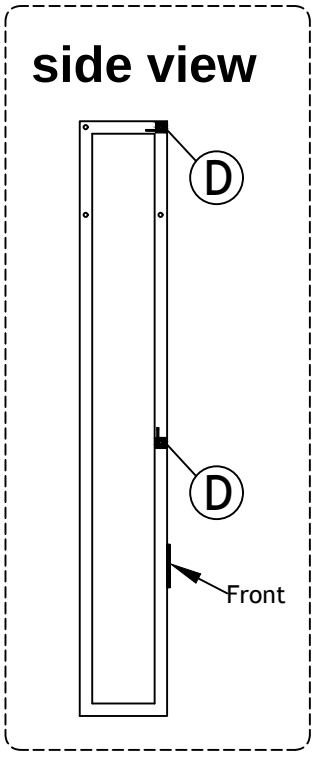


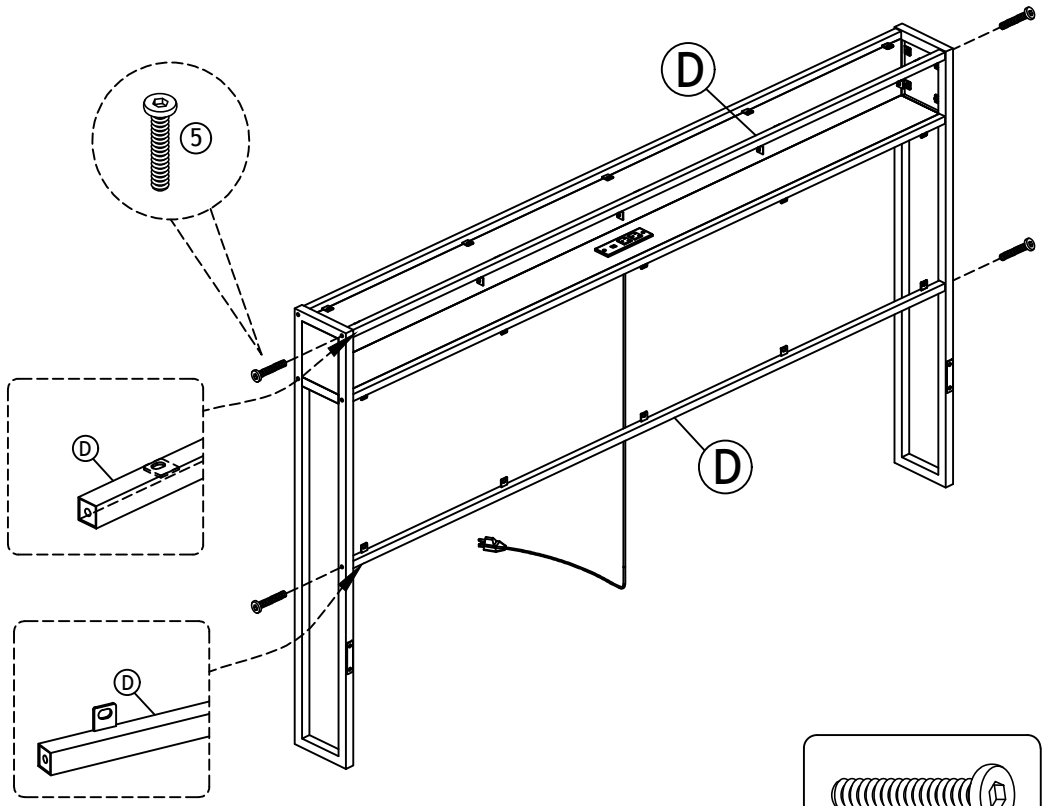


Please pay attention to the direction of the metal bolt plate.

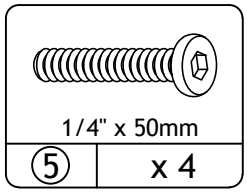

STEP 7

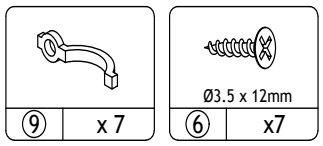

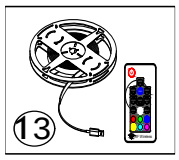



Stick LED strip⑬ underneath board Q .then put the clips ⑨ on LED strip and fasten it with screws⑥ to reinforce the LED strip.

THE 2 ENDS OF LED STRIP MUST TO BE REINFORCED BY LED STRIP CLIPS⑨

There are no screw holes on board(Q), you can choose suitable positions to fix the clips with screws.


STEP 8

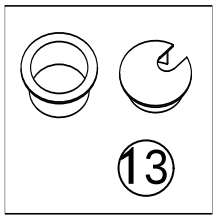

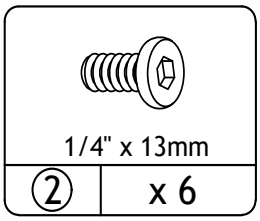


The switch is free to put onto the board or hidden underneath the board.


STEP 9

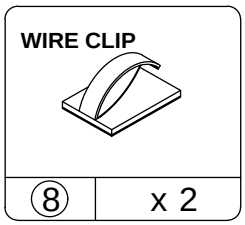


Connect lamp strip usb,
socket ⑫ . stick clip ⑧ underneath board Ⓡ
Then buckle the lines.


STEP 10

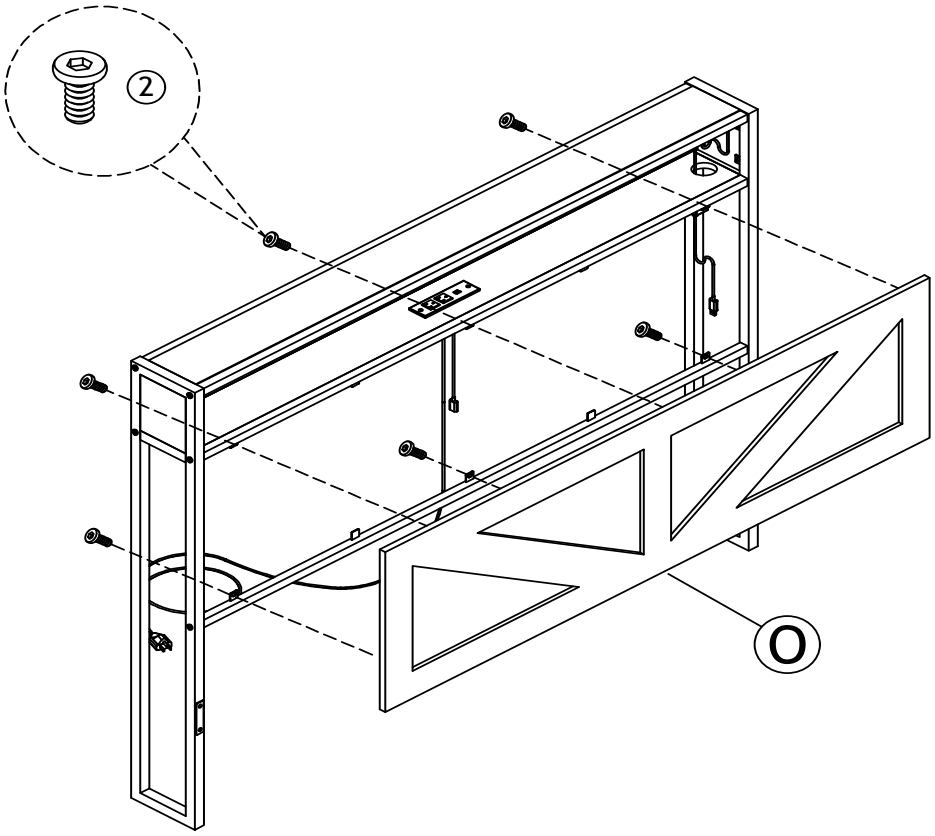

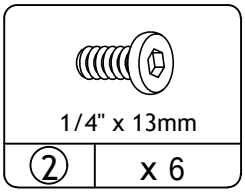



STEP 11

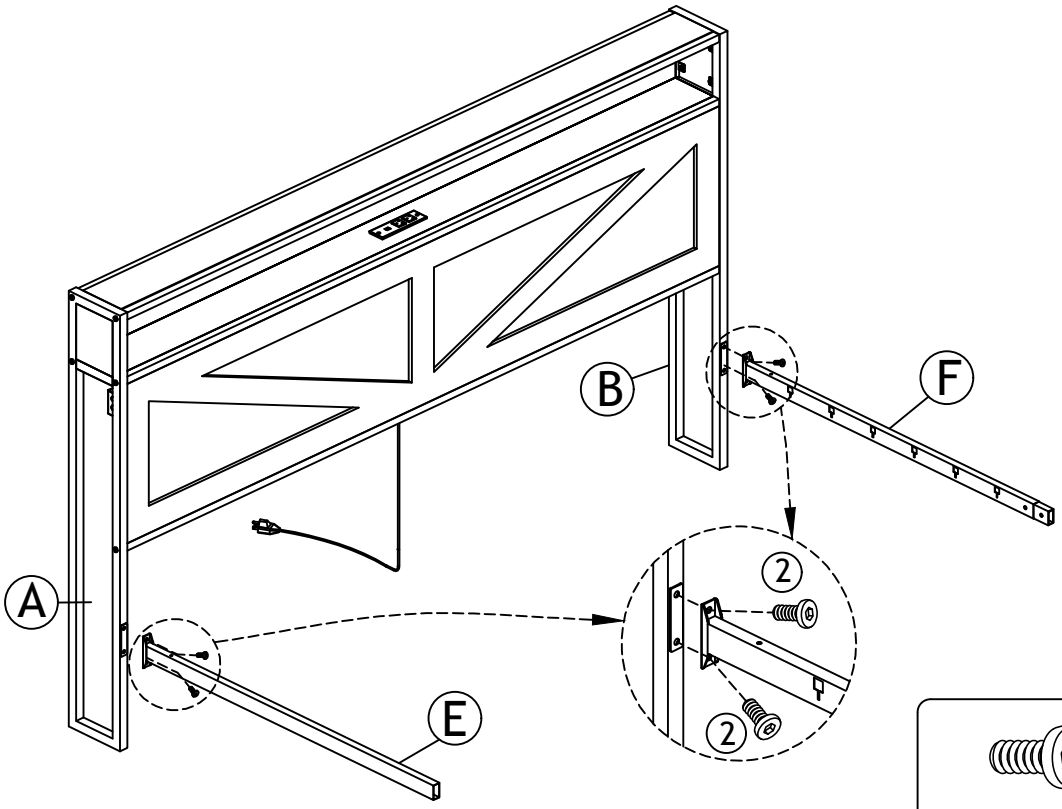

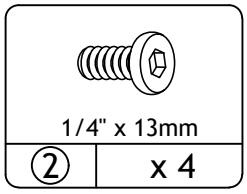


STEP 12

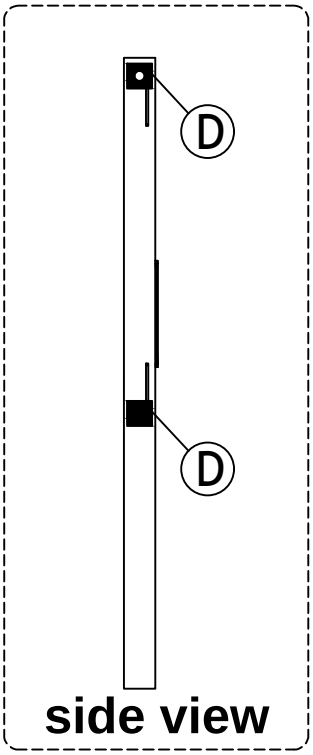


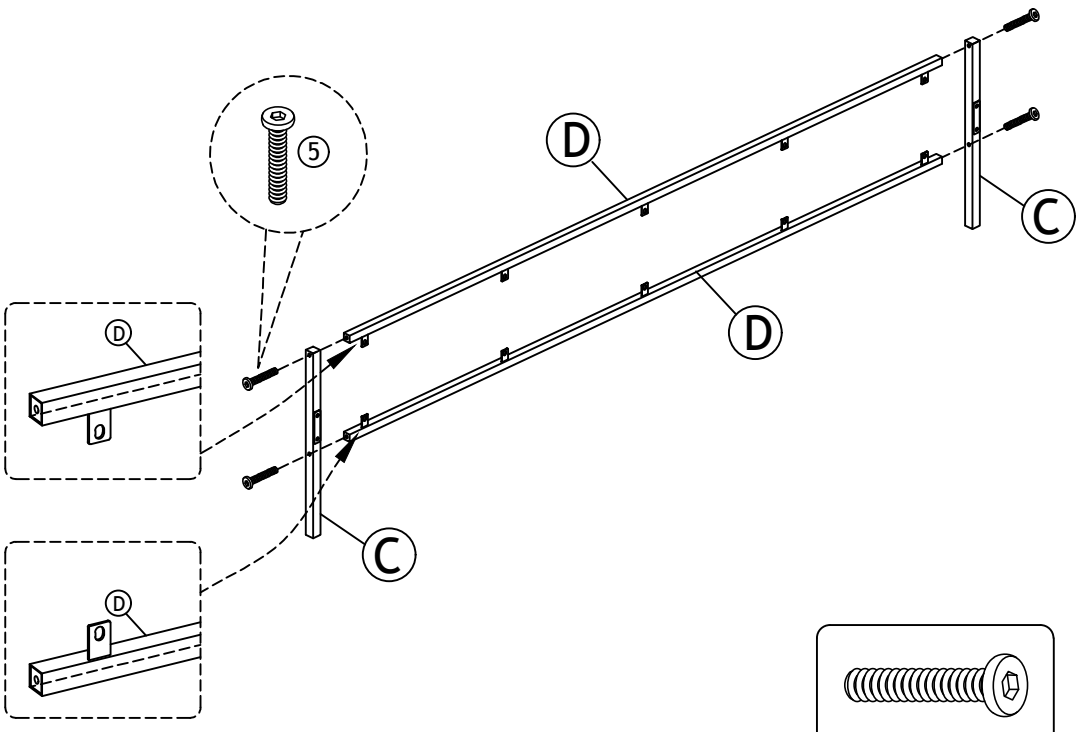


Please pay attention to the direction of the metal bolt plate.


STEP 13

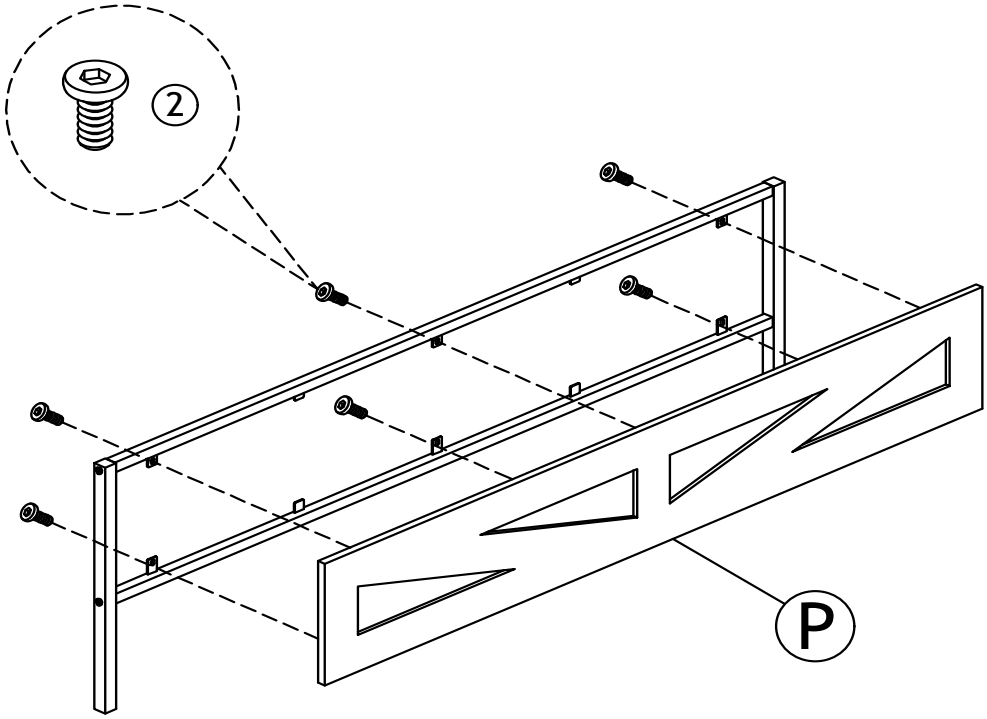

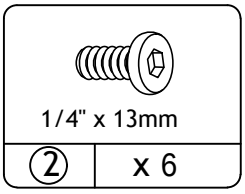


STEP 14

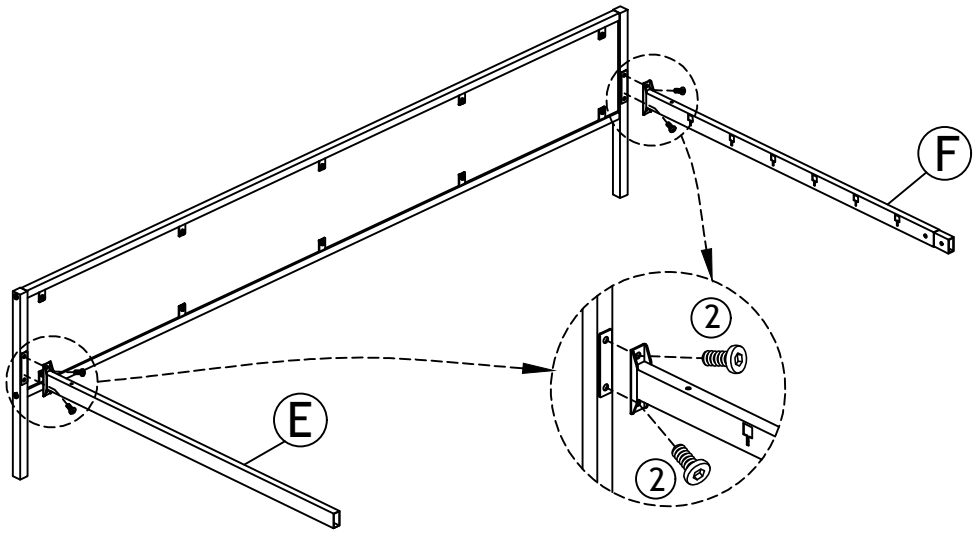


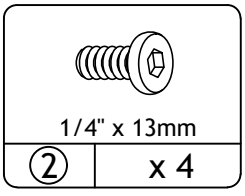


STEP 15

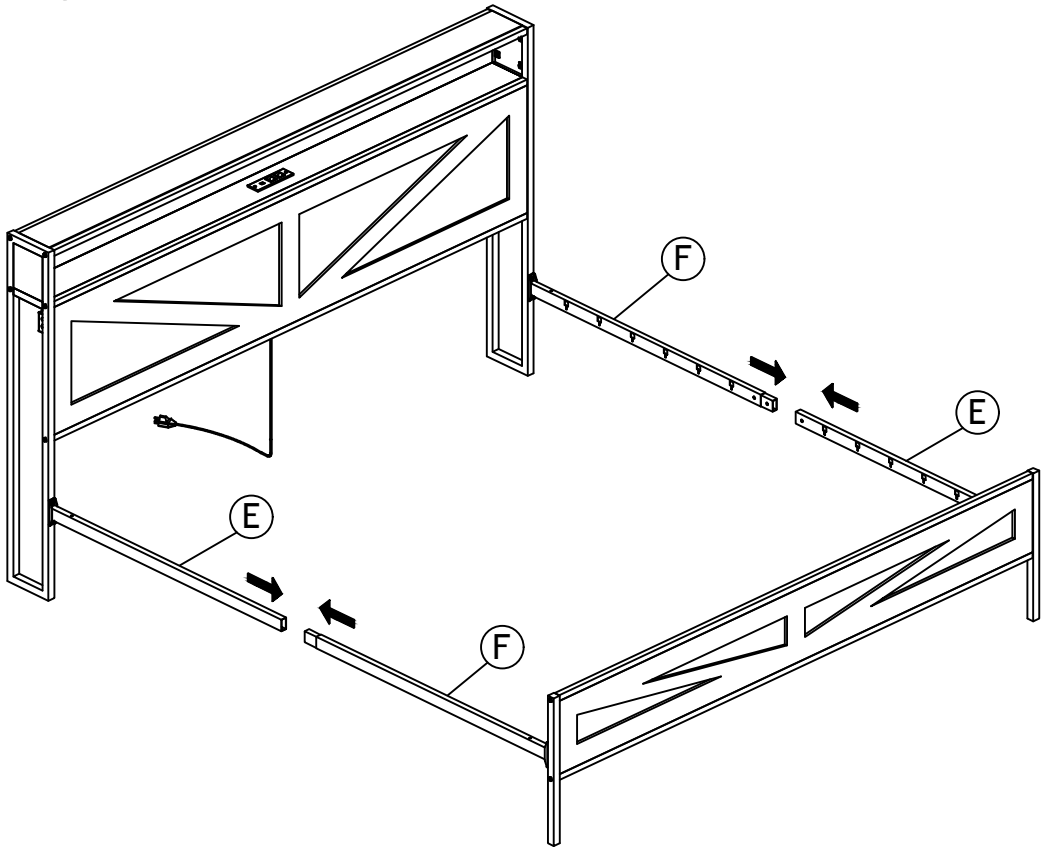


STEP 16

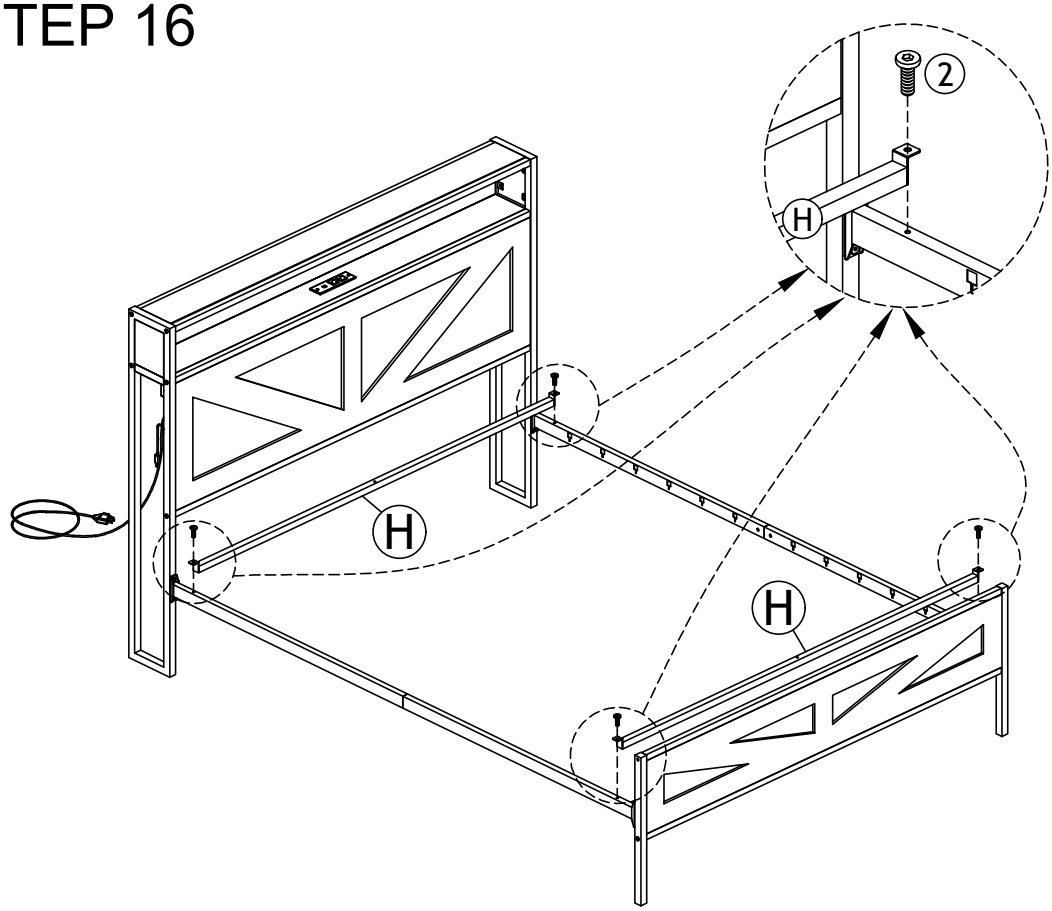

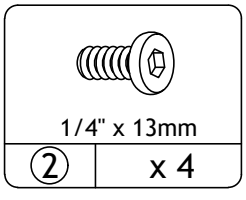



STEP 17

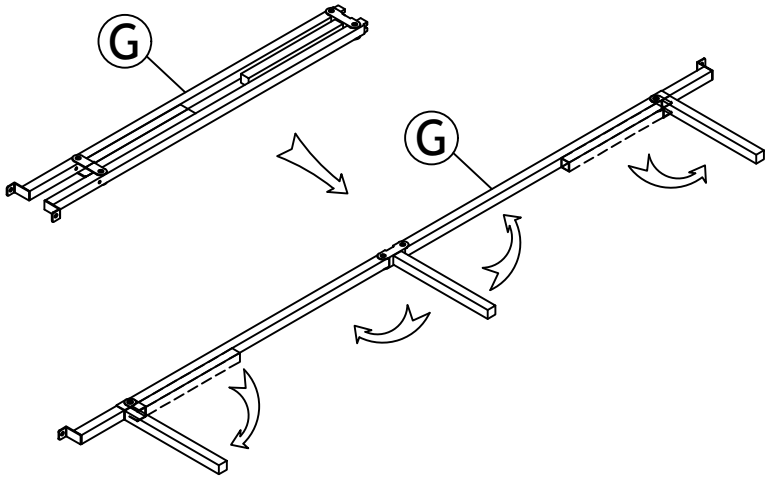


Expand the folded portion X 1

STEP 18

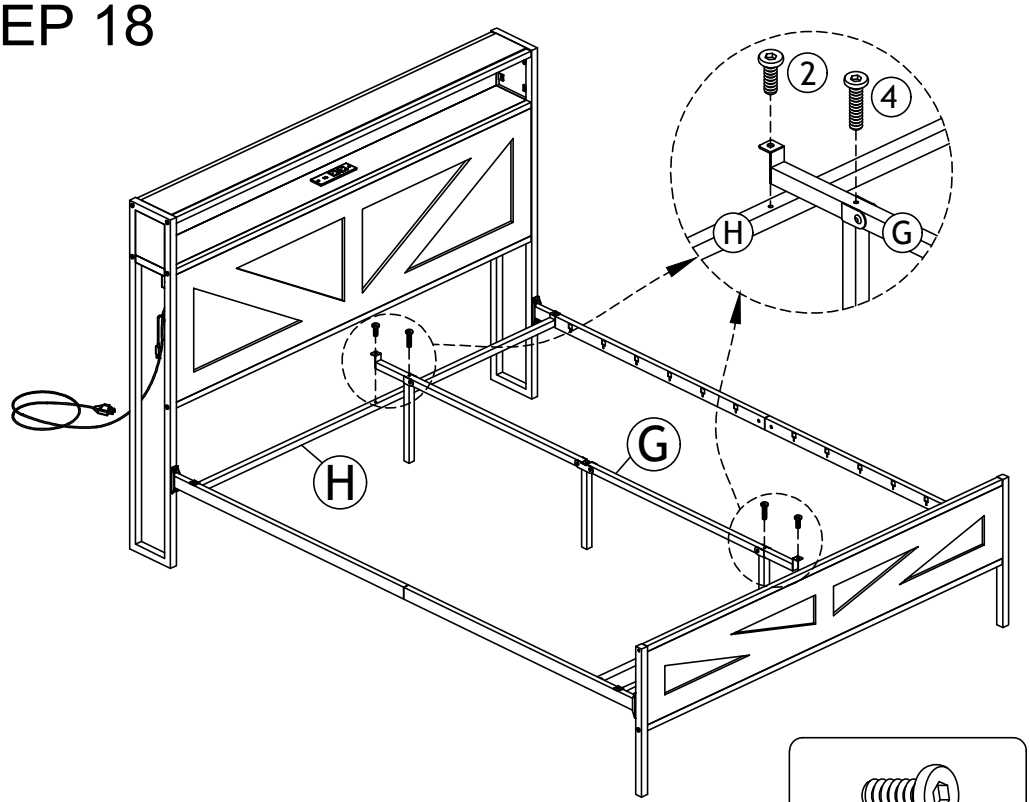


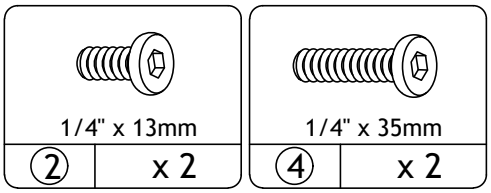


STEP 19

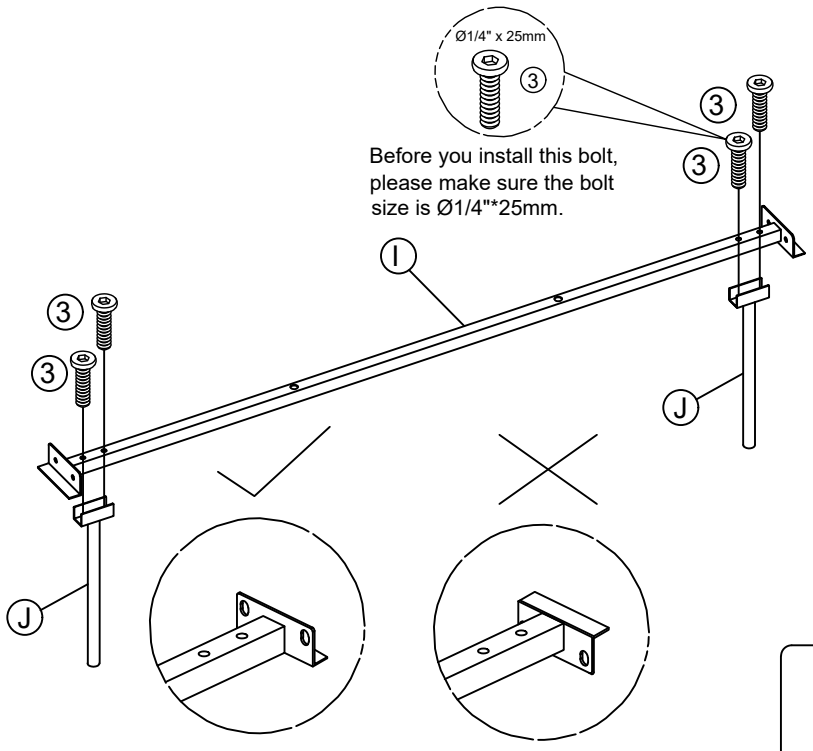

ATTENTION: This metal plate is on the bottom instead of on top. Don't install it wrongly.

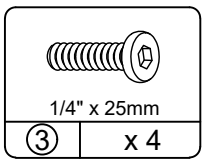



STEP 20

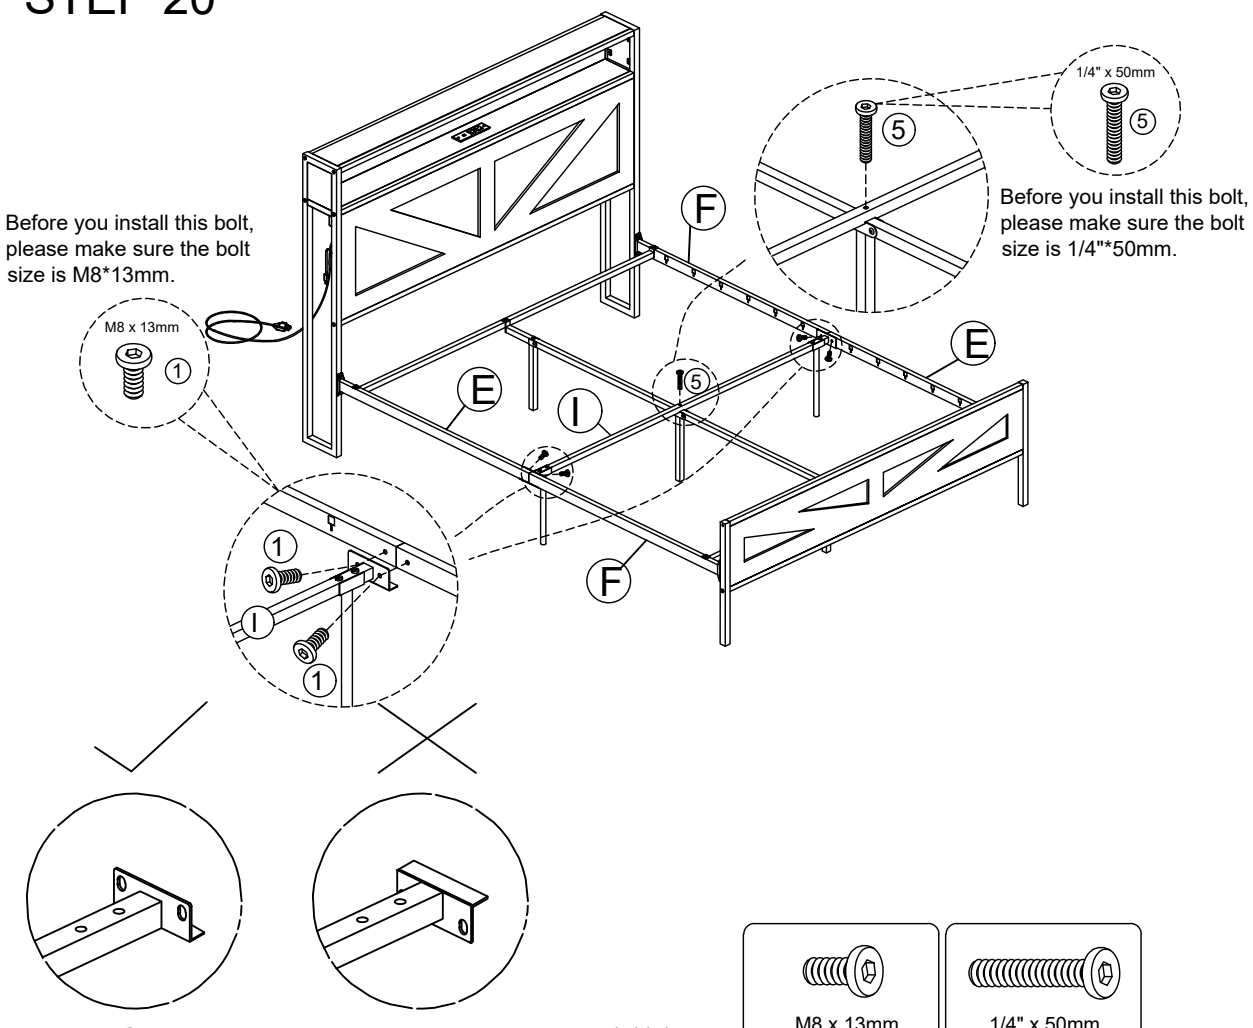

ATTENTION:This metal plate is installed under the tube (E)(F) instead of on top of them. Don't install it wrong.


STEP 21

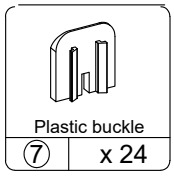

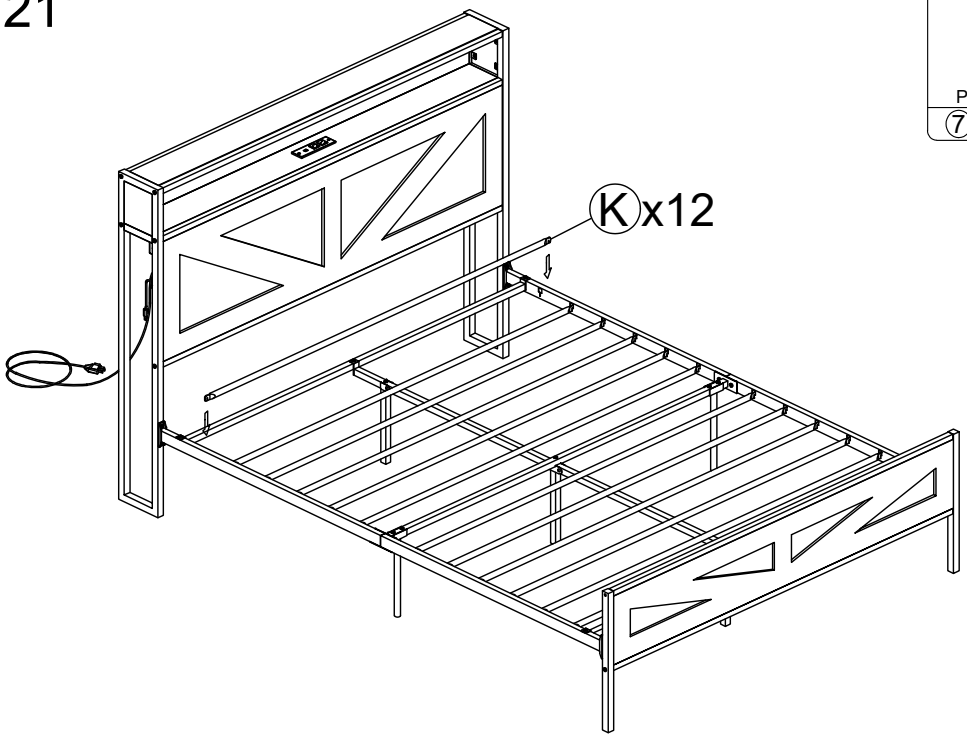


If you find any noise from the bed frame after installation, please check whether the direction of the tube (I) in steps 19 and 20 is installed correctly.


Assemble the slats

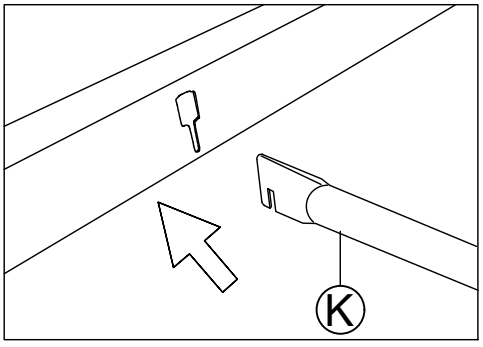


1.Insert slats into the hole on sidebar in the correct orientation.

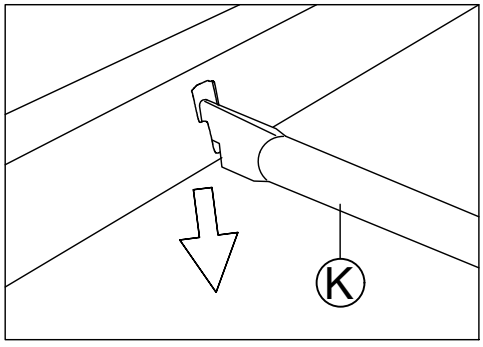

2.Push the slats into the gaps.

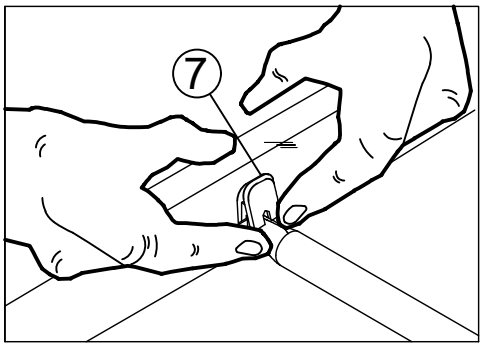

3.Put the plastic clamp(7) into the lower part of hole on 45 degree.

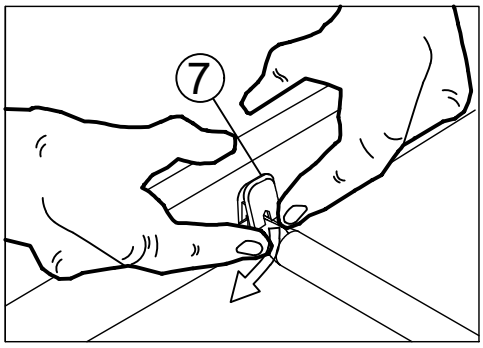

4.Press tight the upper part of clamp to fix its position.