

WYNDHAM
COLLECTION


- Prior to installation please check received items against the “Packing List”.
  Please report any missing items to your retailer immediately.
- Protect all surfaces from sharp objects, high heat sources, direct prolonged sunlight and chemical hazards.
- Professional installation recommended.
- Install on a level surface

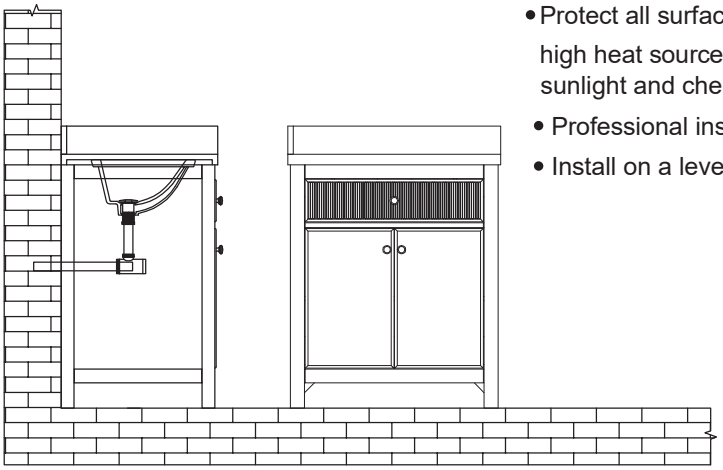

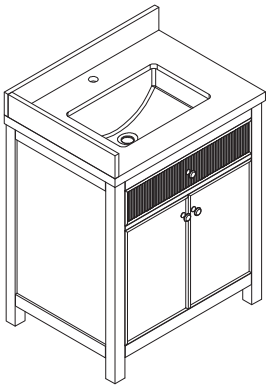


PACKING LIST


(Not all components may be included, depending upon your purchase)

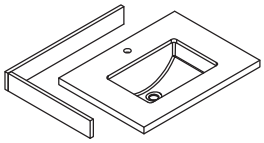

Counter & Sink /1

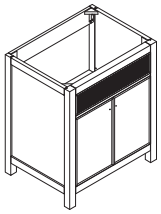

Main Cabinet/1

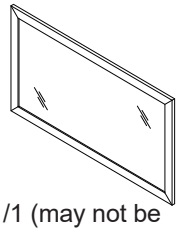


Mirror /1 (may not be included)




Screws for mirror / 2


HOW TO ADJUST HINGES (if required)

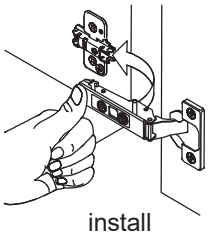


install

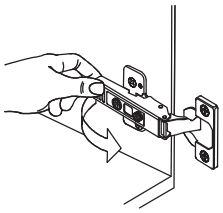


remove

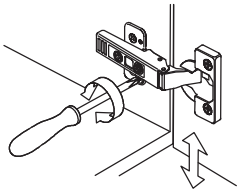

adjust height

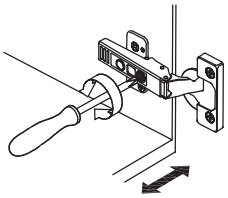


adjust laterally

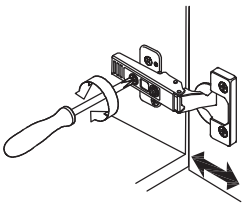


adjust depth

REQUIRED TOOLS NOT IN BOX

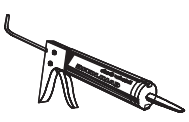

Silicone sealant

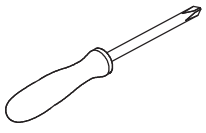


Phillips Screwdriver


WC-4848-30SGL
Installation Guide

WYNDHAM
COLLECTION


1.Place cabinet in desired location and determine where the wall studs are.Adjust the feet if needed.

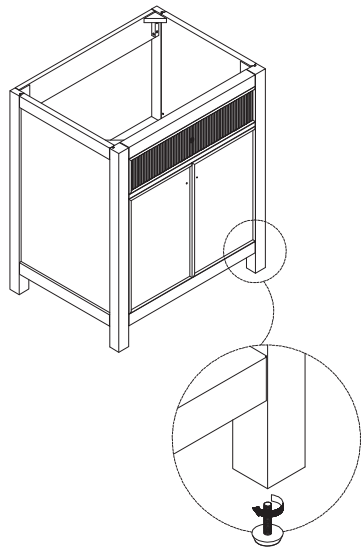


2.Install the counter. Seal around the top of the cabinet with clear silicone sealant. Do not over apply. Allow to dry 24 hours for proper curing.

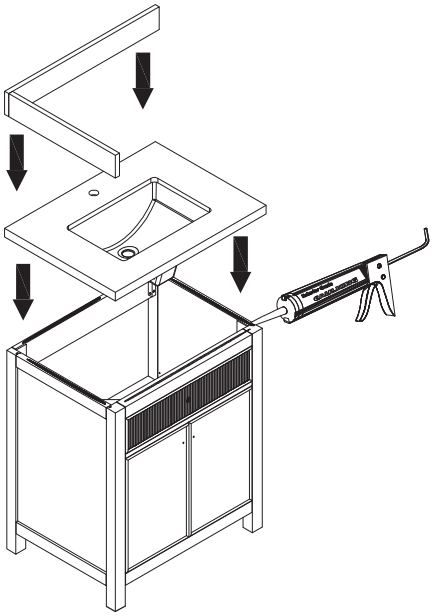


3.The handles are safely stored for transport in a box inside of the cabinet.
Look inside the vanity for the box with your handles.

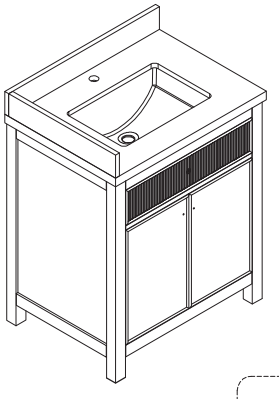

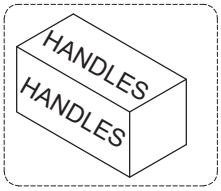

4. Unpack the handles and install them on the vanity.Do not over tighten when attaching.Short screws are for the door handles and long screws are for the drawer handles.

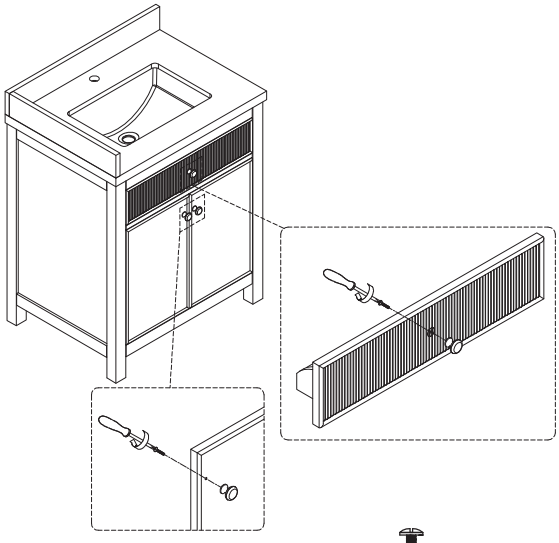



Short, for door handles




Long, for drawer handles


WC-4848-30SGL
Installation Guide

WYNDHAM
COLLECTION


1.Place cabinet in desired location and determine where the wall studs are.Adjust the feet if needed.

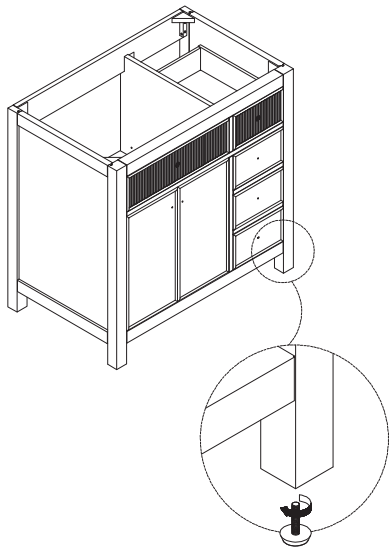


2.Install the counter. Seal around the top of the cabinet with clear silicone sealant. Do not over apply. Allow to dry 24 hours for proper curing.

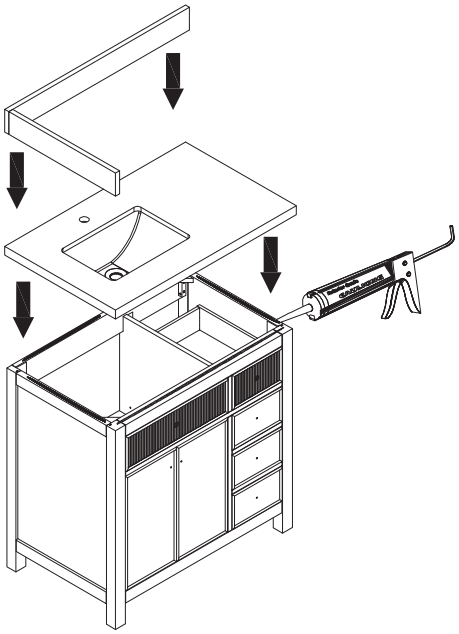

3.The handles are safely stored for transport in a box inside of the cabinet.
Look inside the vanity for the box with your handles.

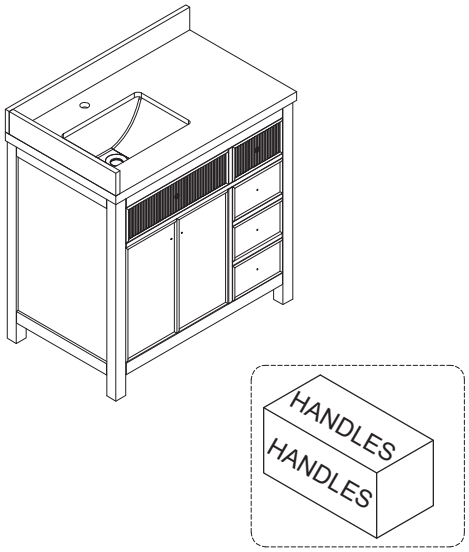

4. Unpack the handles and install them on the vanity.Do not over tighten when attaching.Short screws are for the door handles and long screws are for the drawer handles.

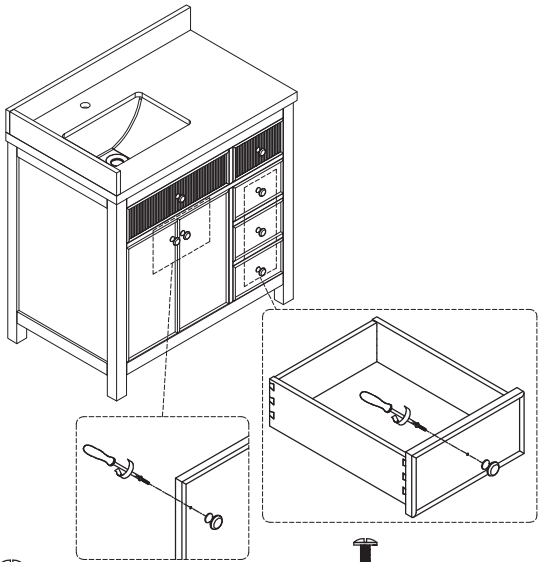


Short, for door handles

Long, for drawer handles


WC-4848-36SGL
Installation Guide

WYNDHAM
COLLECTION


1.Place cabinet in desired location and determine where the wall studs are.Adjust the feet if needed.

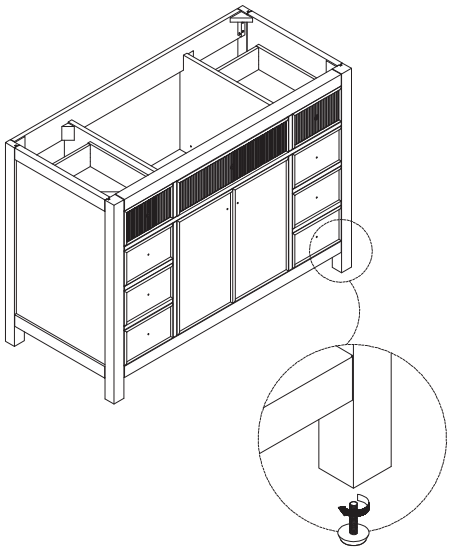


2.Install the counter. Seal around the top of the cabinet with clear silicone sealant. Do not over apply. Allow to dry 24 hours for proper curing.

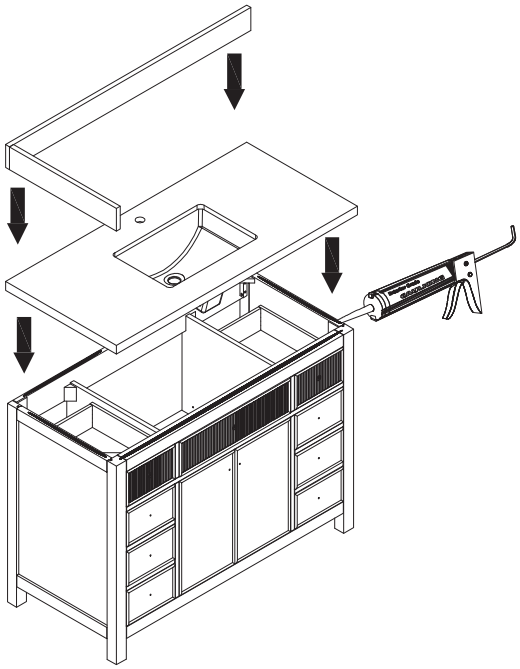

3.The handles are safely stored for transport in a box inside of the cabinet.
Look inside the vanity for the box with your handles.

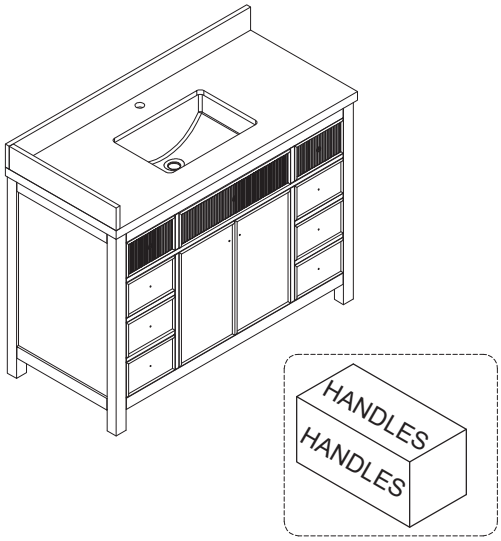

4. Unpack the handles and install them on the vanity.Do not over tighten when attaching.Short screws are for the door handles and long screws are for the drawer handles.

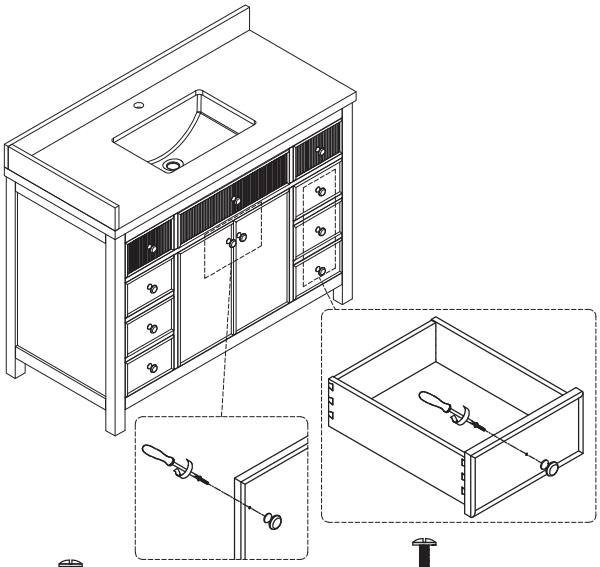


Short, for door handles

Long, for drawer handles


WC-4848-48SGL
Installation Guide

WYNDHAM
COLLECTION


1.Place cabinet in desired location and determine where the wall studs are.Adjust the feet if needed.

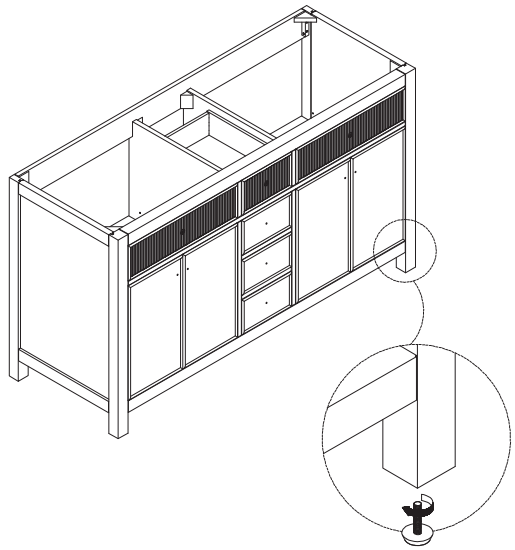


2.Install the counter. Seal around the top of the cabinet with clear silicone sealant. Do not over apply. Allow to dry 24 hours for proper curing.

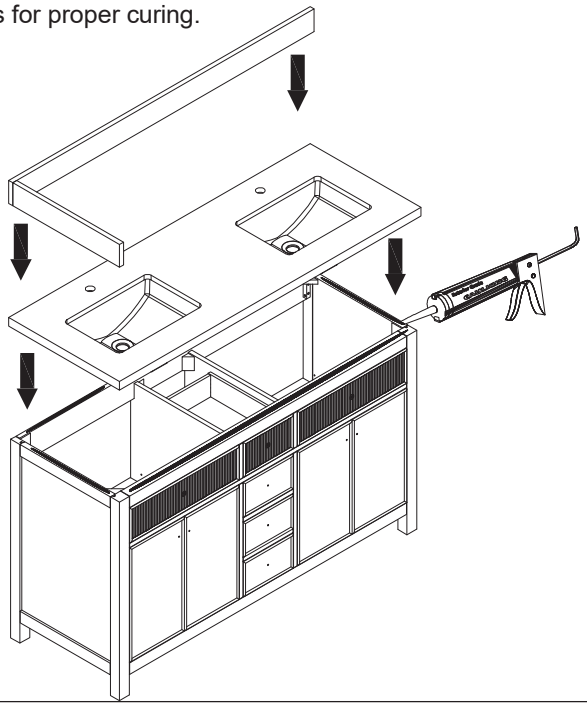

3.The handles are safely stored for transport in a box inside of the cabinet.
Look inside the vanity for the box with your handles.

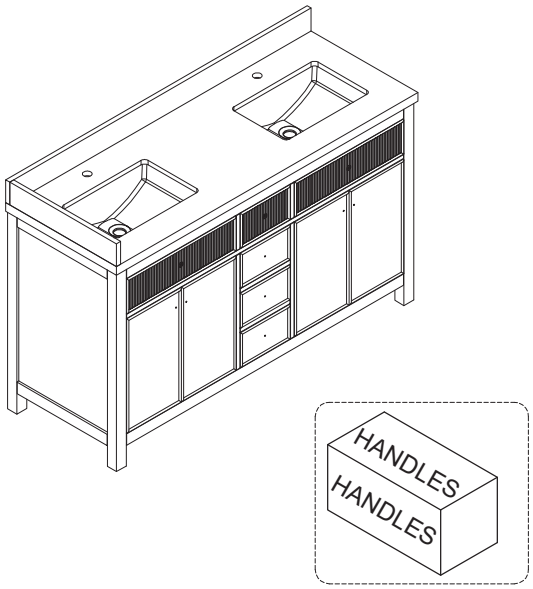

4. Unpack the handles and install them on the vanity.Do not over tighten when attaching.Short screws are for the door handles and long screws are for the drawer handles.

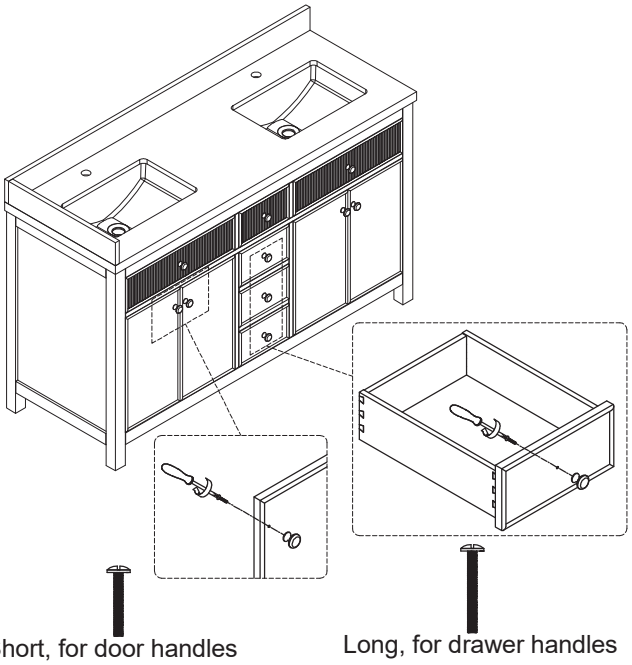


Short, for door handles

Long, for drawer handles


WC-4848-60DBL
Installation Guide

WYNDHAM
COLLECTION


1.Place cabinet in desired location and determine where the wall studs are.Adjust the feet if needed.

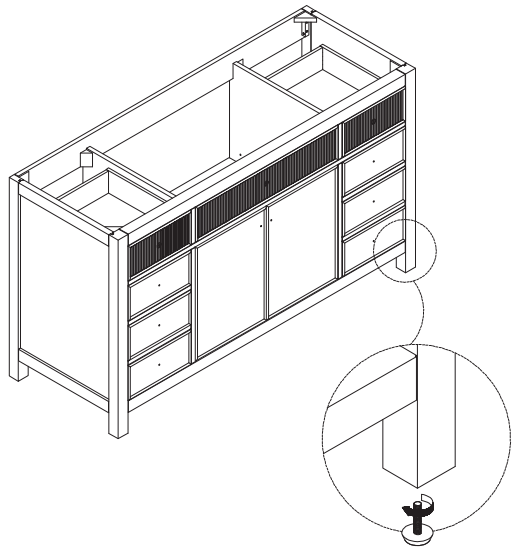


2.Install the counter. Seal around the top of the cabinet with clear silicone sealant. Do not over apply. Allow to dry 24 hours for proper curing.

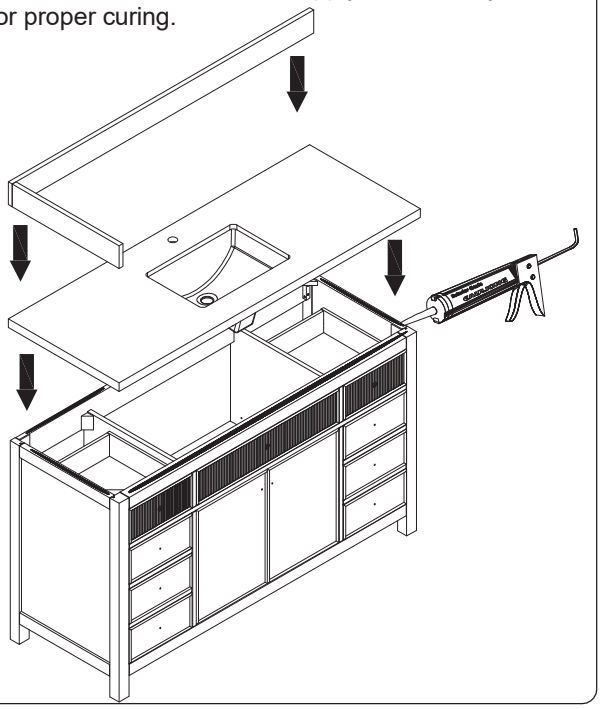

3.The handles are safely stored for transport in a box inside of the cabinet.
Look inside the vanity for the box with your handles.

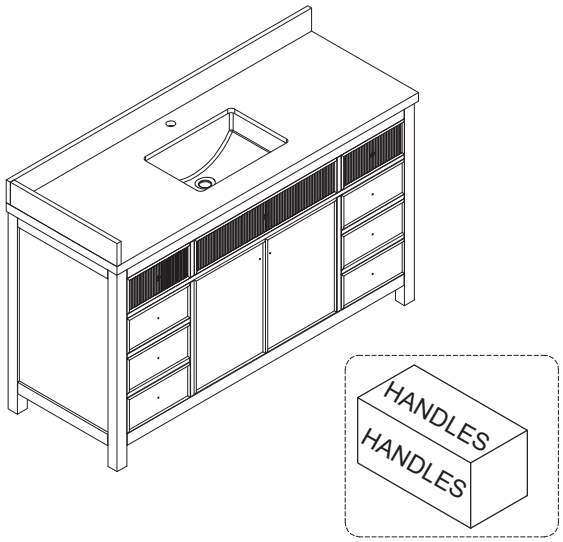

4. Unpack the handles and install them on the vanity.Do not over tighten when attaching.Short screws are for the door handles and long screws are for the drawer handles.

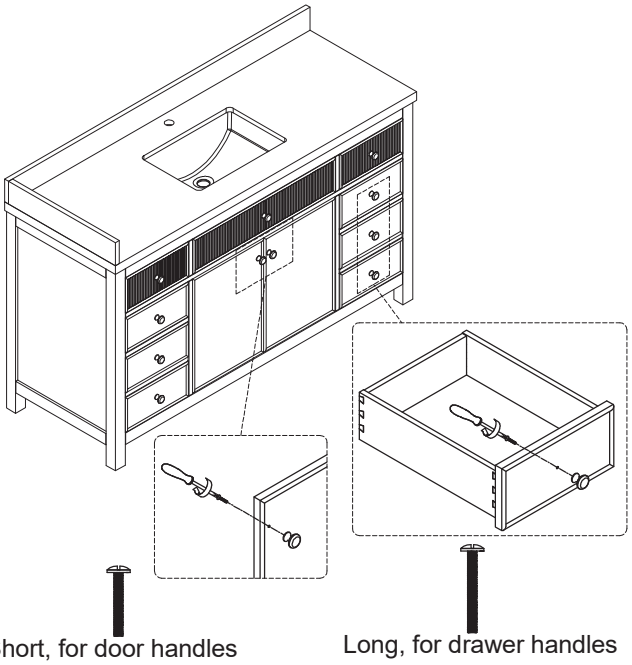


Short, for door handles

Long, for drawer handles


WC-4848-60SGL
Installation Guide

WYNDHAM
COLLECTION


1.Place cabinet in desired location and determine where the wall studs are.Adjust the feet if needed.

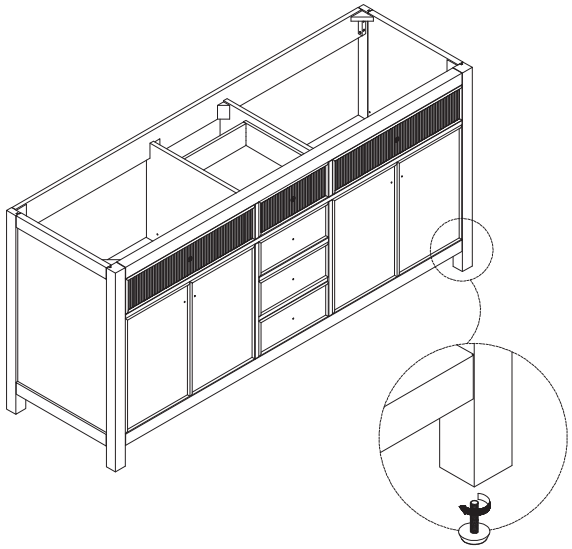


2.Install the counter. Seal around the top of the cabinet with clear silicone sealant. Do not over apply. Allow to dry 24 hours for proper curing.

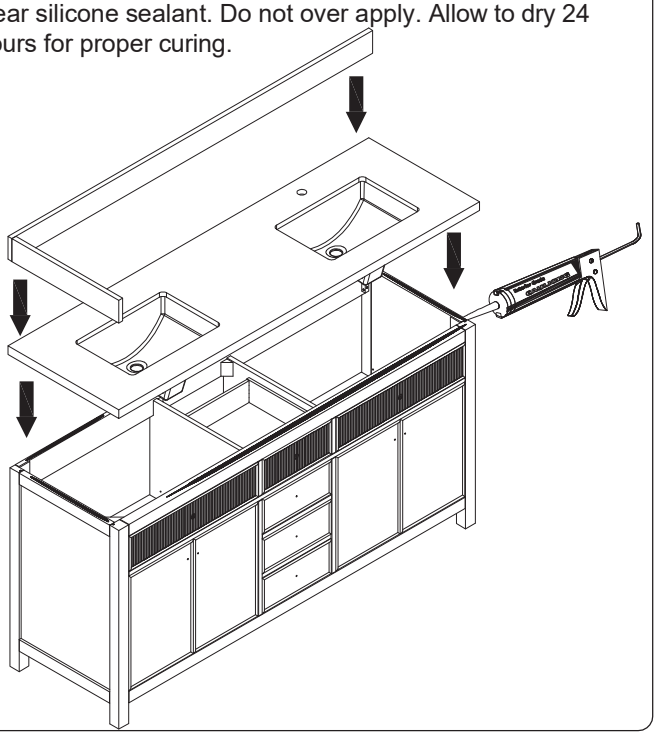

3.The handles are safely stored for transport in a box inside of the cabinet.
Look inside the vanity for the box with your handles.

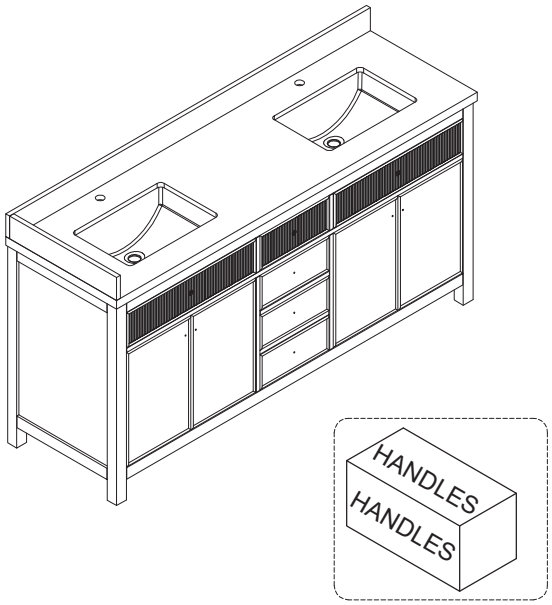

4. Unpack the handles and install them on the vanity.Do not over tighten when attaching.Short screws are for the door handles and long screws are for the drawer handles.

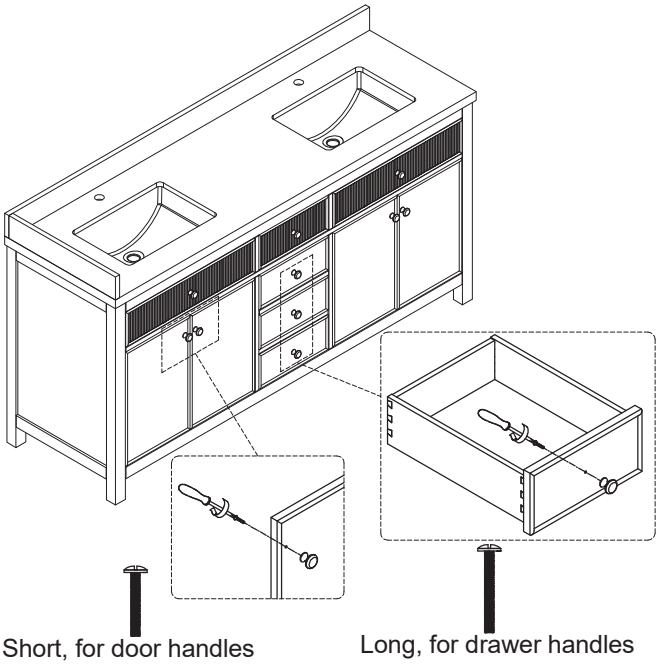


Short, for door handles

Long, for drawer handles


WC-4848-72DBL
Installation Guide

WYNDHAM
COLLECTION


1.Place cabinet in desired location and determine where the wall studs are.Adjust the feet if needed.

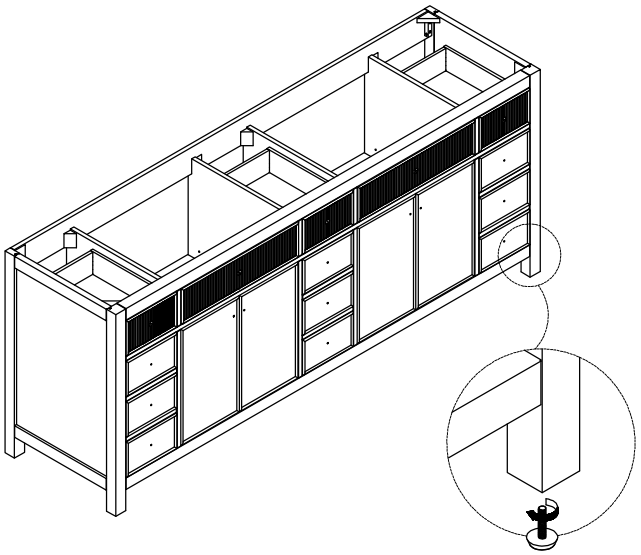


2.Install the counter. Seal around the top of the cabinet with clear silicone sealant. Do not over apply. Allow to dry 24 hours for proper curing.

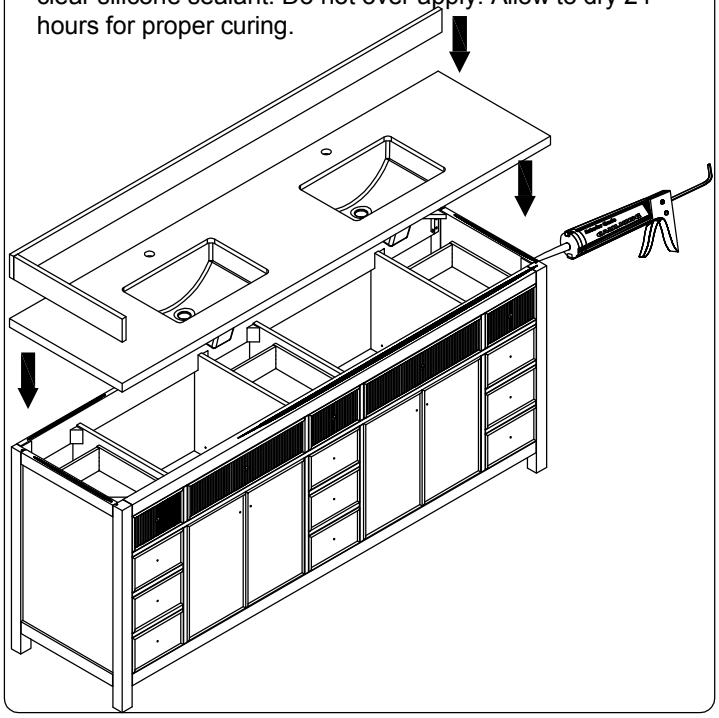

3.The handles are safely stored for transport in a box inside of the cabinet.
Look inside the vanity for the box with your handles.

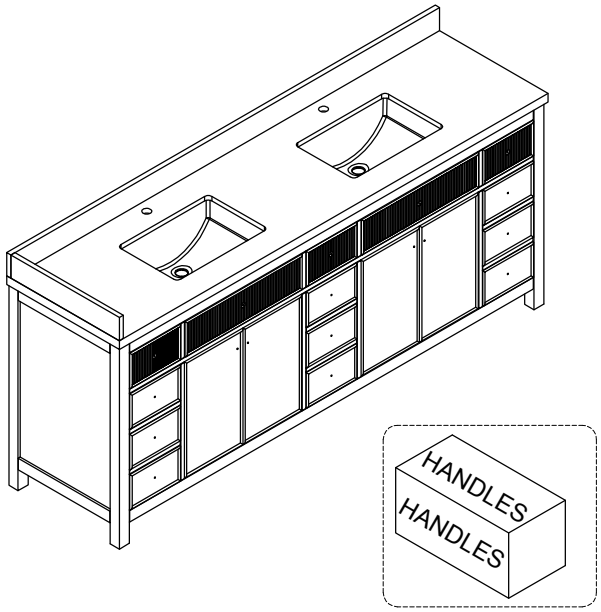

4. Unpack the handles and install them on the vanity.Do not over tighten when attaching.Short screws are for the door handles and long screws are for the drawer handles.

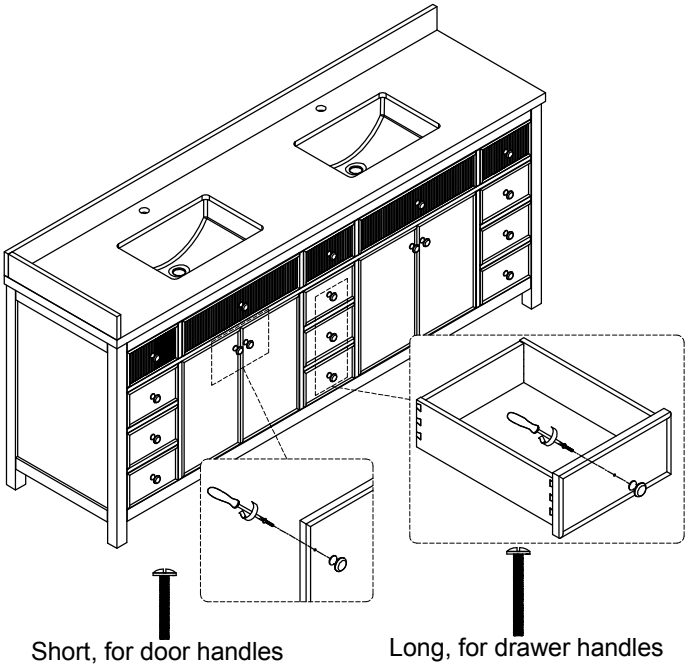

WC-4848-84DBL
Installation Guide