INSTALLATION INSTRUCTIONS

HON20631

① 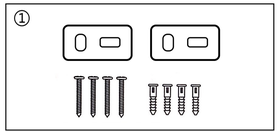

locate mounting hardware before discarding the package

② 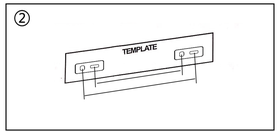

identify on template which item you will be installling , starting with the primary post

③ 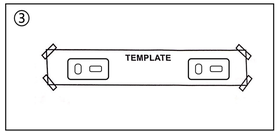

find the position of template on wall in desired location making sure that it is level , then tape it to the wall

④ 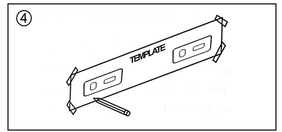

mark locations (on the wall) of fasteners through template using a pencil

⑤

Unscrew the fixed screw with a wrench and remove the fixed base

⑥ A 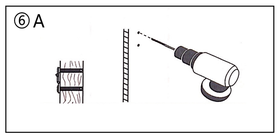

6A - Locate studs before drilling. if solid wood or stud installation: drill 1/16" holes,be sure to keep drill level. Anchors will not be required

⑥ B 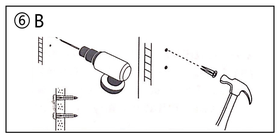

6B - If sheetrock or ceramic tile installation: drill 3/16" holes,be sure to keep drill level. insert anchors into drilled holes using a hammer to tap the anchors in. Be careful not to break tile

⑦ 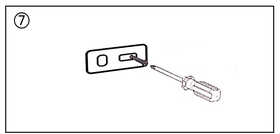

Attach brackets(confirm that clips face outward) to wall with fasteners provided and secur through drilled holes. Confirm that brackets are level

⑧ 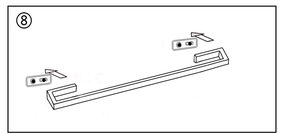

Aim the product at two fixed base and put it on

⑨ 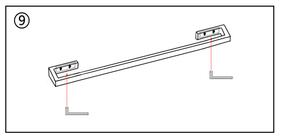

Tighten the screw with the small mounting wrench and install it