Installation Instructions

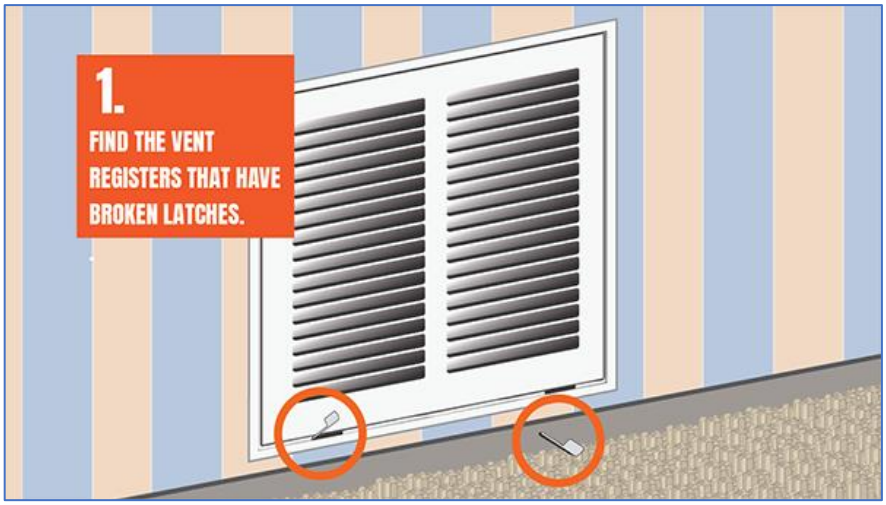

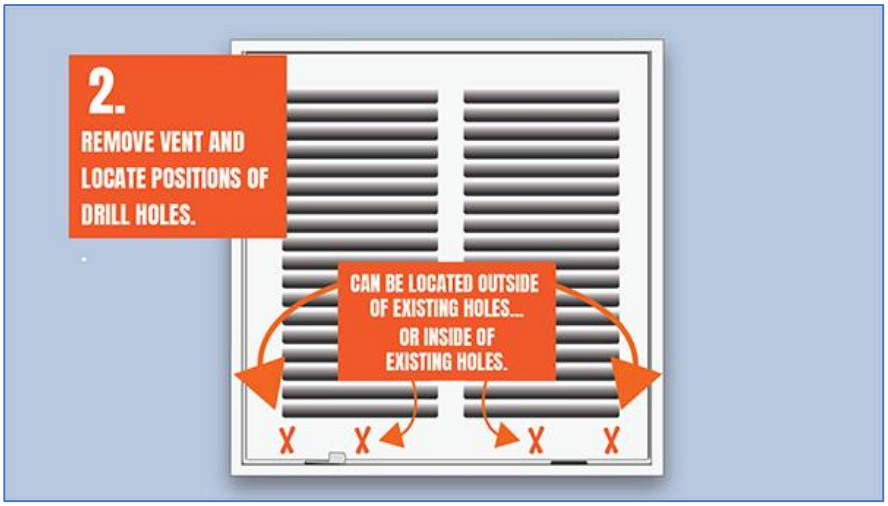

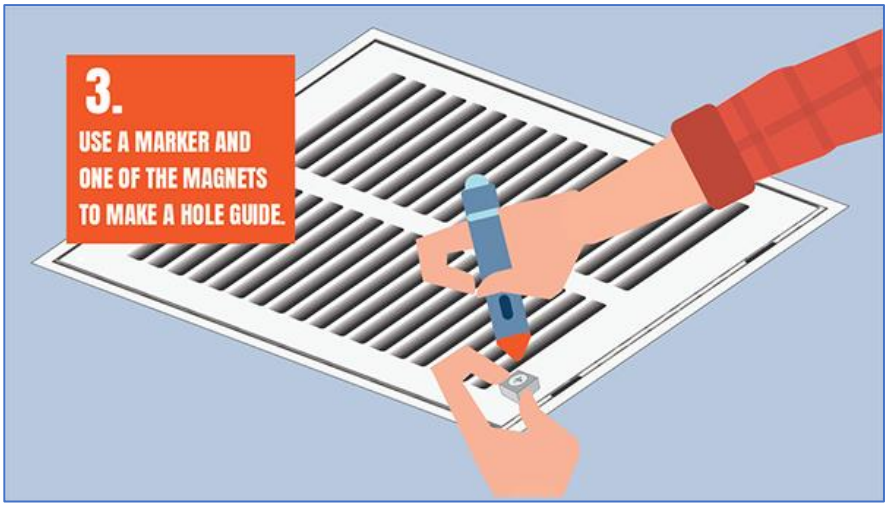

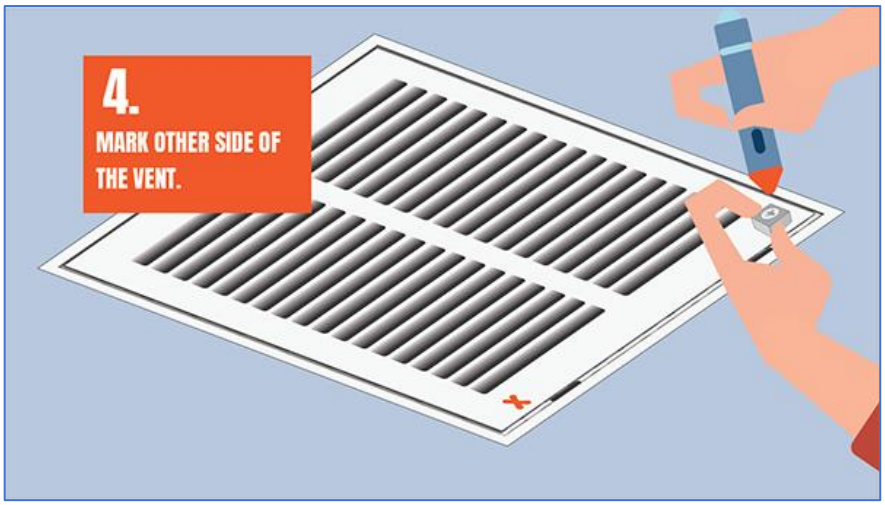
4.
MARK OTHER SIDE OF THE VENT.

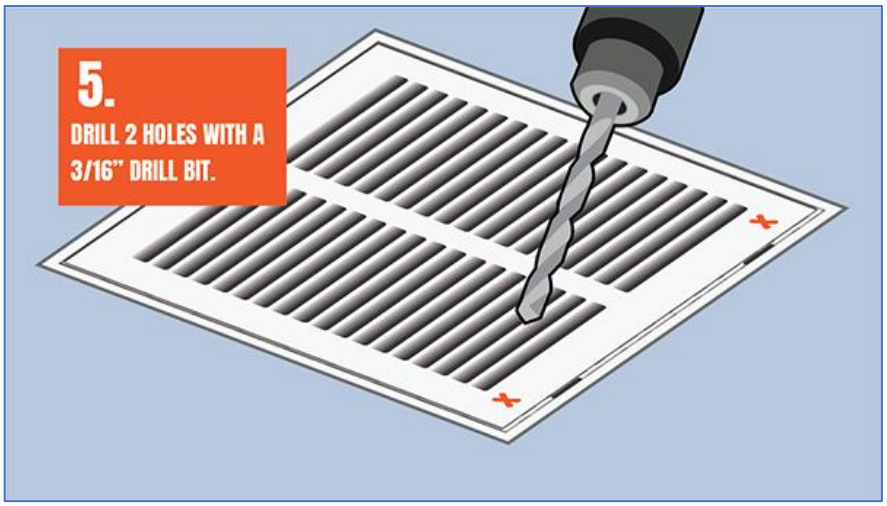
5.
DRILL 2 HOLES WITH A 3/16" DRILL BIT.

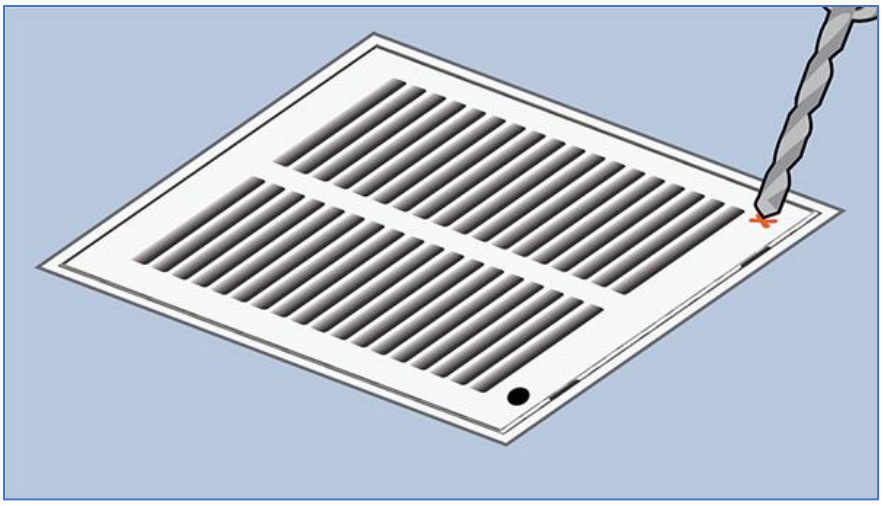
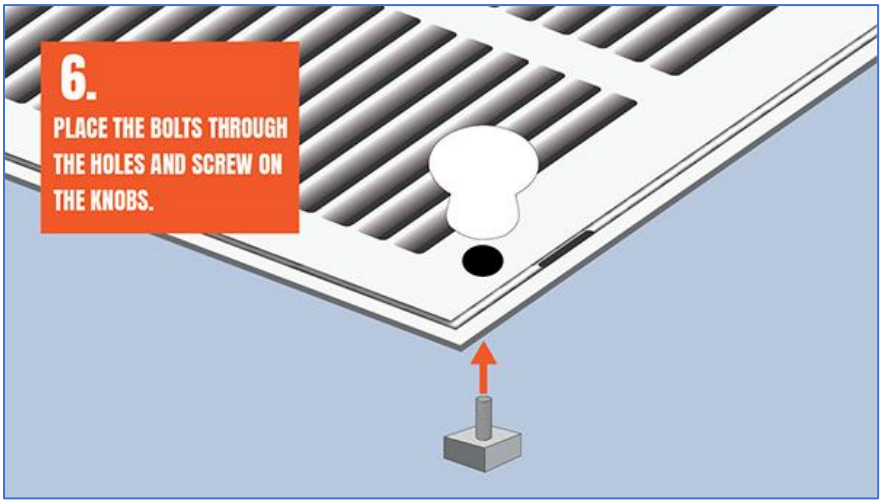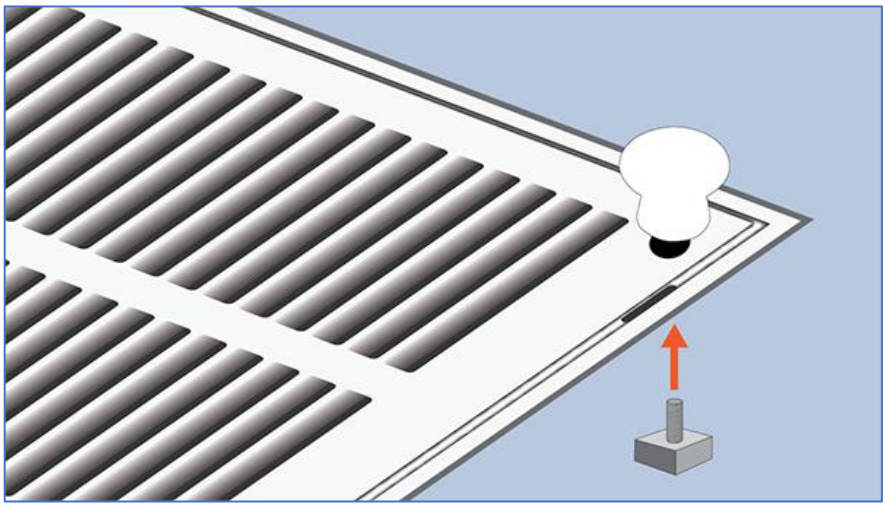
Air-Care
INDOOR AIR QUALITY SPECIALISTS