24.3.21

290X210MM

Screw free installation of single and double door storage cabinets

List of accessories



Type \ Diagram		①	②	③	④	⑤	⑥	⑦	⑧	⑨	⑩	⑪	⑫	⑬	⑭
QTY / Specifications \ item		Left side shelves	right side shelves	Top and bottom layer boards	Inner layer board	Backboard	Elevated back panel	Hole back plate	Front reinforcement rod	Rear reinforcement rod	door	Backboard plug	casters	handle	layer boards buckle
Double opening 6 layer	40-100	1	1	2	4	4	–	1	2	3	2	1	4	2	4
	40-81	1	1	2	4	4	–	1	2	3	2	1	4	2	4
	40-60	1	1	2	4	4	–	1	2	3	2	1	4	2	4

installation steps

YouTube install video

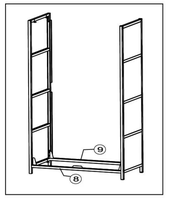

Install the lower front and rear reinforcement rods

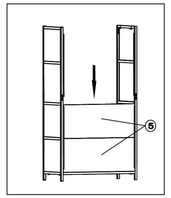

Insert the backboard into the slot at the back of the side shelves, from top to bottom, and install the backboard.

Install the middle reinforcement bar on the back.

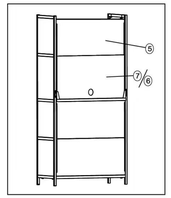

Install the upper back panel. Note: The double door model has a raised back panel with holes ⑦, while the single door model has a raised back panel with holes ⑧

Install the top back reinforcement rod.

Insert the front top reinforcement rod into the top hole, do not tighten it.

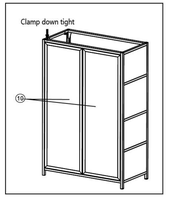

Align the upper and lower pins of the cabinet door with the front reinforcement pipe holes and insert them, and install and fix the top reinforcement rod with a stopper. Note: Double doors consist of two pieces. Single door is one door

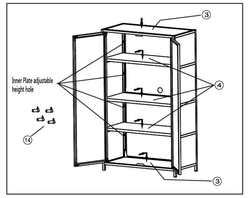

Installation of layer boards: Install the top and bottom boards at the hooks of the layer boards on the side shelves, and place the inner layer boards at the horizontal pipes of the side shelves.

Note: The adjustable inner layer board needs to be inserted with the layer board buckle into the adjustable height hole on the side frame and tightened to support it, and then placed into the layer board.

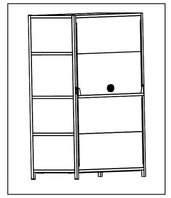

Install the back panel plug. Note: Double doors have backboard plugs, single door models do not have them

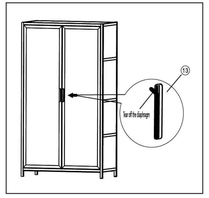

Install cabinet door handle: Tear off the handle adhesive diaphragm and stick the handle to the appropriate height position on the vertical strip of the cabinet door.

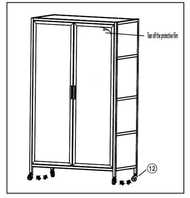

Install casters: Screw the casters into the threaded pipe race at the bottom of the side frame. Attention: During installation, support the cabinet to prevent tipping. Finally, remove the protective film from the cabinet door to complete the installation.