
DE0024

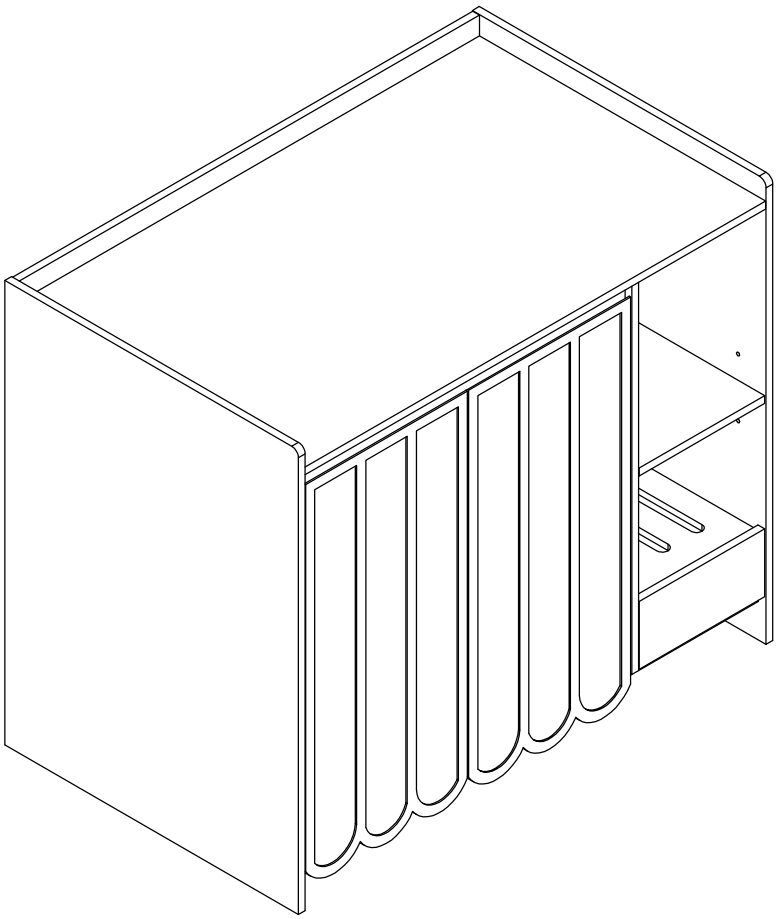


As this item contains many parts, please read the installation instruction carefully before installation . Please use tools properly and carefully. If you have any questions about the product and installation, please contact us.

hosoteservice@gmail.com

Our professional after-sales team will serve you online all day.

Before You Start

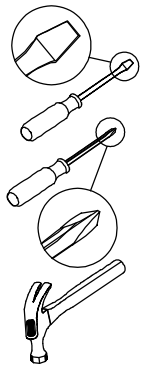

- Read through each step carefully and follow the proper order
- Separate and count all your parts and hardware
- Give yourself enough room for the assembly process
- Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. （Assembly speed can be increased by using electric screwdriver）

Helpful Hints

PEOPLE NEEDED FOR ASSEMBLY: 1-2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.



- Identify, sort and count the parts before attempting assembly.



- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with an **R** (right) and **L** (left) for proper placement.



- Make sure to always face the point on the top of the Cam Lock towards the outer edge.



- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.




-Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.




- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.

Board Identification


Not actual size

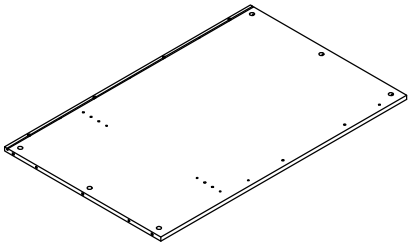


① TOP PANEL
Qty:1

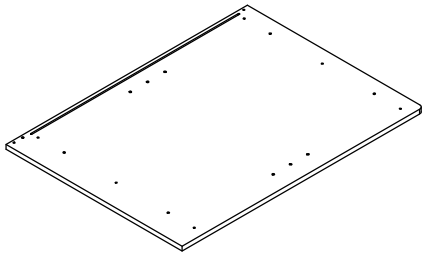


② LEFT PANEL
Qty:1

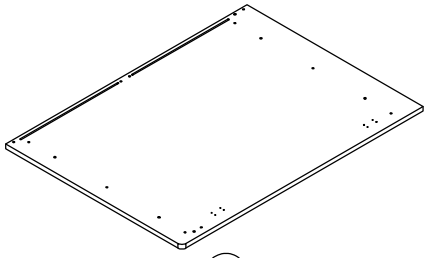


③ RIGHT PANEL
Qty:1

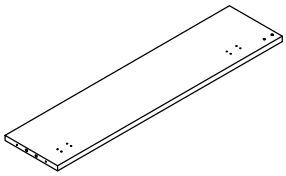


④ MIDDLE FRONT PANEL
Qty:1

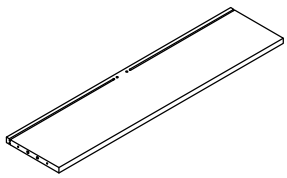


⑤ MIDDLE BACK PANEL
Qty:1

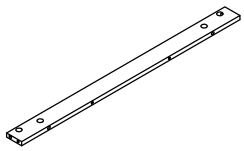


⑥ RALL
Qty:1

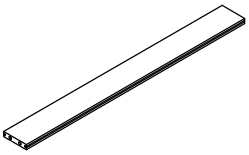

⑦ RALL
Qty:1

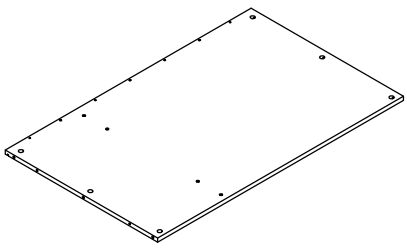


⑧ BOTTOM PANEL
Qty:1

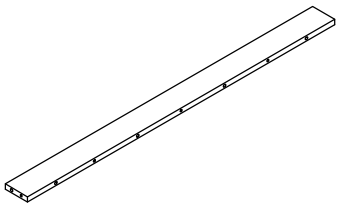


⑨ RALL
Qty:1

Board Identification


Not actual size

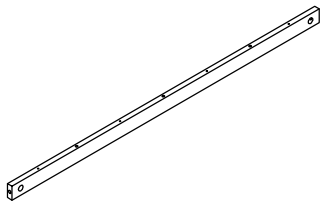


⑩
RALL
Qty:1

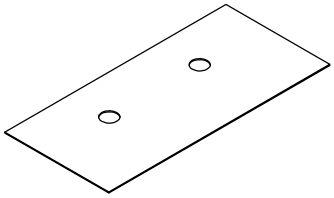


⑪
LEFT UPPER BACK PANEL
Qty:1

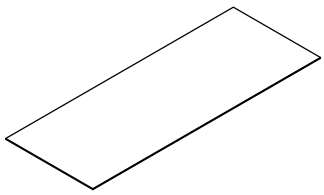


⑫
LEFT LOWER BACK PANEL
Qty:1

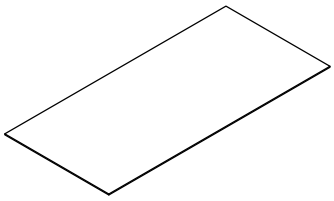


⑬
RIGHT BACK PANEL
Qty:1

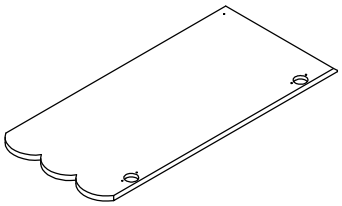


⑭
LEFT DOOR
Qty:1

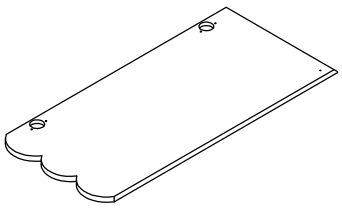


⑮
RIGHT DOOR
Qty:1

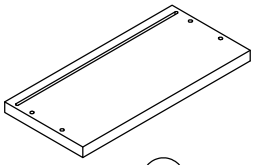

⑯
DRAWER FRONT PANEL
Qty:2

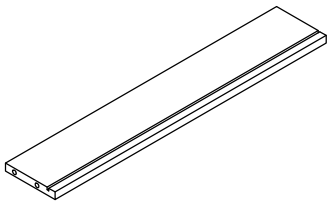


⑰
DRAWER SIDE PANEL
Qty:2

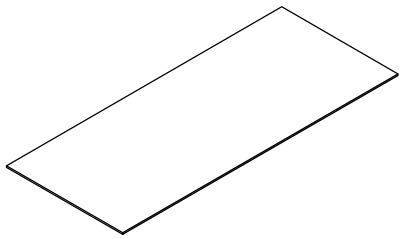


⑱
DRAWER BOTTOM PANEL
Qty:1

Board Identification

Not actual size

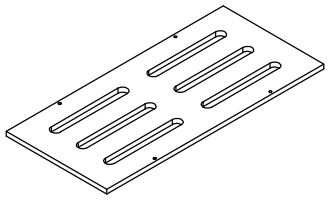


⑲
DRAWER TOP PANEL
Qty:1

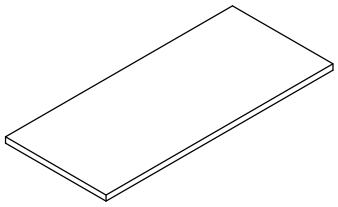

⑳
SHELF
Qty:1

Board Identification

Not actual size

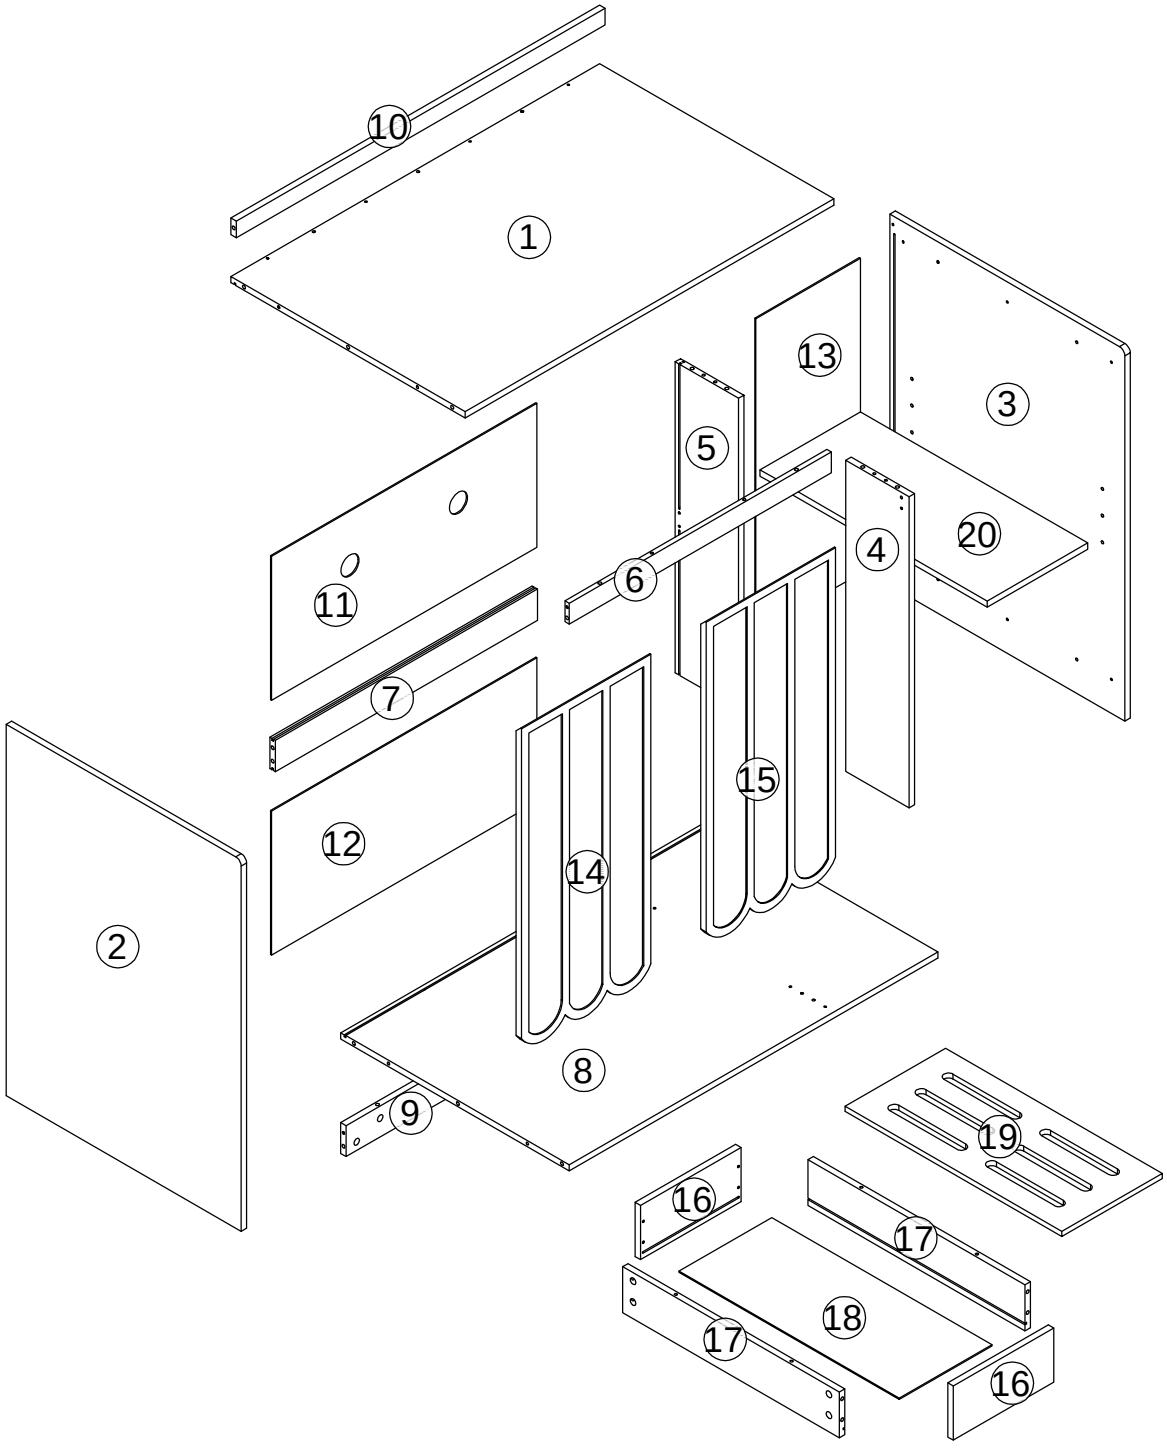

Part List



Ø15X9mm

A	X40

CAM LOCK
spare: 3



Ø6.5X35mm

B	X40


CAM BOLT
spare: 3



Ø6X30mm

C	X32


WOOD DOWEL
spare: 2



Ø4X35mm


D	X8

SCREW
spare: 1

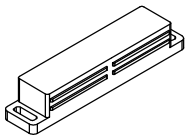

E	X1


MAGNET



Ø3X14mm


F	X2

SCREW
spare: 1



G	X2


MAGNET PLATE



Ø3X10mm


H	X2

SCREW
spare: 1



I	X4

HINGE



Ø4X12mm


J	X24

SCREW
spare: 3



K	X18

SCREW
spare: 2



Ø3X14mm

L	X18

SCREW
spare: 3



M	X4

SHELF SUPPORT
spare:1



Ø20mm


N	X8

HOLE PASTE
spare:1


Part List


Cam Lock Fastening System


Insert the cam bolt into the hole first, then insert the cam lock and lock it,

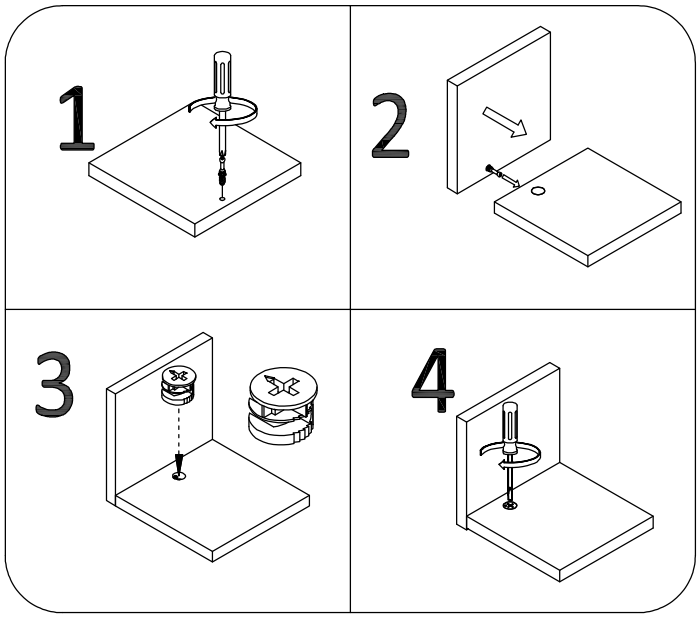



STEP1

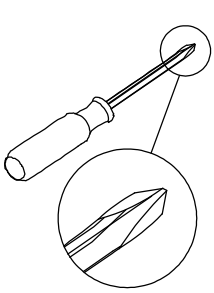


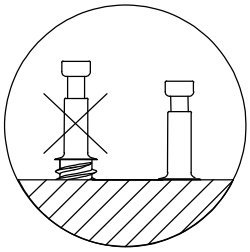


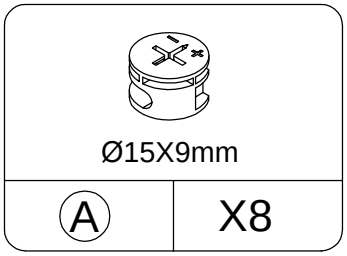


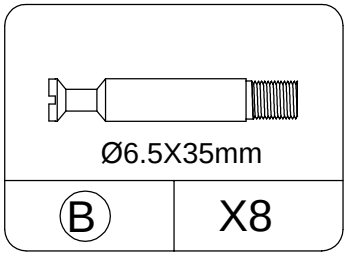


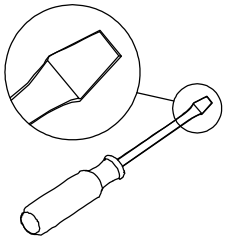


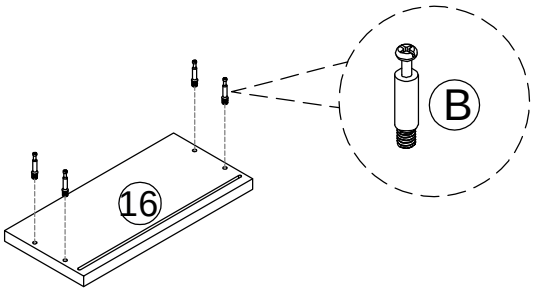

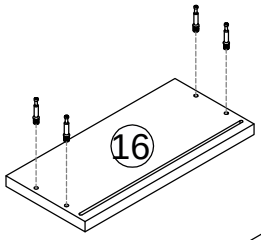


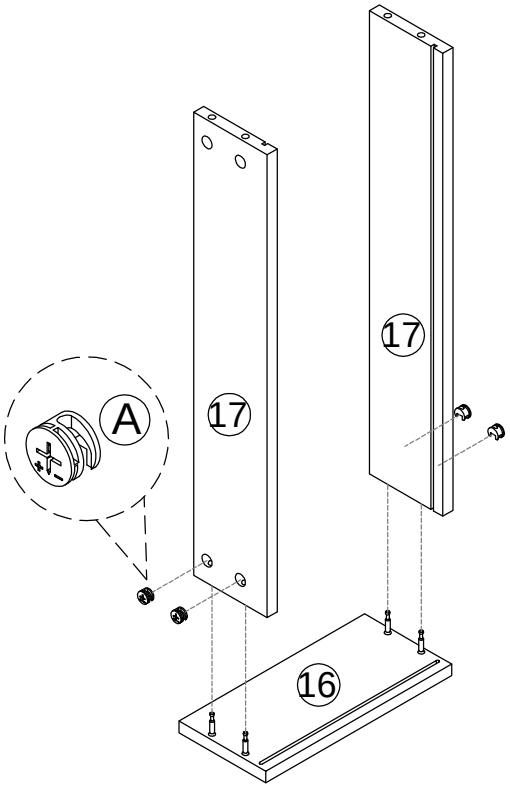

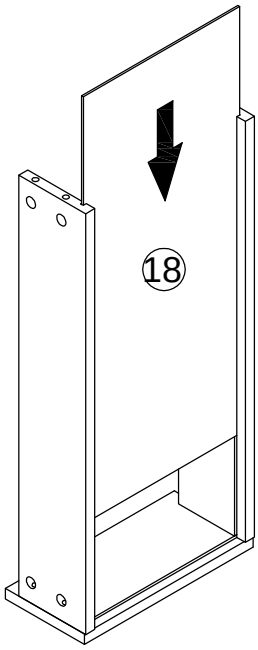

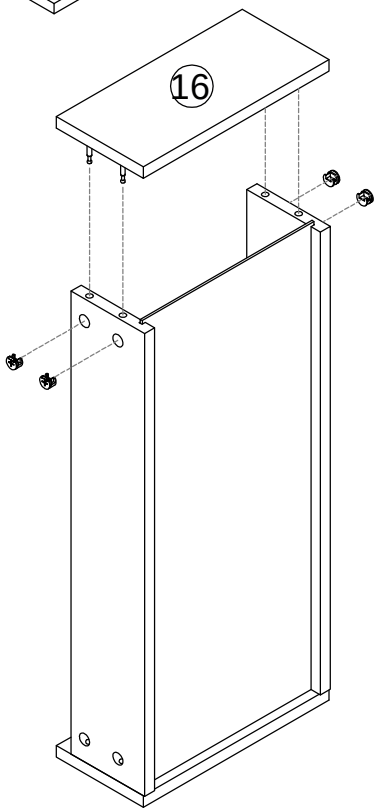



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

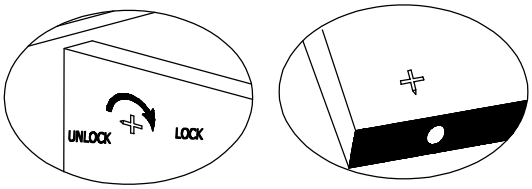

proper orientation of CAM Lock


STEP2

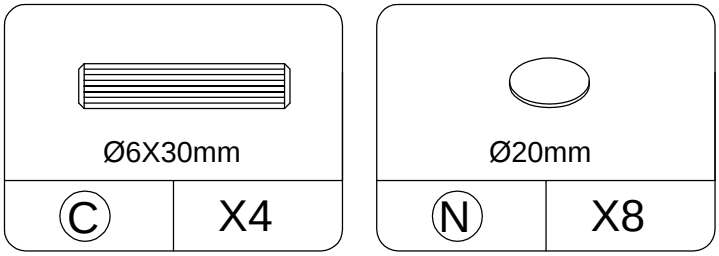

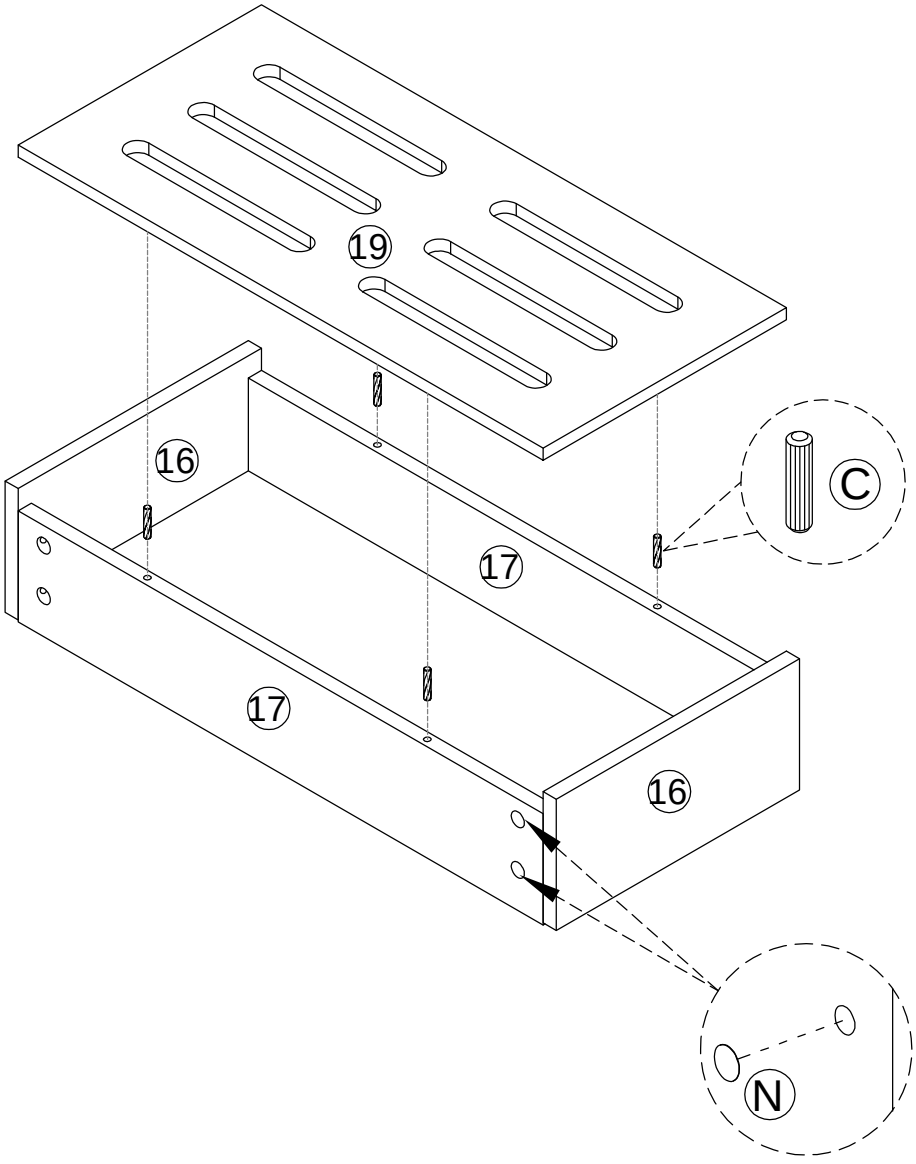



Stick the exposed holes of the cabinet body with hole stickers (N)


STEP3

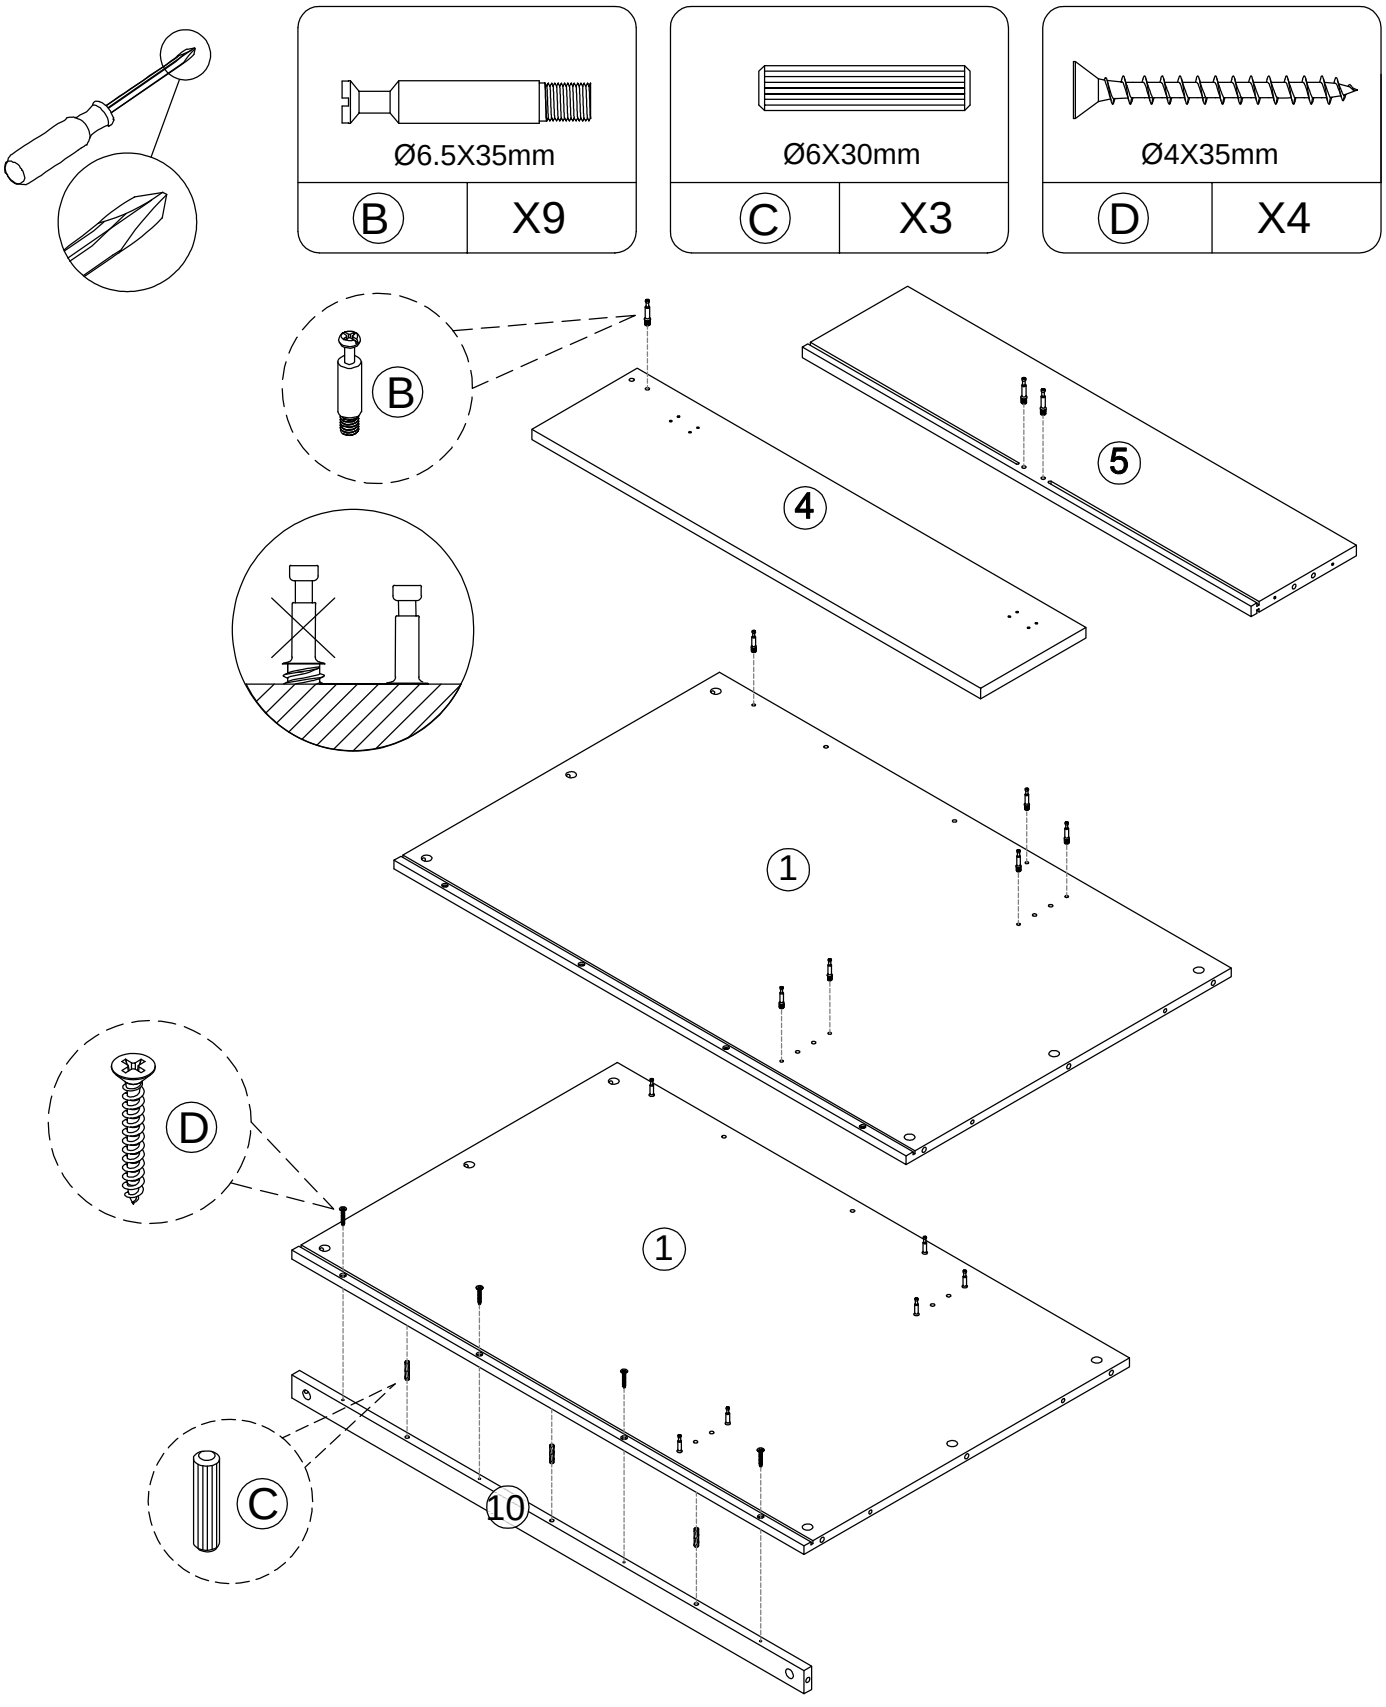



STEP4

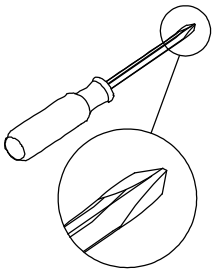


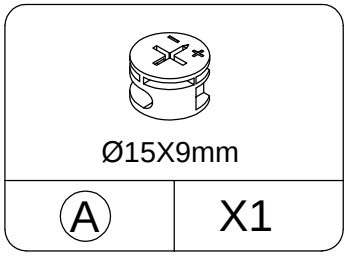

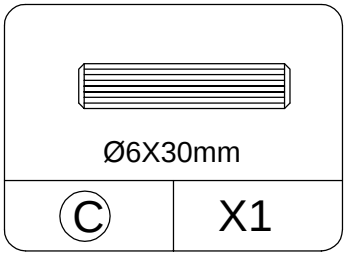


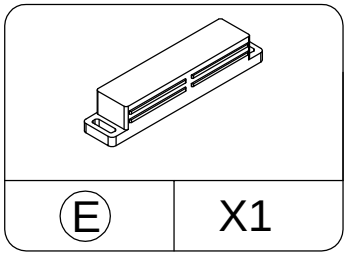

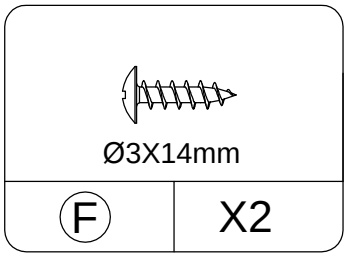

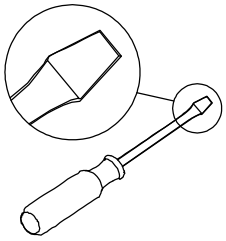


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

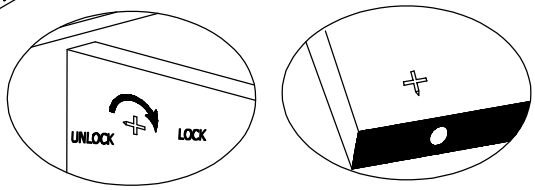

proper orientation of CAM Lock


STEP5

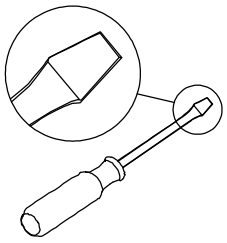




Ø15X9mm

A	X6




Ø6X30mm

C	X6

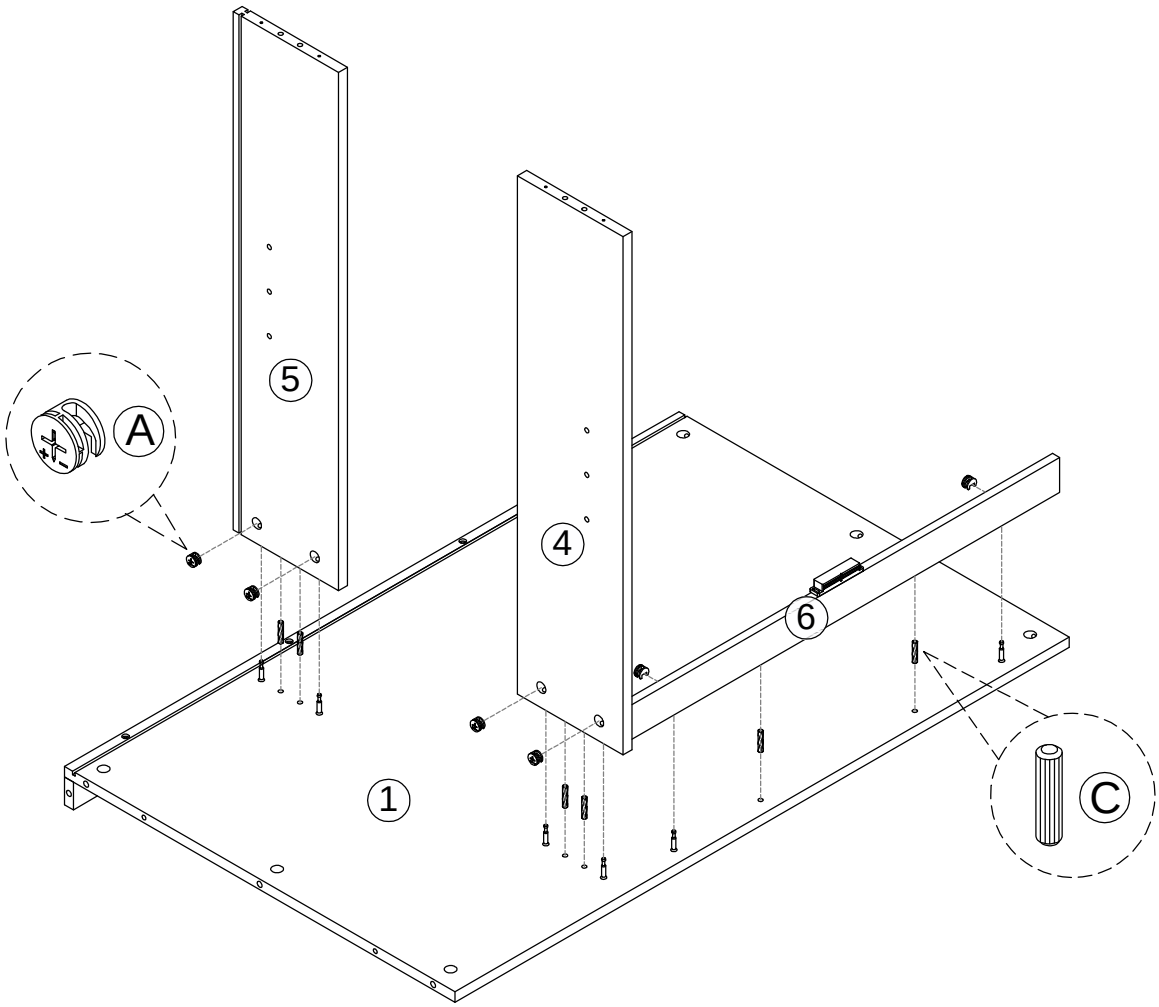


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

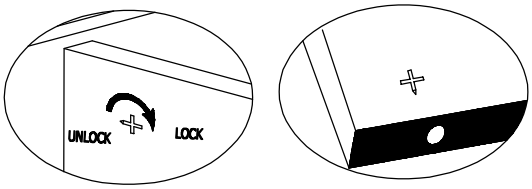


proper orientation of CAM Lock


STEP6

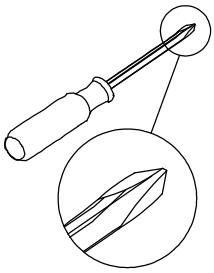


Ø15X9mm	
A	X4





Ø6.5X35mm	
B	X4




Ø6X30mm	
C	X3

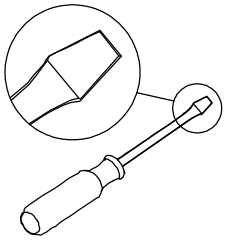


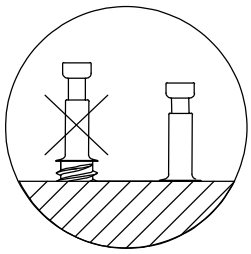


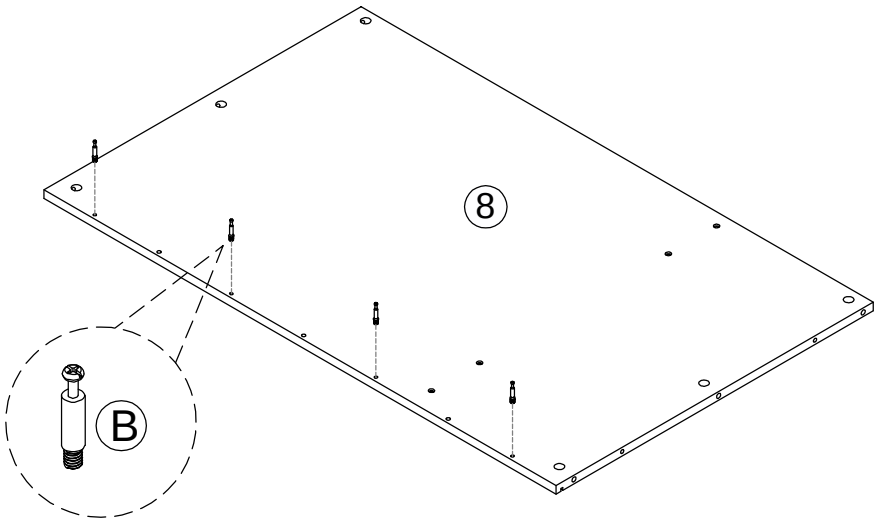

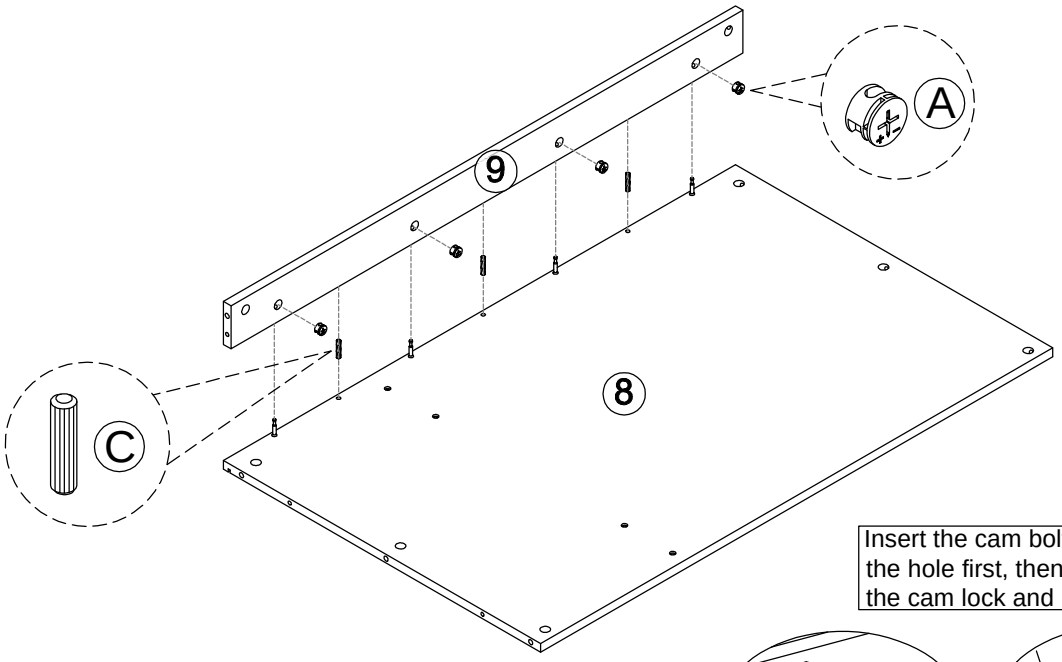


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

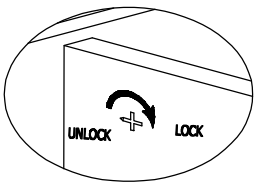


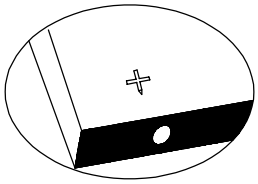



proper orientation of CAM Lock

STEP7

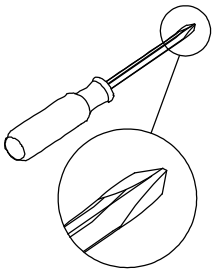


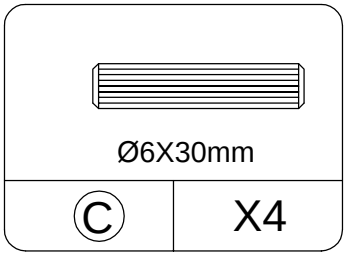

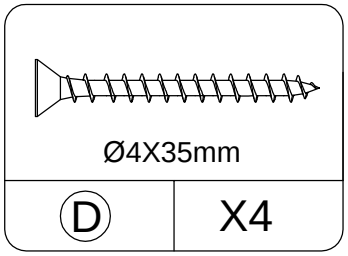


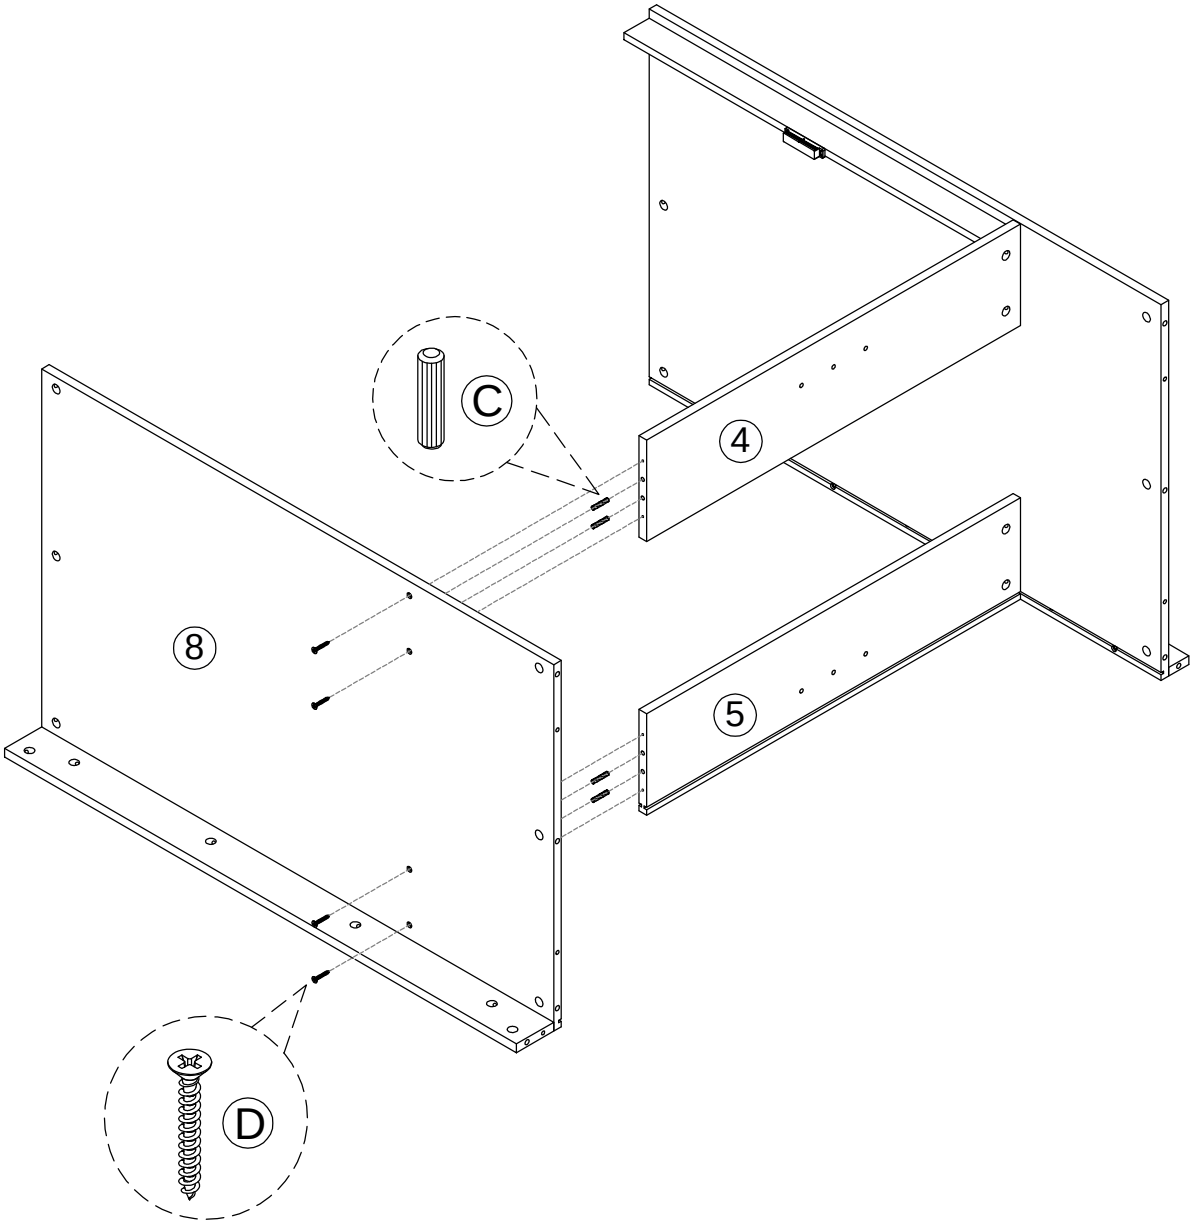



STEP8

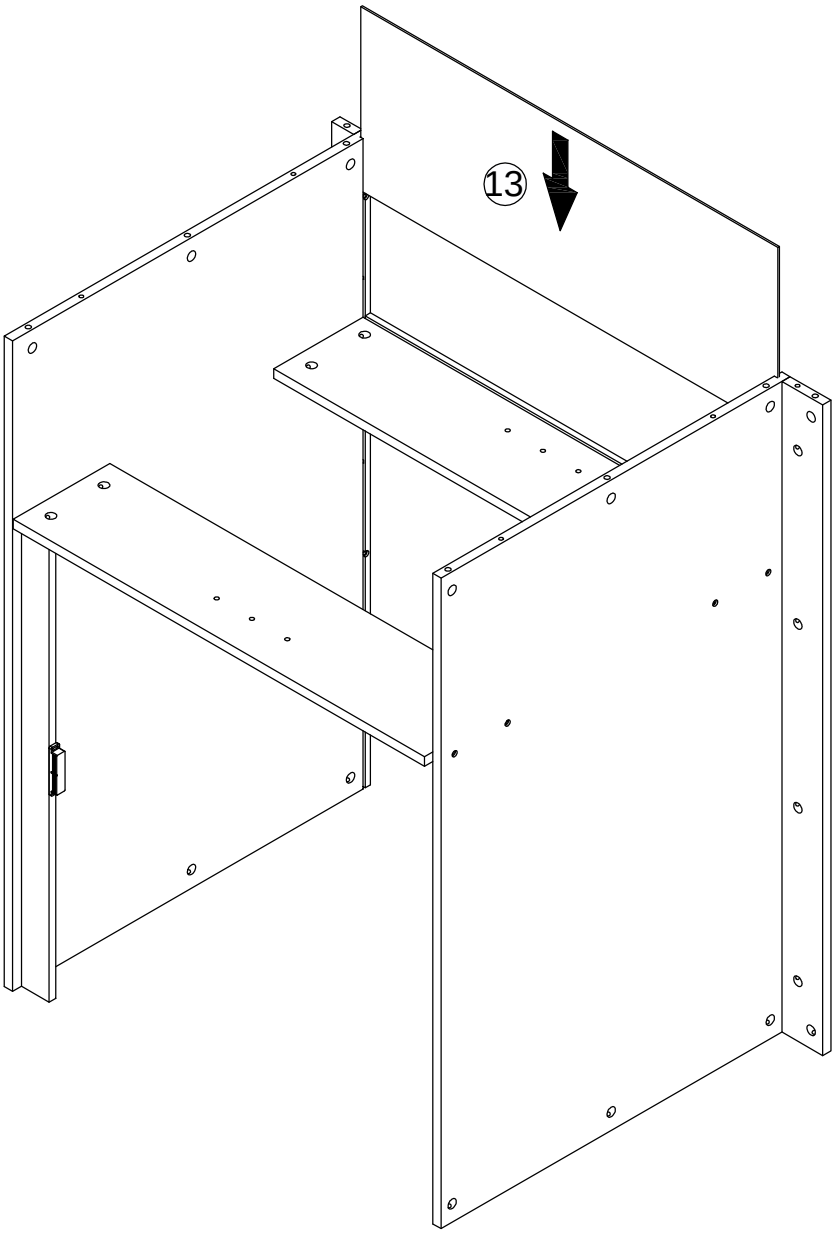



STEP9

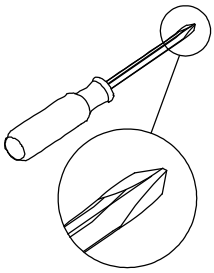


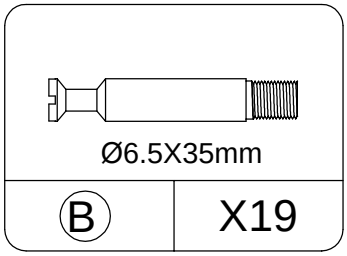

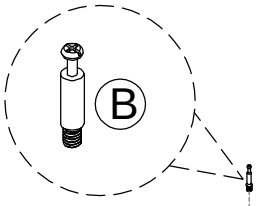


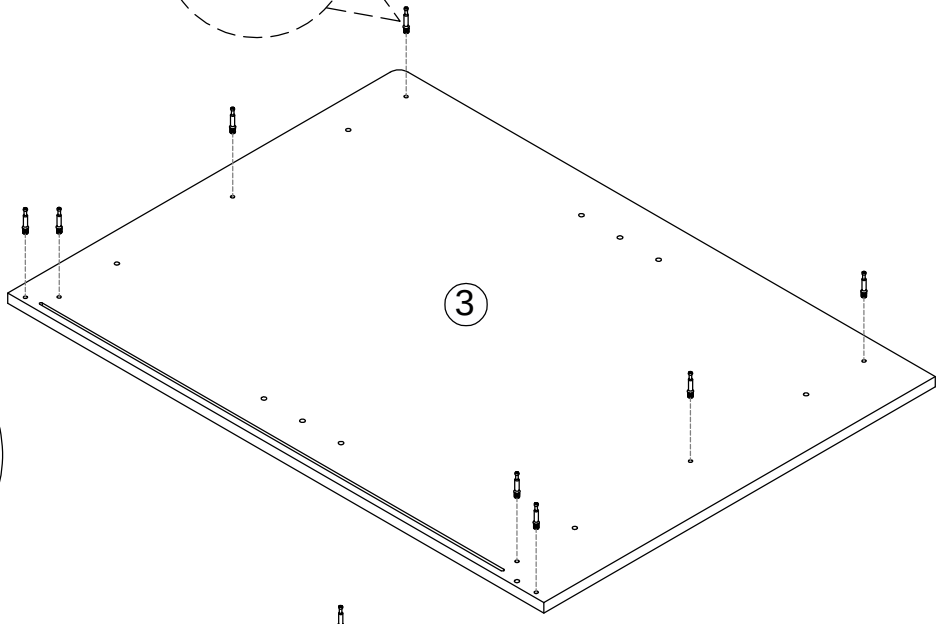

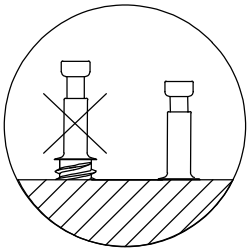

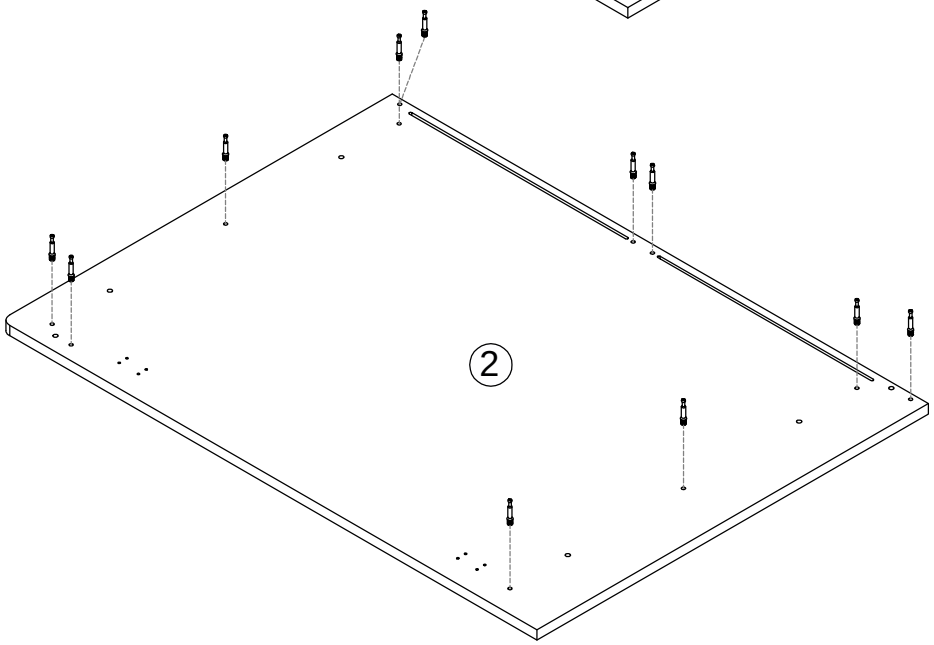


STEP10

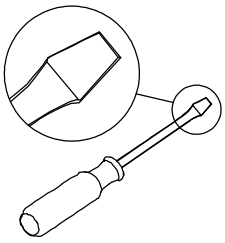




Ø15X9mm

A	X8




Ø6X30mm

C	X5

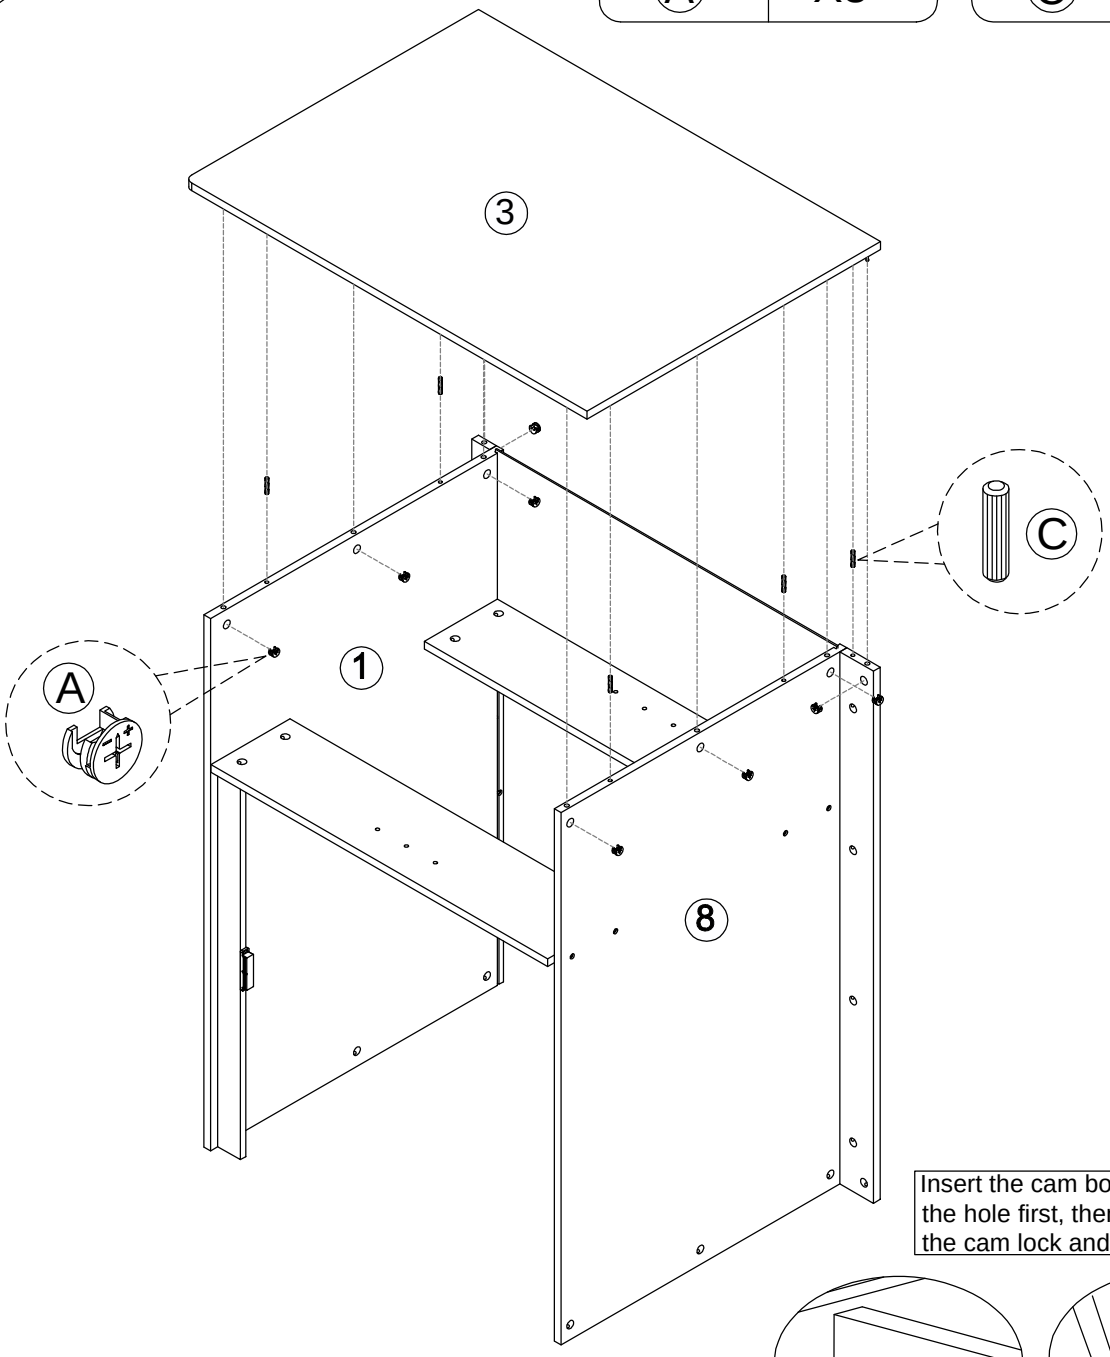



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

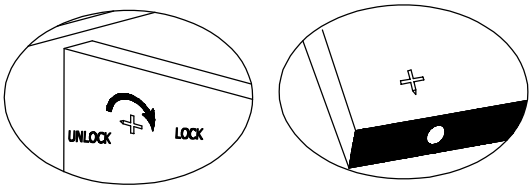


proper orientation of CAM Lock

STEP11

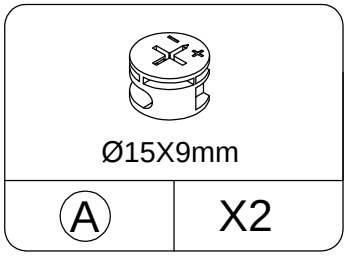

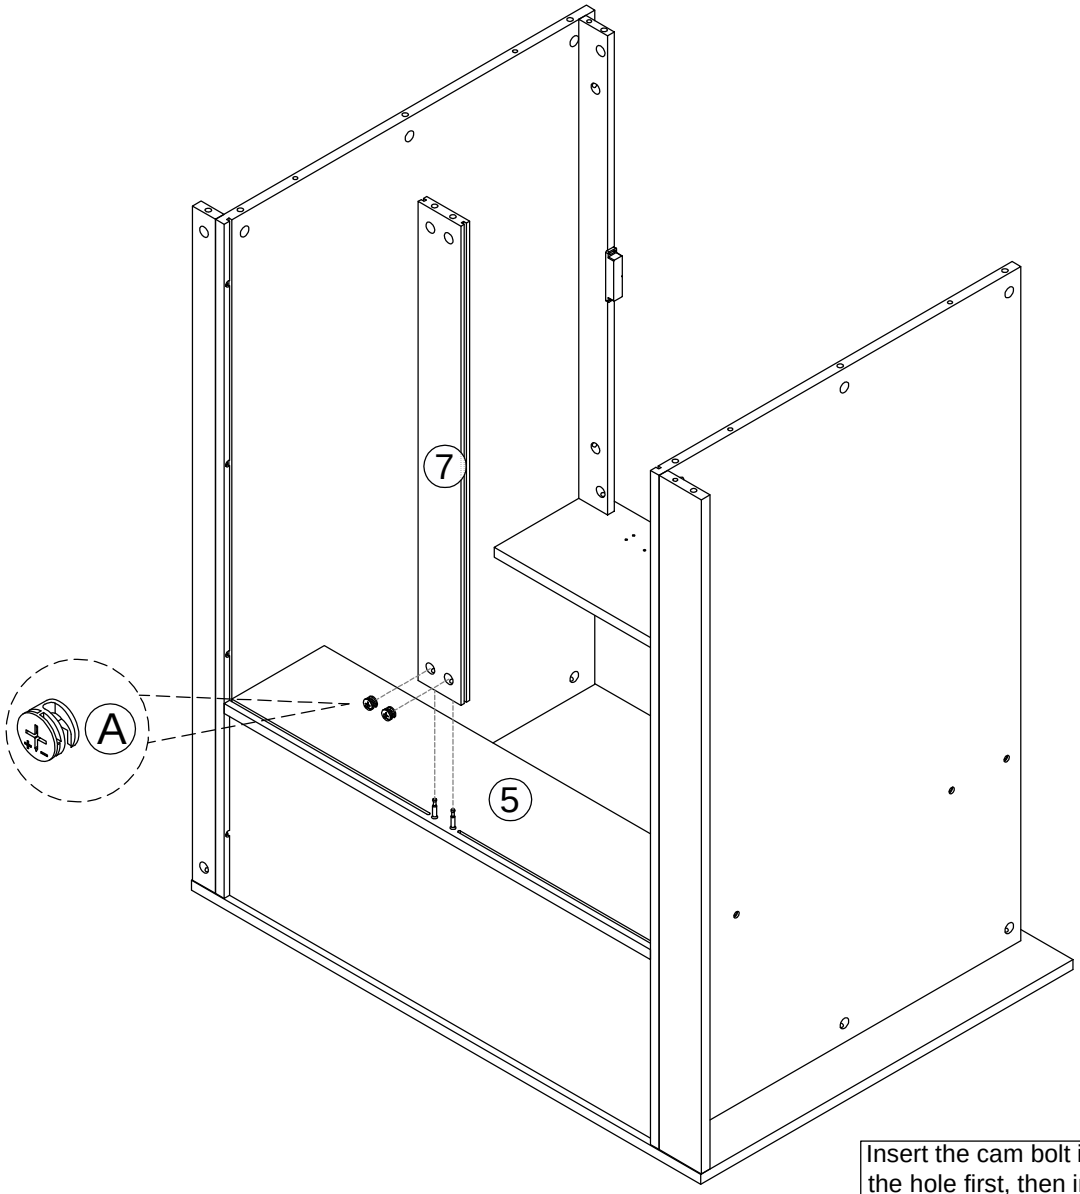


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

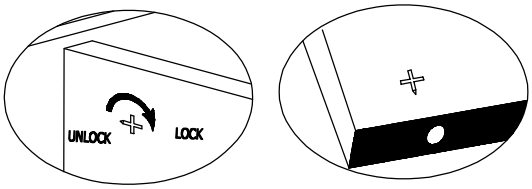


proper orientation of CAM Lock

STEP12

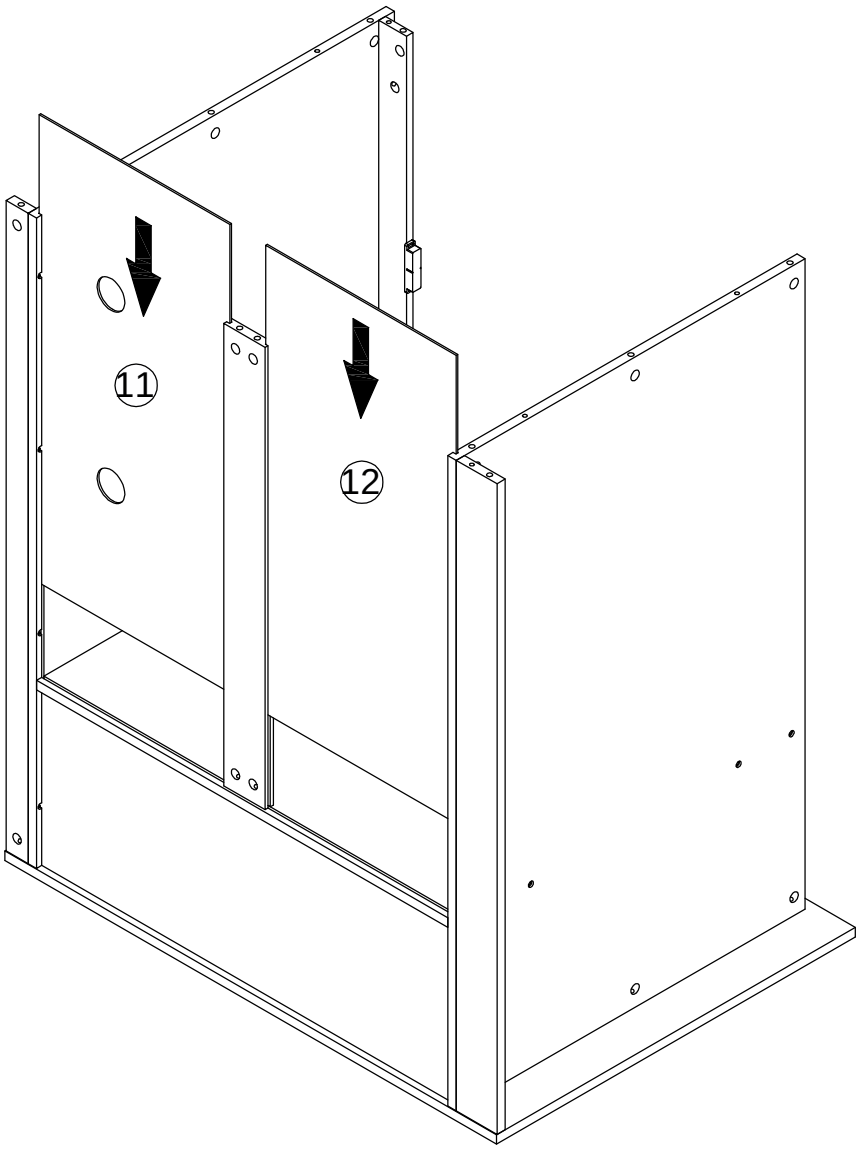


STEP13

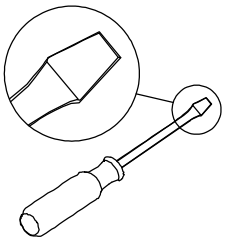





Ø15X9mm	
A	X11



Ø6X30mm	
C	X6

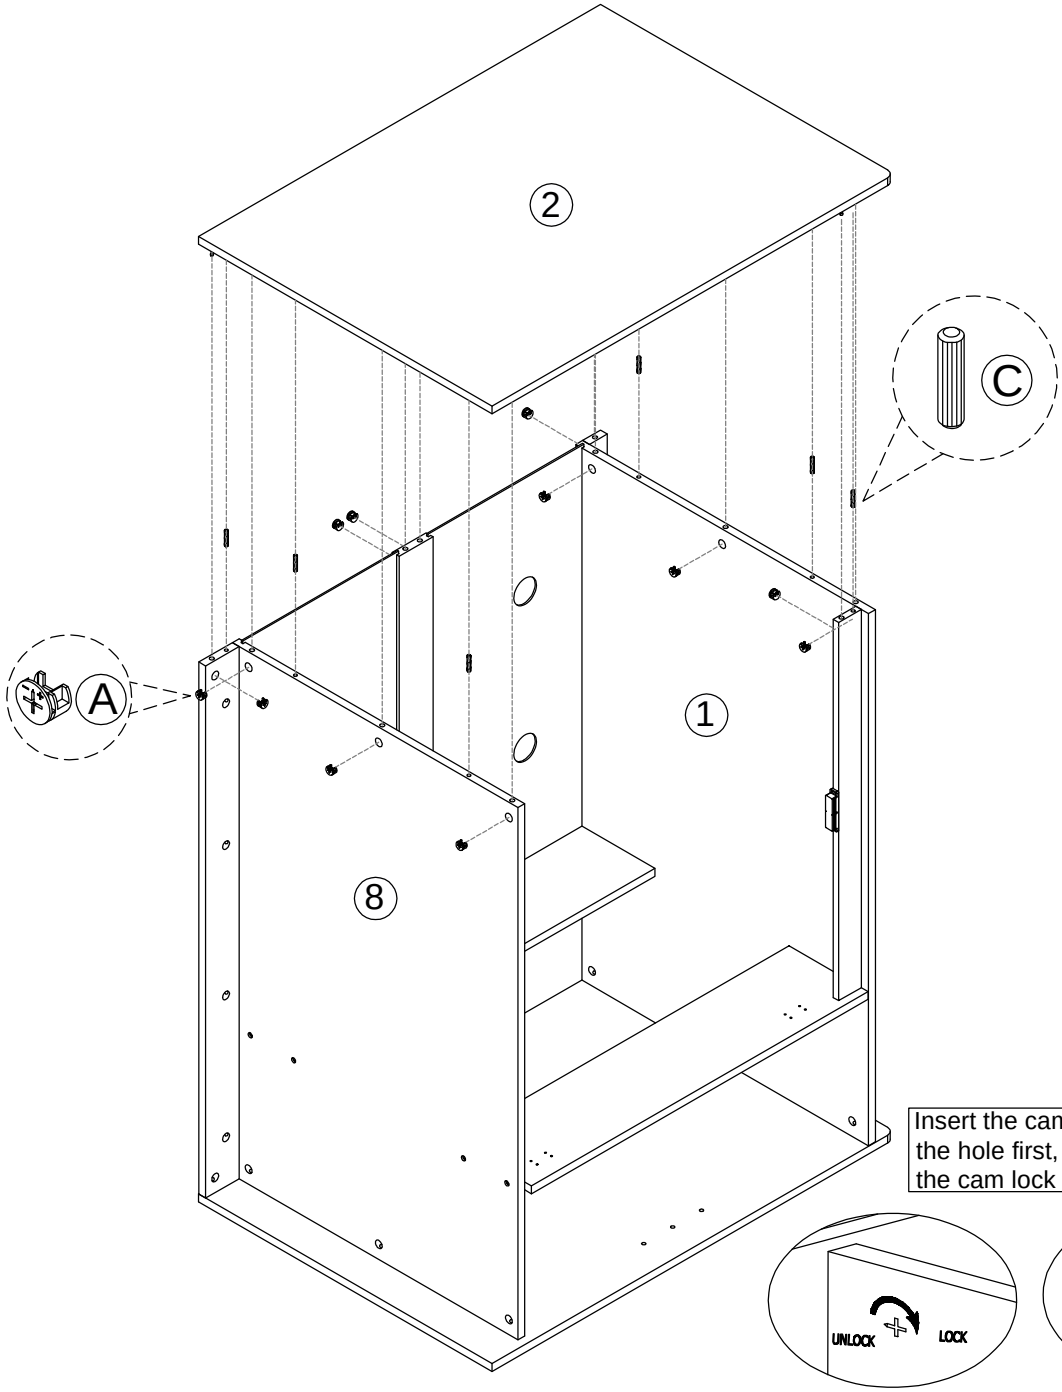



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

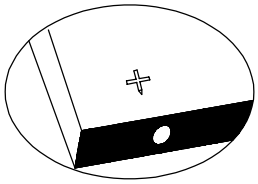


proper orientation of CAM Lock

STEP14

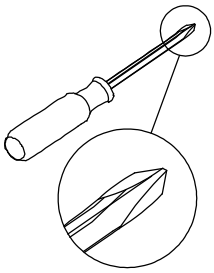




G	X2




Ø3X10mm

H	X2




I	X4




Ø4X12mm

J	X8


STEP15

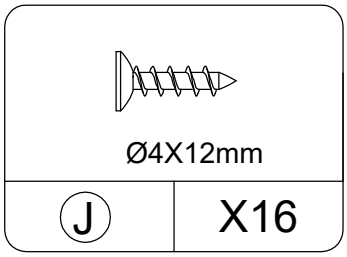


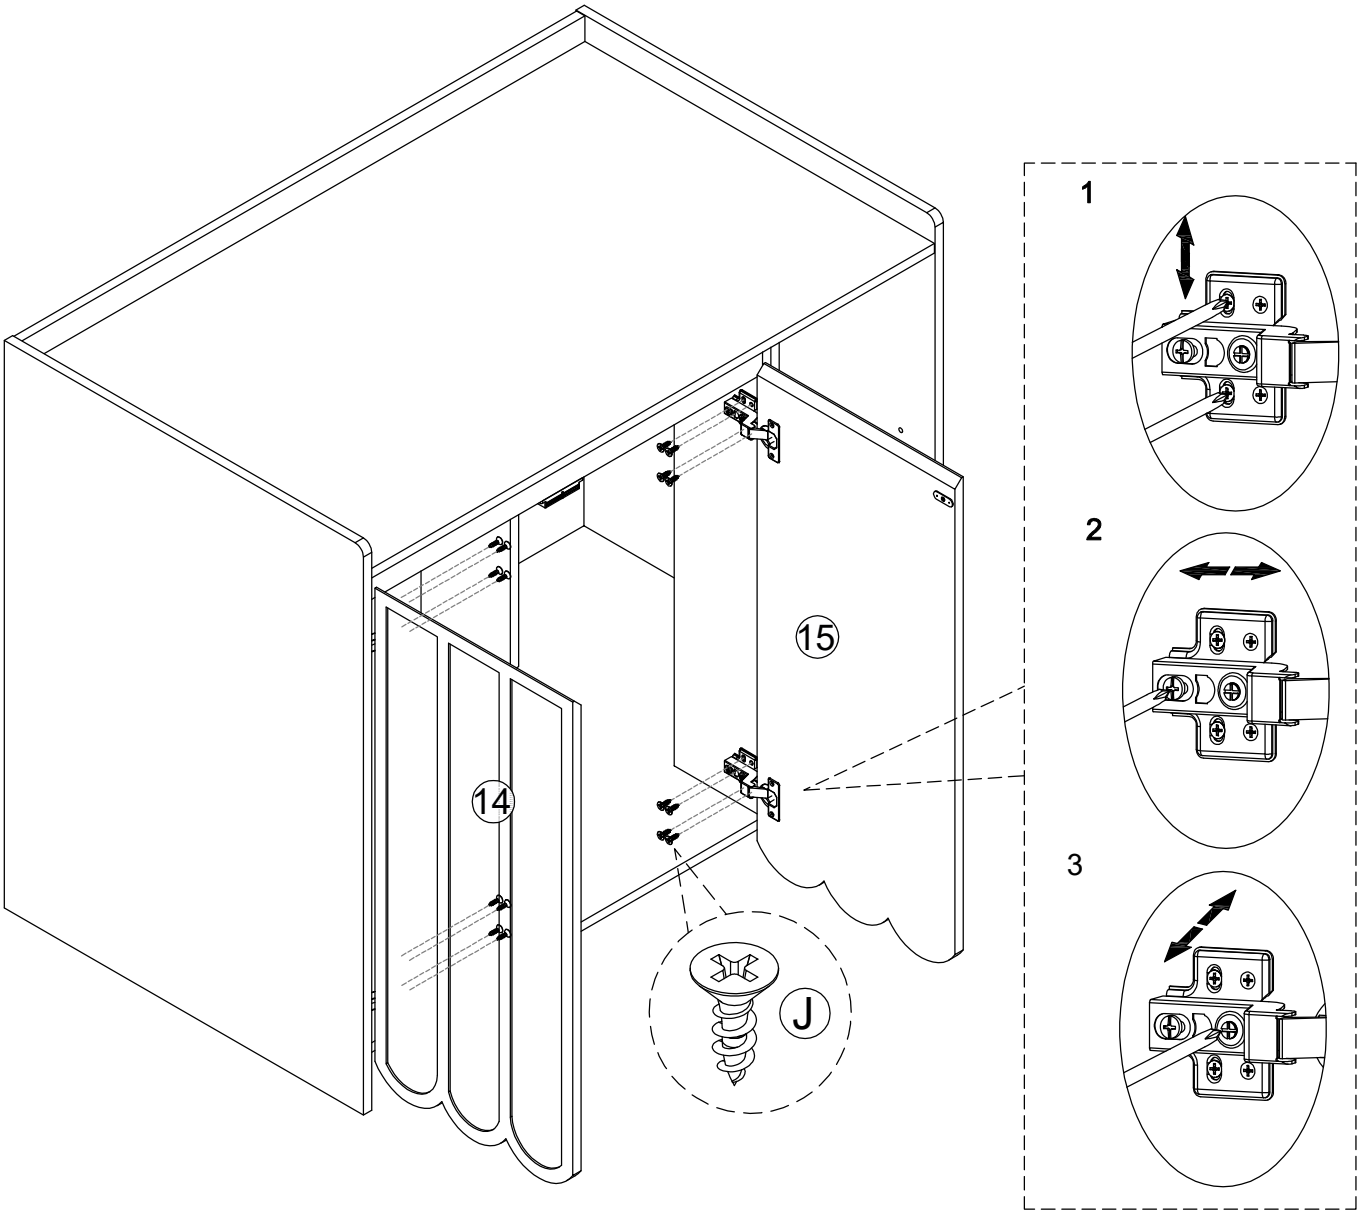


STEP16


	
K	X18

 Ø3X14mm	
L	X18

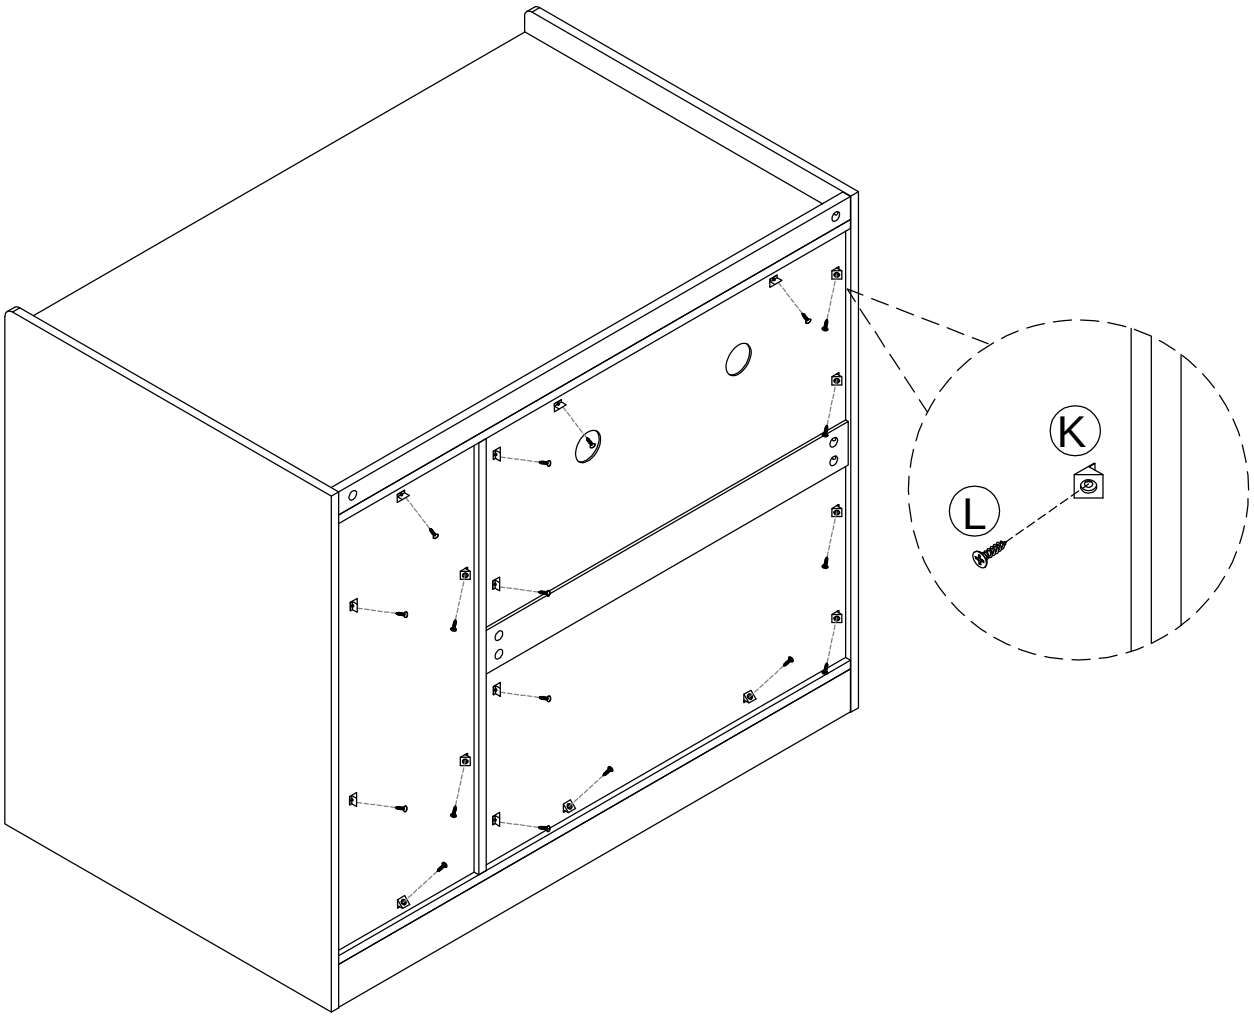

STEP17

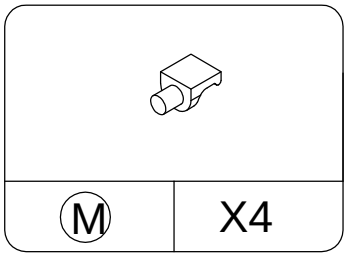
M
X4

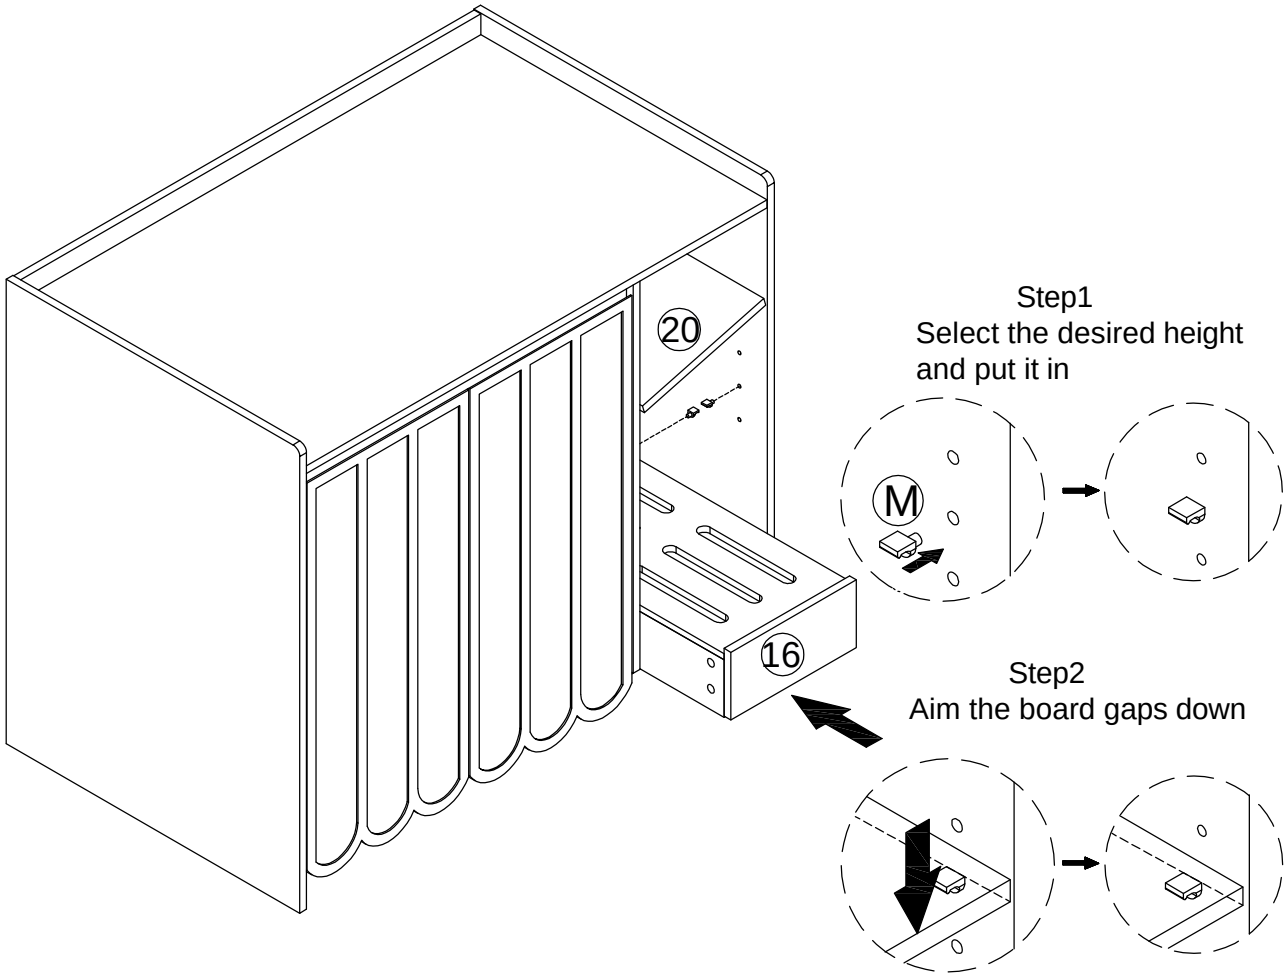
20
16
Step1
Select the desired height
and put it in
M
Step2
Aim the board gaps down