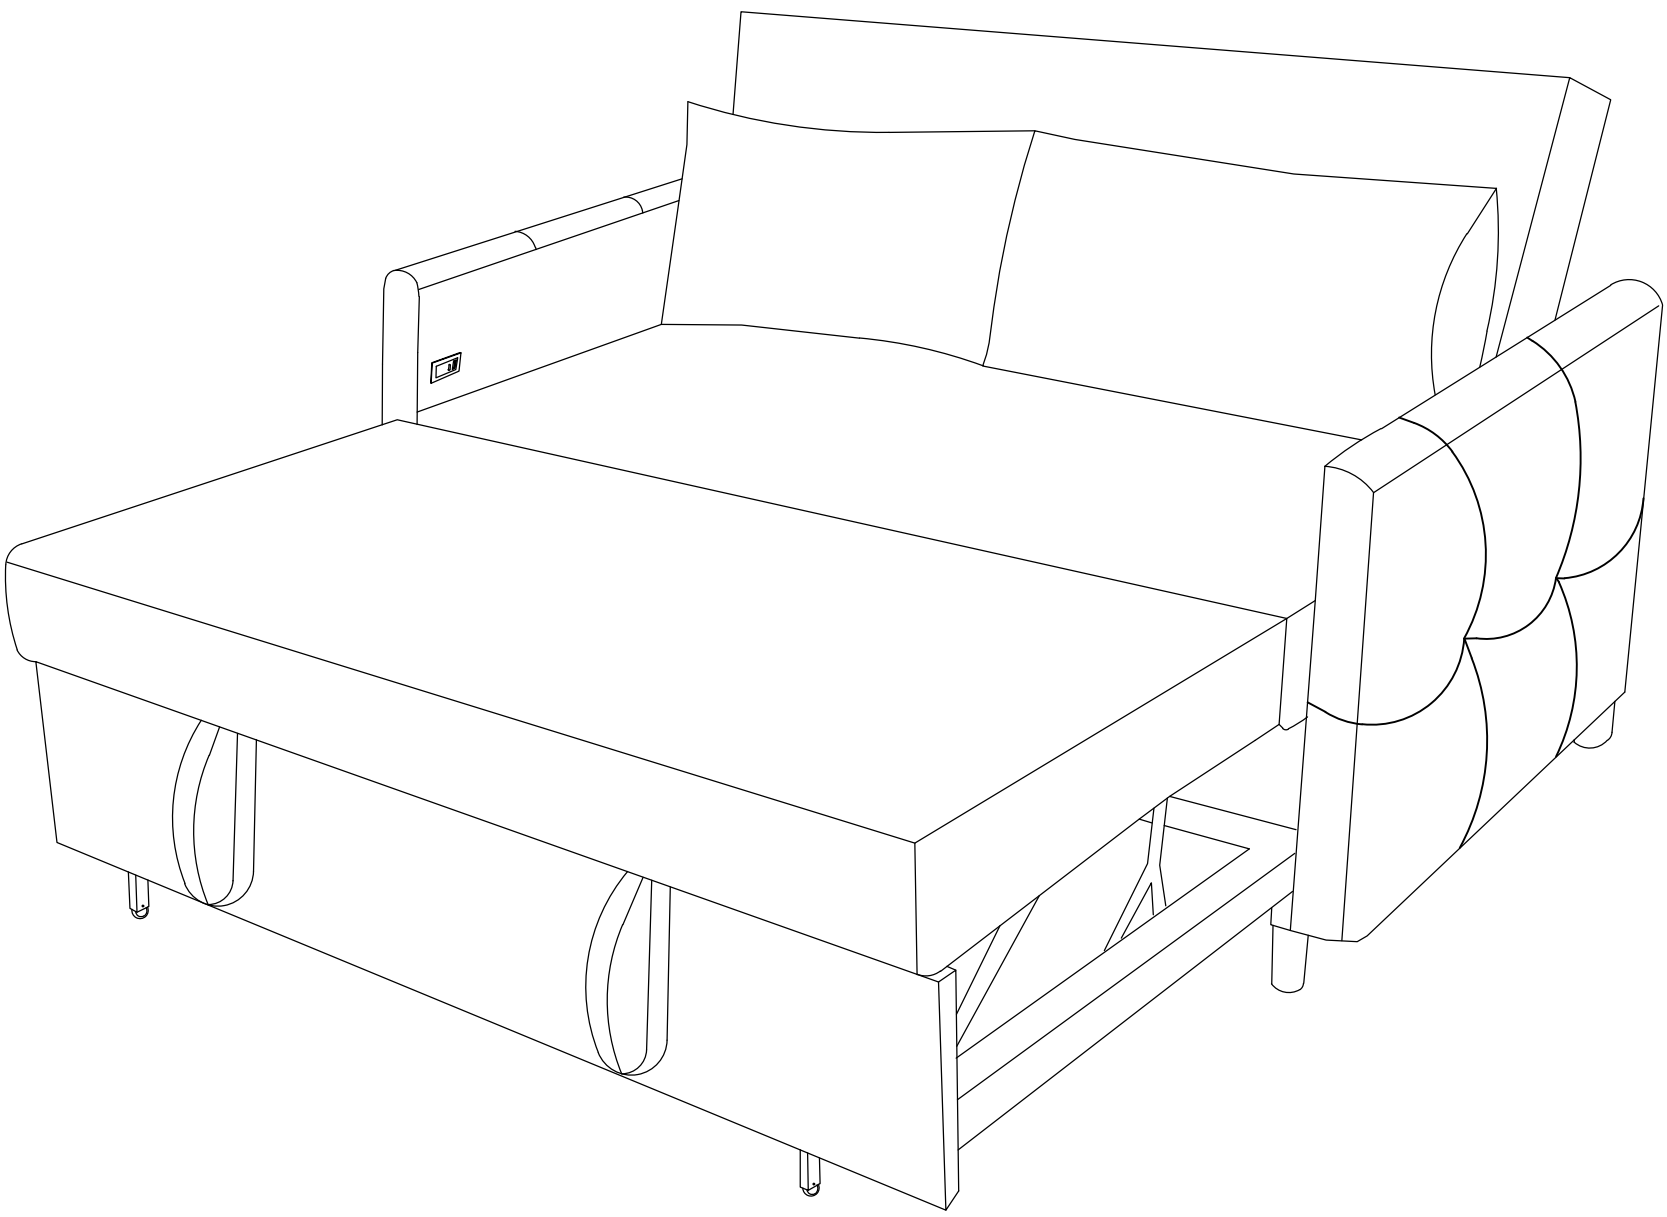
If you have any questions, please feel free to contact us.
Email: lowes.team@qualfurn.net

INSTRUCTION

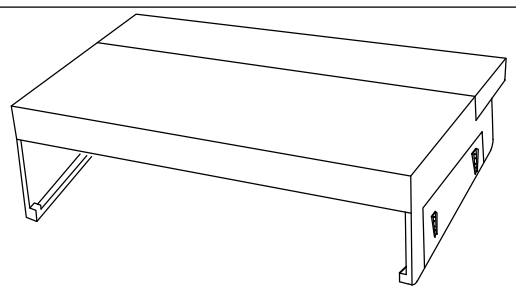
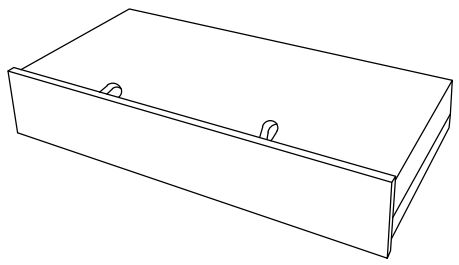
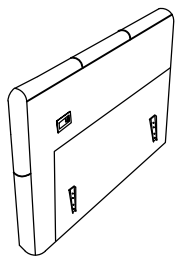
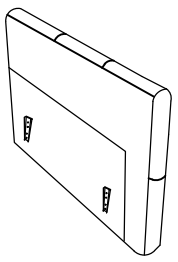
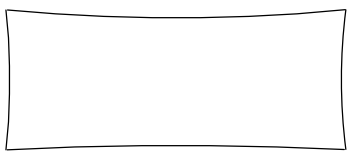

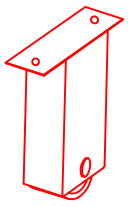
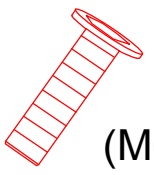
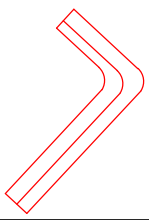
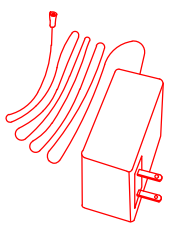
N719P185194



TEAM
ASSEMBLY
RECOMMENDED

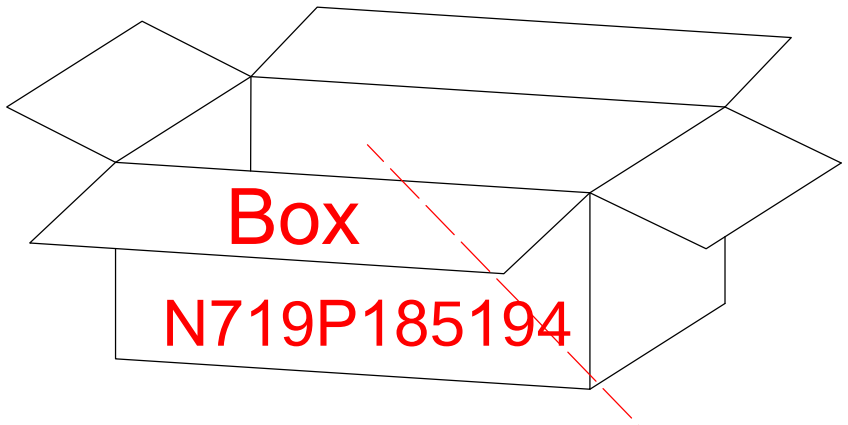
SOFA BED

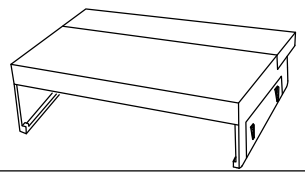
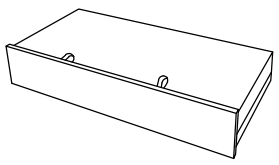

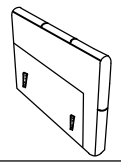

PARTS LIST

NO	PART	DECS	QTY
A		SEAT CUSHION	1pc
B		TRUNDLE BED	1pc
C		LEFT ARM	1pc
D		RIGHT ARM	1pc
E		PILLOW	2pcs
F		LEGS	4pcs
G		WHEELS	4pcs
H	 (M6*20MM)	SHORT SCREW	8pcs
I		L-SHAPED WRENCH	1pc
J		USB POWER	1pc

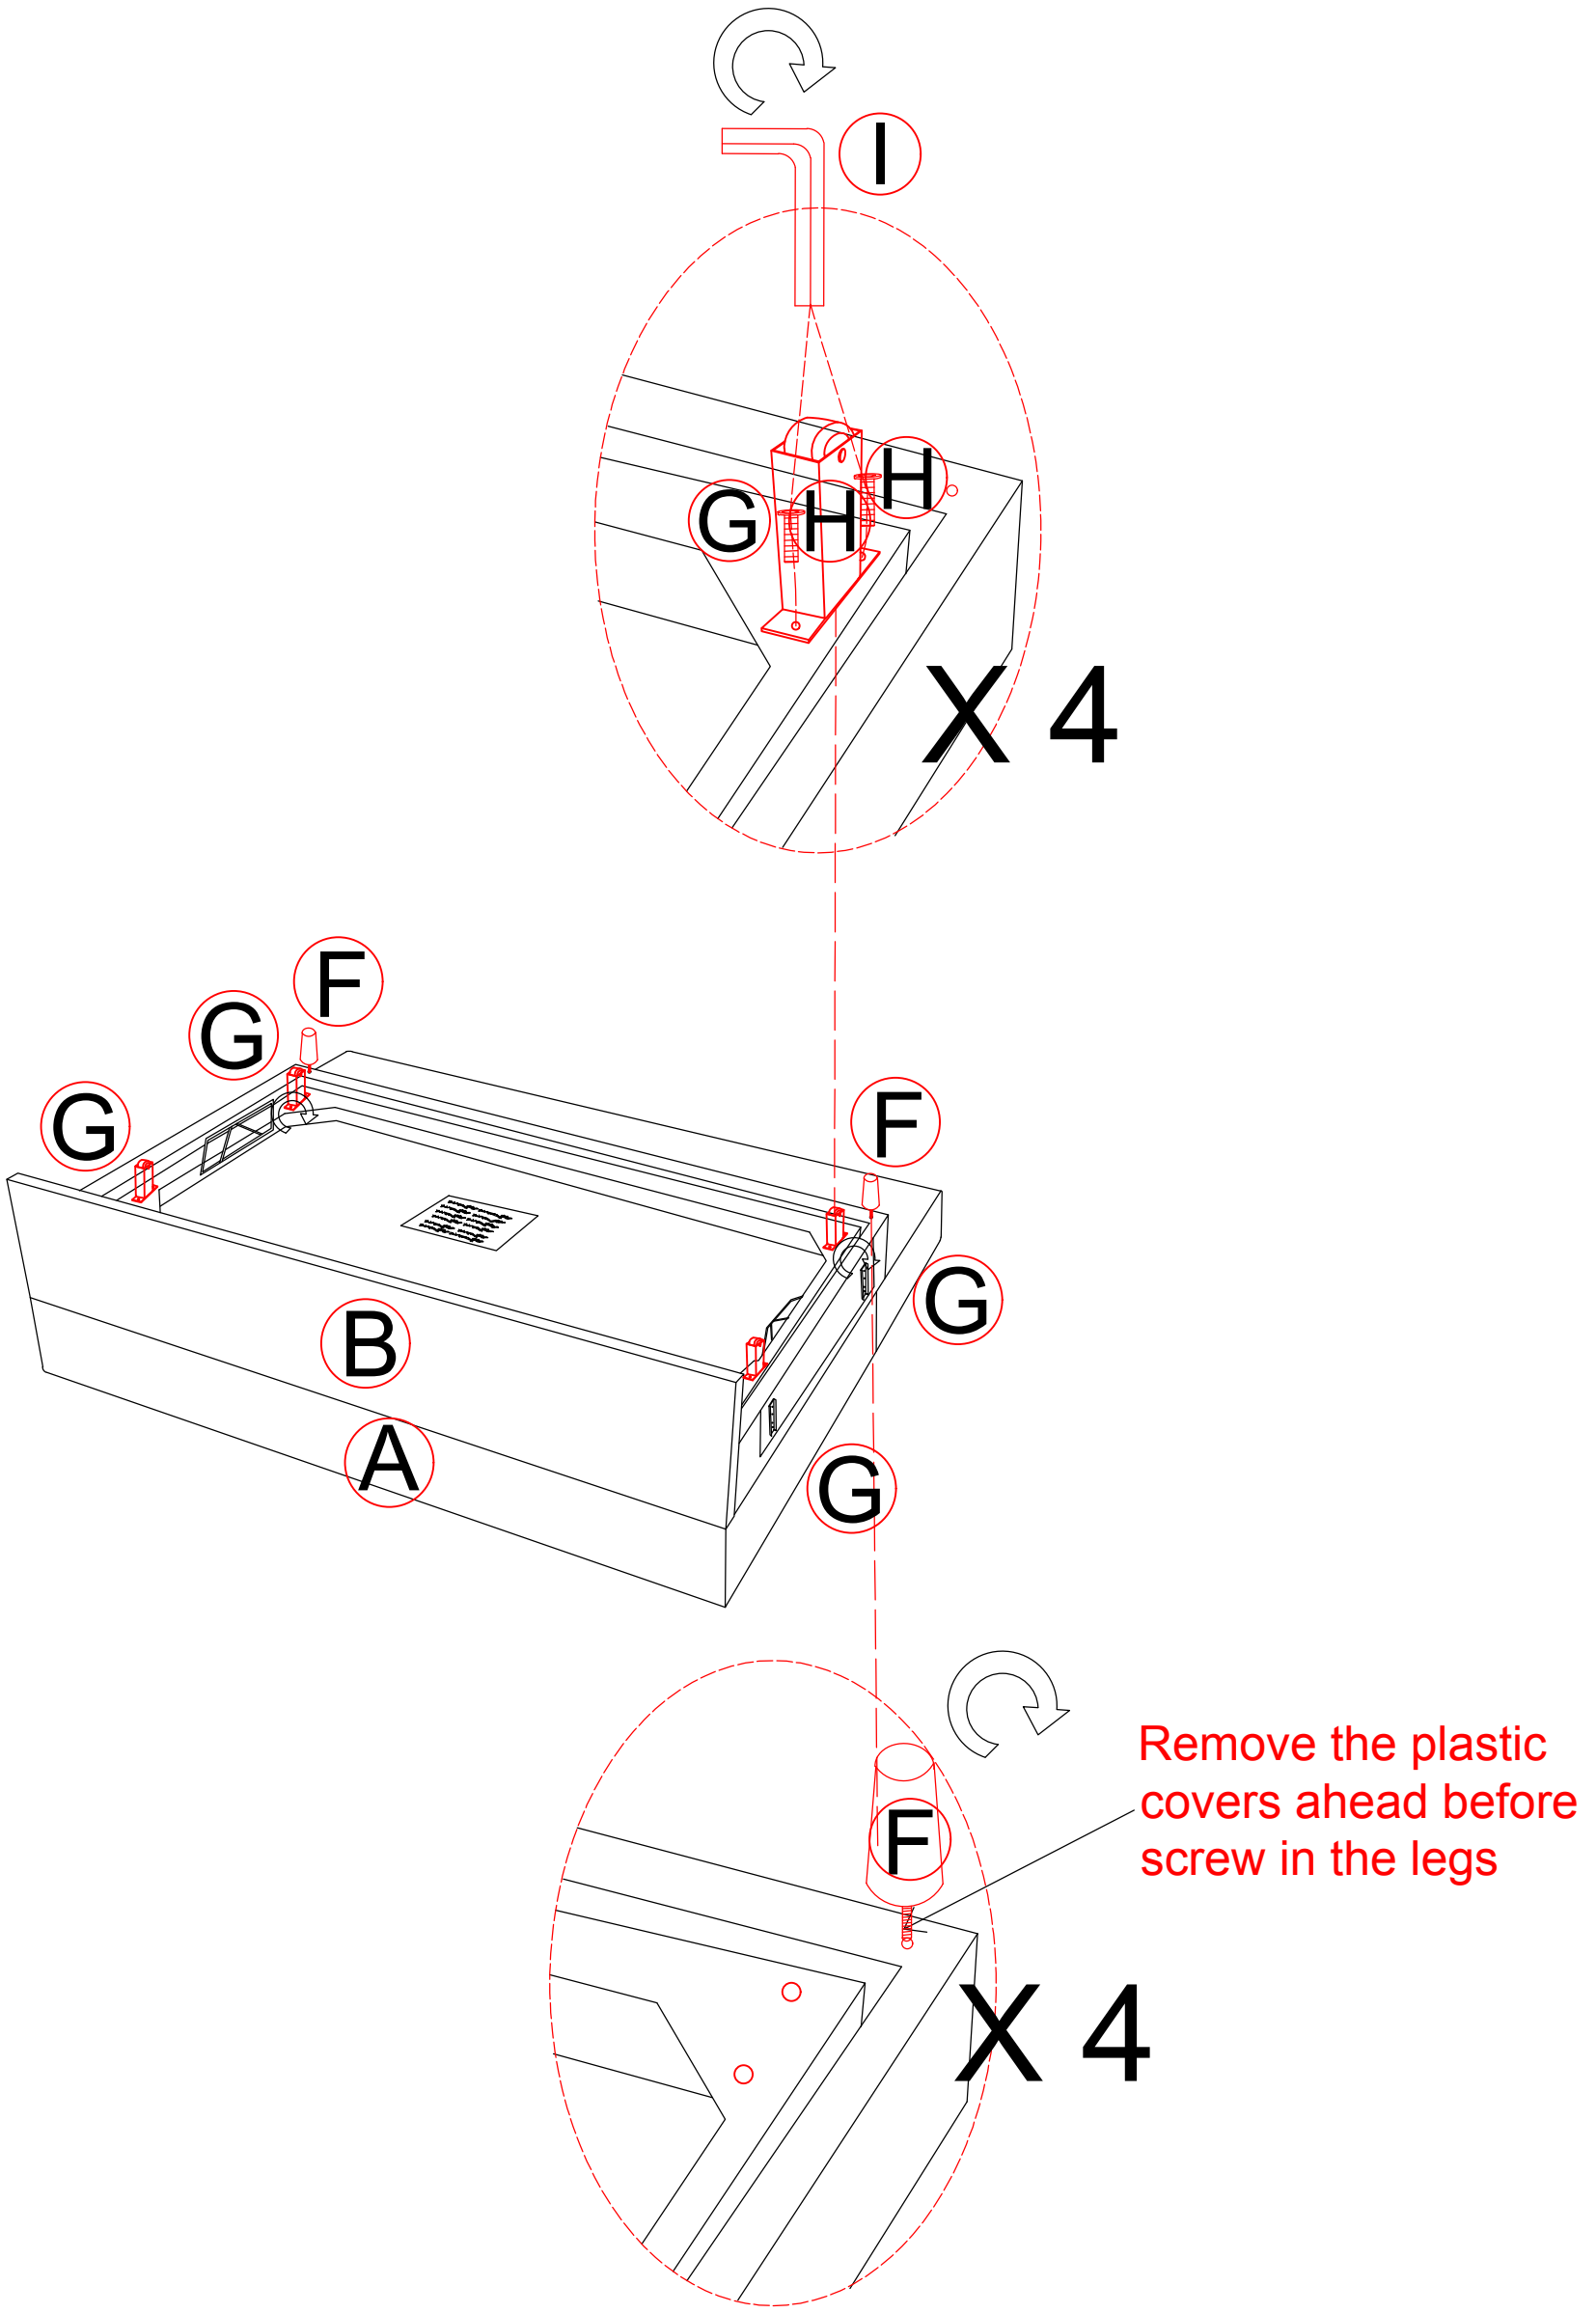
STEP 1

Ship by 1 box

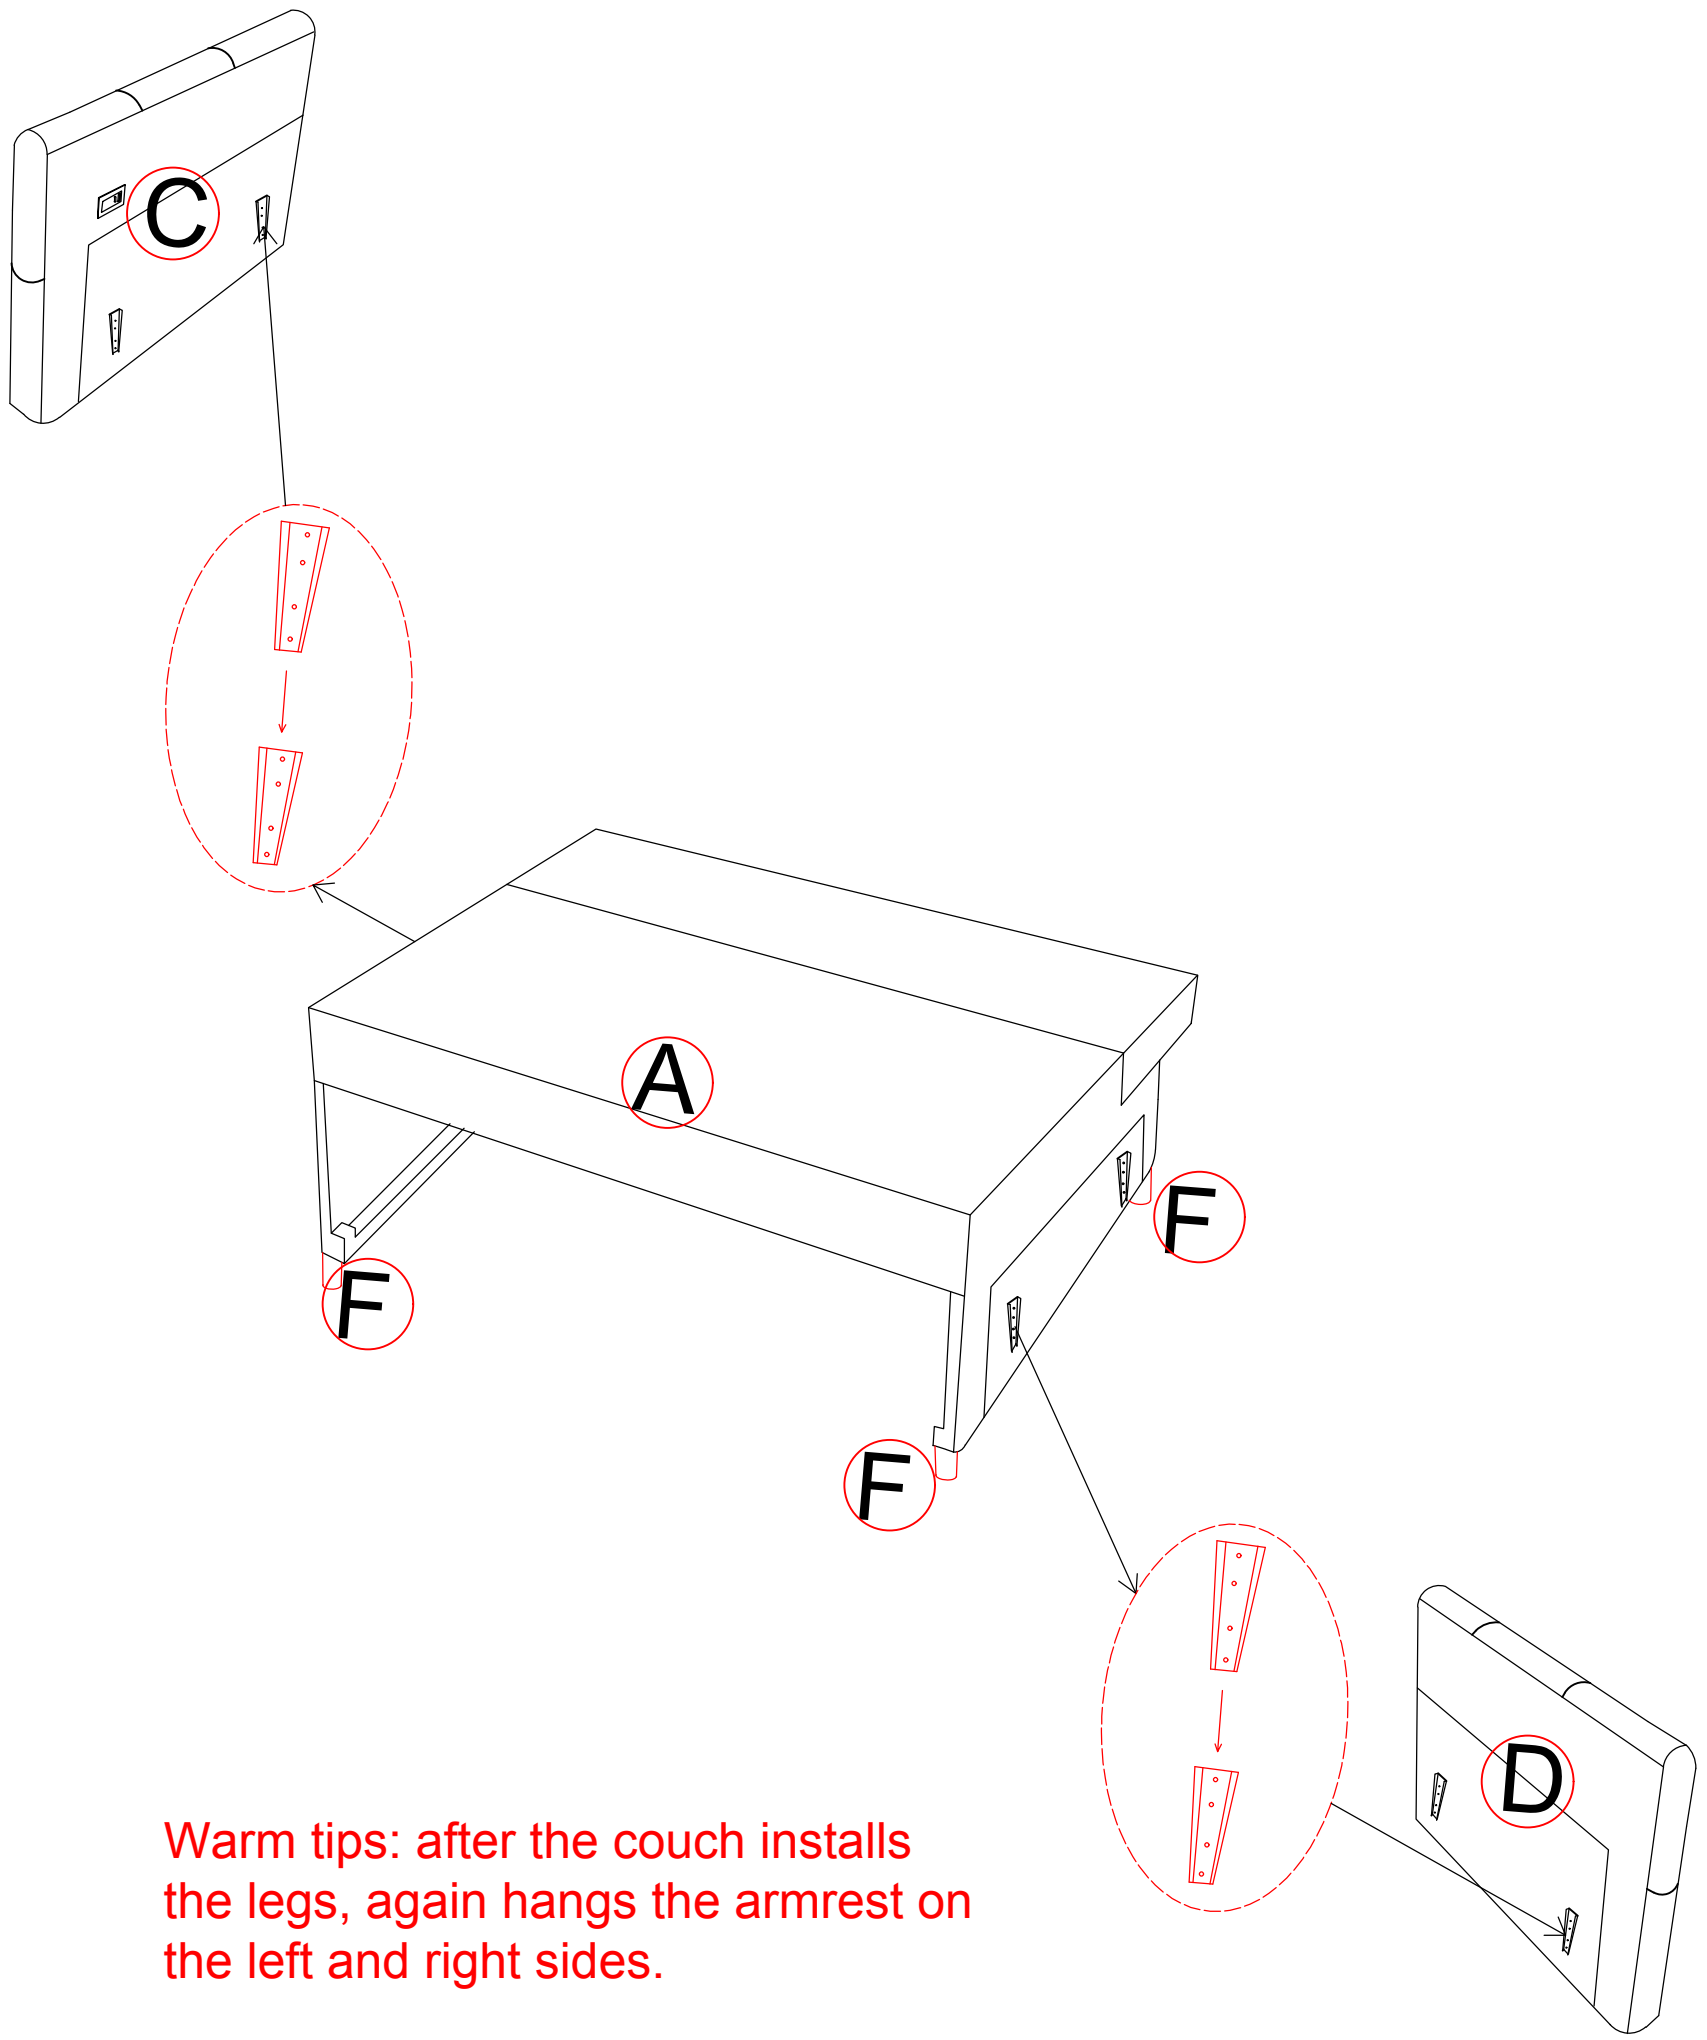


NO	PART	DECS	QTY
A		SEAT CUSHION	1pc
B		TRUNDLE BED	1pc
C		LEFT ARM	1pc
D		RIGHT ARM	1pc
E		PILLOW	2pcs
F		LEGS	4pcs
G		WHEELS	4pcs
H	(M6*20MM)	SHORT SCREW	8pcs
I		L-SHAPED WRENCH	1pc
J		USB POWER	1pc

STEP 2

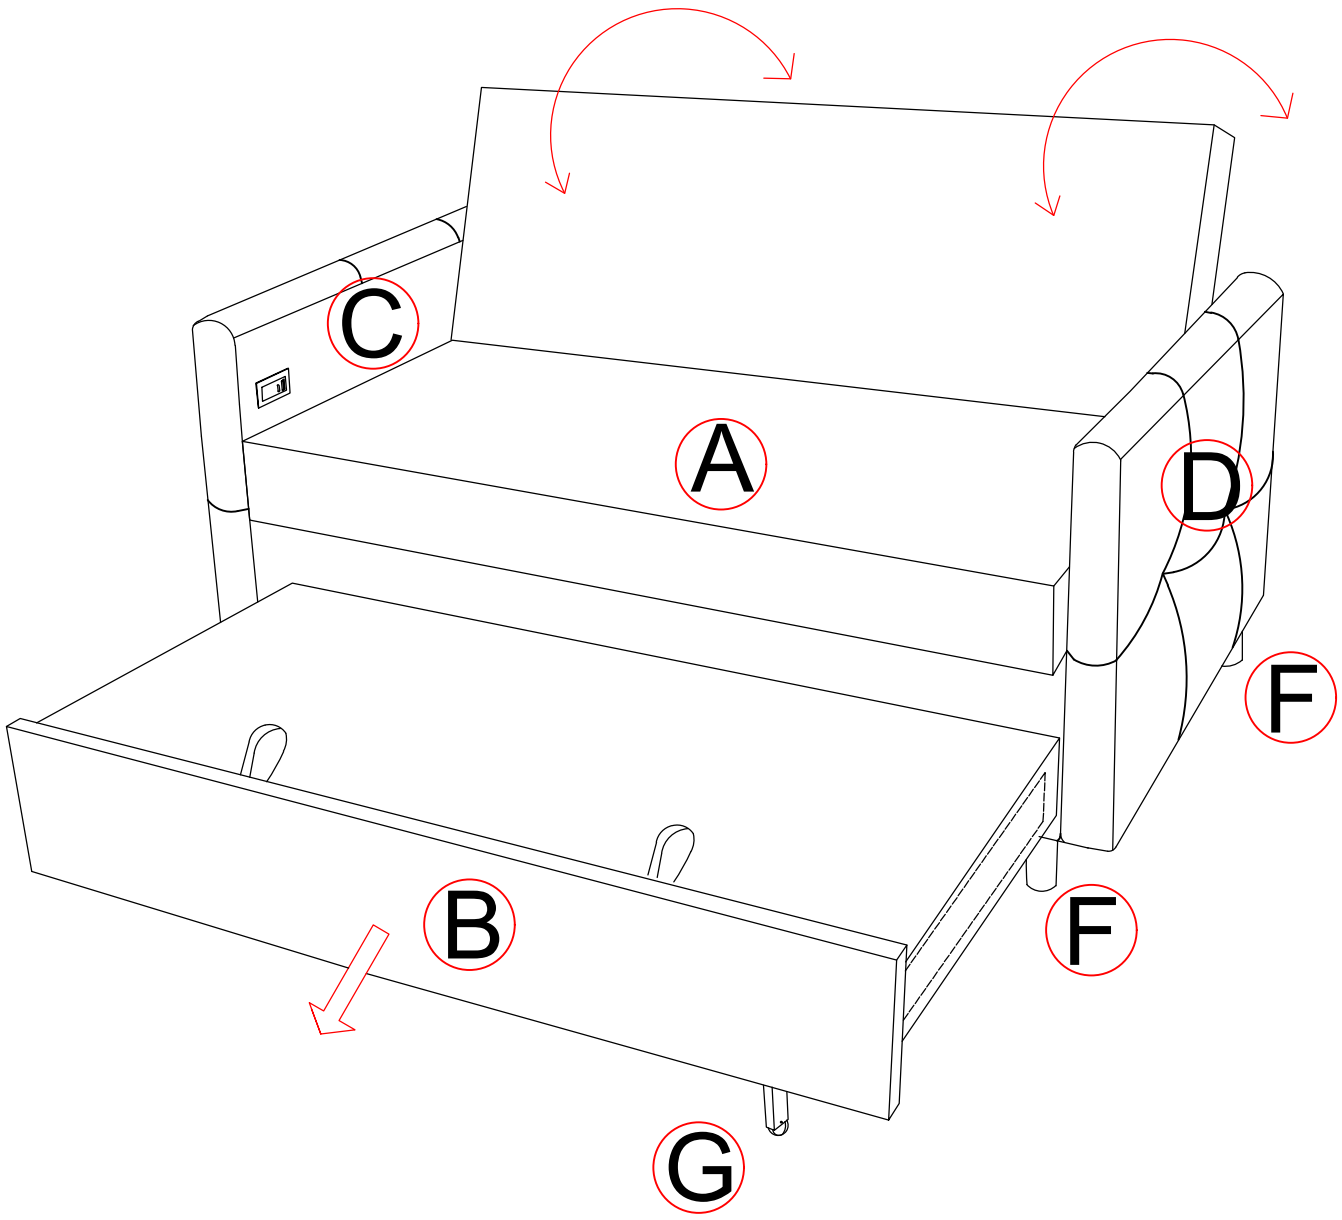

I
G
H
H
X 4
F
G
G
F
B
A
G
F
Remove the plastic covers ahead before screw in the legs
X 4

STEP 3



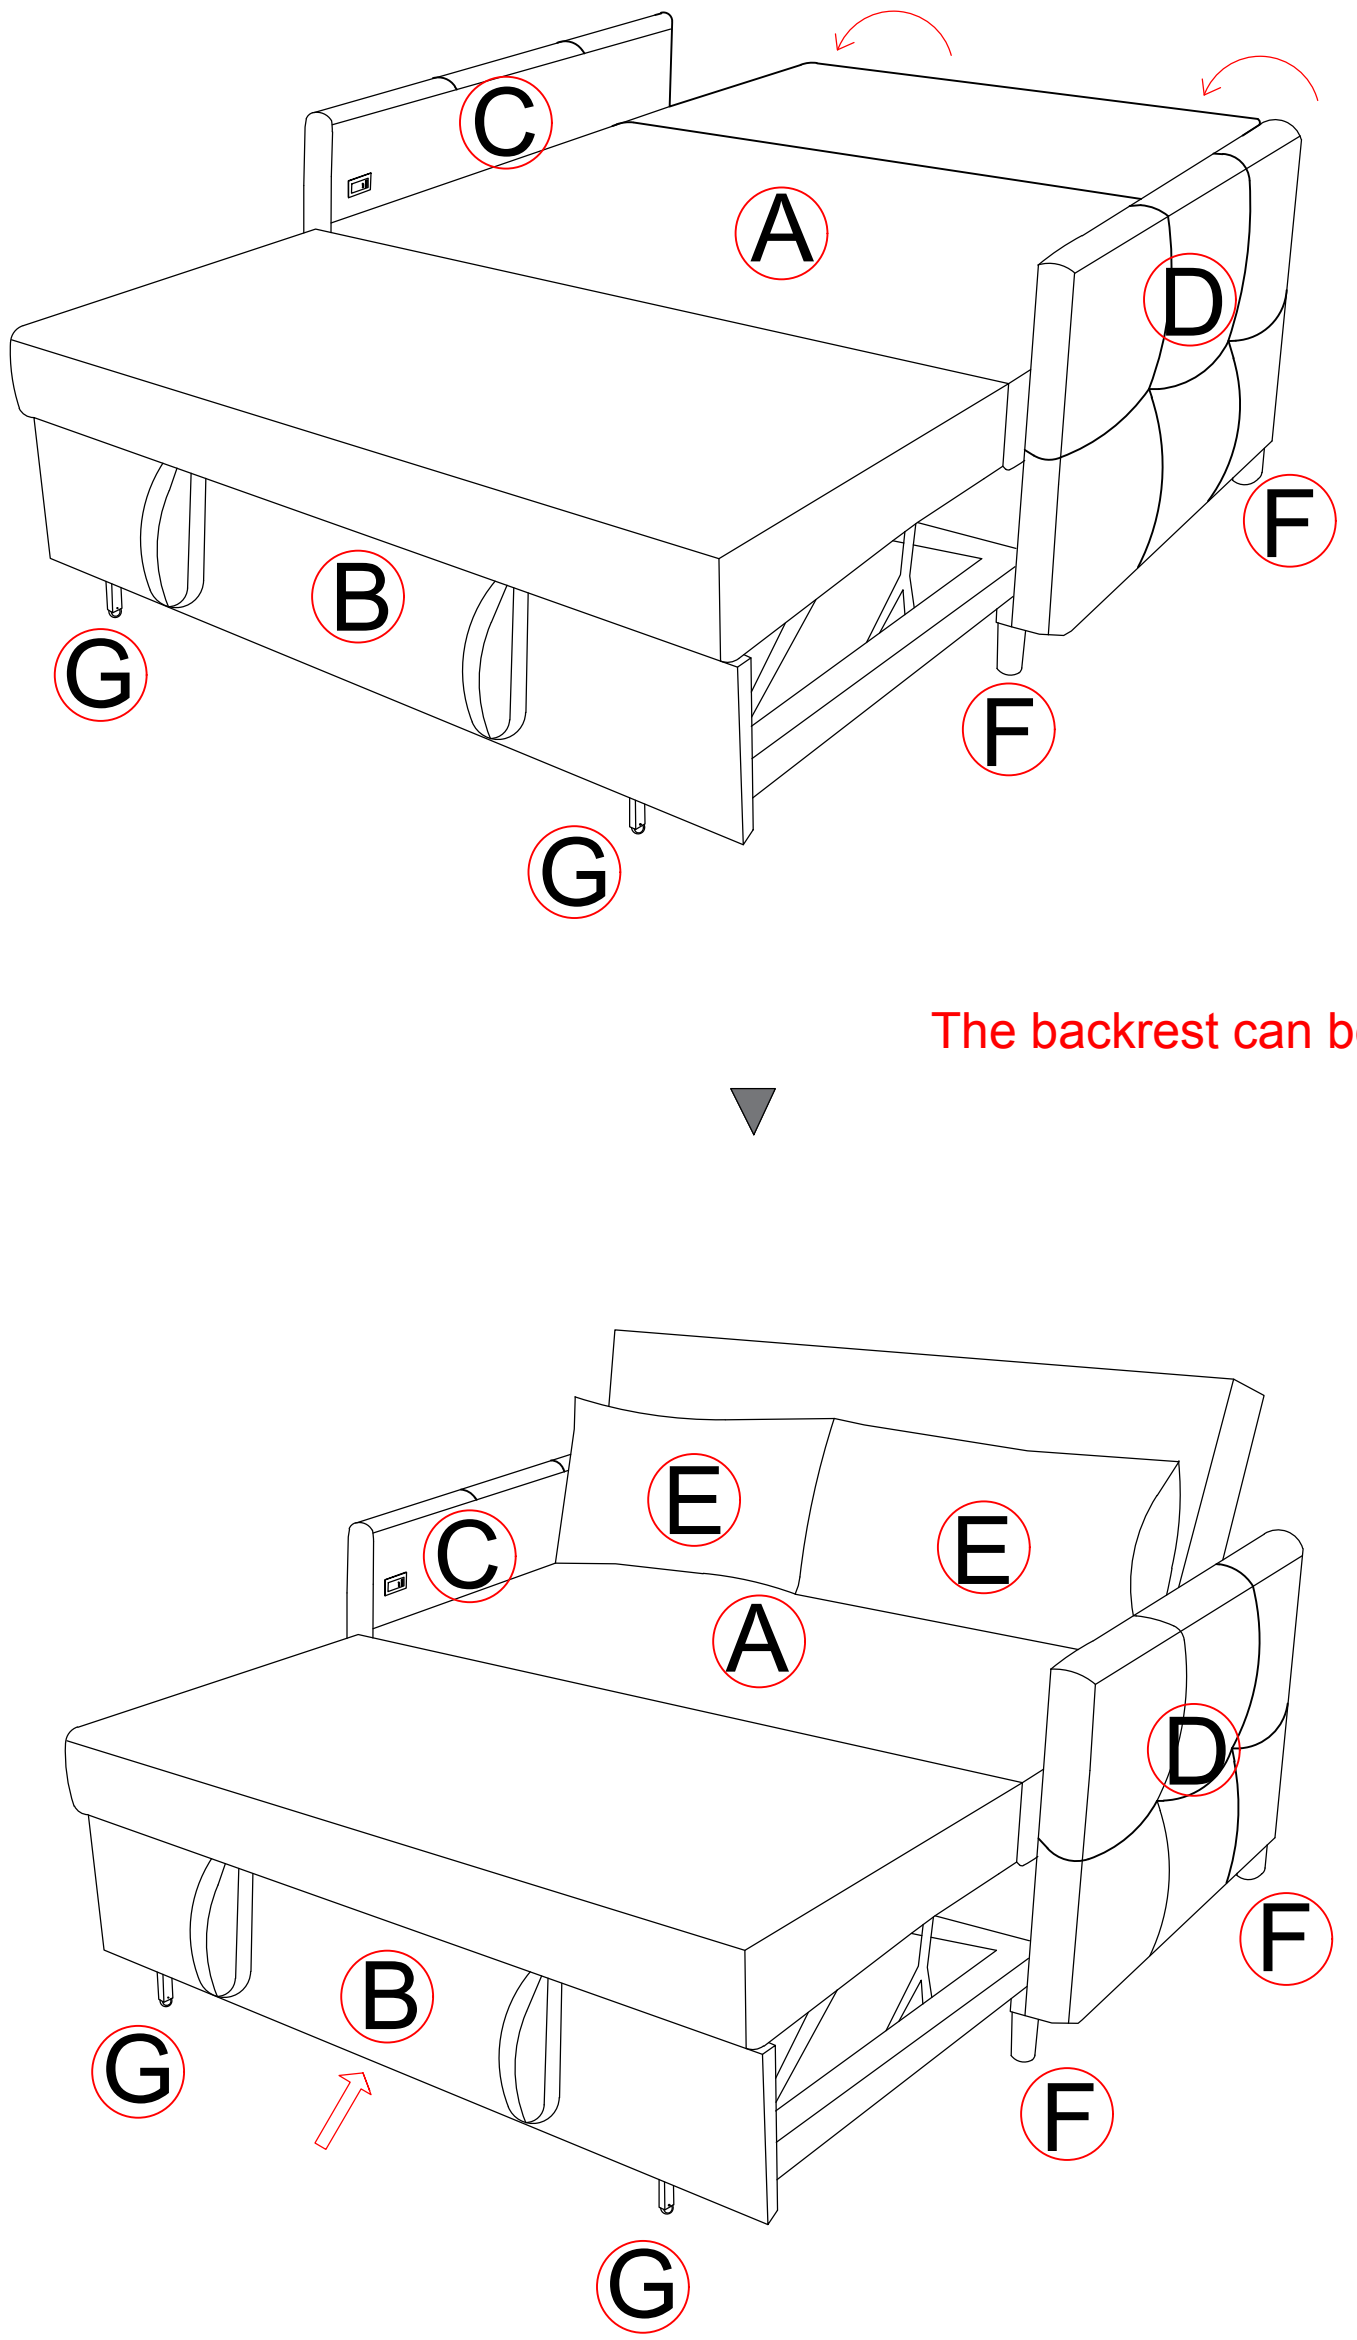
Warm tips: after the couch installs the legs, again hangs the armrest on the left and right sides.

STEP 4



The trundle bed can be pulled out.

STEP 5



STEP 6

