



Turning the Light ON and OFF:

(Locate the red switch on the black battery housing)

- 1) **LOW**- Press the red switch (1 time) to turn on 2 LEDs
- 2) **MEDIUM**- Press switch again (2 times) to turn on 4 LED's
- 3) **HIGH**- Press switch again (3 times) to turn on all 16 LED's
- 4) **OFF**- Press switch again to turn all LED's off.

Changing the Batteries:

- 1) Locate the sliding battery door below the ON/OFF switch. (Fig. 1)
- 2) Gently press two fingers down on the two arrows then, (Fig. 2)
- 3) Slide the door toward the hang loop to remove the door. (Fig. 3)
- 4) Replace all three AA batteries (note (+) and (-) directions)
- 5) Replace battery door by sliding it back into the closed position.

WARNING: (1) Choking Hazard. Small parts, not for children. (2) Do not dispose of batteries in fire - may explode or leak. (3) Do not mix old and new batteries, do not mix alkaline with non-alkaline batteries. (4) Magnets could affect pacemaker/ICD devices. Keep at least 12 inches (30 centimeters) away.

Fig. 1

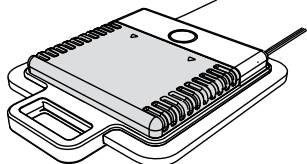


Fig. 2


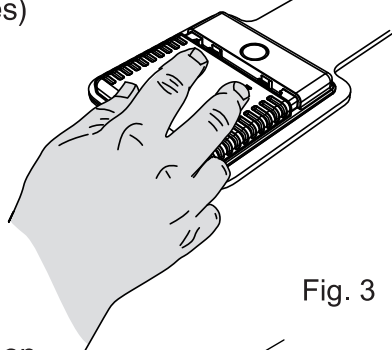


Fig. 3

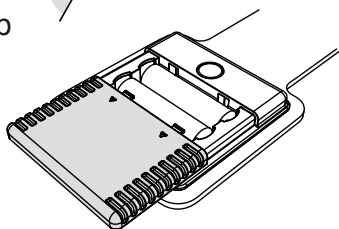

Encendido de la luz y se desactiva

(Busque el interruptor rojo en la caja de la batería negro)

- 1) Presione el botón rojo (1 vez) para encender el 2 LEDs
- 2) Presione el interruptor de nuevo (2 veces) a su vez el 4 de LED's
- 3) Presione el interruptor de nuevo (3 veces) a su vez en los 16 LED's
- 4) Presione el interruptor para apagar todos los LED.

Sustitución de las pilas:

- 1) Busque la tapa de la batería deslizando por debajo del interruptor. (Fig. 1)
- 2) Presione suavemente dos dedos hacia abajo en las dos flechas a continuación, (Fig. 2)
- 3) Deslice la puerta hacia la caída del bucle para quitar la puerta. (Fig. 3)
- 4) Reemplace las tres baterías AA (nota (+) y (-) las instrucciones)
- 5) Coloque nuevamente la tapa de la batería deslizando de nuevo en la posición cerrada.

ADVERTENCIA: (1) Riesgo de asfixia Las partes pequeñas, no son aptas para niños. (2) No incinere las baterías ya que podrían explotar o filtrarse. (3) No mezcle pilas viejas y nuevas, no mezcle pilas alcalinas con pilas recargables no alcalinas. (4) Los imanes pueden afectar el funcionamiento de marcapasos o dispositivos de cuidados intensivos. Mantenga por lo menos a 30 centímetros (12 pulgadas) de distancia.

Fig. 1

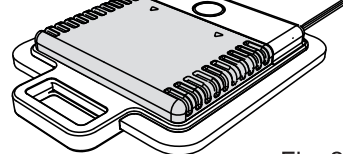


Fig. 2

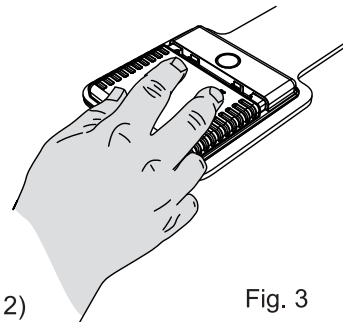


Fig. 3

