

Print Instructions

PRO-LAB® PROFESSIONAL MOLD TEST KIT


SELECTING THE TEST LOCATION Mold spores can be found on carpets, rugs, floors, window sills, furniture, mattresses, pillows, pillowcases, upholstery, drapery, A/C filters, furnace filters or anywhere dust can be found.

CHOOSE ONE OF THE FOLLOWING COLLECTION METHODS

Please wash your hands thoroughly to avoid contamination

METHOD 1: DUST COLLECTION (VACUUM WITH HOSE)

SAMPLING METHODS (To determine if mold spores, pollen and dust mites are in your indoor environment) Remove sampling cassette from the plastic bag. Remove the white caps from both ends of the sampling cassette. Attach the cassette directly to the end of your vacuum hose or use the universal white hose adapter provided. The universal adapter is reversible. After you have attached the cassette to the end of your vacuum cleaner hose, turn on and vacuum your carpet (s), rug(s), floors, mattress, pillows and pillowcases, upholstery, A/C filter, furnace filter or drapes. Continue to vacuum until you have enough fine dust to fill the collection chamber as much as possible. (Minimum of 5 minutes). Once the chamber is full, hold the vacuum hose upright to prevent the dust from falling out of the collection chamber. Shut off vacuum, replace the two white caps, place the sampling cassette back in the plastic bag and proceed to the lab results directions.

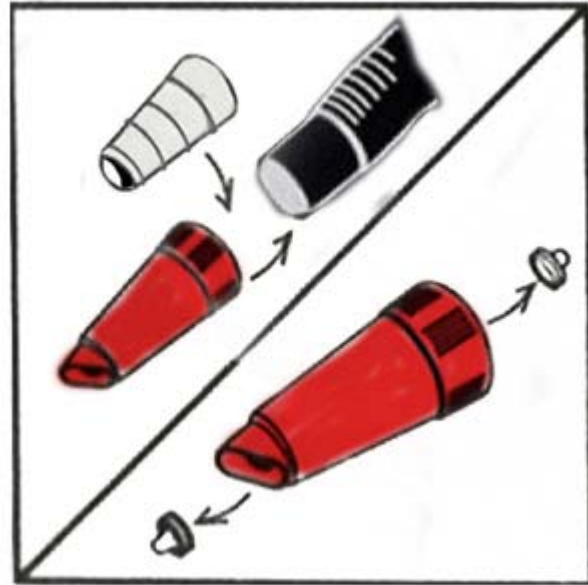

METHOD 2: DUST COLLECTION (VACUUM WITHOUT HOSE) SAMPLING METHOD

(Alternative method to determine if mold spores, pollen and dust mites are in your indoor environment). Remove sampling cassette from the plastic bag. Stand the cassette on a flat surface and remove only the top white cap. Scoop the fine dust from your vacuum cleaner's bag, or cyclone cylinder. Place the fine dust in the hole on the top of the collection chamber of the cassette. Fill the collection chamber as much as possible. Once the chamber is full, replace the white cap. Place the sampling cassette back in the plastic bag and proceed to the lab results directions.

METHOD 3: VISIBLE MOLD (SWAB) SAMPLING METHOD

(To determine the type of mold growth that is visible on a surface) Locate the visible mold growth. Take the enclosed sterile swab and wipe the tip across the visible mold growth. Mold must adhere to the swab tip. Once sampling is complete, place the swab back in the plastic bag and proceed to the lab results directions.

METHOD 4: BULK SAMPLING METHOD

(To determine the type of mold that is visible and growing on a piece of material) Place a small piece of the material to be tested (drywall, wallpaper, molding, ceiling tile) inside the plastic bag and proceed to the lab results directions.

STANDARD LAB RESULTS

Place sample to be tested in the enclosed postage pre-paid envelope along with the information form, and a check, money order (made payable to PRO-LAB®) or credit card payment for \$40 (Visa, Mastercard, Discover, or AMEX only). Mail immediately to PRO-LAB® P.O. Box 267730, Ft. Lauderdale, FL 33326-9914. Within seven (7) business days after PRO-LAB® has received your sample, we will email your results that list the type of mold, pollen and dust mites present in your home or office. You may also print and view your results at www.prolabresults.com.

EXPRESS lab results (Results available within 2 business days)

Express service is available for an additional \$15, or a total of \$55. In order to use the express service, you must send the sample to be tested, information form, and the proper payment to PRO-LAB® using an overnight shipping service such as FedEx, Airborne Express, DHL, UPS or U.S. Mail Priority Overnight. Send the sample to PRO-LAB® 1675 N. Commerce Parkway, Weston, FL 33326. (Express samples can only be received Monday – Friday). Within two (2) business days of our receipt of your sample, you will receive an email of your results. You may also print and view your results at www.prolabresults.com.

Do you have [Black Mold](#)? PRO-LAB catalog includes Test Kits for Mold, Radon Gas, Water Quality, Asbestos, Lead, Carbon Monoxide, and Bacteria.

FOR QUESTIONS OR MORE INFORMATION CALL 1-800-427-0550

CREDIT CARD VOUCHER

- STANDARD LAB RESULTS (\$40 per sample) \$ _____
- EXPRESS FAX SERVICE ADD (\$15 per sample) \$ _____
- TOTAL \$ _____

Make Checks Payable to PRO-LAB™

- CHECK MONEY ORDER CREDIT CARD

PRO-LAB™ MOLD TEST KIT CREDIT CARD VOUCHER (VISA, MASTERCARD, AMEX & DISCOVER ONLY)

Name (as it appears on card) _____

Street Address _____

City/State/Zip _____

Credit Card # _____

Expiration Date _____

Amount \$ _____

Phone _____

Signature _____

Date / / _____

1675 N. Commerce Parkway, Suite 100 - Weston, FL 33326

INFORMATION FORM

Name _____

Street Address _____

City _____

State _____

Zip _____

Phone () _____

Fax for Express Service Only () _____

MOLD SAMPLE

Date of Sample _____

Where was the sample taken from?

- House Apartment Outside (control)
- Office Other: _____

Age of house (or Building) in years: _____

Room where sample was taken: _____

Sampling Method Used: _____

For Lab Use Only:

Date Sample Received _____ Time _____ Received by _____

[Close Window](#)