

INSTALLATION INSTRUCTIONS

SSB, SSL &
SSR SEATS

IMPORTANT: PROPER BACKING MATERIAL AND MOUNTING HARDWARE MUST BE USED TO MOUNT THIS SHOWER SEAT FOR SAFE USE AND AS REQUIRED BY A.D.A. GUIDELINES.

This seat should be installed as an assembled unit.

PLEASE READ THESE INSTALLATION INSTRUCTIONS THOROUGHLY PRIOR TO INSTALLING THIS SHOWER SEAT

IMPORTANT: THIS PRODUCT SHOULD ONLY BE INSTALLED BY QUALIFIED AND TRAINED PERSONNEL

FAILURE TO FOLLOW THESE INSTRUCTIONS COULD LEAD TO IMPROPER INSTALLATION OF THE SHOWER SEAT, STRUCTURAL AND/OR WATER DAMAGE TO THE WALL AND IN-WALL SUPPORT STRUCTURES, AND/OR SERIOUS BODILY INJURY IN USE. IN ADDITION, ALL WARRANTIES, EXPRESS OR IMPLIED, WILL BE NULL & VOID DUE TO IMPROPER INSTALLATION OF THIS PRODUCT. THE MANUFACTURER DOES NOT ASSUME ANY LIABILITY FOR DAMAGE RESULTING FROM SERVICES PERFORMED BY OTHERS, OR FAULTY INSTALLATION, MISUSE OR MISAPPLICATION OF GOODS.

THIS PRODUCT IS DESIGNED TO MEET OR EXCEED ALL LOAD REQUIREMENTS ESTABLISHED IN THE FEDERAL SPECIFICATION #WW-P-541/8b AT 250 POUNDS OF FORCE. THE PERFORMANCE OF THIS PRODUCT IS SIGNIFICANTLY IMPACTED BY THE STRENGTH OF THE WALL TO WHICH IT IS ATTACHED.


TO ASSURE PROPER AND SAFE INSTALLATION, THIS SHOWER SEAT MUST BE INSTALLED INTO A MINIMUM 2" THICK, SOLID WOOD, IN-WALL BACKING MATERIAL. MAKE CERTAIN IN-WALL BACKING COMPLIES WITH ALL LOCAL BUILDING CODE REQUIREMENTS.

1. Determine whether the seat has a hard-surface (Phenolic/HDPE) or Naugahyde cushion seat top.

PHENOLIC/HDPE

FRONT VIEW


ONE-PIECE SOLID
SEAT TOP
(SHOWN IN RAISED
POSITION)

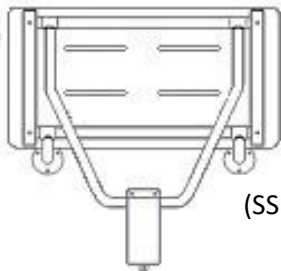

(SSB)

FRONT VIEW

(LEFT HAND SEAT
SHOWN IN RAISED POSITION)

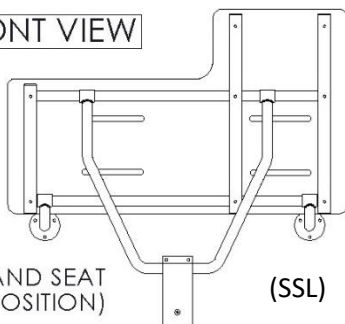


(SSL)

NAUGAHYDE CUSHION


FRONT VIEW

CUSHION SEAT TOP
(SHOWN IN
RAISED POSITION)

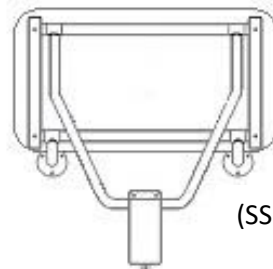

(SSB)

FRONT VIEW

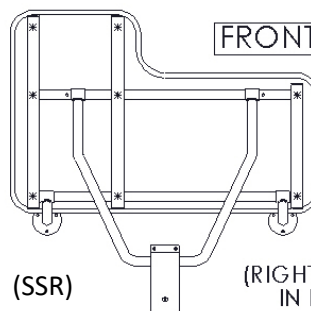

(SSR)

(RIGHT HAND SEAT SHOWN
IN RAISED POSITION)

2. Determine seat height from the floor and location relative to the inside back wall.

ADA regulations specify a finished seat height of 17" to 19" above the finished floor and 1½" of clearance between the seat edge and the side wall. Check local building codes for additional requirements.

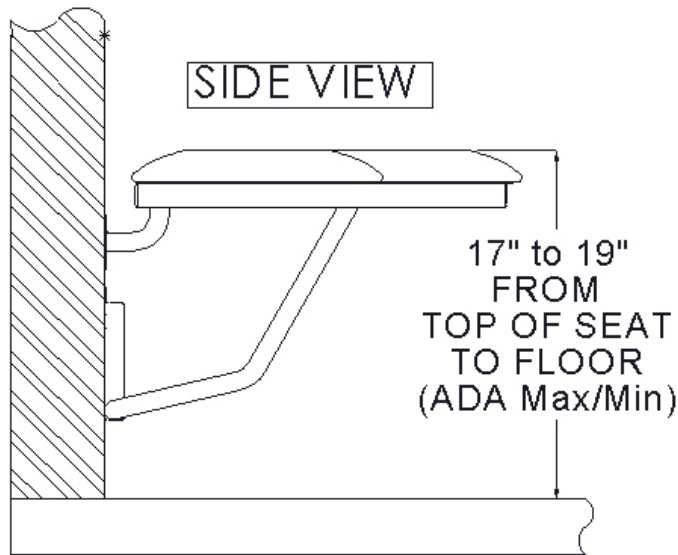


Diagram A

Place the seat against the wall where minimum 2" thick, solid wood in-wall backing material is located and ensure the appropriate finished seat height is at the desired height and is level. (See Diagram A)

Verify that the seat edge is at the desired distance from the side wall and is level and plumb, and the sliding leg bracket fits flush against the wall and is clear from the floor.

Upon selecting the height & location of the seat, mark the three (3) holes on each of the 3" diameter mounting flanges (six [6] holes total) on the wall where the seat will be mounted. Use the Shower Seat Mounting Flange Template (supplied by manufacturer) as necessary.


Using a 1/8" Carbide tip drill bit (not provided), drill at all six (6) locations.

Use clear silicone sealer at each hole location to prevent water damage to existing structures as desired.

3. Mounting the seat to the wall.

Holding the seat assembly in an upright and raised position against the wall, tightly secure the two mounting flanges to the wall **AND INTO 2" THICK, SOLID WOOD IN-WALL BACKING MATERIAL**, using six (6) #12 x 2½" stainless steel screws (supplied by manufacturer).

*Tighten screws completely **AFTER** all screws are in place.*

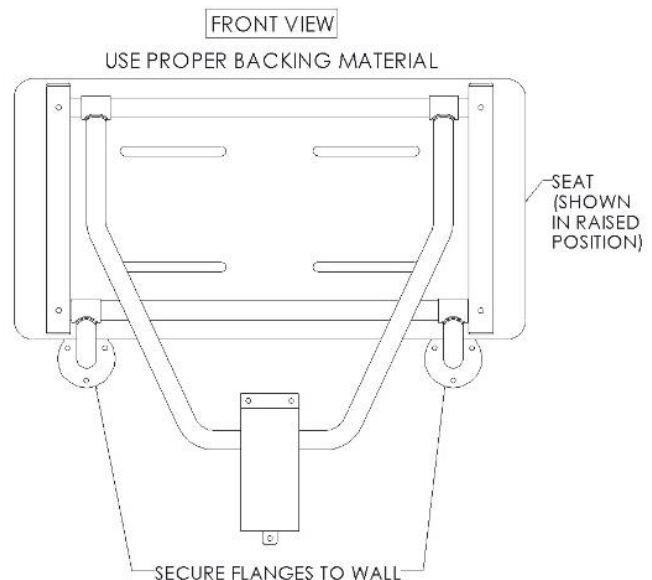

4. Determining the Location of the mounting holes for the Sliding Leg Bracket:


- Place the Sliding Leg Bracket around the Leg Support tube and affix the Sliding Leg Bracket against the wall on the established centerline of the seat. Rotate the seat top from down (horizontal) to up (vertical) positions to ensure the Sliding Leg Bracket is positioned properly. Mark the two top holes and the bottom hole in the Sliding Leg Bracket. (See Diagram 5A)
- Using a 3/32" Carbide tip drill bit (not provided), drill the two top mounting holes and the bottom tab mounting hole for the Sliding Leg Bracket.
- Secure the Sliding Leg Bracket to the wall **AND INTO 2" THICK, SOLID WOOD IN-WALL BACKING MATERIAL**, using (3) #10 x 2½" stainless steel screws (supplied by manufacturer).

EXAMPLE:

For a 32" wide seat with hard-surface (Phenolic/HDPE) seat top, see Diagram 3A

For a 32" wide seat with Naugahyde cushion seat top, see Diagram 3B

ADA regulations specify a finished seat height 17" to 19" above the finished floor and 1-1/2" clearance between the seat edge and the inside back wall.

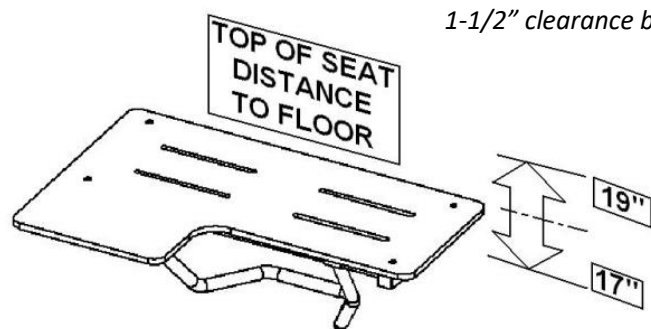

Measure and mark the appropriate finished Seat Height (Line "A" on Diagram 3A & 3B). The top of the seat should be straight and level. Locate the side edge of the seat top at 1-1/2" from the inside back wall. Mark the hole locations for the mounting flanges and the sliding leg bracket as described in steps 2, 3 and 4.

Example: Finished seat height: 19" & width of the seat: 32"
Maximum distance from the inside back wall to the edge of the seat: 1½".
Therefore, the center of the seat will be: ½ (32) + 1½" = 17½" from the side wall.

5. Check Seat for:

- Proper up and down operation.
- Correct finished height.
- Correct distance from wall.
- Weight bearing.

THIS COMPLETES THE INSTALLATION OF THE SSB, SSL or SSR SHOWER SEAT.

Hardware provided:

(3) #10 X 2-1/2" Phillips Pan Head sheet metal screws, (6) #12 X 2-1/2" Phillips Pan Head sheet metal screws

Tools required:

Tape measure, masking tape, power drill, 1/8" and 3/32" Carbide tip drill bit, marking pen/pencil, level, #2 phillips driver (for #10 screws) #3 phillips driver (for #12 screws)