



How to Scale Formulas by Can Size or Percentage

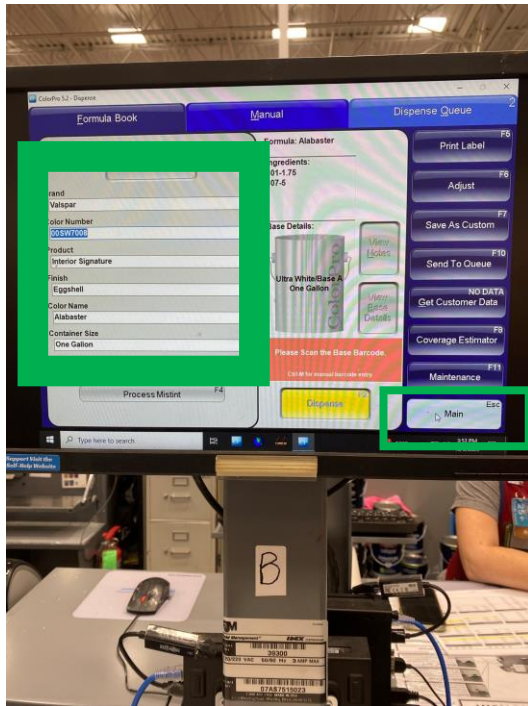


Step 1: Select product and input chosen color at tint from the main screen.

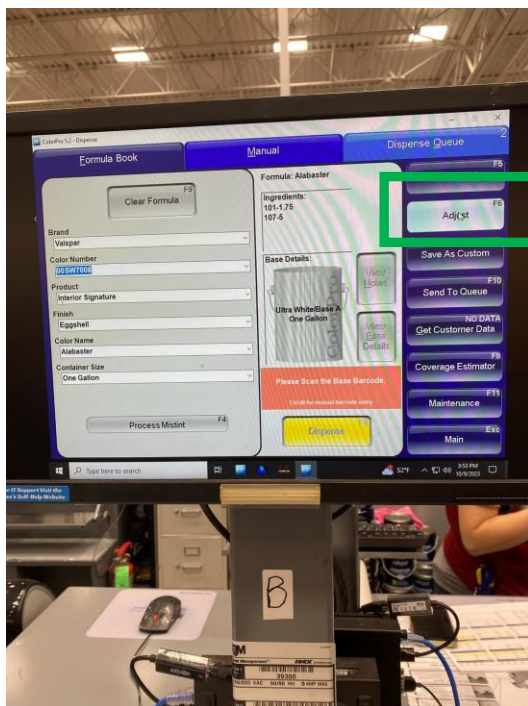


Step 2: Select **Adjust** from the main screen to input changes for colorant percentage or container size.

How to Scale Formulas by Can Size or Percentage

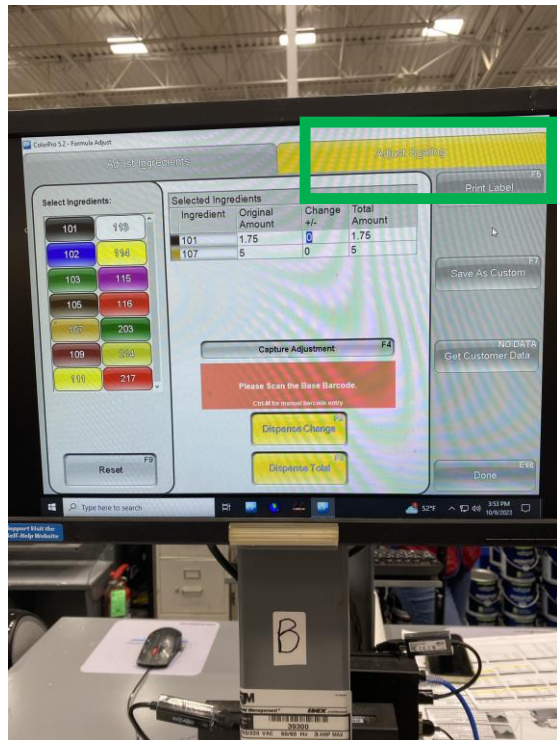

Step 3: From this screen, select **Adjust Scaling** to change amount of colorant dispensed.

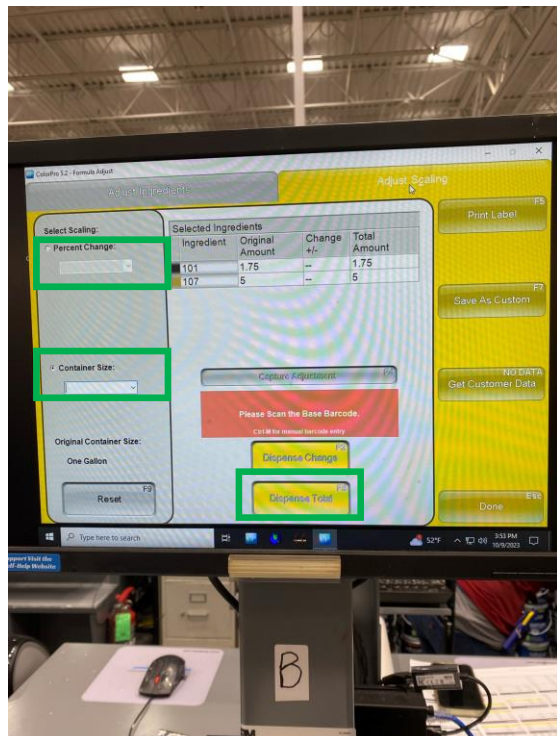

Step 4: From the drop-down menus on the left, select **Percent Change** or **Container Size** to change amount of colorant dispensed based on percent or the size of the container. Once the selection has been made select **Dispense Total**.