



WAYPUMP09
WAYPUMP10



Attachable Battery- Powered Transfer Pump

Thank you for purchasing the **DeWay™ Attachable Battery-Powered Transfer Pump**. This User

Guide is intended to provide you with guidelines to ensure that operation of this product is safe and does not pose risk to the user.

Any use that does not conform to the guidelines described in this User Guide may void the limited warranty.

Please read all directions before using the product and retain this guide for reference. This product is intended for household use only. It is not intended for commercial use.

This product is covered by a limited one-year warranty. Coverage is subject to limits and exclusions. See warranty for details.


Safety Precautions

- > Only use compatible liquids with this pump.
- > Do not allow children to operate the product.
- > Make sure to remove any liquid left in the hose after use.
- > Do not use this pump for transferring the following liquids: acetone, benzene, cresol, ethyl, phenol, methyl ethyl, concentrated caustic soda liquid, nitric acid, hydrochloric acid, or sulfuric acid.
- > Do not refuel directly while the vehicle or other equipment is turned on.
- > Do not alter or disassemble the pump.
- > Do not place the pump in a wet area.
- > Do not turn the pump upside down after use.
- > **CAUTION: Remove the batteries when not in use.**
- > When using the pump on a fuel tank of a heater, turn the heater off and allow it to cool off first.
- > Do not use corrosive chemicals in this pump.
- > Do not leave pump unattended during operation.

- > Make sure to detach the pump from the tank when moving device.
- > Drain the pump of any remaining liquid after each use.
- > Make sure the sensor on the discharge nozzle is vertical. If not, pump may not stop automatically and could overflow.





Product Overview

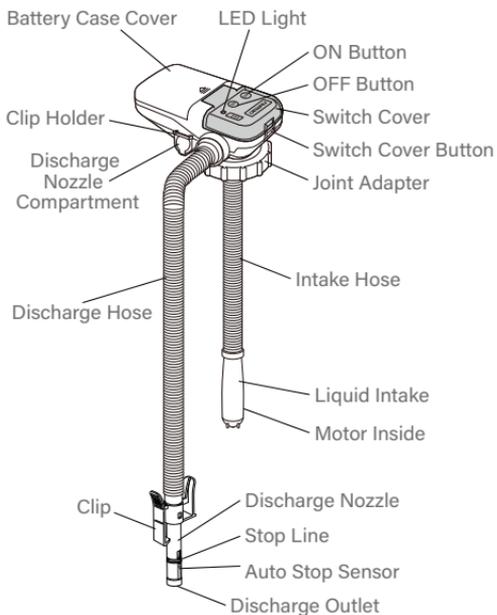

Operating Instructions






Installing the Batteries

- 1 Remove the battery case cover by pushing down on the grooves in the direction of the arrow.
- 2 Insert four (4) AA batteries (not included) into the battery compartment.
NOTE: Make sure battery wrappings are not torn and that you match the positive and negative poles with the markings in the battery compartment.
- 3 Slide the battery case cover back onto the battery compartment.
NOTE: It is recommended to use four (4) batteries for the pump. However, it is possible to operate the pump with two (2) batteries during emergencies as long as there is a battery on both sides of the battery compartment.

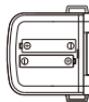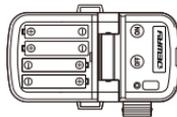

Operating the Pump

- 1 Insert intake hose into supply tank. Fasten the pump's joint adapter onto the supply tank (if possible).
- 2 Insert discharge nozzle into receiving container. Use clip to firmly attach the nozzle to the container and make sure discharge nozzle stays in a vertical position.
- 3 Push the switch cover button to open the switch cover.
- 4 Start the pump flow by pressing the ON button. When the flow starts, the LED light will turn on. Pump will automatically stop when the fuel/liquid reaches the stop line of the discharge nozzle.
NOTE: To stop pump flow manually, press the OFF button or close the switch cover.
- 5 Remove the discharge hose from the container once the pump flow automatically stops. Hold the discharge hose over the container to allow excess fuel to drain back into the tank.
- 6 Close the switch cover and insert the discharge nozzle into the discharge nozzle compartment. Clip nozzle to clip holder so nozzle stays in place.
NOTE: Discharge nozzle can be placed into the discharge nozzle compartment from either side.

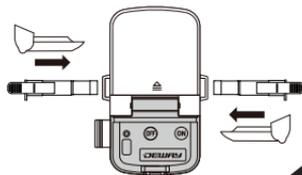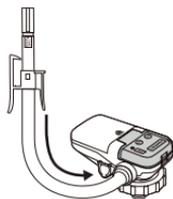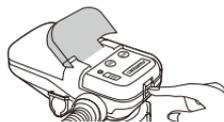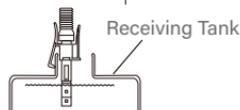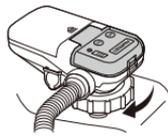

Storing the Pump

When pump is not in use for a long period of time, it should be properly stored. Before storing the pump:

- > Make sure no fuel remains in the pump.
- > Wipe down the pump with a cloth.
- > Make sure to remove the batteries.

Resetting the Pump

To reset the pump once it automatically turns off:

- 1 Take out all the batteries. Then, reinsert them in the battery compartment.
- 2 Press the OFF button twice.
- 3 The pump should now be reset. Press the ON button to resume pumping operation.

Compatible Liquids

- > Gasoline
- > Kerosene
- > Diesel
- > Non-potable water

Specifications

- > Flow rating: 2.4 gpm (9.2 Lpm)
- > Power source: Four (4) AA size batteries (not included)
- > Pump type: Automatic
- > Operating temperature: 41 °F – 104 °F (5 °C – 40 °C)
- > Rated voltage: 3 V DC
- > Operational voltage: 2 - 3 V DC
- > Material: Polyethylene, polyoxymethylene, ABS, nitrile rubber

LIMITED WARRANTY TO ORIGINAL CONSUMER

This **DeWay™ Attachable Battery-Powered Transfer Pump ("Product")**, including any accessories included in the original packaging, as supplied and distributed new by an authorized retailer is warranted by C&A Marketing, Inc. (**the "Company"**) to the original consumer purchaser only, against certain defects in material and workmanship ("**Warranty"**) as follows:

To receive Warranty service, the original consumer purchaser must contact the Company or its authorized service provider for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the Product is within the applicable Warranty period(s), **MUST** be presented to the Company or its authorized service provider in order to obtain the requested service.

Service options, parts availability, and response times may vary and may change at any time. In accordance with applicable law, the Company may require that you furnish additional documents and/or comply with registration requirements before receiving warranty service. Please contact our customer service for details on obtaining warranty service:

Email: info@supportcbp.com

Phone: 888-375-6700

Shipping expenses to the Company's Return Facility are not covered by this warranty, and must be paid by the consumer. The consumer likewise bears all risk of loss or further damage to the Product until delivery to said facility.

EXCLUSIONS AND LIMITATIONS The Company warrants the Product against defects in materials and workmanship under normal use for a period of **ONE (1) YEAR** from the date of retail purchase by the original end-user purchaser ("**Warranty Period**"). If a hardware defect arises and a valid claim is received within the Warranty Period, the Company, at its sole option and to the extent permitted by law, will either (1) repair the Product defect at no charge, using new or refurbished replacement parts, (2) exchange the Product with a Product that is new or which has been manufactured from new or serviceable used parts and is at least functionally equivalent to the original device, or (3) refund the purchase price of the Product.

A replacement Product or part thereof shall enjoy the warranty of the original Product for the remainder of the Warranty Period, or ninety (90) days from the date of replacement or repair, whichever provides you longer protection. When a Product or part is exchanged, any replacement item becomes your property, while the replaced item becomes the Company's property. Refunds can only be given if the original Product is returned.

This Warranty does not apply to:

- (a) Any non-DeWay™ Attachable Battery-Powered Transfer Pump product, hardware or software, even if packaged or sold with the Product;
- (b) Damage caused by use with non-DeWay™ Attachable Battery-Powered Transfer Pump products;
- (c) Damage caused by accident, abuse, misuse, flood, fire, earthquake, or other external causes;
- (d) Damage caused by operating the Product outside the permitted or intended uses described by the Company;
- (e) Damage caused by third party services;
- (f) A Product or part that has been modified to alter functionality or capability without the written permission of the Company;
- (g) Consumable parts, such as batteries, fuses and bulbs;
- (h) Cosmetic damage; or
- (i) If any DeWay™ Attachable Battery-Powered Transfer Pump serial number has been removed or defaced. This Warranty is valid only in the country where the consumer purchased the Product, and only applies to Products purchased and serviced in that country.

The Company does not warrant that the operation of the Product will be uninterrupted or error-free. The Company is not responsible for damage arising from your failure to follow instructions relating to its use.

NOTWITHSTANDING ANYTHING TO THE CONTRARY AND TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THE COMPANY PROVIDES THE PRODUCT "AS-IS" AND "AS-AVAILABLE" FOR YOUR CONVENIENCE AND THE COMPANY AND ITS LICENSORS AND SUPPLIERS EXPRESSLY DISCLAIM ALL WARRANTIES AND CONDITIONS, WHETHER EXPRESSED, IMPLIED, OR STATUTORY, INCLUDING THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE, QUIET ENJOYMENT, ACCURACY, AND NON-INFRINGEMENT OF THIRD-PARTY RIGHTS. THE COMPANY DOES NOT GUARANTEE ANY SPECIFIC RESULTS FROM THE USE OF THE PRODUCT, OR THAT THE COMPANY WILL CONTINUE TO OFFER OR MAKE AVAILABLE THE PRODUCT FOR ANY PARTICULAR LENGTH OF TIME. THE COMPANY FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE.

YOU USE THE PRODUCT AT YOUR OWN DISCRETION AND RISK. YOU WILL BE SOLELY RESPONSIBLE FOR (AND THE COMPANY DISCLAIMS) ANY AND ALL LOSS, LIABILITY, OR DAMAGES RESULTING FROM YOUR USE OF THE PRODUCT.

NO ADVICE OR INFORMATION, WHETHER ORAL OR WRITTEN, OBTAINED BY YOU FROM THE COMPANY OR THROUGH ITS AUTHORIZED SERVICE PROVIDERS SHALL CREATE ANY WARRANTY.

IN NO EVENT WILL THE COMPANY'S TOTAL CUMULATIVE LIABILITY ARISING FROM OR RELATED TO THE PRODUCT, WHETHER IN CONTRACT OR TORT OR OTHERWISE EXCEED THE FEES ACTUALLY PAID BY YOU TO THE COMPANY OR ANY OF ITS AUTHORIZED RESELLERS FOR THE PRODUCT AT ISSUE IN THE LAST YEAR FROM YOUR PURCHASE. THIS LIMITATION IS CUMULATIVE AND WILL NOT BE INCREASED BY THE EXISTENCE OF MORE THAN ONE INCIDENT OR CLAIM. THE COMPANY DISCLAIMS ALL LIABILITY OF ANY KIND OF ITS LICENSORS AND SUPPLIERS. IN NO EVENT WILL THE COMPANY OR ITS LICENSORS, MANUFACTURERS AND SUPPLIERS BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL 29 DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT.

Nothing in these terms shall attempt to exclude liability that cannot be excluded under applicable law. Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so certain limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.



Questions or Concerns? Contact Us!

telephone: 888-375-6700

email: info@supportcbp.com

DeWay is a trademark of C&A IP Holdings, LLC, in the U.S.

All other products, brand names, company names, and logos are trademarks of their respective owners, used merely to identify their respective products, and are not meant to connote any sponsorship, endorsement, or approval.

Distributed by C&A Marketing, Inc., 114 Tived Lane East, Edison, NJ 08837. Made in Korea.

© 2020. C&A IP Holdings, LLC. All Rights Reserved.