



## LED Lighted Medicine Cabinet

---




# Installation and Operating Manual

Series: 13MC2432V4LX

Size: W24"xH32"

13MC2432V4RX

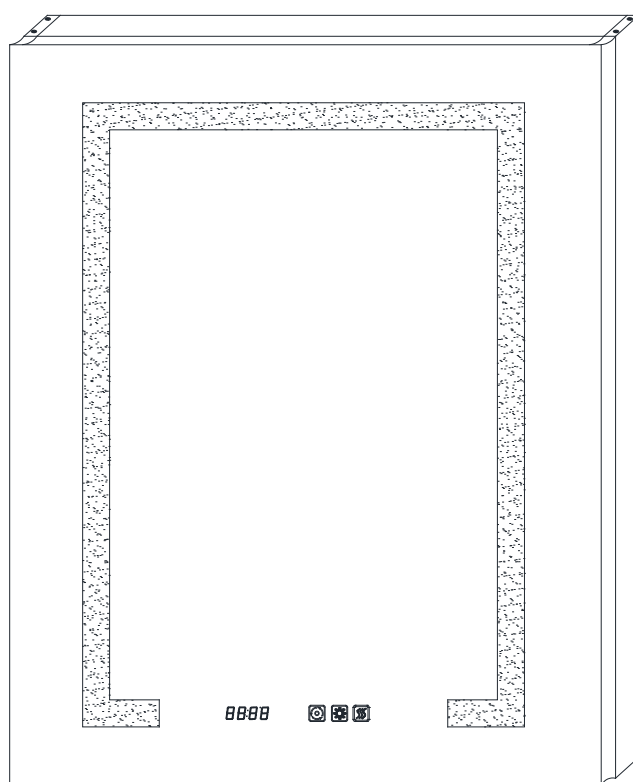

**For easy and safe installation, please refer to the following:**

Read all instructions thoroughly before installing the enclosed product.  
Read and take note of all safety, care and maintenance information.

**PLEASE KEEP THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE  
DURING PRODUCT OPERATION AND MAINTENANCE.**

## INSTALLATION INSTRUCTIONS



### WARNING AND SAFETY INSTRUCTIONS

Before installing your LED Medicine Cabinet fixture, please make sure that you carefully read through this instruction sheet, refer back to them during installation to ensure your product is fitted safely and correctly. Keep these instructions for future use.

#### WARNING Risk of Fire and Electric Shock

- All fittings must be installed in accordance with current IEE wiring regulations. If in doubt, consult a qualified electrician.
- Switch off the electrical supply at the main circuit board BEFORE installation and maintenance.
- Suitable for indoor use only. This product should be positioned well away from curtains and fabrics. Never cover the mirror.
- Regularly check the cord, the transformer and all other parts for damage, if any part is damaged the product should not be used.

#### INSTALLATION SAFETY





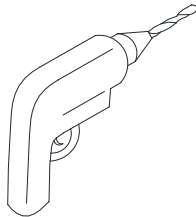
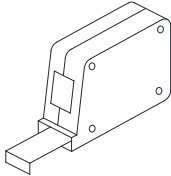
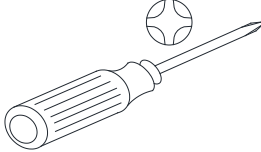
- Inspect the product immediately upon receipt for any possible damage during transportation or missing parts. Handle the product with care and protect against knocks to all sides and edges of the glass.
- Ensure there are no hidden pipes or cables in the wall before drilling.
- Wear suitable eye protection when drilling. Take care if drilling on tiled surfaces in case the drill slips.

#### CAUTION






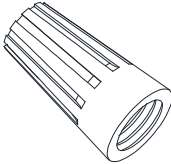
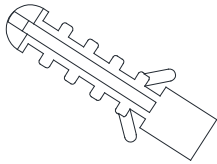
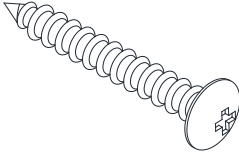

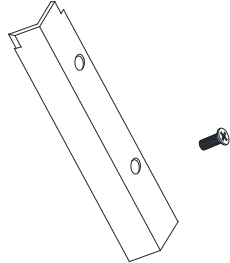
The light source of this product is non-changeable light diodes (LED). Do not disassemble the product, as the light diodes can cause damage to the eyes.

NOTE: The important safeguards and instructions that appear in this manual are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution and care are factors that can't be built into any product. These factors must be supplied by the person(s) caring for and operating the fixture. Do not install this fixture in hazardous locations.



## REQUIRTOOLSED
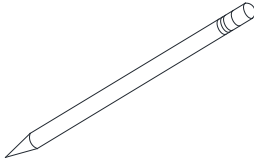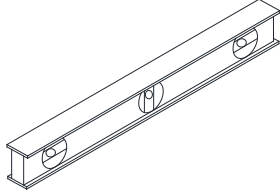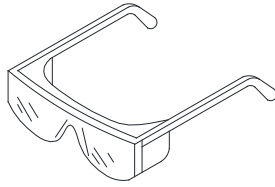
## PARTS SUPPLIED


 Z-Bar x1	 Z-Hook x1 Matching screws x2	 Layer board supporting X4 for spare	 22.2"x3.74": Glass Shelf x3	 Side panels x 2
 Wire caps x3	 Anchor x6	 Round head screw x6	 Hinge cover x3	
				 Side panel lids x4 , Matching screws x10
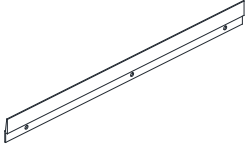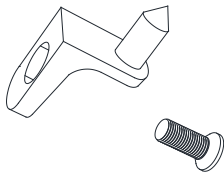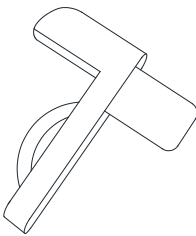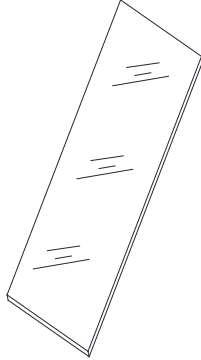
## Installation Instructions for Hanging Walls

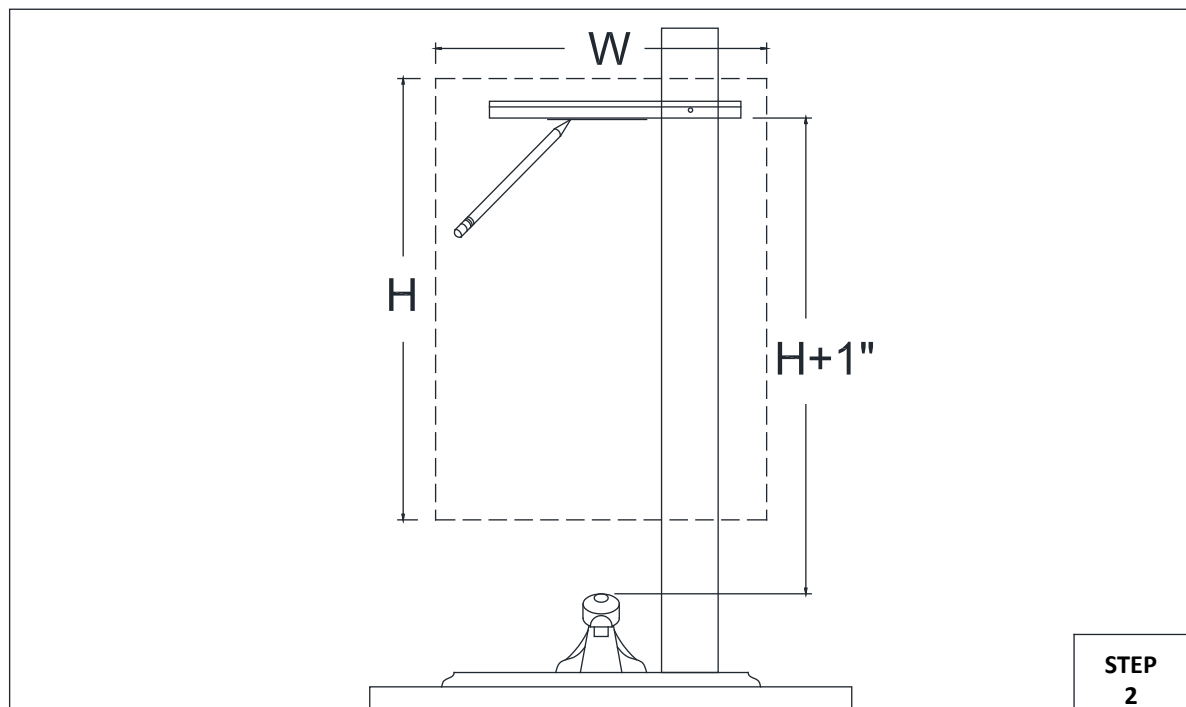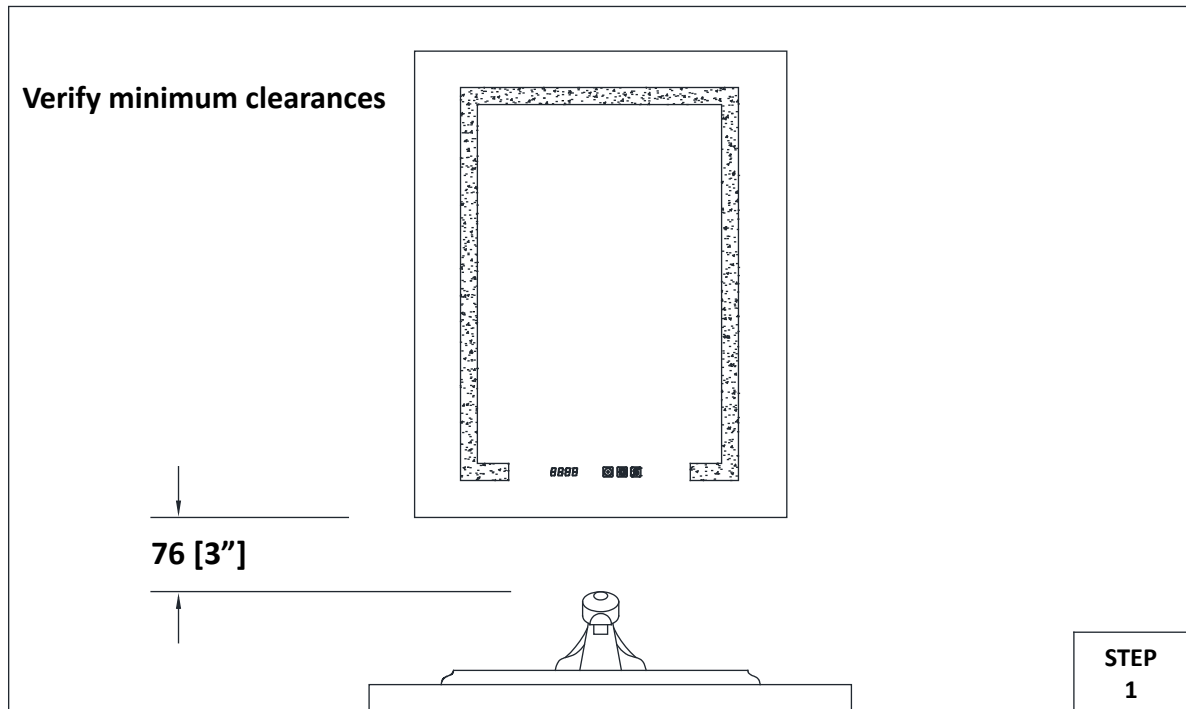


## Installation Instructions for Hanging Walls

Mark hole locations on the wall. Drill holes. Insert anchors where needed.

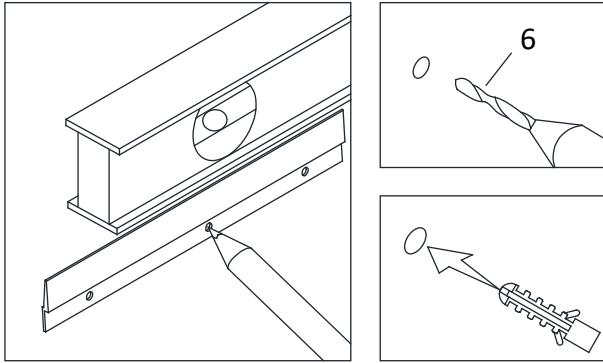


STEP  
3

Secure the bar with round-head screws.

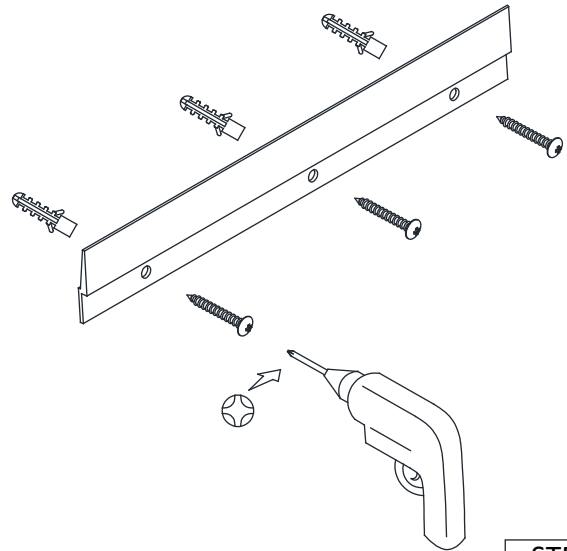


STEP  
4

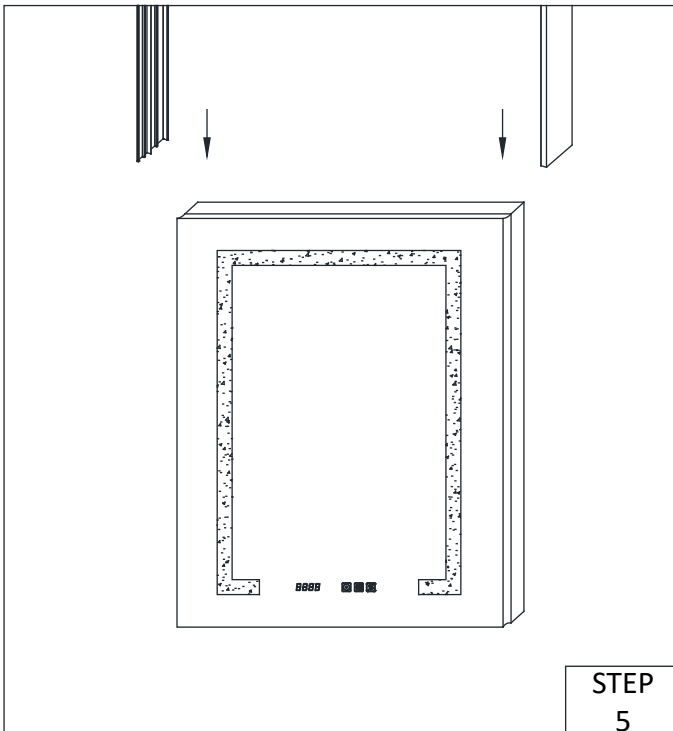


STEP  
5

The side panels and cabinets are individually packaged, you need follow the STEP 5 to STEP 7 to install the side panels for hanging walls version, for embedded installation no need install the side boards.

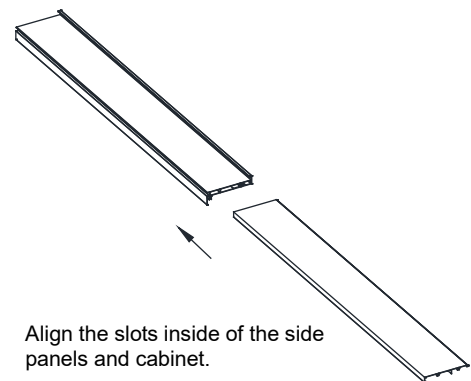





Align the slots inside of the side panels and cabinet.

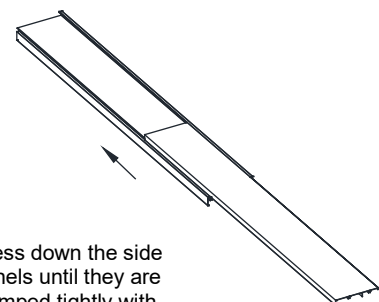

Press down the side panels until they are clamped tightly with the cabinet.


STEP  
6

## Installation Instructions for Hanging Walls

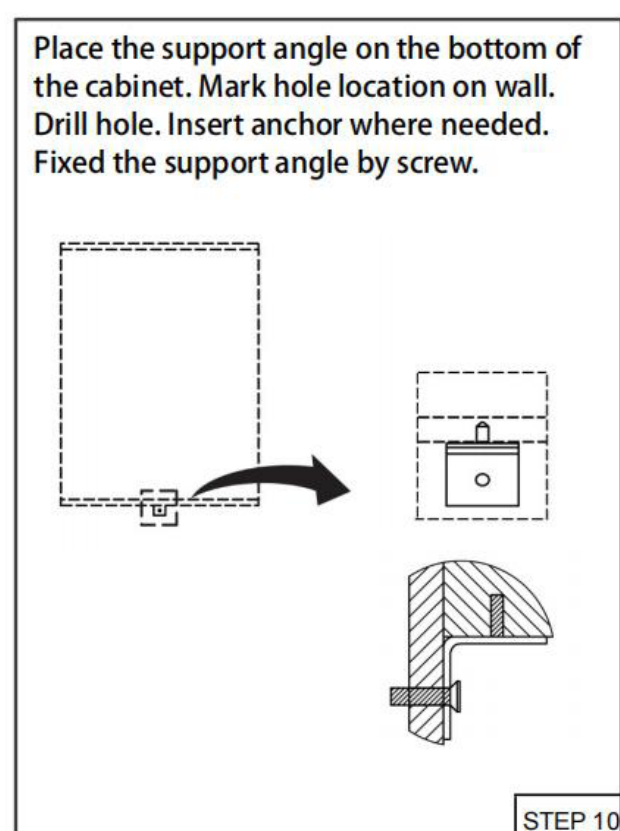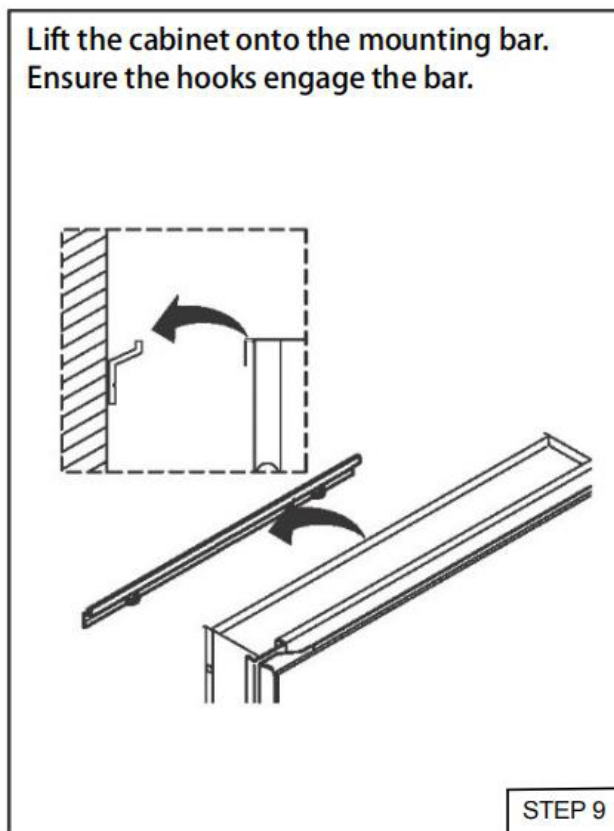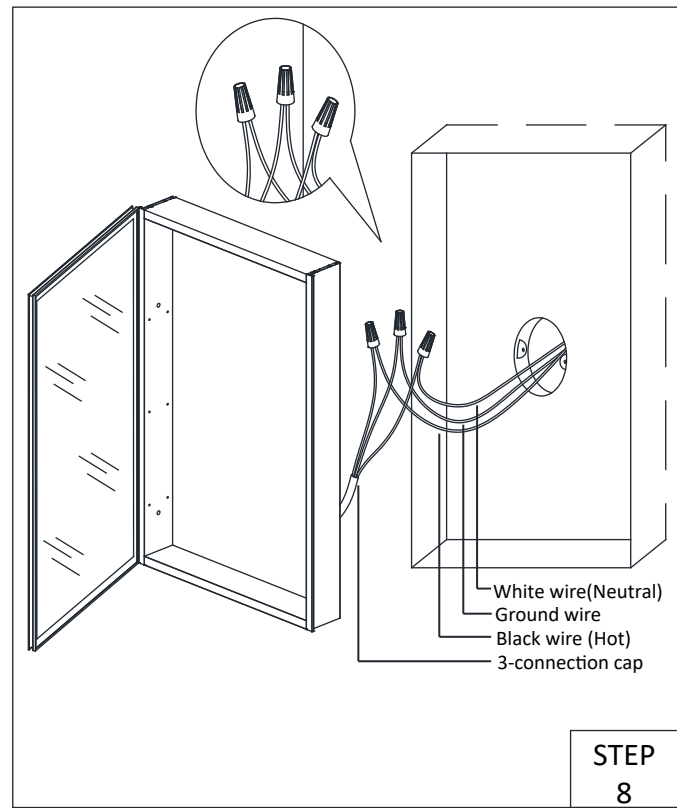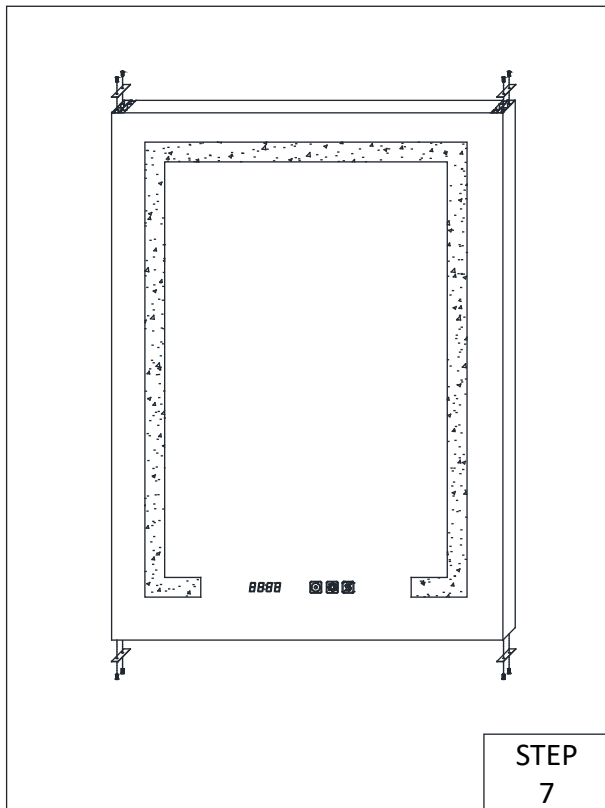


## Installation Instructions for Hanging Walls


### Install the glass shelf

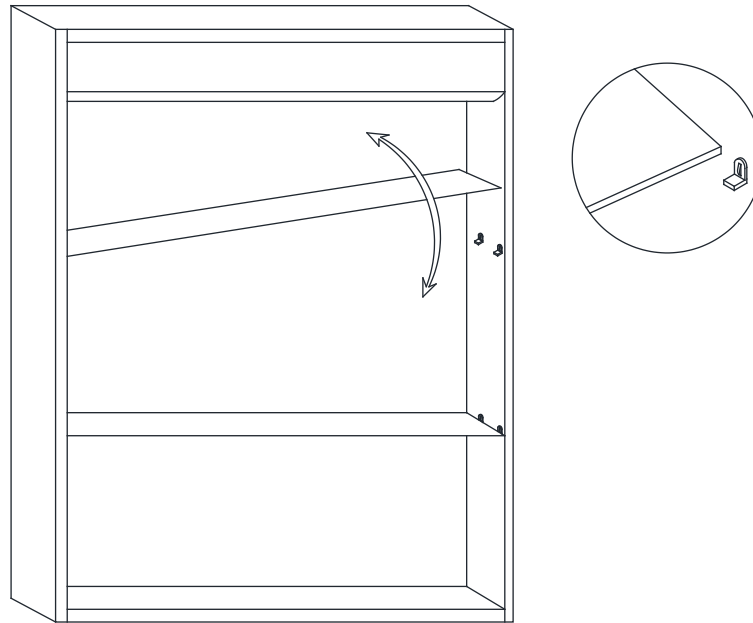

Adjust corresponding screws on the hinge to align the doors, ensure that gaps are even and the doors open and close smoothly

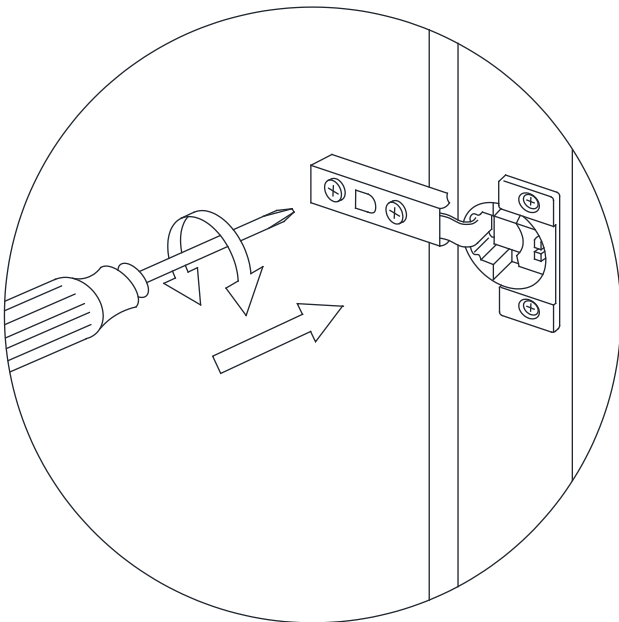

Adjust gap between door and cabinet

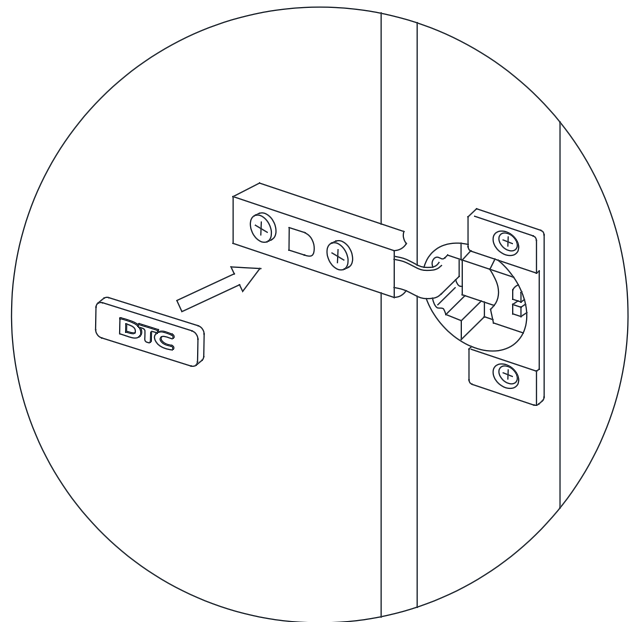


Install the Hinge cover




## Embedded Installation Instructions

### Determine the size of the opening



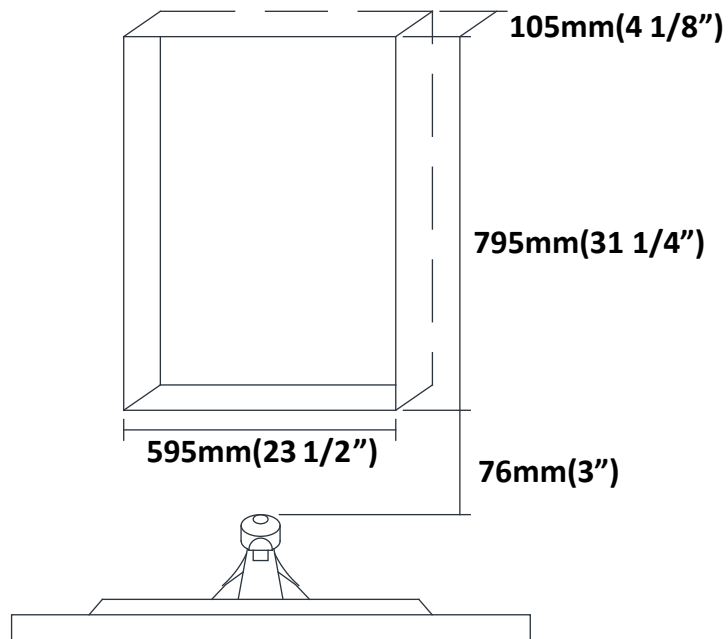


**STEP  
1**


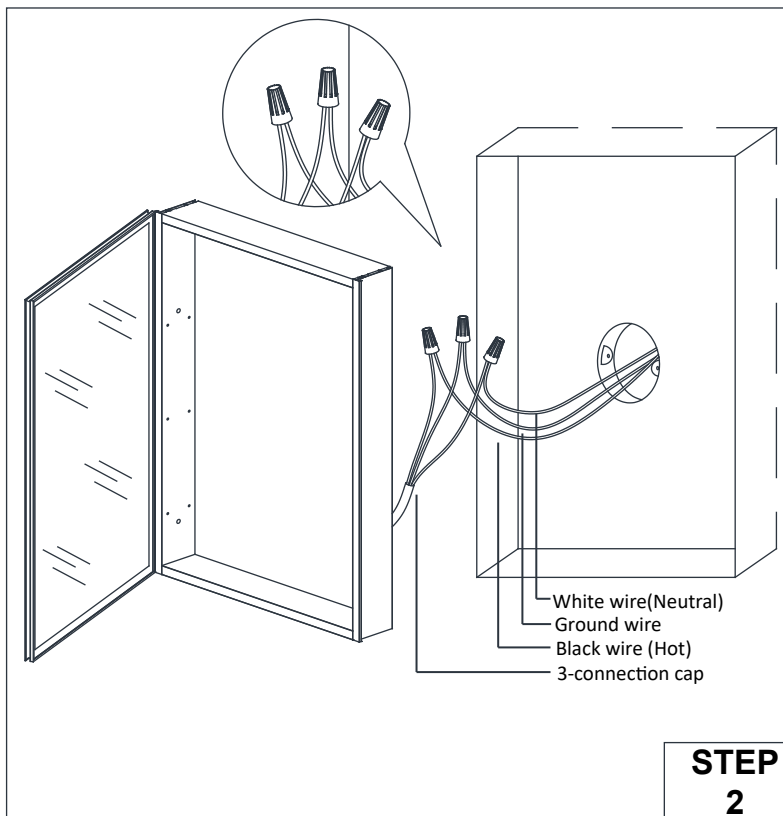


**STEP  
2**

## Embedded Installation Instructions

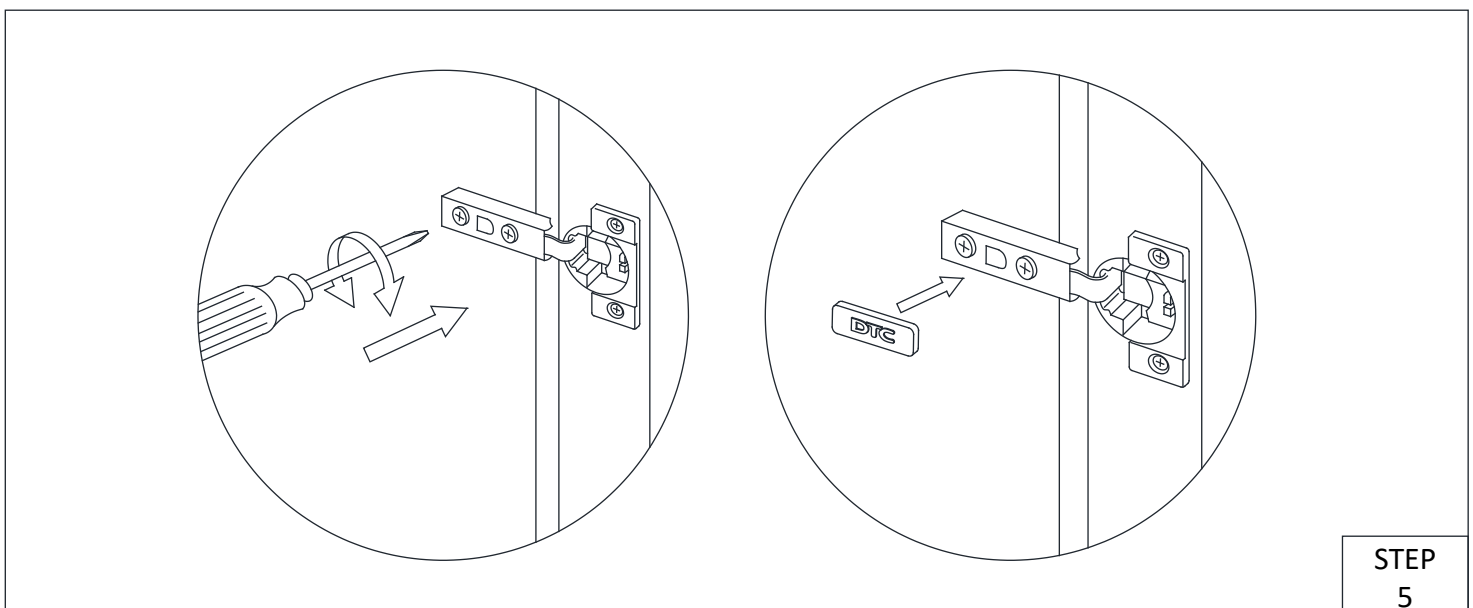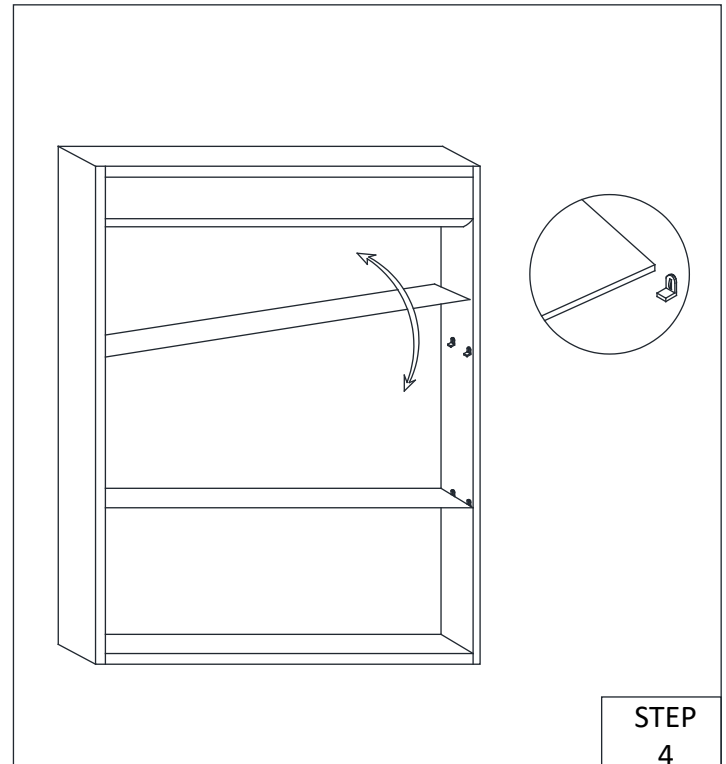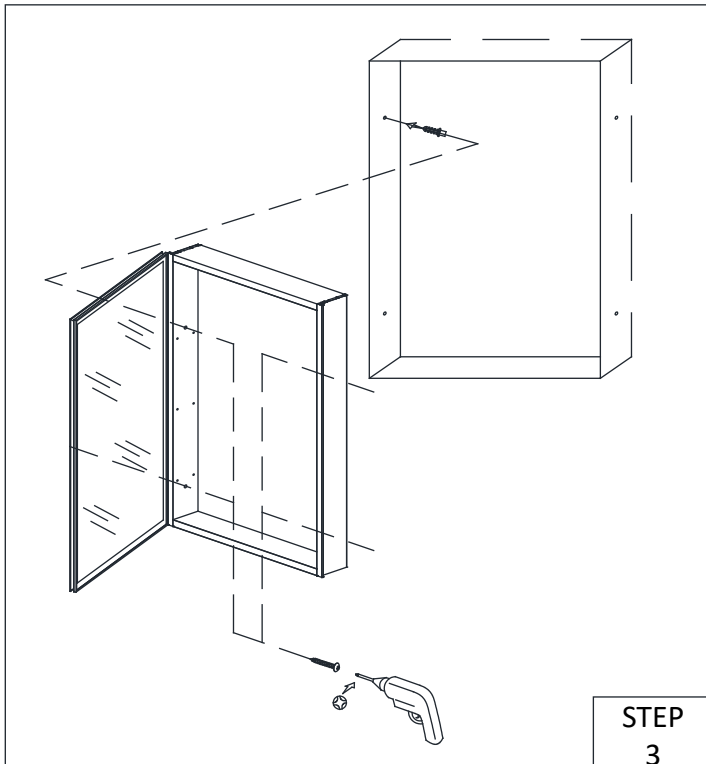


*\* All diagrams are for reference only. All model dimensions and proportions position will vary.*

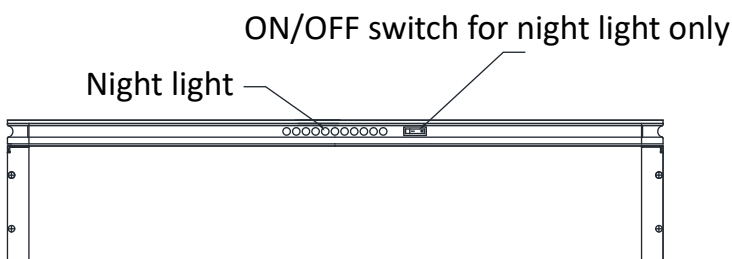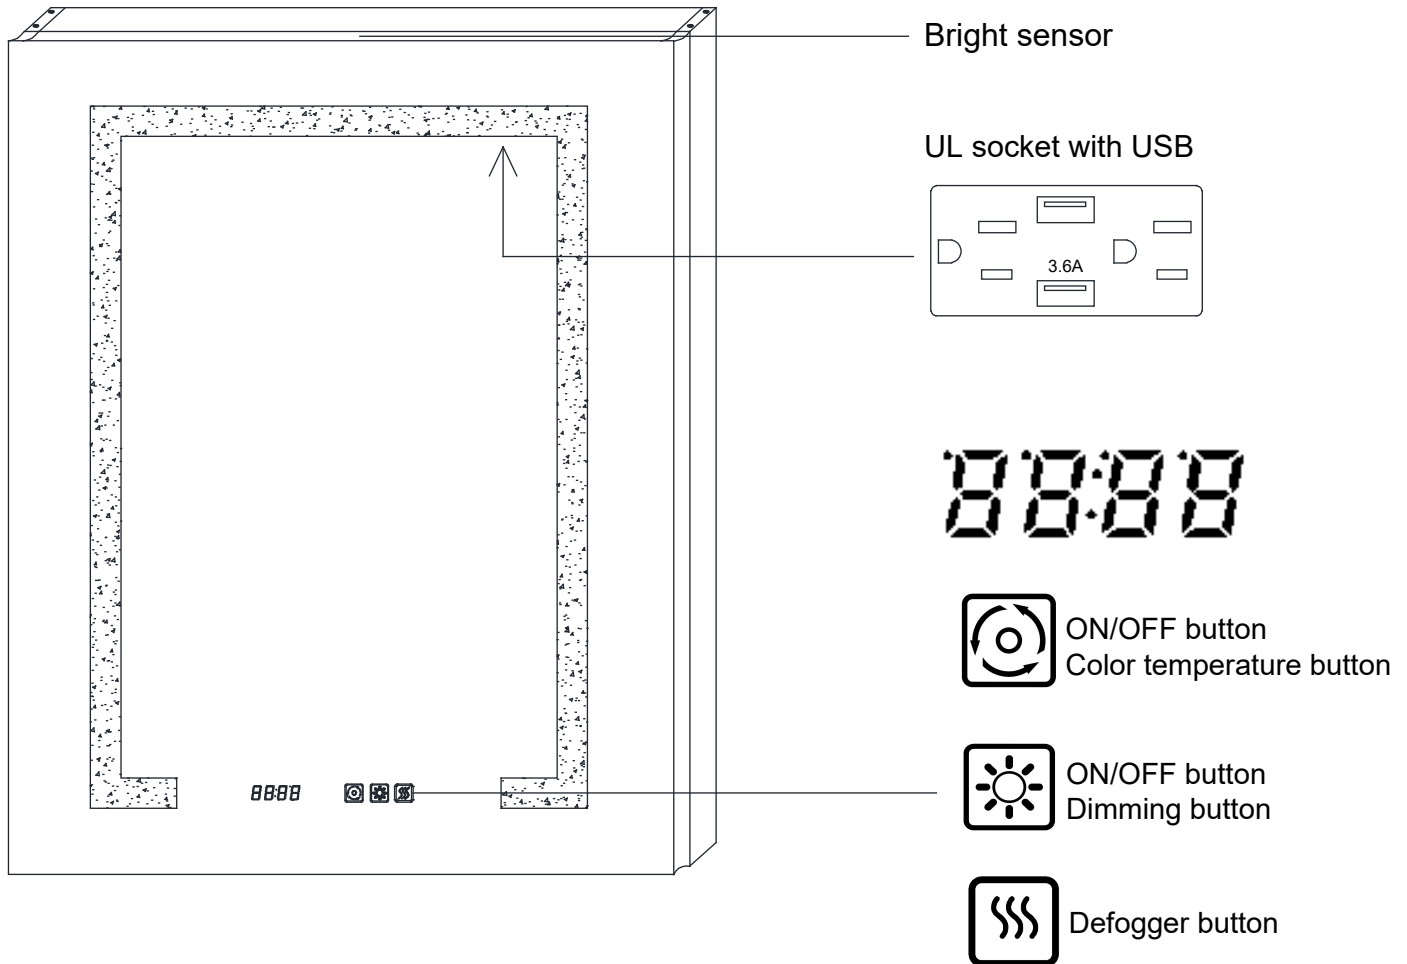

- DO NOT cover the sensor on the cabinet.
- Night light will be auto-on/off according to the brightness surrounding.
- Optional to stop night light function by tapping the ON/OFF switch at the bottom of the cabinet.




- Short press and touch button to turn on/off the mirror.
- Button turns blue when connected to main supply & turns to white after a short press. The mirror starts to work accordingly.
- Long press button to change color temperature when the mirror is working.

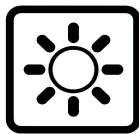

- Short press and touch button to turn on/off the mirror.
- Button turns blue when connected to main supply & turns to white after a short press. The mirror starts to work accordingly.
- Long press button to change brightness when the mirror is working.



- Short press and touch button to start defogging.
- Button turns blue when connected to main supply & turns to white after a short press. The mirror starts to work accordingly.
- Long press button to turn on/off the blue backlight. In default mode, the touch switches are with blue backlight.
- Note: Button turns off after a delay of 60 minutes.

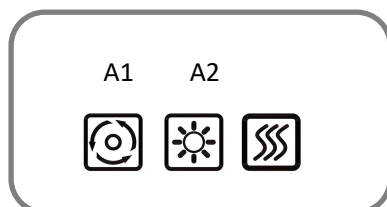

- Long press the A2 button for 3 seconds to enter the time adjustment mode. In this mode, short press A1 to decrease & A2 to increase time. Each short press will reduce or ascend the value by one. Or you can choose a long press for quick adjustment. After the "hour" adjustment is completed, if there is no more operation for 5 seconds, it will enter the "minute" adjustment mode, whose adjustment operation is the same as the "hour". And after the "minute" adjustment is finished, it will automatically return to the normal mode if there is no operation for 5 seconds either.
- Note: This product has time display & temperature display function. 5 seconds for time display & 2 seconds will last for temperature display. Each of them alternates. Remember to adjust the timer only after turn off the mirror.