

*If you have questions or comments, contact us.
Pour toute question ou tout commentaire, nous contacter.
Si tiene dudas o comentarios, contáctenos.*

1-888-895-4549 • www.DEWALT.com

INSTRUCTION MANUAL
GUIDE D'UTILISATION
MANUAL DE INSTRUCCIONES

INSTRUCTIVO DE OPERACIÓN, CENTROS DE SERVICIO Y
PÓLIZA DE GARANTÍA. **ADVERTENCIA:** LÉASE ESTE
INSTRUCTIVO ANTES DE USAR EL PRODUCTO.

DEWALT®

DXCM024-0393

*Air Compressor Monitoring System
Système de surveillance de compresseur d'air
Sistema de control del compresor de aire*

⚠WARNING: Read and understand all warnings and safety information provided with compressor.

WARNING: CONTAINS LEAD, May be harmful if eaten or chewed, May generate dust containing lead. Wash hands after use. Keep out of reach children.

⚠WARNING: This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

⚠WARNING:

- Battery acid leakage can cause personal injury and cause damage to the product and surrounding property. If battery leakage occurs, thoroughly wash any affected skin, making sure to keep battery acid away from eyes, ears, nose and mouth. Immediately wash any clothing or other surface that comes in contact with leaked battery acid. If a chemical burn occurs or if irritation persists, seek medical attention. Dispose according to Local, State or Federal regulations.
- Batteries are to be inserted following the polarity markings on the product.
- NEVER mix old and new batteries or different brands of batteries. Replace all batteries at the same time.
- NEVER mix alkaline, standard (carbon-zinc), rechargeable (nickel-cadmium) batteries with this product.
- NEVER dispose of batteries in fire, as they may leak and explode.
- Promptly remove exhausted batteries from product.
- Remove batteries before extended storage.

SAVE THESE INSTRUCTIONS

This manual contains information that is important for you to know and understand. This information relates to protecting YOUR SAFETY and PREVENTING EQUIPMENT PROBLEMS.

Product Overview

The Air Compressor Monitoring System application must be used with the Air Compressor Monitoring Device to track your air compressor's run hours. Air Compressor Monitoring System will then inform you of maintenance tasks that need to be performed on your air compressor. These include:

- Daily tank drain notification.
- Daily maintenance notification.
- Applicable air compressor pump oil, air filter, pump belt, fastener torque and vibration sensing device battery status.
- Gas driven engine maintenance intervals (for portable gas engine compressors only, not truck mount).

- Direct links to buy replacement parts from DEWALT's toolservicenet.com.

The Air Compressor Monitoring System application can monitor more than one compressor making it ideal for multiple compressors at multiple locations. Each compressor requires a separate Air Compressor Monitoring Device. Air Compressor Monitoring System also logs the maintenance performed for historical purposes, gives you a run time graph, and, if electric, an estimated compressor operating cost. This allows you to track usage and potential issues making preventative maintenance easier, while keeping costs down.

Specifications

Device Size: 2.85" x 4" x .92" (72.4 mm x 101.6 mm x 23.4 mm)


Device Weight: 5 oz. (141 g)

Voltage: 4.5 VDC (3 – 1.5 VDC AA Batteries)

Supports: Andriod, Version 11 or later or IOS, Version 14.8 or later

Tools Required

DESCRIPTION	SUPPLIED
Smart Phone or Tablet	No
Internet Connection	No
Air Compressor	No
Phillips Head Screwdriver	No

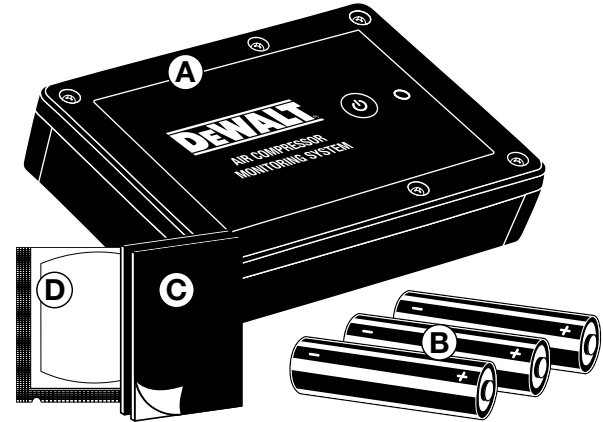


Parts List

REF.	DESCRIPTION	QTY
A	Air Compressor Monitoring Device	1
B	AA batteries	3
C	Velcro strips (1 hook, 1 loop)	2
D	Alcohol pad	1


Install or Change Batteries

1. Loosen the six (6) screws on the device cover, using a #1 or smaller Phillips screwdriver.


NOTICE: The screws are intentionally retained to the cover, when loosened, to prevent losing them.

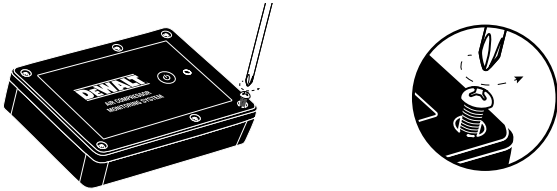

2. Install (3) fully charged AA batteries in the device. Be sure to orient the batteries properly so +/- matches indicators shown on battery case.

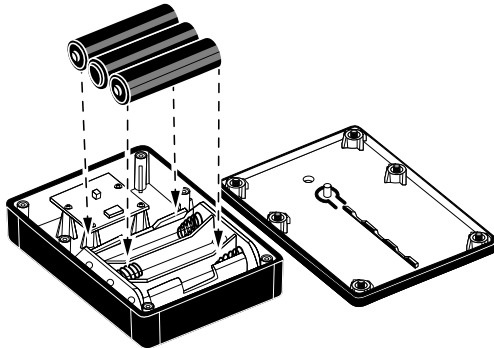

3. Replace the cover making sure the perimeter seal (O-ring) is in place, then securely tighten the six (6) screws. Be sure not to over-tighten screws.

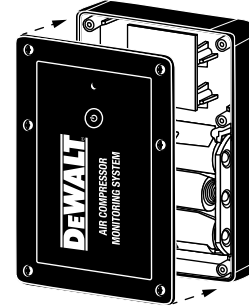

4. Press & hold button at least 3 seconds until light flashes blue 3 times indicating the device is ON.
5. Press & hold button at least 3 seconds again until light flashes red 3 times indicating the device is OFF.

NOTICE: If the device is ON, it will record any movement such as walking with the device in hand or installing the device to the compressor so be sure to keep it off until installed on the desired compressor and ready to use.

6. Operating temperature range of the device depends on AA batteries (32° F / 0° C to 104° F / 40°C).

Quick "How To" Guide

Turn Device On – Press and hold Device Button for at least 3 seconds until light flashes blue 3 times indicating the device is ON.

Turn Device Off – Press and hold Device Button for at least 3 seconds until light flashes red 3 times indicating the device is OFF.

Put Device into Pairing Mode – Press and hold Device Button for at least 6 seconds until light flashes red & blue simultaneously, indicating the device is in PAIRING MODE.


NOTICE: You have 30 Seconds to pair the device to the mobile application before having to put the device into Pairing Mode again.

Reset Device - Press and hold Device Button for at least 15 seconds until light flashes red & blue then turns a solid color indicating the device has been reset.

⚠ WARNING: Resetting the device will delete all the data, which cannot be recovered.

Low Battery - Light will flash red when device batteries are getting below 10% of full charge.

NOTICE: Battery life is also indicated on your APP once paired.

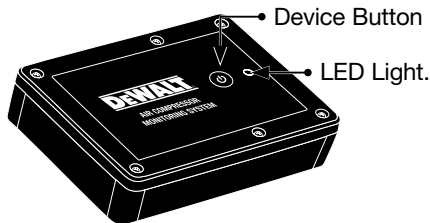

Mounting Device to the Compressor


1. Select a mounting location on the front platform of the air compressor that is easily accessible, will not interfere with any maintenance activities (changing pump oil, etc.), and will not cover safety or data decals. Do not mount on the tank.
2. Clean the selected mounting location on compressor very well with the alcohol pad provided. If the location requires more cleaning than the provided alcohol pad can do, use denatured or isopropyl alcohol on a clean, lint-free cloth.



NOTICE: Do not use rubbing alcohol containing glycerin.

3. Clean the back area of the Air Compressor Monitoring Device where the Velcro will be placed with the alcohol pad provided. If the location requires more cleaning than the provided alcohol pad can do, use denatured or isopropyl alcohol on a clean, lint-free cloth.

NOTICE: Do not use rubbing alcohol containing glycerin.


4. Adhere one side (hook or loop) of the Velcro provided to the back of the Air Compressor Monitoring Device by peeling off the backing and firmly pressing on the Velcro.

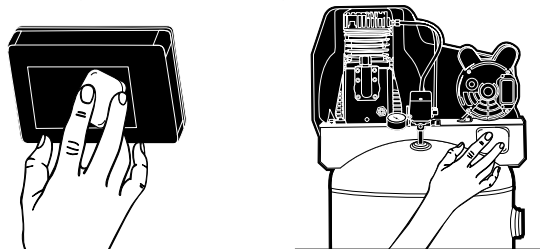

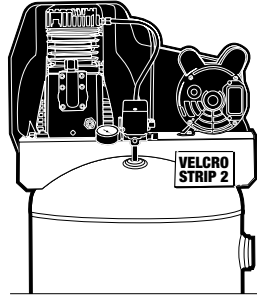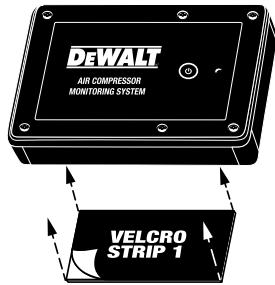

5. Peel the backing off the mating Velcro piece and press firmly onto the designated compressor location.
6. Be sure the Air Compressor Monitoring Device is securely mounted to the compressor by firmly, but carefully, pushing on the front of the device with your full hand.
7. Try pulling the device off of the compressor with a moderate pull.
NOTICE: The device should not pull off without fairly significant pull force.
8. After the test pull, give the device one more push to reconnect any hook and loops that may have separated during the test pull.



Pairing Device to Mobile Application

Download	
Android	IOS
Go to Google Play Store	Go to App Store
 Search for DEWALT Air Compressor Monitoring System	
Install App	

The Device works with the mobile application to provide a record of air compressor hours ran so the APP can automatically remind you when key maintenance activities need to be performed to get the most useful life out of your investment. You will be able to view both detailed and summary run times on your APP. Air Compressor Monitoring Device must be paired to the application to function properly.


During the set-up of your air compressor in the application, follow these steps to connect the device:

1. Make sure (3) fully charged Size AA batteries are installed in the device.
2. Make sure the Air Compressor Monitoring Device is securely mounted to the compressor.
3. Make sure the application is installed on your phone.
4. In "Settings" on your phone, make sure the Bluetooth is "ON" in order for the device to be discoverable.

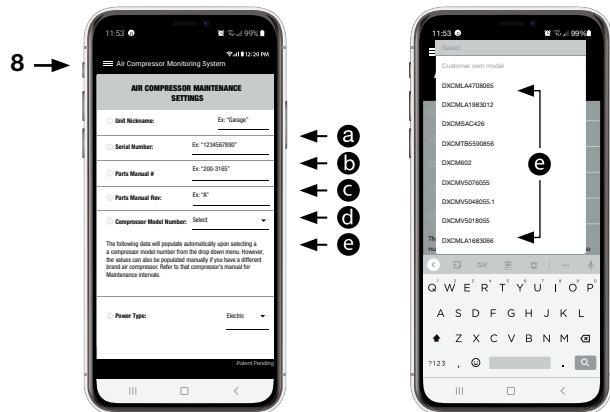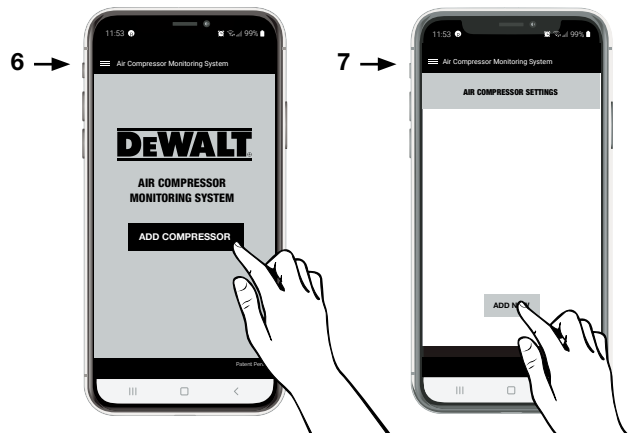


Pairing Device to Mobile Application (continued)

- Open DEWALT Air Compressor Monitoring System App on phone.
- From the initial screen: Select "ADD COMPRESSOR".
- This will bring you to the AIR COMPRESSOR SETTINGS screen. Press "ADD NEW".


NOTICE: Pressing the  icon beside each item will give you hints on what to enter.

- On the AIR COMPRESSOR MAINTENANCE SETTINGS screen:
 - Enter a compressor Nickname. This identity will be used throughout the application.
 - Enter serial number for future ease of ordering parts and obtaining service.
 - Enter Parts Manual Number for future ease of ordering parts and obtaining service.
 - Enter Parts Manual Revision to assure you get the right parts for your compressor.
 - Select your DEWALT Compressor Model Number from the drop down listing. This will automatically populate the manufacturer's recommended maintenance parameters for this model.

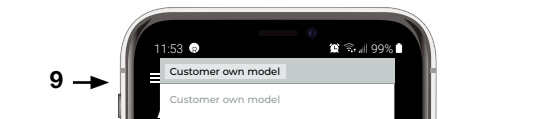

If not a DEWALT branded Air Compressor:

9. Select "Customer own model" Manually type in the model number of your air compressor on the next line (if desired).
10. Enter Compressor Model number for future ease of ordering parts and obtaining service.
11. Choose the maintenance activities appropriate for your air compressor and define the maintenance parameters.

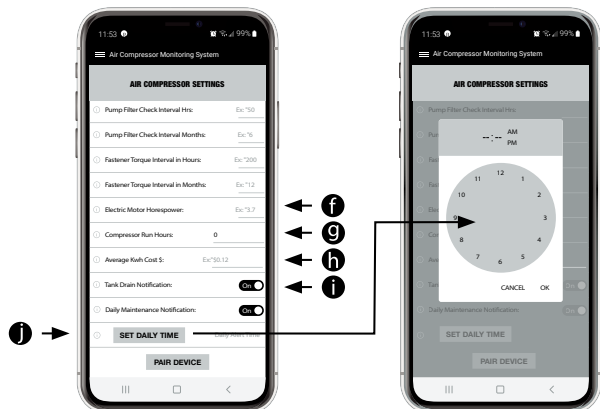

12. Enter information for your compressor (see AIR COMPRESSOR MAINTENANCE SETTINGS on the following pages).

- f Enter compressor run time if installing a device on an older compressor when you know how many hours are on it. Recommend this be left at "0".
- g You must enter your area's Average Kwh Cost to use the Cost of Operation feature if you have an electric powered air compressor.
- h Turn Tank Drain Notification OFF only if you have an automatic tank drain system mounted on your compressor, otherwise leave it turned ON.
- i Turn Daily Maintenance Notification OFF only if you intend to do the daily maintenance without being reminded. We recommend this feature be turned ON.
- j If you elect to receive daily notifications, you must enter a daily notification time. Press "SET DAILY TIME" button and use clock feature to set the time. Then press "OK".

13. Scroll to the bottom of the screen to "PAIR DEVICE".


14. On the Device, press & hold button at least 6 seconds until light flashes red & blue.

15. Press the "PAIR DEVICE" on phone.

Pairing Device To Mobile Application (continued)

- k** When the "Discovering" box appears, press it.
- l** When the "ADD" button appears, press it.

Setup is complete! Your compressor will appear in the "Air Compressor Settings" of the COMPRESSOR MANAGER screen.

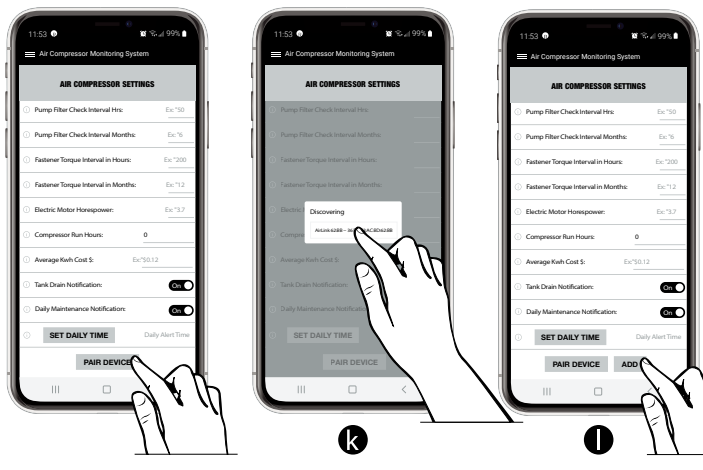

Troubleshooting


If no device is found:

- Make sure you are within 30 feet, of your air compressor with the Device on it, get closer if you are not.

- Make sure you press "PAIR DEVICE" on phone within 30 seconds after the device flashes red & blue.
- Make sure there are batteries in the device.
- Make sure you did not connect the device through the "Bluetooth" setting on your phone, it must be connected through the Air Compressor Monitoring System application only.
- If your app and device stop interacting check for system updates on your IOS or Android phone. Check DEWALT Air Compressor Monitoring System APP occasionally for updates to the APP.


Adding A Compressor

If you want to add additional compressors:

1. Go to the main menu by pressing .
2. Select "COMPRESSOR MANAGER."
3. Press "ADD NEW."

NOTICE: Each compressor requires a separate Air Compressor Monitoring Device.

4. Follow the steps above to add another compressor model.

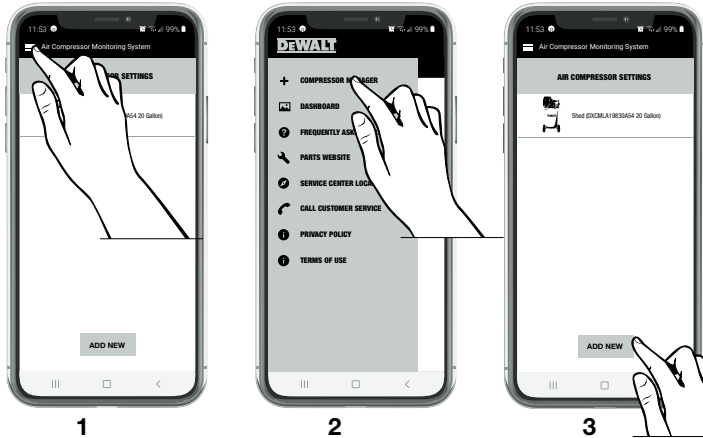

DEWALT branded models from the drop down feature or enter your own. If you select a DEWALT branded product from the drop down menu, the manufacturer's recommended maintenance activities will automatically populate. If you choose "Customer own model", then you will need to manually enter the maintenance activities / intervals you want to perform.

NOTICE: Most compressors come with "Break-in" oil which should be changed after 8 hours (see your manual). Change "Pump Oil Change Interval in Hours" to the recommended time found in your owner's manual. Enter the number "8" to set Oil change interval for 8 hours of break-in time.

Compressor Run Hours – can start at zero or enter number of run hours on machine. (This cannot be changed after recording has started).

Average KWh Cost\$ – found on electric bill or call electric company (used to estimate cost to run compressor).

Tank Drain Notification – turn ON or OFF. Turn OFF only if you have auto tank drain.

Daily Maintenance Notification – turn ON or OFF. Turn OFF only if you will do on your own.

Set Daily Time – set the time of day you want to receive the above notifications on your phone.

If you selected a DEWALT branded compressor, then the following are automatically populated and shown here for informational purposes only:

Air Compressor Maintenance Settings

Unit Nickname – this will show up on the Air Compressor Maintenance Dashboard.

Serial Number – recommended for future ease of ordering parts and obtaining service.

Parts Manual Number (optional) – recommended for future ease of ordering parts and obtaining service.

Parts Manual Revision (optional) – recommended to assure you get the right parts for your compressor.

Compressor Model Number – select from the list of preloaded

Air Compressor Maintenance Settings (continued)

Power Type – how is the compressor powered? (Electric or Gas).

Drive Type – how the compressor is driven. (Direct or Belt).

Pump Oil Change Interval in Hours – Number of hours you want the compressor to run before changing the pump oil. See your manual.

Pump Oil Change Interval in Months – Number of months you need to change the pump oil if hours have not been reached. See your manual.

Pump Filter Check in Hours – Number of hours you want the compressor to run before checking the pump filter. See your manual.

Pump Filter Check Interval in Months – Number of months you need to check the pump filter if hours have not been reached. See your manual.

Belt Tension Check Interval in Hours – Number of hours you want the compressor to run before checking the belt tension. See your manual.

Belt Tension Check Interval in Months – Number of months you need to check the belt tension if hours have not been reached. See your manual.

Fastener Torque Check Interval in Hours – Number of hours you want the compressor to run before checking fastener torques. See your manual.

Fastener Torque Interval Check in Months – Number of months you need to check fastener torques if hours have not been reached. See your manual.

Electric Motor Horsepower – Used for cost estimate.

Portable Gas Driven Compressors Only Oil Change Interval in Hours – Number of hours you want the compressor to run before changing the engine oil. See your manual.

Gas Engine Oil Change Interval in Months – Number of months you need to change the engine oil if hours have not been reached. See your manual.

Gas Engine Air Filter Change Interval in Hours – Number of hours you want the compressor to run before changing the air filter. See your manual.

Gas Engine Air Filter Change Interval in Months – Number of months you need to change the air filter if hours have not been reached. See your manual.

Gas Engine Sediment Cup Hours – Number of hours you want the compressor to run before checking / emptying the sediment cup. See your manual.

Gas Engine Sediment Cup Months – Number of months you need to check / empty the sediment cup if hours have not been reached. See your manual.

Gas Engine Spark Plug Hours – Number of hours you want the compressor to run before checking / changing the spark plug. See your manual.

Gas Engine Spark Plug Months – Number of months you need to check / change the spark plug if hours have not been reached. See your manual.

Gas Engine Valve Clearance Hours – Number of hours you want the compressor to run before checking valve clearance. See your manual.

Gas Engine Valve Clearance Months – Number of months you need to check valve clearance if hours have not been reached. See your manual.

Gas Engine Fuel Tank/Filter Hours – Number of hours you want the compressor to run before checking the fuel tank & filter. See your manual.

Gas Engine Fuel Tank/Filter Months – Number of months you need to check the fuel tank & filter if hours have not been reached. See your manual.


Gas Engine Fuel Line Months – Number of months you want the compressor to run before checking / replacing the fuel line. See your manual.

Compressor Manager

The COMPRESSOR MANAGER shows you each of your compressors and lets you edit their settings.

Go to main menu pressing .

Then select COMPRESSOR MANAGER

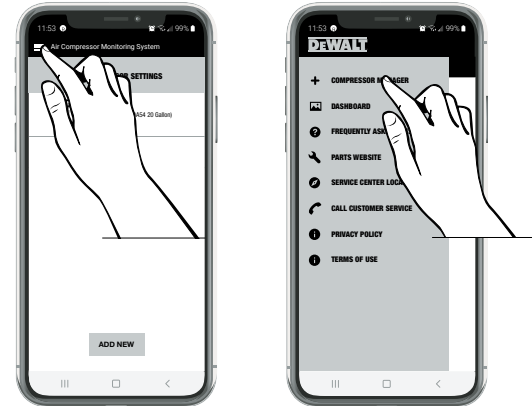


Compressor Manager (continued)

Select a compressor to edit or delete.


Edit the setting by tapping on the value you wish to change. Press "UPDATE" after all settings you wish to change have been edited.

⚠ WARNING: Deleting a compressor is permanent. The data cannot be recovered.

Each compressor's setting can also be reached from the SETTINGS button on the DASHBOARD.

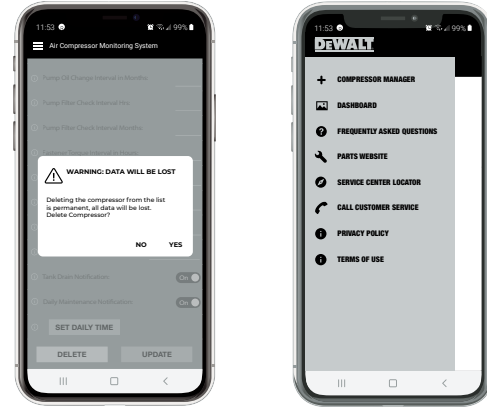

English

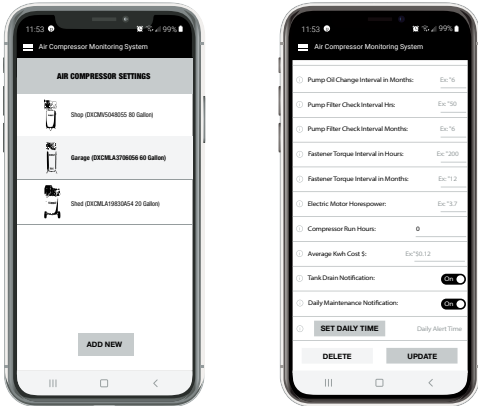

Dashboard


NOTICE: The name of the compressor will change from plain text to BOLD to indicate which compressor you are accessing. If you are monitoring multiple compressors / devices, they will show up sequentially on your Dashboard. As you scroll down to get to the next compressor, you will note that the name of the compressor is in plain / grayscale text. That means it is not yet accessible so you need to keep scrolling until the name goes from plain / grayscale text to BOLD text. Once the compressor name goes BOLD, it is then accessible.

Air Compressor Maintenance Dashboard

REF.	DESCRIPTION
A	Refresh Page
B	Perform maintenance on this date if hours are not met
C	Link to FAQ and "How to"
D	Cost Estimate Graph
E	Maintenance log
F	Order parts
G	Total compressor run time
H	Hours left until maintenance is required
I	Battery Status
J	Time Daily Notices are sent
K	Change settings
L	Reset maintenance intervals

The Dashboard is the main monitor of your compressors maintenance. See where each item is at a glance, the progress bars turn red when getting close to the time to perform the maintenance. See the compressor run time and cost estimate graphs, see the maintenance log, change your compressor settings, and reset maintenance intervals after buying and installing the parts or performing maintenance.

Links to Frequently Asked Questions and "How-to's" help keep your compressor in top shape.

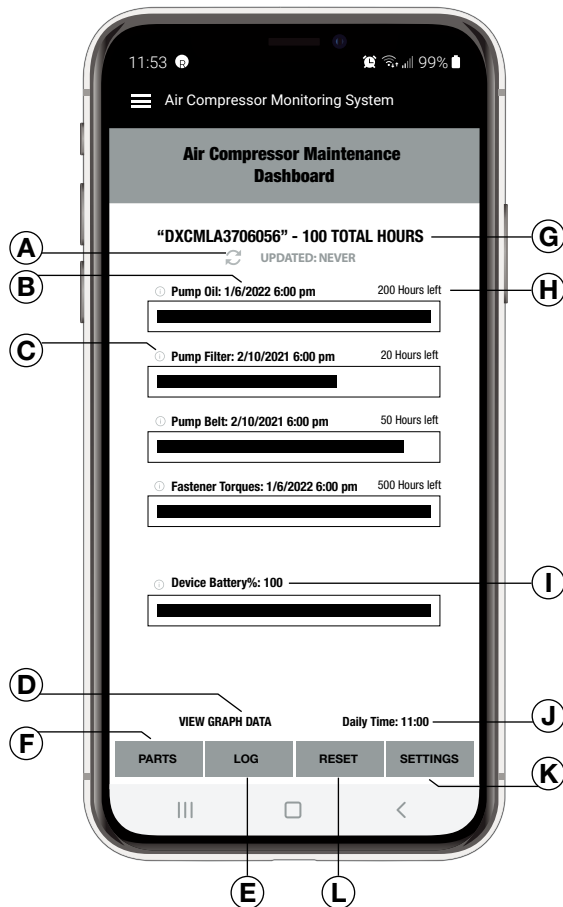



Retrieving Data From The Device

The Air Compressor Monitoring Device will record when the air compressor runs and for how long. The data is retrieved with the Air Compressor Monitoring System mobile application.

To retrieve the data from your air compressor, follow these steps:

1. On the Air Compressor Monitoring Device, press the button until the light flashes blue once.
2. Make sure you stay within 30 feet of the device with the app.
3. Press the DASHBOARD refresh icon on the phone.
4. If a lot of data is being retrieved, the percentage collected will be displayed. Let the app finish pulling in the data 100% before moving away from the compressor or changing app to another compressor.
5. When data retrieval is complete, the DASHBOARD refresh icon will be green and the date and time of update displayed.


It is recommended to retrieve data daily while performing the daily maintenance. Data **MUST** be retrieved every 30 days or less.

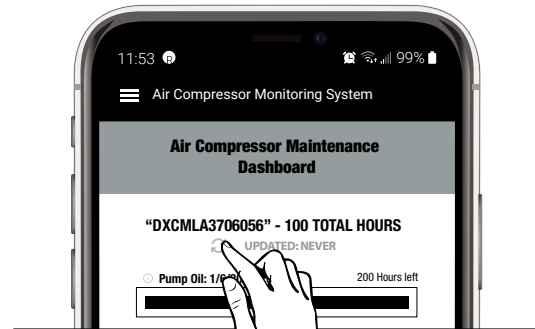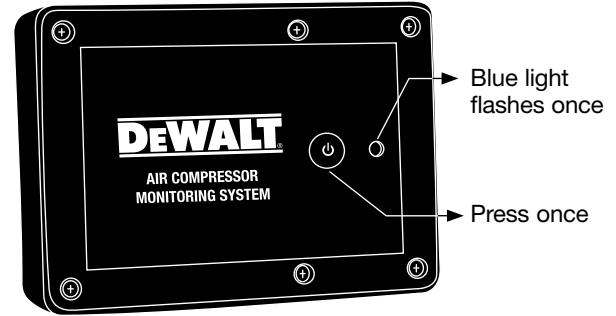


Press DASHBOARD refresh icon: 

Entering Maintenance Note In Log


The Compressor Maintenance Log provides a Maintenance History for the compressor linked to your app. When maintenance is performed and the interval is RESET, the log is updated with an entry. The maintenance history log can be manually updated with notes. The Compressor Run Time Log provides a record of when the compressor ran and for how long.

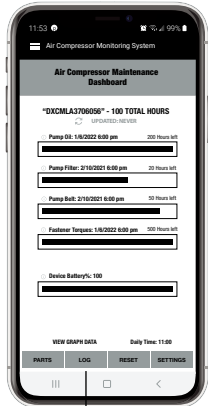


Press Log

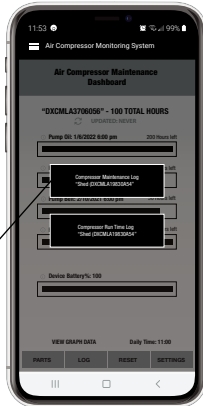

Press here for Maintenance Log

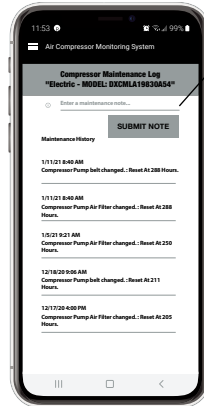


Press Here, to manually enter a note

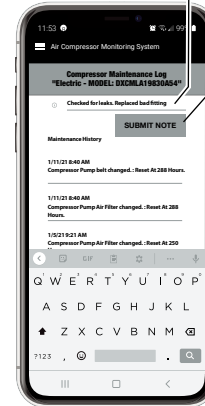


Type maintenance note

Press Submit Note

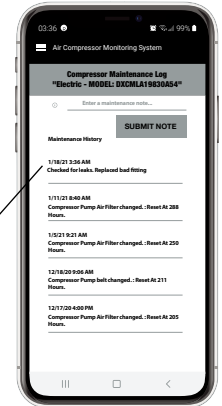


New note appears here

To View Compressor Run Time History

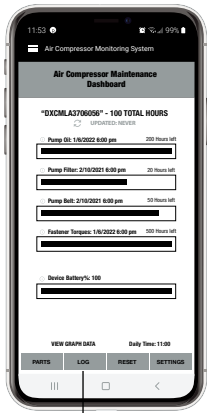

Press here for Run Time Log

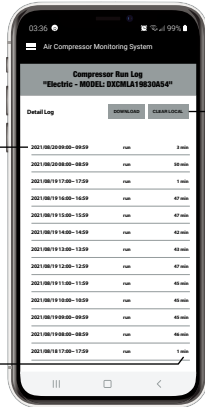

Press Log
Date and Time compressor ran (shown in one hour intervals).

How long compressor ran in each one hour interval.


"Clear LOCAL" will remove the minutes run time data from your phone. It does not affect the total hours accumulated, which are shown at the top of your compressor dashboard screen.

To Reset A Maintenance Activity

Selecting RESET from the dashboard will bring you to the "COMPRESSOR MAINTENANCE RESET" screen. This screen allows you to Reset the interval and begin counting again after a maintenance item has been performed. This can also be done from the notification you receive. The reset screen allows you to schedule maintenance and get to it when it is convenient for you without having to wait for the notification.


The RESET INTERVALS button will ask you to verify that you want to reset the interval. This is just to be sure you did not accidentally press the incorrect button. The RESET INTERVALS will set the next run time hours and the next date for that maintenance item. All maintenance items are reset individually.


NOTICE: If more than one phone is paired to a device, only the phone that reset the interval will show the reset. The second phone must also be reset to show the maintenance history.

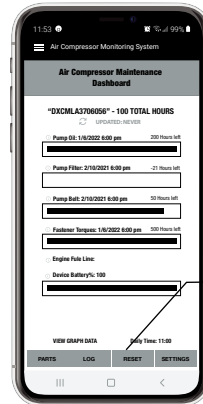


Press to Reset Pump Filter Interval

Press RESET

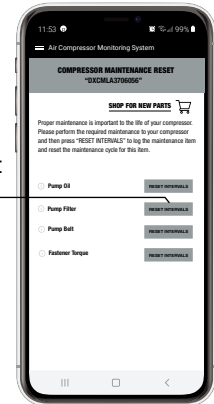

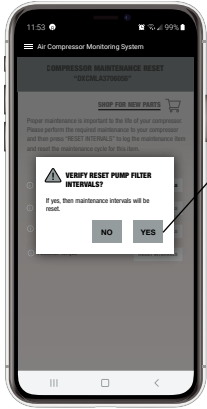

Press YES to verify the maintenance activity displayed is the one you want to reset. If the maintenance activity displayed is not the one you wanted to reset, go back to previous step.

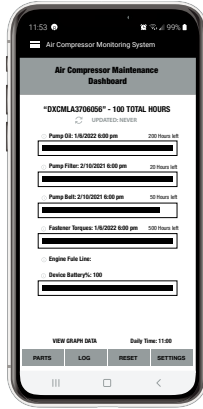

- If a maintenance note is manually entered, it will only appear on that phone unless manually entered on other phones.

Notifications


NOTIFICATIONS are sent when it is time to perform a maintenance check or replacement for a particular item. The Notification may have multiple items or just one. Snoozing of the notification is possible so that you can be reminded again when doing the maintenance fits your busy schedule. Snooze can be set for 1 day later, 14 days later, or 30 days later. If you have received notifications for several items, snoozing one item will snooze all.

A convenient shopping cart is available so you can order the parts you need.

If you have performed the maintenance, RESET INTERVALS resets the intervals so the countdown begins again.


Daily maintenance notifications are available. These are just a quick reminder to perform the daily tasks that keep your compressor running for the long haul.

- The first phone to update will retrieve data from the beginning to the point in time when updated.
- The second phone to update will retrieve data only from the time since the device had previously been updated.
- The total hours on the device / compressor will be shown on all phones.
- When maintenance is performed, all phones must reset the intervals to retain maintenance history.

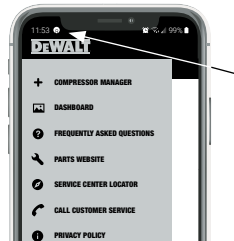


Notification sent to phone. This may vary by phone.

Press to open notification

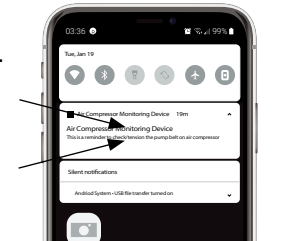

Notifications (continued)

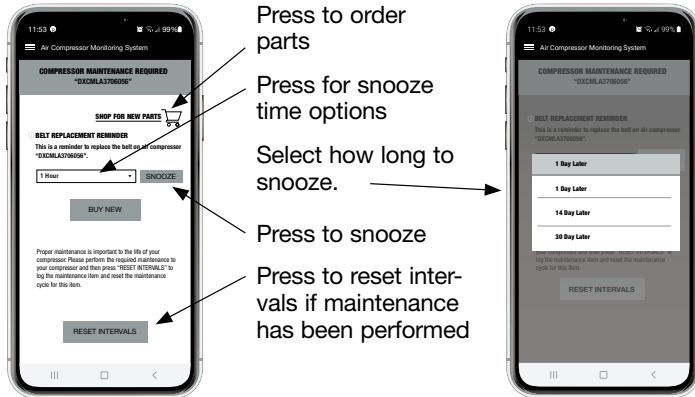


Graph Data

The GRAPH DATA will show the compressor run times and dates along with a cost estimate if electric driven and if you input the cost per kwh for your area during setup. Charts can be zoomed in and out using your fingers and viewed by week or month.

An average cost will be displayed for electric compressors.

The Graphs can help you determine the health of your entire air delivery system. Increasing costs or having the compressor run more often or at times when you don't expect it to be, may indicate issues with the compressor or system. For example, if you do not use the compressor at night, but a review of the run

times indicate that the compressor is beginning to run at night, this could mean there might be a leak somewhere in the system, someone left something running, or a bad component in the compressor itself.

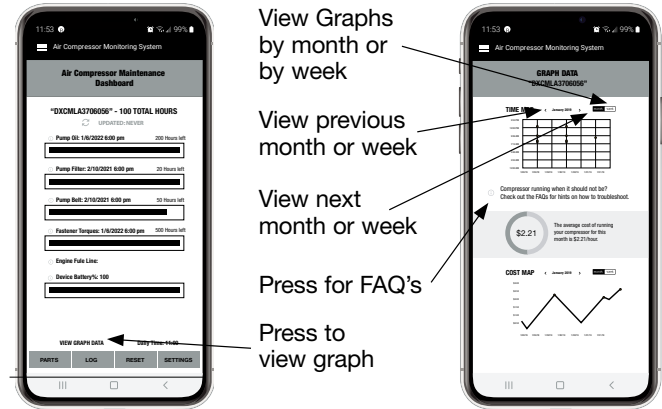


Parts

Replacement parts can be easily purchased through DEWALT's toolservice net.com website. Clicking the "PARTS" button in the dashboard or "PARTS WEBSITE" button from the Home page, brings you to the DEWALT website. You can also find an authorized service center for your compressor on this site as well. If you do not have a DEWALT product, you can still search our website for parts.




Parts (continued)

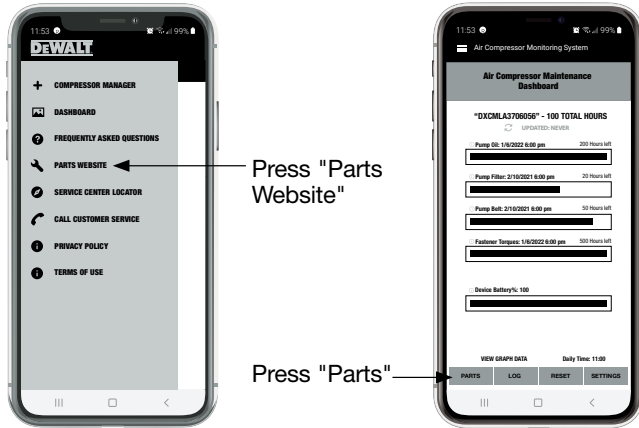


You can easily populate your shopping cart by locating your necessary parts on the exploded diagrams or from the list. Get your parts ordered, snooze the notification if you need to, install your parts and "RESET INTERVALS" for that maintenance item.

Any questions, you can always call customer service. Just click the main menu-> "CALL CUSTOMER SERVICE"

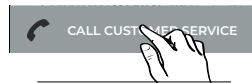


Access the Menu on the DEWALT site.

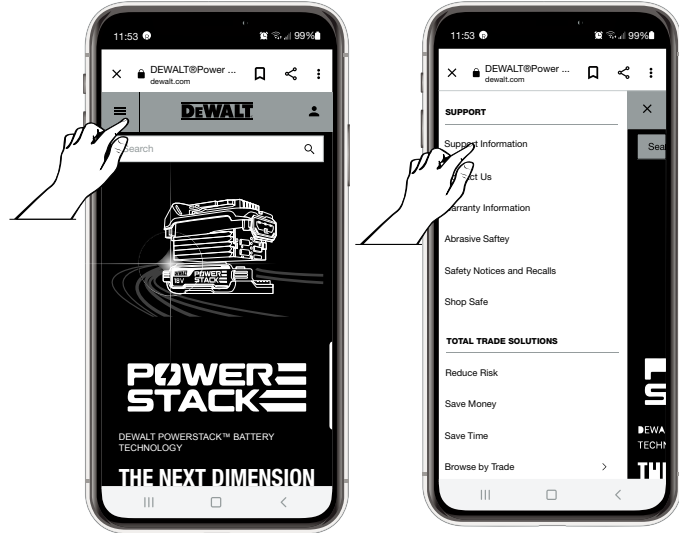


Under the Section of SUPPORT, Choose Support Information. And then within: Help & Support – scroll down to find DEWALT Service Net.

Scroll down to find Service & Support.

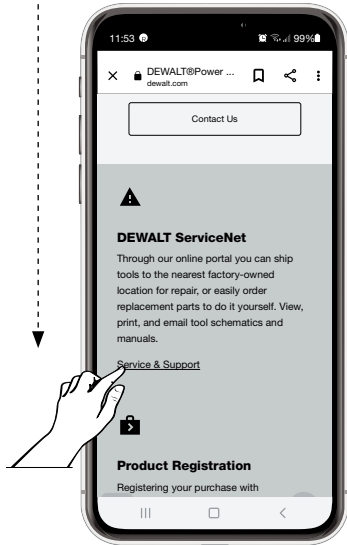


Type in the model number of your air compressor in the search bar.

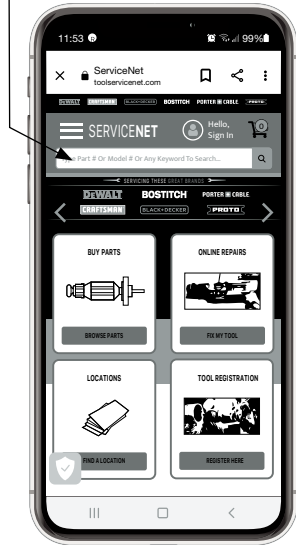

Frequently Asked Questions (FAQ)

The Air Compressor Monitoring System application also includes Frequently Asked Questions. Each info button either gives you a hint of what to do or links you to the appropriate FAQ, for example, how to check and change your pump oil.

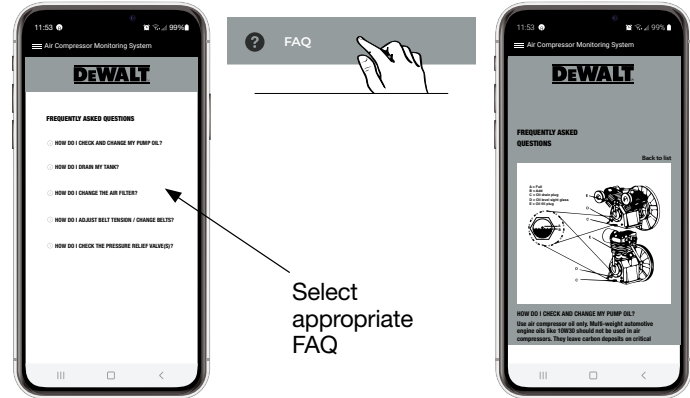

Select appropriate FAQ



Transferring App And Data To A New Phone

If you upgrade or purchase a new phone and need to move the DeWalt Air Compressor Monitoring System App to the new phone, transfer the App through a cloud based portal. Doing a phone to phone transfer will not move the data with the App. You would have to set up your Air Compressor through Compressor Manager and re-pair to the device. All Maintenance History and data will be lost.

Once you are in the SERVICENET page, please type in the model number of your air compressor in the search bar. This will bring you to the parts diagram and the available replacement parts. (If you encounter any issues accessing the parts list & breakdown for your compressor, please enter the site directly via www.DEWALT.com)

Privacy Policy, Terms of Use and Warranty

Your privacy is important to us, please read our Privacy Policy and Terms of Use. You can reach these from the main menu by selecting "PRIVACY POLICY" and "TERMS OF USE".

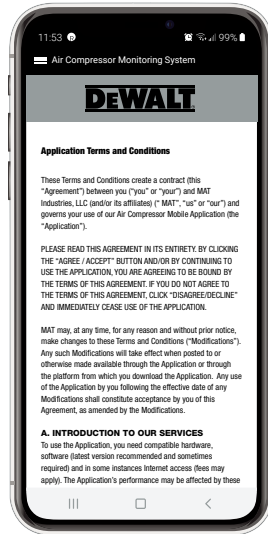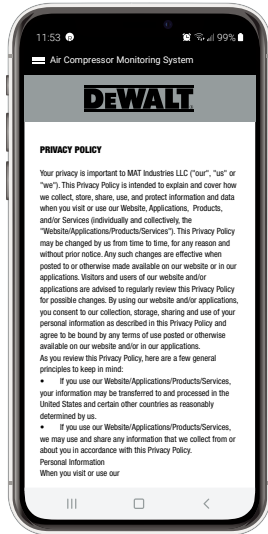

Privacy Policy

Your privacy is important to MAT Industries LLC ("our", "us" or "we"). This Privacy Policy is intended to explain and cover how we collect, store, share, use, and protect information and data when you visit or use our Website, Applications, Products, and/or Services (individually and collectively, the "Website/Applications/Products/Services"). This Privacy Policy may be changed by us from time to time, for any reason and without prior notice. Any such changes are effective when posted to or otherwise made available on our website or in our applications. Visitors and users of our website and/or applications are advised to regularly review this Privacy Policy for possible changes. By using our website and/or applications, you consent to our collection, storage, sharing and use of your personal information as described in this Privacy Policy and agree to be bound by any terms of use posted or otherwise available on our website and/or in our applications.

As you review this Privacy Policy, here are a few general principles to keep in mind:

- If you use our Website/Applications/Products/Services, your information may be transferred to and processed in the United States and certain other countries as reasonably determined by us.
- If you use our Website/Applications/Products/Services, we may use and share any information that we collect from or about you in accordance with this Privacy Policy.

Personal Information

When you visit or use our Website/Applications/Products/Services, we may collect personal information from or about you that you choose to disclose or share. If you choose to correspond with us through e-mail, we may retain the content of your e-mail messages together with your name, e-mail address and our responses.

Usage and Other Information

In addition to the personal information described above, we may collect certain other information about your use of our Website/Applications/Products/Services. We may use "cookies" and web server logs to collect information about how our website or application is used. Information collected through cookies and web server logs may include but is not limited to the date and time of visits, the pages viewed, time spent at our website. This information is collected on an aggregate, de-identified basis. For example, we may capture the IP address of the device you use to connect to our website or use our application, in such case, our applicable terms of use.

Applicable Law

This Privacy Policy is intended to comply with applicable law. We reserve the right to collect, store, share and use information to the extent permitted by applicable law. In addition to the terms and conditions herein, you shall be entitled to such privacy rights as required under applicable law. In the event of any conflict between the terms and conditions of this Privacy Policy and applicable law, such applicable law shall control and take priority.

Additional Sources of Information

We may also collect information about you from additional online and offline sources including from our company sites or commercially available third-party sources. We may combine this information with the personal and other information we have collected about you under this Privacy Policy.

We may use the information discussed above in a number of ways, such as:

- Preventing fraud and enhancing the security of your information or our Website/Applications/Products/Services;
- Responding to your requests and communicating with you;
- Managing your preferences;
- Performing analytics concerning your use of our Website/Applications/Products/Services , including your responses to our emails and the pages and advertisements you view;
- Providing you tailored content and marketing messages;
- Operating, evaluating and improving our business (including developing new Website/Applications/Products/Services; improving existing Website/Applications/Products/Services; performing data analytics; and performing accounting, auditing and/or other internal functions);

- Complying with and enforcing applicable legal requirements, relevant industry standards, contractual obligations and our policies; and
- For any other commercial purposes that we may or may not specifically disclose at the time you provide or we collect your information.
- We may also use data that we collect on an aggregate or anonymous basis (such that it does not identify any individual customers) for other various business purposes, where permissible under applicable laws and regulations.
- We may share the information we collect from and about you with our affiliates and other third parties. For example, we may share your information with:
 - Third-party service providers;
 - Our affiliated websites and businesses in an effort to bring you improved service across our offering of Website/Applications/Products/Services, when permissible under relevant laws and regulations;
 - Other companies to bring you co-branded services, products or programs; and

Other third parties to comply with legal requirements such as the demands of applicable subpoenas and/or court orders; to verify or enforce our terms of use, our other rights, or other

applicable policies; to address fraud, security or technical issues; to respond to an emergency or otherwise to protect the rights, property or security of our customers or third parties. We will use our reasonable discretion in sharing your information.

We may share anonymous or aggregated information with third parties to help deliver our Website/Applications/Products/Services, as well as additional content that is better tailored to the users of our Website/Applications/Products/Services, and for other purposes.

We may provide links to websites and applications that are owned or operated by other companies ("third-party websites and applications"). When you use a link to visit a third-party website or application, you will be subject to that website's and/or application's privacy and security practices, which may differ from ours. **IN NO EVENT ARE WE RESPONSIBLE OR LIABLE FOR SUCH THIRD-PARTY WEBSITES AND APPLICATIONS AND/OR THE ACTIONS OR OMISSIONS OF THE OWNERS OR OPERATORS OF SUCH THIRD-PARTY WEBSITES AND APPLICATIONS. WE DISCLAIM AND ARE EXPRESSLY NOT MAKING ANY REPRESENTATIONS OR WARRANTIES WITH RESPECT TO SUCH THIRD-PARTY WEBSITES AND APPLICATIONS.** You should familiarize yourself with the privacy policy, terms of use and security practices of the linked third-party website and application before providing any information on that website or application.

We use reasonable physical, electronic, and procedural safeguards that are used in our industry to protect and limit

access to personal information. This includes device safeguards, secured files and secured buildings, which may be provided by third parties on our behalf. .

You have the right at any time to cease permitting personal information to be collected, used or disclosed by us and/or by any third parties with whom we have shared and/or transferred such personal information. Right of cancellation may be exercised by contacting us via e-mail, telephone or certified postal mail, in each case in accordance with the paragraph below. After processing the cancellation, we will delete your personal information from our data base.

WE SHALL NOT BE LIABLE FOR INDIRECT, CONSEQUENTIAL, INCIDENTAL, SPECIAL AND/OR PUNITIVE DAMAGES IN CONNECTION WITH OUR COLLECTION, STORAGE, SHARING, USAGE, AND/OR PROTECTION OF YOUR INFORMATION AND DATA EXCEPT TO THE EXTENT OF OUR GROSS NEGLIGENCE AND/OR WILLFUL MISCONDUCT. THE PRECEDING SENTENCE SHALL NOT APPLY TO THE EXTENT PROHIBITED BY APPLICABLE LAW.

Upon your request, we will provide a reasonable description of your personally identifiable information that we maintain in our data bank. We can be contacted by e-mail at customercare@matholdingsinc.com, telephone at 888-895-4549, or certified postal mail at MAT Industries, LLC, 6700 Wildlife Way, Long Grove, IL 60047.

Help us to keep your personal information accurate. If your personal information changes, or if you note an error upon review

of your information that we have on file, please promptly e-mail us at customercare@matholdingsinc.com and provide the new or correct information.

If you are a resident of California, you should refer to the attached Addendum for California Residents for more information about the California Consumer Privacy Act of 2018.

For information on the General Data Protection Regulation, which applies across the European Union (including the United Kingdom), please refer to the attached Addendum on the General Data Protection Regulation.

Please note that information you send to us electronically may not be secure when it is transmitted to us. We recommend that you do not utilize unsecure methods to communicate sensitive or confidential information to us.

For any questions regarding this Privacy Policy, please contact us at customercare@matholdingsinc.com
Copyright © 2022 MAT Industries LLC, All Rights Reserved.

Addendum For California Residents

To the extent applicable, you may have the following rights under the California Consumer Privacy Act of 2018 (CCPA) and certain other privacy and data protection laws:

<p>Disclosure of Personal Information We Collect About You</p>	<p>You have the right to know:</p> <ul style="list-style-type: none"> • The categories of personal information we have collected about you; • The categories of sources from which the personal information is collected; • Our business or commercial purpose for collecting or selling personal information; • The categories of third parties with whom we share personal information, if any; and • The specific pieces of personal information we have collected about you. • Please note that we are not required to: <ul style="list-style-type: none"> • Retain any personal information about you that was collected for a single one-time transaction if, in the ordinary course of business, that information about you is not retained; • Reidentify or otherwise link any data that, in the ordinary course of business, is not maintained in a manner that would be considered personal information; or • Provide the personal information to you more than twice in a 12-month period.
<p>Personal Information Sold or Used for a Business Purpose</p>	<p>In connection with any personal information we may sell or disclose to a third party for a business purpose, you have the right to know:</p> <ul style="list-style-type: none"> • The categories of personal information about you that we sold and the categories of third parties to whom the personal information was sold; and • The categories of personal information that we disclosed about you for a business purpose.

Personal Information Sold or Used for a Business Purpose	<ul style="list-style-type: none"> You have the right under the California Consumer Privacy Act of 2018 (CCPA) and certain other privacy and data protection laws, as applicable, to opt-out of the sale of your personal information. If you exercise your right to opt-out of the sale of your personal information, we will refrain from selling your personal information, unless you subsequently provide express authorization for the sale of your personal information. To opt-out of the sale of your personal information, please contact us at customercare@mathholdingsinc.com.
Right to Deletion	<p>Subject to certain exceptions set out below, on receipt of a verifiable request from you, we will:</p> <ul style="list-style-type: none"> Delete your personal information from our records; and Direct any service providers to delete your personal information from their records. Please note that we may not delete your personal information if it is necessary to: <ul style="list-style-type: none"> Complete the transaction for which the personal information was collected, fulfill the terms of a written warranty or product recall conducted in accordance with federal law, provide a good or service requested by you, or reasonably anticipated within the context of our ongoing business relationship with you, or otherwise perform a contract between you and us; Detect security incidents, protect against malicious, deceptive, fraudulent, or illegal activity; or prosecute those responsible for that activity; Debug to identify and repair errors that impair existing intended functionality; Exercise free speech, ensure the right of another consumer to exercise his or her right of free speech, or exercise another right provided for by law; Comply with the California Electronic Communications Privacy Act;

Right to Deletion	<ul style="list-style-type: none"> • Engage in public or peer-reviewed scientific, historical, or statistical research in the public interest that adheres to all other applicable ethics and privacy laws, when our deletion of the information is likely to render impossible or seriously impair the achievement of such research, provided we have obtained your informed consent; • Enable solely internal uses that are reasonably aligned with your expectations based on your relationship with us; • Comply with an existing legal obligation; or • Otherwise use your personal information, internally, in a lawful manner that is compatible with the context in which you provided the information.
Protection Against Discrimination	<p>You have the right to not be discriminated against by us because you exercised any of your rights under the CCPA. This means we cannot, among other things:</p> <ul style="list-style-type: none"> • Deny goods or services to you; • Charge different prices or rates for goods or services, including through the use of discounts or other benefits or imposing penalties; • Provide a different level or quality of goods or services to you; or • Suggest that you will receive a different price or rate for goods or services or a different level or quality of goods or services. <p>Please note that we may charge a different price or rate or provide a different level or quality of goods and/ or services to you, if that difference is reasonably related to the value provided to our business by your personal information.</p>

How to Exercise Your Rights. To the extent applicable, if you would like to exercise any of your rights as described above, please:

- Call us at 888-895-4549; or
- Email us at customercare@matholdingsinc.com.

Please note that you may only make a CCPA-related data access or data portability disclosure request twice within a 12-month period or as otherwise provided under applicable law.

If you choose to contact us directly by email/phone, you will need to provide us with:

- Enough information to identify you;
- Proof of your identity and address (e.g., a copy of your driving license or passport and a recent utility or credit card bill); and
- A description of what right you want to exercise and the information to which your request relates.

Unless otherwise required under applicable law, we are not obligated to make a data access or data portability disclosure if we cannot verify that the person making the request is the person about whom we collected information, or is someone authorized to act on such person's behalf.

Any personal information we collect from you to verify your identity in connection with your request will be used solely for the purposes of verification.

Addendum On The General Data Protection Regulation

To the extent applicable, you may have the following rights under the General Data Protection Regulation (GDPR):

Right to Access	The right to be provided with a copy of your personal information (the right of access)
Right to Rectification	The right to require us to correct any mistakes in your personal information
Right to be Forgotten	The right to require us to delete your personal information—in certain situations
Right to Restriction of Processing	The right to require us to restrict processing of your personal information—in certain circumstances, e.g. if you contest the accuracy of the data
Right to Data Portability	The right to receive the personal information you provided to us, in a structured, commonly used and machine-readable format and/or transmit that data to a third party—in certain situations
Right to Object	The right to object: <ul style="list-style-type: none"> • at any time to your personal information being processed for direct marketing (including profiling); • in certain other situations to our continued processing of your personal information, e.g. processing carried out for the purpose of our legitimate interests.
Right Not to be Subject to Automated Individual Decision-Making	The right not to be subject to a decision based solely on automated processing (including profiling) that produces legal effects concerning you or similarly significantly affects you

For further information on each of the rights listed above, including the circumstances in which they apply, see the guidance from the UK Information Commissioner's Office (ICO) on individual rights under the General Data Protection Regulation.

How to Exercise Your Rights. To the extent applicable, if you would like to exercise any of your rights as described above, please:

- Call us at 888-895-4549; or
- Email us at customer care@matholdingsinc.com.

How to File a GDPR Complaint. We hope that we can resolve any query or concern you raise about our use of your information. The General Data Protection Regulation also gives you right to lodge a complaint with a supervisory authority, in the European Union (or European Economic Area) state where you work, normally live, or where any alleged infringement of data protection laws occurred.

Application Terms and Conditions

These Terms and Conditions create a contract (this "Agreement") between you ("you" or "your") and MAT Industries, LLC (and/or its affiliates) ("MAT", "us" or "our") and governs your use of our Air Compressor Mobile Application (the "Application").

PLEASE READ THIS AGREEMENT IN ITS ENTIRETY. BY CLICKING THE "AGREE / ACCEPT" BUTTON AND/OR BY CONTINUING TO USE THE APPLICATION, YOU ARE AGREEING TO BE BOUND BY THE TERMS OF THIS AGREEMENT. IF YOU DO NOT AGREE TO THE TERMS OF

THIS AGREEMENT, CLICK "DISAGREE/DECLINE" AND IMMEDIATELY CEASE USE OF THE APPLICATION.

MAT may, at any time, for any reason and without prior notice, make changes to these Terms and Conditions ("Modifications"). Any such Modifications will take effect when posted to or otherwise made available through the Application or through the platform from which you download the Application. Any use of the Application by you following the effective date of any Modifications shall constitute acceptance by you of this Agreement, as amended by the Modifications.

A. INTRODUCTION TO OUR SERVICES

To use the Application, you need compatible hardware, software (latest version recommended and sometimes required) and in some instances Internet access (fees may apply). The Application's performance may be affected by these factors. You are solely responsible for any hardware, software, wireless connection, and/or internet access (as applicable) required to download, access and/or use the Application. By accessing and using the Application, you acknowledge and agree that (i) you may receive certain communications from MAT and (ii) you are solely responsible for all fees you may incur from the provider or carrier of the mobile or Internet services that you use, including data charges. MAT makes no representation or warranty and does not accept any responsibility whatsoever for unavailability of the Application or any difficulty or inability to download or access content or any other communication system failure which may result in the Application being unavailable.

B. USING OUR APPLICATION

1. PRIVACY POLICY AND ADDITIONAL TERMS AND CONDITIONS

Your use of the Application is subject to our Privacy Policy which is set forth in the Application or otherwise made available to you. The Privacy Policy, as may be amended from time to time, is hereby incorporated by reference. If you are accessing our website, your use is also subject to our website terms of use.

2. USAGE RULES

Your use of the Application must follow the rules set forth in this section (“Usage Rules”). Any other use of the Application is a material breach of this Agreement. MAT may monitor your use of the Application to ensure that you are following these Usage Rules.

- You may not tamper with or circumvent any security or privacy technology included with the Application.
- You may access the Application only using MAT’s software, and may not modify or use modified versions of such software.
- You shall use the Application only for its intended use and in compliance with any applicable instructions and/or requirements.
- You shall not publish, modify or otherwise distribute any material provided through the Application for any purpose other than as expressly set forth herein. You may only use the Application as permitted by law, including applicable export and re-export laws and regulations.

- You agree that you are only authorized to access and use the Application for your own personal use. The commercial use, reproduction, transmission or distribution of any information, software or other material available through the Application without the prior written consent of MAT is strictly prohibited.

- Gathering email addresses through harvesting or automated means by you through the Application is prohibited. Posting or transmitting unauthorized or unsolicited advertising, promotional materials, or any other forms of solicitation to other users by you through the Application is prohibited.

3. SUBMISSION GUIDELINES

To the extent applicable, the Application may allow you to submit information or materials such as, part names or numbers, comments, pictures, videos, and other content and data (including associated metadata and artwork) (collectively, “User Content”). Your use of such features must comply with MAT’s submissions guidelines, which may be updated and modified from time to time. You hereby grant MAT a worldwide, royalty-free, perpetual, nonexclusive license to use the User Content you submit through the Application and related marketing. This license continues even if you stop using the Application. You represent and warrant you have the necessary rights to grant MAT this license for all User Content submitted by you. MAT may monitor and remove or edit any User Content submitted through the Website or Application.

You may not use the Application to:

- post any materials that you do not have permission, right or license to use;

- post objectionable, offensive, unlawful, deceptive or harmful content;
- post personal, private or confidential information belonging to others;
- impersonate or misrepresent your affiliation with another person, or entity;
- post or transmit spam, including but not limited to unsolicited or unauthorized advertising, promotional materials, or informational announcements; or
- plan or engage in any illegal, fraudulent, or manipulative activity.

4. IN-APP PURCHASES

The Application may offer content, services or functionality for use within the Application. In-Application Purchases that are consumed or exercised during the use of the Application (for example, Ad free functionality) are subject to terms and conditions of the platform the Application is supported by (IOS or Android).

5. TEXT, E-MAIL AND PUSH NOTIFICATIONS

As part of installation of the Application on your mobile device, the Application may ask in the future if you would like it to send you "Push Notifications", which may include alerts, texts, emails, badges, banners and sounds, on your mobile device. If you choose to allow Push Notifications, then the Application may generate Push Notifications on your mobile device and you acknowl-

edge and consent to receipt of these Push Notifications.

You may choose to stop receiving Push Notifications at any time by selecting such option within the Application's settings menu on your device or by deleting the Application from your mobile device.

You agree to us sending to you communications via text and email ("Text/Email Notifications"). You acknowledge and agree that receipt of Text/Email Notifications is dependent on the operation of your mobile device provider and the service of the mobile device provider. We will not be responsible or liable for any costs or damages incurred by you not receiving Text/Email Notifications or by the insufficient operation of your mobile device, mobile network and mobile phone company.

You may opt out of receiving Text/Email Notifications at any time by clicking the 'Unsubscribe' link that appears at the bottom of Text/Email Notifications.

In addition to and without limiting the foregoing, (i) you acknowledge and agree that through and in connection with the Application you may receive information, data, reminders, recommendations and notices regarding the usage, maintenance and status of your compressor and/or other hardware, (ii) you consent to the delivery and receipt of such information, data, reminders, recommendations and notices and (iii) you agree that MAT shall not have any liability with respect to such information, data, reminders, recommendations, and notices.

C. LICENSED APPLICATION END USER LICENSE AGREEMENT

The Application is licensed, not sold, to you for your use only under the terms of this Agreement. MAT reserves all rights not expressly granted to you.

1. Scope of License: Subject to compliance with all of the terms of this Agreement, MAT grants to you a single, limited, non-exclusive, non-assignable, nontransferable restricted license to use the Application on mobile device that you own or control (“Device”) as permitted by the Usage Rules set forth herein. This license does not allow you to use the Application on any device that you do not own or control. The terms of this Agreement will govern any content, materials, or services accessible from or purchased within the Application as well as upgrades provided by MAT that replace or supplement the original product, unless such upgrade is accompanied by a custom license. You may not distribute or make the Application available over a network where it could be used by multiple devices at the same time. You may not transfer, redistribute or sublicense the Application and, if you sell your mobile device to a third party, you must remove the Application from the mobile device before doing so. You may not copy (except as permitted by this license and the Usage Rules), reverse-engineer, disassemble, attempt to derive the source code of, modify, or create derivative works of the Application, any updates, or any part thereof.

2. Consent to Use of Data: You agree that MAT may collect, store and use data and information—including but not limited to technical information collected by your device, system and application software, and peripherals—that is gathered periodically to facilitate the provision of software updates, product support, and other services to you (if any) related to the Application. MAT may use this data and information for commercial reasonable purposes.

3. Termination of License: The license is effective until terminated by you or MAT at any time. Your rights under this license will terminate automatically if you fail to comply with any of its terms. The termination of the license does terminate any and all of your rights in the Application. The termination of the license does not terminate or release you from your obligations under this Agreement.

D. INTELLECTUAL PROPERTY

You agree that the Application, including but not limited to content, graphics, user interface, audio clips, video clips, editorial content, and the scripts and software used to implement the Application, contain proprietary information and material that is owned by MAT and/or its licensors, and is protected by applicable intellectual property and other laws, including but not limited to copyright. You agree that you will not use such proprietary information or materials in any way whatsoever except for your use of the Application for personal, noncommercial uses in compliance with this Agreement. No portion of the Application may be reproduced in any form or by any means, except as expressly permitted by this Agreement. You agree not to modify, rent, loan, sell, or distribute the Application in any manner, and you shall not exploit the Application in any manner not expressly authorized. The MAT name, DeWALT Name, the MAT logo, the DeWALT logo and other trademarks, service marks, graphics, and logos used in connection with the Application are trademarks or registered trademarks of MAT or its affiliates or licensors in the U.S. and other countries throughout the world. You are granted no right or license with respect to any of the aforesaid trademarks. For the avoidance of doubt, neither MAT nor its affiliates nor its licensors are transferring, conveying, licensing (except for the limited right

to use the Application granted by MAT in Section C - End User License Agreement) or assigning nor are you acquiring any copyrights or other intellectual property rights hereunder. To the extent you provide us with any suggestions, feedback, enhancement requirements or recommendations (“Suggestions”), you assign to MAT all rights in and to such Suggestions and agree that MAT may use any Suggestions, and permit any other persons or entities to use any Suggestions, for any purpose. You shall not directly or indirectly take any actions nor make any claim inconsistent with this Section.

E. COPYRIGHT NOTICE

If you believe that any content available through the Application infringes a copyright claimed by you, you may submit a notification pursuant to the Digital Millennium Copyright Act (DMCA) by contacting MAT at 6700 Wildlife Way, Long Grove, Illinois 60047, Attention: General Counsel.

F. THIRD PARTY LINKS AND SERVICES

As part of and/or through the Application, MAT may suggest, direct or provide links to various third party or affiliate websites, applications or services that may be of interest to you or that you may want to access or use, including but not limited to the www.DEWALT.com. However, MAT does not control or endorse such websites, applications, or services and is not responsible for their content nor is it responsible for the accuracy or reliability of any information, data, opinions, advice, or statements contained within such websites or applications. Please read the terms and conditions or terms of use policies of such third party websites and applications. If you decide to access or use any of the third party sites, applications or services linked on, to or from our Services,

you do so at your own risk. MAT reserves the right to terminate any link or linking program at any time. MAT DISCLAIMS ALL WARRANTIES, EXPRESS AND IMPLIED, AS TO THE ACCURACY, VALIDITY, AND LEGALITY OR OTHERWISE OF ANY MATERIALS OR INFORMATION CONTAINED ON SUCH THIRD PARTY WEBSITES, APPLICATIONS OR SERVICES INCLUDING WWW.DEWALT.COM.

G. TERMINATION AND SUSPENSION OF SERVICES

If you fail, or MAT suspects that you have failed, to comply with any of the provisions of this Agreement, MAT may, without notice to you: (i) terminate this Agreement and/or (ii) terminate your license to the Application; and/or (iii) preclude your access to the Application.

MAT further reserves the right to modify, suspend, or discontinue the Application (or any part, service or content thereof) at any time with or without notice to you, and MAT will not be liable to you or to any third party should it exercise such rights.

H. DISCLAIMER OF WARRANTIES

MAT DOES NOT GUARANTEE, REPRESENT, OR WARRANT THAT YOUR USE OF THE APPLICATION WILL BE UNINTERRUPTED OR ERROR-FREE OR COMPATIBLE WITH YOUR DEVICE, AND YOU AGREE THAT FROM TIME TO TIME MAT MAY REMOVE THE APPLICATION OR SUPPORT FOR THE APPLICATION FOR INDEFINITE PERIODS OF TIME, CANCEL THE APPLICATION OR SUPPORT FOR THE APPLICATION AT ANY TIME, OR OTHERWISE LIMIT OR DISABLE YOUR ACCESS TO THE APPLICATION WITHOUT NOTICE TO YOU.

YOU EXPRESSLY AGREE THAT YOUR USE OF, OR INABILITY TO USE, THE APPLICATION IS AT YOUR SOLE RISK AND EXPENSE. THE APPLICATION AND ALL SERVICES, CONTENT, INFORMATION, DATA, REMINDERS, RECOMMENDATIONS, AND/OR NOTICES DELIVERED TO YOU THROUGH THE APPLICATION ARE PROVIDED "AS IS" AND "AS AVAILABLE" FOR YOUR USE, WITHOUT WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE, AND NON-INFRINGEMENT. BECAUSE SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES, THE ABOVE EXCLUSION OF IMPLIED WARRANTIES MAY NOT APPLY TO YOU.

IN CONNECTION WITH THIS AGREEMENT AND THE APPLICATION, MAT IS NOT MAKING ANY REPRESENTATION OR WARRANTY WITH RESPECT TO ANY COMPRESSOR, HARDWARE, OR DEVICE. IN ADDITION TO THE DISCLAIMERS HEREIN, ANY DISCLAIMERS BY MAT SET FORTH IN ITS OWNER'S MANUAL AND/OR INSTRUCTIONS FOR THE APPLICATION SHALL BE DEEMED TO APPLY.

Any information, data, reminders, recommendations and notices made available through the Application is intended to be a general information resource regarding the matters covered, and is not tailored to your specific circumstance. You should not construe this as business, legal, accounting or any other professional advice. A possibility exists that the Application could include inaccuracies or errors, or information or materials that violate the Usage Rules. Additionally, a possibility exists that unauthorized alterations could be made by third parties to the Application. We do not accept

liability for any error or omission, injury, expense, loss or damage incurred by you or another party as a result of you using or relying upon any information provided by the Application.

YOU AGREE NOT TO TAKE ANY ACTION NOR MAKE ANY CLAIM INCONSISTENT WITH THIS SECTION.

I. LIMITATION OF LIABILITY

TO THE EXTENT NOT PROHIBITED UNDER APPLICABLE LAW, IN NO CASE SHALL MAT, ITS DIRECTORS, OFFICERS, EMPLOYEES, AFFILIATES, AGENTS, CONTRACTORS, OR LICENSORS BE LIABLE FOR ANY, INDIRECT, INCIDENTAL, PUNITIVE, SPECIAL, OR CONSEQUENTIAL DAMAGES OR LOSSES ARISING FROM YOUR USE OF THE APPLICATION OR FOR ANY OTHER CLAIM RELATED IN ANY WAY TO YOUR USE OF THE APPLICATION AND/OR SERVICES OR CONTENT AVAILABLE THROUGH THE APPLICATION, INCLUDING, BUT NOT LIMITED TO, ANY ERRORS OR OMISSIONS IN ANY CONTENT, USE OF MAT'S WEBSITE, OR ANY LOSS OR DAMAGE OF ANY KIND INCURRED AS A RESULT OF THE USE OF ANY CONTENT POSTED, TRANSMITTED, OR OTHERWISE MADE AVAILABLE VIA THE APPLICATION, EVEN IF ADVISED OF THEIR POSSIBILITY. BECAUSE SOME COUNTRIES, STATES OR JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR THE LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, IN SUCH COUNTRIES, STATES OR JURISDICTIONS, MAT'S LIABILITY SHALL BE LIMITED TO THE EXTENT SUCH LIMITATION IS PERMITTED BY LAW. MAT'S TOTAL CUMULATIVE LIABILITY IN CONNECTION WITH THIS AGREEMENT AND/OR THE APPLICATION, WHETHER IN CONTRACT OR TORT OR OTHERWISE, SHALL NOT EXCEED FIFTY DOLLARS (\$50.00). THE FOREGOING LIMITATIONS WILL

APPLY EVEN IF THE ABOVE STATED REMEDY FAILS OF ITS ESSENTIAL PURPOSE.

YOU AGREE THAT YOUR SUBMISSION OF INFORMATION TO MAT IS AT YOUR SOLE RISK, AND YOU HEREBY RELEASE MAT FROM ANY AND ALL LIABILITY TO YOU FOR ANY LOSS OR LIABILITY RELATING TO SUCH INFORMATION IN ANY WAY.

MAT DOES NOT REPRESENT OR GUARANTEE THAT THE APPLICATION WILL BE FREE FROM LOSS, CORRUPTION, ATTACK, VIRUSES, INTERFERENCE, HACKING, OR OTHER SECURITY INTRUSION, AND YOU HEREBY RELEASE MAT FROM ANY LIABILITY RELATING THERETO. YOU SHALL BE RESPONSIBLE FOR BACKING UP YOUR OWN SYSTEM. MAT IS NOT RESPONSIBLE FOR DATA CHARGES YOU MAY INCUR FOR DOWNLOADING OR STREAMING FILES OVER A DATA CONNECTION.

NOTWITHSTANDING ANY OTHER PROVISION CONTAINED HEREIN OR OTHERWISE, NEITHER MAT NOR ITS AFFILIATES NOR ITS LICENSORS SHALL HAVE ANY LIABILITY FOR INFORMATION, DATA, REMINDERS, RECOMMENDATIONS, AND/OR NOTICES THAT ARE PROVIDED (OR ARE NOT PROVIDED) THROUGH THE APPLICATION IN CONNECTION WITH THE USAGE, MAINTENANCE, REPAIR AND/OR STATUS OF ANY COMPRESSOR, DEVICE OR OTHER HARDWARE PRODUCT. YOU AGREE THAT YOU WILL NOT BE RELYING ON SUCH INFORMATION, DATA, REMINDERS, RECOMMENDATIONS AND/OR NOTICES AND IT IS YOUR RESPONSIBILITY TO FOLLOW THE INSTRUCTIONS AND REQUIREMENTS IN ANY APPLICABLE OWNER'S MANUAL.

NOTWITHSTANDING ANY OTHER PROVISION CONTAINED HEREIN OR OTHERWISE, NEITHER MAT NOR ITS AFFILIATES SHALL HAVE ANY RESPONSIBILITY OR LIABILITY IN CONNECTION WITH THE WWW.DeWALT.COM WEBSITE AND/OR ANY OTHER THIRD PARTY SITE OR APPLICATION EVEN IF THE APPLICATION PROVIDES A LINK OR OTHERWISE CONNECTS YOU TO SUCH THIRD PARTY SITE OR APPLICATION. FOR THE AVOIDANCE OF DOUBT, MAT DOES NOT OWN OR OPERATE THE WWW.DeWALT.COM WEBSITE.

YOU AGREE NOT TO TAKE ANY ACTION NOR MAKE ANY CLAIM INCONSISTENT WITH THIS SECTION.

J. WAIVER AND INDEMNITY

BY USING THE APPLICATION, YOU AGREE, TO THE EXTENT PERMITTED BY LAW, TO INDEMNIFY AND HOLD MAT, ITS DIRECTORS, OFFICERS, EMPLOYEES, AFFILIATES, AGENTS, CONTRACTORS, AND LICENSORS HARMLESS WITH RESPECT TO ANY CLAIMS ARISING OUT OF YOUR BREACH OF THIS AGREEMENT, YOUR USE OF THE APPLICATION, OR ANY ACTION TAKEN BY MAT AS PART OF ITS INVESTIGATION OF A SUSPECTED VIOLATION OF THIS AGREEMENT OR AS A RESULT OF ITS FINDING OR DECISION THAT A VIOLATION OF THIS AGREEMENT HAS OCCURRED. YOU AGREE THAT YOU SHALL NOT SUE OR RECOVER ANY DAMAGES FROM MAT, ITS DIRECTORS, OFFICERS, EMPLOYEES, AFFILIATES, AGENTS, CONTRACTORS, AND LICENSORS AS A RESULT OF ITS DECISION TO REMOVE OR REFUSE TO PROCESS ANY INFORMATION OR CONTENT, TO WARN YOU, TO SUSPEND OR TERMINATE YOUR ACCESS TO THE APPLICATION, OR TO TAKE ANY OTHER ACTION DURING

THE INVESTIGATION OF A SUSPECTED VIOLATION OR AS A RESULT OF MAT'S CONCLUSION THAT A VIOLATION OF THIS AGREEMENT HAS OCCURRED. THIS WAIVER AND INDEMNITY PROVISION APPLIES TO ALL VIOLATIONS DESCRIBED IN OR CONTEMPLATED BY THIS AGREEMENT.

If you are a California resident, you hereby waive (the extent waivable) each and all the provisions of the California Civil Code, Section 1542 (to the extent it would be applicable), which reads as follows: "A general release does not extend to claims which the creditor does not know or suspect to exist in his favor at the time of executing the release, which if known by him must have materially affected his settlement with the debtor."

K. GOVERNING LAW

Except to the extent expressly provided in the following paragraph, this Agreement and the relationship between you and MAT, and all transactions through the Application shall be governed by the laws of the State of Illinois, excluding its conflicts of law provisions. You and MAT agree to submit to the personal and exclusive jurisdiction of the courts located within Lake County, Illinois, to resolve any dispute or claim arising from this Agreement. If (a) you are not a U.S. citizen; (b) you do not reside in the U.S.; (c) you are not accessing the Service from the U.S.; and (d) you are a citizen of one of the countries identified below, you hereby agree that any dispute or claim arising from this Agreement shall be governed by the applicable law set forth below, without regard to any conflict of law provisions, and you hereby irrevocably submit to the non-exclusive jurisdiction of the courts located in the state, province or country identified below whose law governs:

If you are a citizen of any European Union country or Switzerland, Norway or Iceland, the governing law and forum shall be the laws and courts of your usual place of residence.

Specifically excluded from application to this Agreement is that law known as the United Nations Convention on the International Sale of Goods.

L. OTHER PROVISIONS

This Agreement constitutes the entire agreement between you and MAT with respect to the subject matter hereof and governs your use of the Application, superseding any prior agreements with respect to the same subject matter between you and MAT. You also may be subject to additional terms and conditions that may apply when you use MAT's website, affiliate services, third-party content, third-party software, or additional services. If any part of this Agreement is held invalid or unenforceable, that portion shall be construed in a manner consistent with applicable law to reflect, as nearly as possible, the original intentions of the parties, and the remaining portions shall remain in full force and effect. MAT's failure to enforce any right or provisions in this Agreement will not constitute a waiver of such or any other provision. MAT will not be responsible for failures to fulfill any obligations due to causes beyond its control.

MAT may notify you with respect to the Application by a posting on the Application, by e-mail or through push notifications as set forth herein. Unless otherwise stated, notices shall become effective immediately.

You agree that MAT has the right (but not the obligation) to take

steps MAT believes are reasonably necessary or appropriate to enforce and/or verify compliance with any part of this Agreement.

You acknowledge and agree that MAT's affiliates (and at MAT's option, its licensors) are intended third party beneficiaries of this Agreement. MAT's affiliates (and at MAT's option, its licensors) will have the right to enforce the terms of this Agreement against you to the same extent as MAT.

The Application is not intended for use by minors. By clicking the "Agree / Accept" button, you are representing that you are at least eighteen (18) years of age and of legal age to enter into this Agreement.

Any provision of this Agreement that by its nature extends beyond the termination of this Agreement, including but not limited to Sections D (Intellectual Property), H (Disclaimer of Warranties), I (Limitation of Liability), J (Waiver and Indemnity), and K (Governing Law), shall survive any termination of this Agreement. The termination of this Agreement shall not affect liability for any breach of this Agreement prior to such termination

Limited Warranty

TWO YEAR LIMITED WARRANTY: Sanborn Mfg., Division of MAT Industries, LLC (the Company)

warrants that for a period of twenty-four (24) months from the date of purchase, it will, at its option, replace or repair, free of charge, for the original retail purchaser only, any part or parts, manufactured by the Company, found upon examination by the Company or its assigned representatives, to be defective in material or workmanship or both. All transportation charges for parts

submitted for replacement or repair under this warranty must be borne by the original retail purchaser. This is the exclusive remedy under this warranty.

Failure by the original retail purchaser to install, maintain and operate any part, product or equipment in accordance with good industry practices, or failure to comply with the specific recommendations or instructions of the Company set forth in the owner's manual or otherwise provided by the Company, shall render this warranty null and void. The Company shall not be liable for any repairs, replacements, or adjustments to any part, product or equipment or any costs for labor performed without the Company's prior written approval. The effects of corrosion, erosion and normal wear and tear are specifically excluded from this warranty and the Company shall not have liability with respect thereto.

THE COMPANY DISCLAIMS AND MAKES NO OTHER WARRANTY OR REPRESENTATION OF ANY KIND WHATSOEVER, EXPRESSED OR IMPLIED EXCEPT THAT OF TITLE. ALL IMPLIED WARRANTIES, INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. LIABILITY FOR INDIRECT, CONSEQUENTIAL AND INCIDENTAL DAMAGES UNDER ANY AND ALL WARRANTIES, OTHER CONTRACTS, NEGLIGENCE, OR OTHER SORTS IS EXCLUDED TO THE EXTENT EXCLUSION IS PERMITTED BY LAW. TO THE EXTENT THAT SUCH EXCLUSION IS NOT PERMITTED BY LAW, IT SHALL NOT APPLY TO YOU. THE COMPANY DISCLAIMS AND MAKES NO REPRESENTATION OR WARRANTY OF ANY KIND IN CONNECTION WITH ANY APP, SOFTWARE AND/OR SERVICE RELATED TO ANY PART, PRODUCT OR EQUIPMENT.

Notwithstanding the above, any legal claim against the Company shall be barred if legal action thereon is not commenced within twenty-four (24) months from the date of purchase. This warranty constitutes the entire agreement between the Company and the original retail purchaser and no representative or agent is authorized to alter the terms of same without expressed written consent of the Company.

Service

When consulting Product Services, refer to the model and serial number located on the serial label found on the back side of the Air Compressor Monitoring System module. Proof of purchase is required for all transactions and a copy of your sales receipt may be requested.

Record the model number, serial number and date of purchase in the spaces provided below. Retain your sales receipt and this manual for future reference.

When needing assistance, please contact:
Toll Free USA or Canada: 888-895-4549
or Fax 507-723-5013

Made in China

©2022 Sanborn Mfg; A Division of MAT Industries, LLC,
Springfield, MN 56087
All Rights Reserved
Patent Pending

Model Number: _____ Serial Number: _____

Date of Purchase: _____