

### #1 BRAND PRO-LAB®

## MOLD TEST KIT

It the EPA, mold is a microscopic fungus that thrives indoors when excessive moisture or water ites or when moisture problems remain undiscovered or unaddressed. Mold spores are in the air breathe and are produced by mold growing on damp or wet surfaces. In order for mold to grow the needs a food source (such as wood, wallboard, wallpaper, ceiling tiles, or carpet), a source of and time to grow. When inhaled, mold spores can cause a wide range of health problems including ry issues (wheezing), nasal and sinus congestion, watery and red eyes, nose and throat irritation, tilon, aches, pains, and fevers. In large quantities, mold spores can cause allergic symptoms and sthma attacks. Exposure to mold is not healthy for anyone, but the following individuals are at a sk for adverse health effects: infants, children, elderly, immunocompromised persons, and individuals in the following individuals.

mold spores are virtually invisible to the naked eye, the only way to know if you have a mold problem is ... Analyzing the ordinary dust in your home is the best way to discover if there are current or historical minants present. Dust sampling for mold and other allergens has been proven to be the most accurate minants present. Our sampling for mold and other allergens has been proven to be the most accurate minants way to test your home according to the IAC2 (International Association of Certified Indoor Air

### When family members have he

- an family members have health concerns like asthma that may be attributed to mold but smell musty odors and you believe that you have mold growing somewhere in your home are a water problem such as a water leak, burst pipe, flood or roof leak ore purchasing a home or moving into a rental property just want to make sure that your home is safe for you and your family

The PRO-LAB® WOLD TEST KIT is designed for "D0 IT Y0URSELF" use with reliable results. It uses the same sampling methods that are used by professional mold inspectors and industrial hygienists worldwide. The test kit offers four (4) easy sampling methods that inexpensively detect dangerous levels of microscopic viable (living) and non-viable (dead) mold spores that may be present in your home. The first two (2) dust collection sampling methods are an accurate way to determine the presence of mold, pollen and dust mites in your indoor environment. If so desired, the second two (2) sampling methods allow you to take a sample of visible mold growth or a small bulk sample. Once you're done taking the sample, place it in the pre-paid postage envelope provided and mail back to PRO-LAB®. Within 7 business days after our receipt you will receive a detailed direct microscopic analysis lab report providing accurate and reliable results of any mold spores, dust mites and/or pollen present in your sample. A laboratory analysis fee of \$40 is required for lab results. 48 hour express service is also available (see details inside).

orseek.com and an IAC2 / INTERNACHI em in your home or office.

COMPLETE DIRECTIONS INSIDE • KEEP OUT OF REACH OF CHILDREN • NON-TOXIC CONTENTS: ■ Vacuum sample dust collector ■ Sterile swab ■ Payment Form IF YOU HAVE ANY QUESTIONS OR COMMENTS VISIT US ON THE INTERNET AT: WWW.PROLABINC.COM




# MOLD TEST KIT DIRECTIONS

SELECTING THE TEST LOCATION Mold spores can be sillows, pillowcases, upholstery, drapery, A/C filters, fur

### OSE ONE OF THE FOLLOWING COLLECTION METHODS se wash your hands thoroughly to avoid contamination

HOD 1: DUST COLLECTION (VACUUM WITH HOSE) SAMPLING METHODS

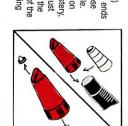

**D 2: DUST COLLECTION (VACUUM <u>WITHOUT</u> HOSE) SAMPLING METHOD**tive method to determine if mold spores, pollen and dust mites are in your indoor environment).

e sampling cassette from the plastic bag. Stand the cassette on a flat surface and remove only the top white cap. The fine dust from your vacuum cleaner's bag, or cyclone cylinder. Place the fine dust in the hole on the top of the on chamber of the cassette. Fill the collection chamber as much as possible. Once the chamber is full, replace the place the sampling cassette back in the plastic bag and proceed to the lab results directions.

D 3: VISIBLE MOLD (SWAB) SAMPLING METHOD

rmine the type of mold growth that is visible on a surface)

the visible mold growth. Take the enclosed sterile swab and wipe the tip across the visible mold growth. Mold must

to the swab tip. Once sampling is complete, place the swab back in the plastic bag and proceed to the lab results

ton 4: BULK SAMPLING METHOD

termine the type of mold that is visible and growing on a piece on material)

a small piece of the material to be tested (drywall, wallpaper, molding, ceiling tile) inside the pla; lab results directions.

RESS LAB RESULTS (Results available within 2 business days)

ress service is available for an additional \$15, or a total of \$55. In order to use the express service, you must send the pie to be tested, information form, and the proper payment to PRO-LAB® using an overnight shipping service such edEx, Airborne Express, DHL, UPS or U.S. Mail Priority Overnight. Send the sample to PRO-LAB®-1675 N. Commerce way, Weston, FL 33326. (Express samples can only be received Monday – Friday). Within two (2) business days of receipt of your sample, you will receive an email of your results. You may also print and view your results at www. abresults.com.

FOR ADDITIONAL ALLERGEN TESTING OPTIONS, PLEASE SEE INSERT.

For questions or more information go online to www.prolabinc.com

Note: All sampling methodologies are subject to the occurrence of false negative and false positive results. The sample provided is only a snapshot in time. The results will only represent the sample as of the time it was taken.

### FOR FASTER RESULTS REGISTER YOUR MOLD TEST KIT ONLINE AT DONE TESTING THE COMPLETED FORM AND PAYMENT MUST BE RETURNED TO PRO-LAB PLEASE OBTAIN YOUR REGISTRATION NUMBER ONLINE AND WRITE THE NUMBER IN THE SPACE PROVIDED BELOW. www.prolabinc.com Cut along dotted line

# MUST BE RETURNED TO PRO-LAB® TEST LOCATION AND PAYMENT FORM COMPLETE INFORMATION REQUIRED

Online Registration #:
Name:
Test Address:
City:
State: Zip: Zip:
Sample Location:
Date Sample Collected: MM / DD / YY
Sample Method (choose one) : ☐ Dust 1 ☐ Dust 2 ☐ Visual ☐ Bulk
EMAIL ADDRESS REQUIRED FOR RESULTS
Email:
STANDARD MOLD LAB RESULTS (\$40) OR CLEXPRESS MOLD LAB RESULTS (\$55) TOTAL S
MAKE CHECKS PAYABLE TO <b>PRO-LAB®</b> CHECK # MONEY ORDER CREDIT CARD: Visa Mastercard Discover AMEX
Credit Card #;  Exp. Date    M M /
Phone:
Name on Card / Check:
Street Address:
ature: Date: M
your sample to PRO-LAB® for analysis, you authorize PRO-LAB® and/or its

PRO-LAB® • 1675 N. COMMERCE PARKWAY • WESTON • FL 33326
MUST BE RETURNED WITH YOUR SAMPLE TO PRO-LAB