

BATHROOM LED MEDICINE CABINET


INSTALLATION MANUAL

CONTACT US


Thank you for shopping with us! We hope that our products have added a touch of brightness to your life. If you need any assistance, please don't hesitate to reach out. Our dedicated team is available 24/7 to ensure your satisfaction.

✉ MC@ZRSupport.com ☎ 1-888-204-3326 📱 ZRSupport


PACKING LIST




Wall anchor-A



Wall anchor-B



Short screw



Long screw




Sticker




Bubble level

INSTALLATION TOOLS




Electric Drill




Hammer




Marker




Tape Measure



Level



Phillips Screwdriver



Safety Goggles

BEFORE INSTALLATION

To ensure the best experience, **please read carefully and follow the instructions provided below before assembling and installing the product.**

1. Important Safety Instructions:


- Assembly by two or more adults is highly recommended, so as to ensure proper installation.
- To connect the wires to the electrical junction box, a qualified technician or electrician is highly recommended.
- Disconnect power before installing, adding, or changing any components.
- Make sure that the fixing location can support the weight of the entire fixture (e.g. solid stone or brick walls).
- To prevent injury, the mirror must be installed as per the instructions provided.

2. Pre-assembly:

- Inspect the product immediately upon receipt for any transit damage or missing parts.
- The voltage for your product should be between 100V and 120V. If the voltage exceeds 120V, please use a transformer.

3. Before Installation

Please check and make sure that the mirror is functioning properly.

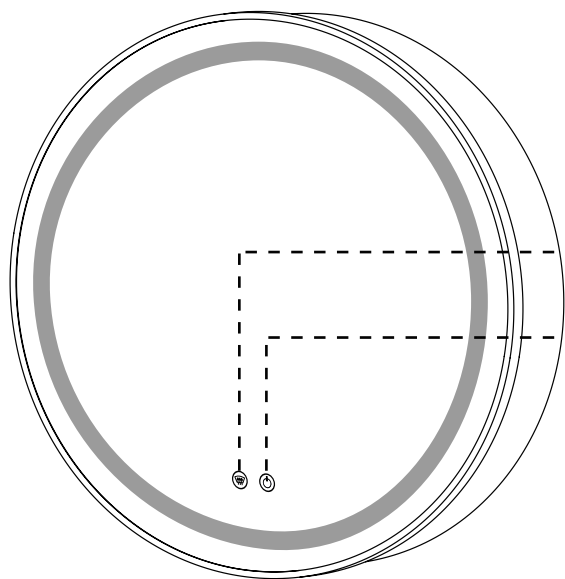

Anti-fog



On/Off
Brightness
Color Temperatures

• Touch Switch



Mirror with 3 color temperatures

The button controls the light switch, brightness and color temperature. Keep holding it and the brightness will change. You can adjust the color temperature as well: the first tap is white light, the second one is warm light, and the third one is natural light.

If no button is pressed within 15 seconds, the next tap will turn off the light immediately.


• Anti-fog




The anti-fog function helps resist the troubling fog and keep a clear reflection image. To save energy, it will automatically turn off after one hour.

INSTALLATION: SURFACE-MOUNTED

You can choose the following installation methods: 1、Surface-mount only 2、 Reversible for installation

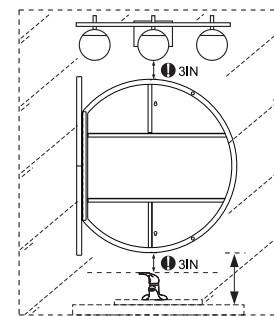


Left-hand door swing

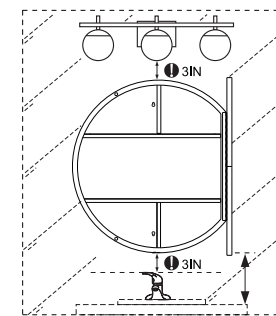


Right-hand door swing

The detachable shelves & dividers inside this round medicine cabinet enable you to adjust the interior layout to your liking.

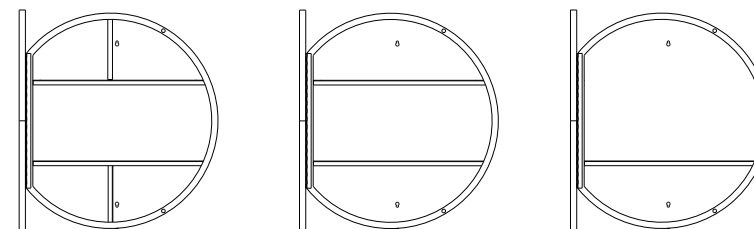


1. Place the medicine cabinet against the wall and mark spot ❶ on the wall (❶). Put the cabinet down, drill at the marked spot and apply wall anchor (❷).

❶

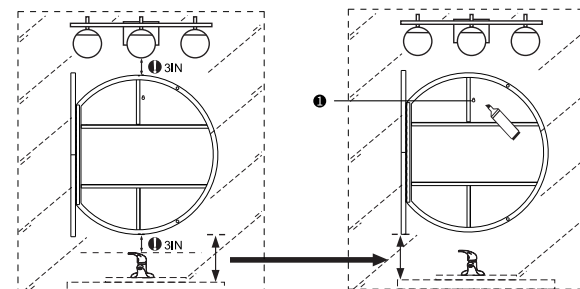


Note: Please hang the cabinet at least 3 inches above the faucet.

②

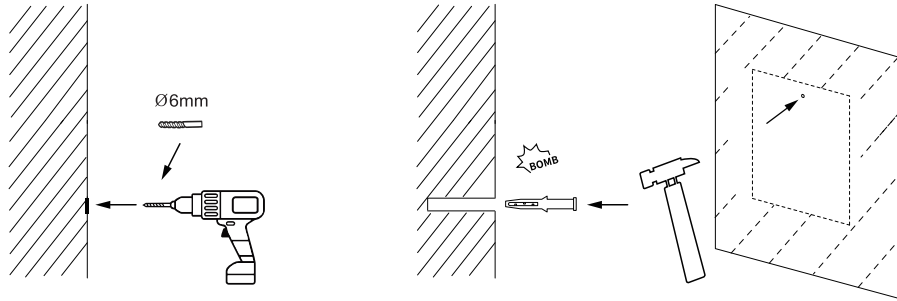


2. Fit a screw into the anchor, but leave a 7mm gap between the screw head and the wall (①). Hang the medicine cabinet on it (②), which can lighten the load and make it easier to hold the cabinet and mark the rest 4 spots ①②③④ with the help of a level (③).


①

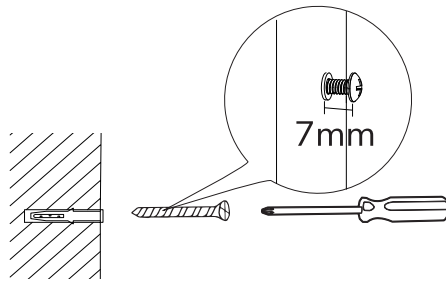

②

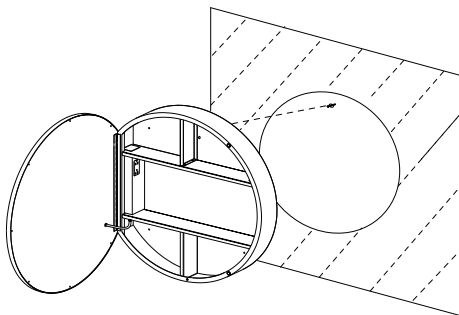


③

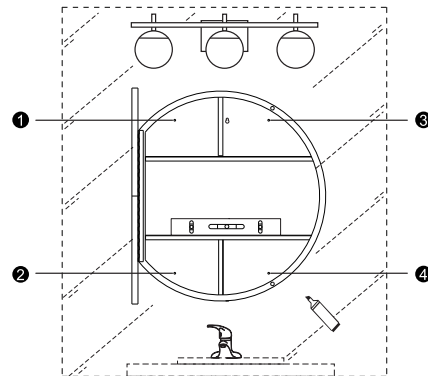




3. Put the medicine cabinet down, drill at the marked spots (①) and apply a wall anchors (②).

①

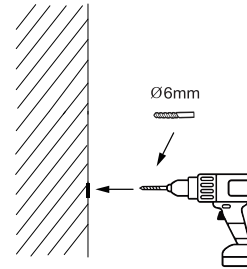


②

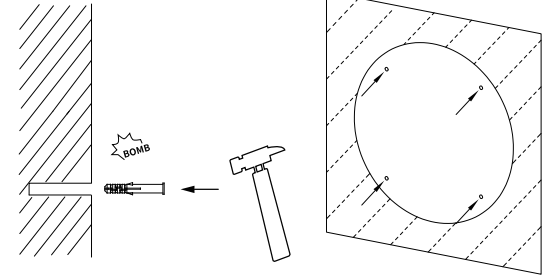

Thickness of Wall :	Recommended Drill Bit :
> 5/8" (16mm)	1/4" (6mm) drill bit, drilling depth in 1 31/32" (50mm) 
5/16" (8)-5/8" (16mm)	25/64" (10mm) drill bit 
< 5/16" (8mm)	Unapplicable


4. Align the medicine cabinet with the screw holes on the wall and secure it in place with four screws at the corners. Apply stickers to cover the keyhole and screws installed.

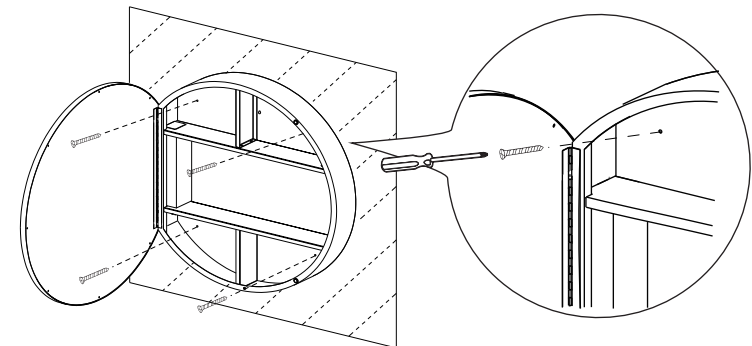

5. Connect the power by plugging into an outlet or hardwired to a standard circuit panel.

• **Option 1: Plug-in**

After hanging the mirror securely, plug the power cable to a standard socket.

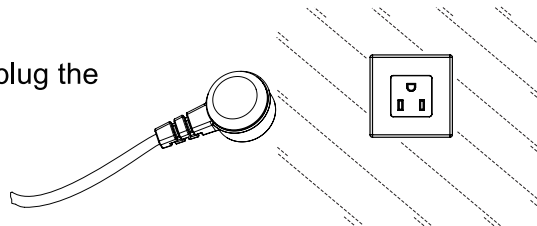


• **Option 2: Hardwired**

Cut the head off the plug and hardwire it into an outlet.

Black wire --- power supply L (LIVE)


White wire --- power supply N (NEUTRAL)

Green wire --- power supply E (EARTH)

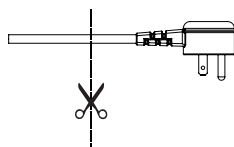


⚠ **REMINDER:** Please make sure the power is cut off before installation.

⚠ **WARNING:** This mirror must be earthed.

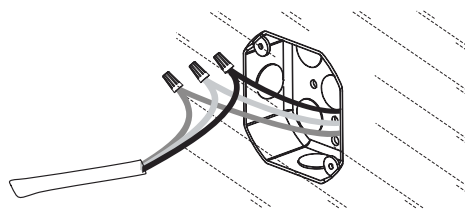

6. Done, enjoy !

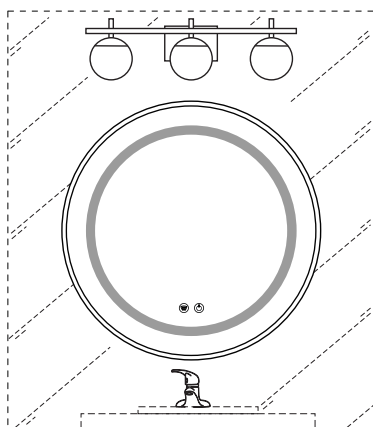

HOW TO USE AND CLEAN

In order to keep the product in perfect condition, we suggest a proper use and regular cleaning.

How to Use

1. Please ensure that the product is used within the safe voltage range of 100V-120V.
2. Please wrap electrical tape around the wires to prevent electrical leakage.
3. Avoid using hard or pointed items to strike the mirror glass so as to prevent damage.

How to Clean

When cleaning the mirror, please follow these steps:

1. Use a soft, non-abrasive cloth to clean the mirror. Avoid using rough or abrasive materials that may damage the surface.
2. Do not use any cleaning agents that may cause irritation or damage to the mirror's finish. Instead, use any of the recommended cleansers to remove dirt and grime:

☒ Gentle liquid detergents ☒ Colorless cleansers

3. If any adhesive residue left, please wipe it off with a cloth dipped in water (instead of detergents).

★ Warranty

A two-year warranty from the date of your purchase.

If you have any questions, please feel free to contact us via
MC@ZRsupport.com