


Mirror time-temperature display module

-- instruction manual

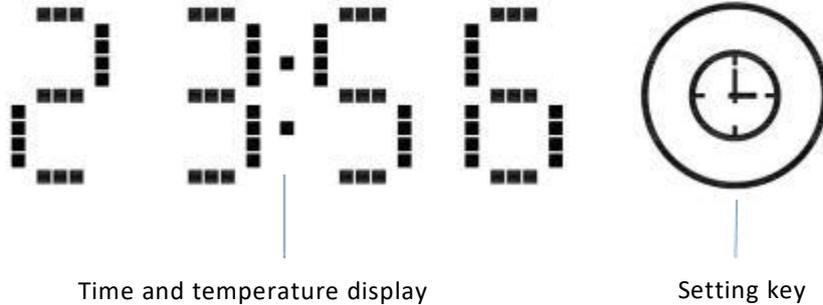

1、 Functional characteristics:

1. Single-click mirror touch operation, real-time display of time and temperature, simple and practical;
2. Special customized digital tube display, convenient and flexible design of mirror laser marking, more beautiful effect;
3. The automatic detection function of temperature sensor can intermittently display the current room temperature by connecting the matching sensor, which is convenient for selection;
4. One-click to complete all settings, support 12/24 hour system switching, Celsius/Fahrenheit switching;
5. In the night mode, the display brightness will be automatically reduced between 22:00-06:00 at night to reduce dazzling discomfort at night.

2、 Operating instructions

1. Display of time and temperature

The normal working state is that the time is displayed for 10 seconds, the temperature is displayed for 2 seconds, and the two are displayed alternately; When the time is displayed, press the button once to display the temperature immediately, and the alternate display will automatically resume after two seconds;

2. Function setting

Press and hold the touch key for 3 seconds to enter the setting mode. The Screen displays "24H" and flashes. At this time, you can briefly press the setting key to switch the 24-hour system or the 12-hour system;

Press and hold again until the hour position displayed on the screen flashes. At this time, press and hold briefly to adjust the hour incrementally; Press and hold again until the minute bit displayed on the screen flashes. At this time, press and hold briefly to adjust the minute incrementally;

Press and hold again until the screen displays °C or °F and flashes. At this time, press and hold briefly to switch the temperature unit (°C/°F).


After all the options are set, the system will automatically exit the setting mode and return to the normal standby state if there is no operation for more than 3 seconds.

3. Night mode

The display brightness will be automatically reduced during the 22:00-06:00 period. During this period, if there is a key operation, the normal brightness will be automatically restored. If there is no key operation for more than 10 seconds, the display will automatically turn to the low brightness display state.

INSTALLATION INSTRUCTIONS

Apply to the below style of LED medicine cabinet

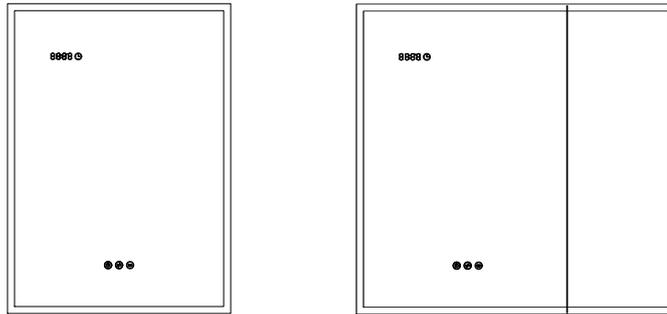

Please read carefully and save these instructions.

Don't discard any of the packaging until you are sure that you have all of the parts and the fittings.

Make sure power to the junction box is off before commencing installation.

IMPORTANT

- Unpack LED cabinet. DO NOT lay cabinet on tiled or concrete surface prior to installation. Cabinet must be on protected surface to prevent chipping of the corners.
- Care must be taken before drilling pilot holes to avoid any existing wiring or pipe work that may be concealed.
- A certified electrician must perform all work. The mirror must be connected to a GFI.

INSTALLATION

Please refer the installation diagram on next two installations manual.

- 1) Unpack the LED mirror cabinet and prepare tools needed. (See Pic.1)
- 2) Mark down the carboard screw holes with pencil. (See Pic.2)
- 3) Drill holes, and put in the plastic expansion bolt, then fix the aluminum bar by screws. (See Pic.3&Pic.4);
- 4) Install the anti-pull bracket at below of the cabinet.(See Pic.5)
- 5) (Make sure the power off)Connect the cable before hanging thecabinet to the wall. The way for connecting wires: Black wire to Live Terminal (L), White wire to Neutral Terminal (N), Green wire to Earth Terminal (E) (120V, 60Hz). (See Pic.6)
- 6) Hang up the cabinet on the wall. Then use screws to fix the bracket. (See Pic.7&Pic 8)
- 7) According to your needs, put plastic buckles into cabinet holes in fit height, then to install the glass shelves. (See Pic.9)

FUNCTION DESCRIPTION

Turn on/off the light by touch sensor switch. (At the mirror surface)



➔ Touch sensor switch - for control the lights on/off OR long press for dimmable



➔ Defogger - Clear the mirror from bathroom steam



➔ Touch sensor switch - to change the color temperature by short or long press




➔ Time and temperature display - to ajust the time by long press

MAINTENANCE


Wipe clean with a soft damp cloth. Apply glass cleaner to cloth and do not apply directly to mirror.

Never use abrasive cleaners as these could damage the finish or exposed LED strips.


1

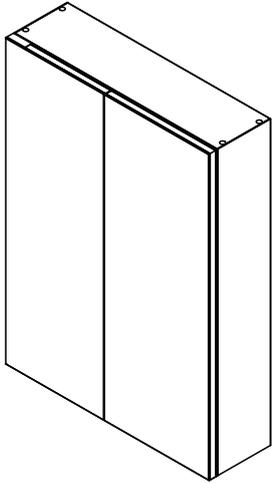


2

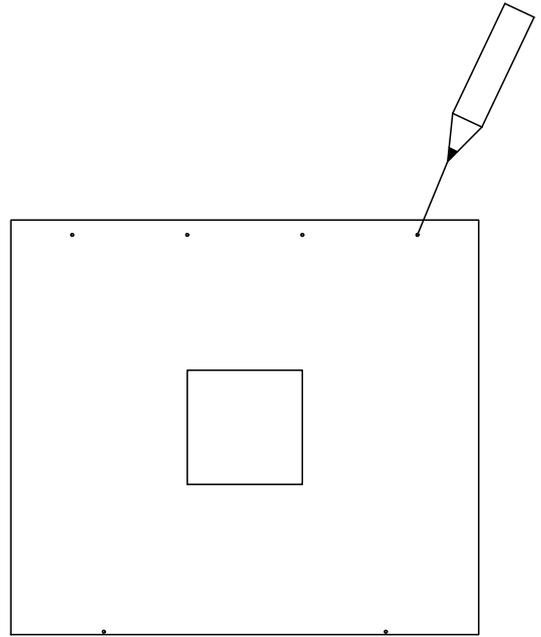

3

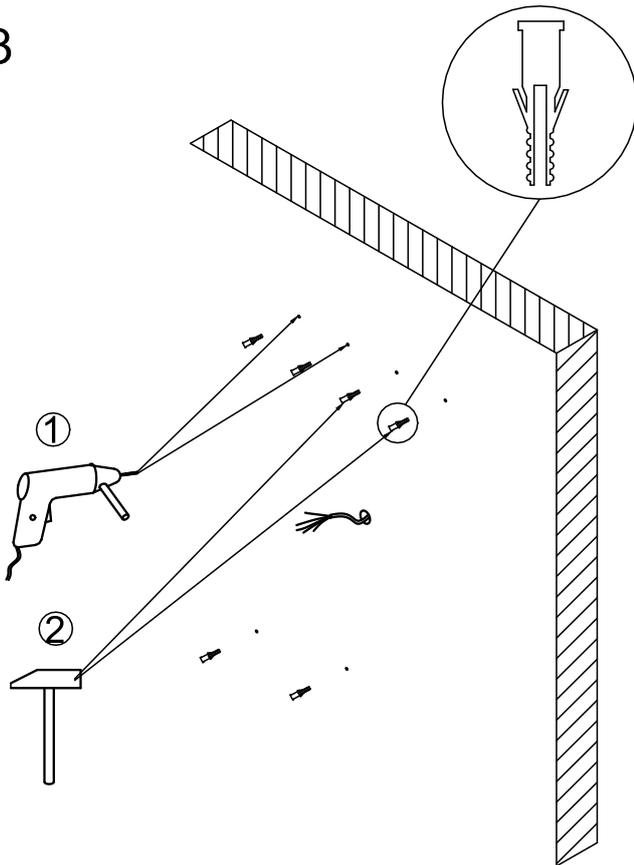


4

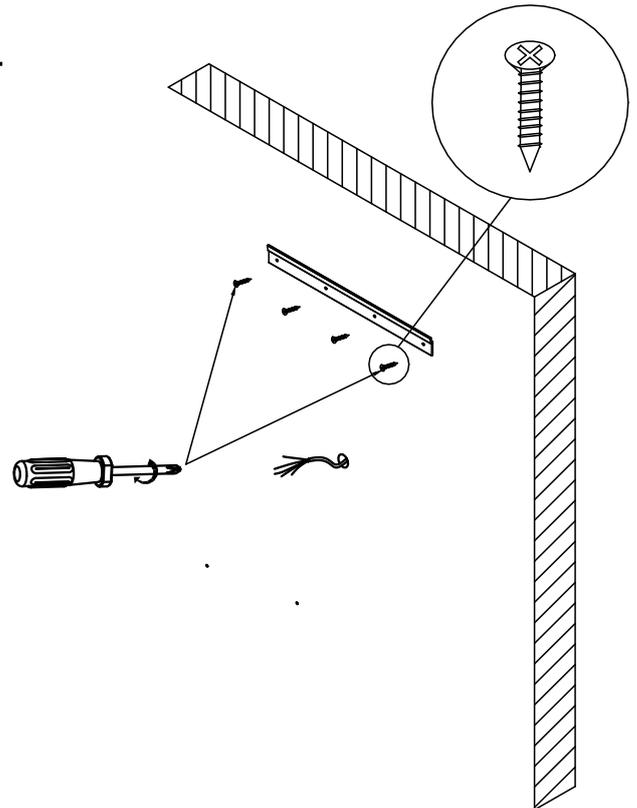


5



Single door cabinet

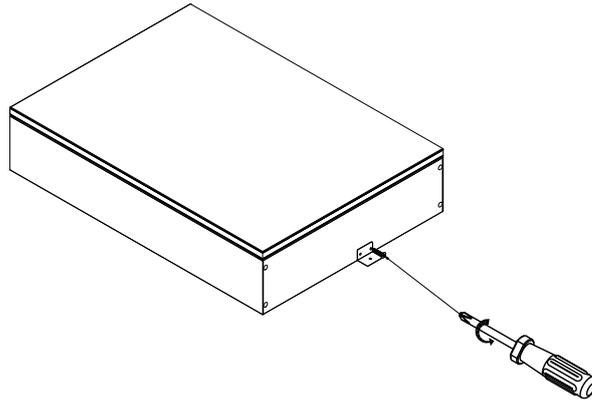


Two door cabinet

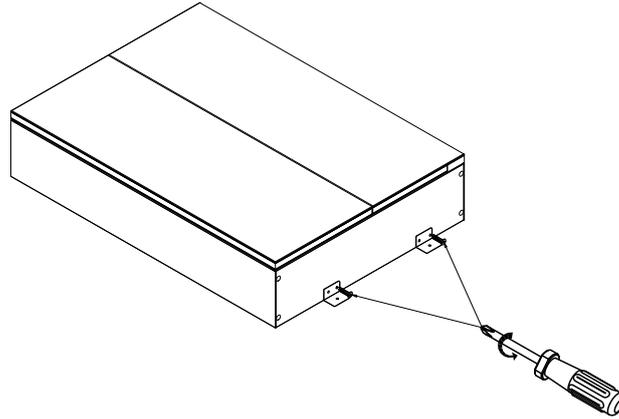


6

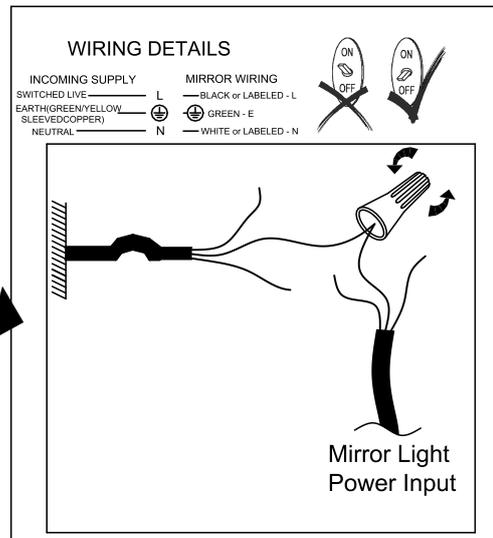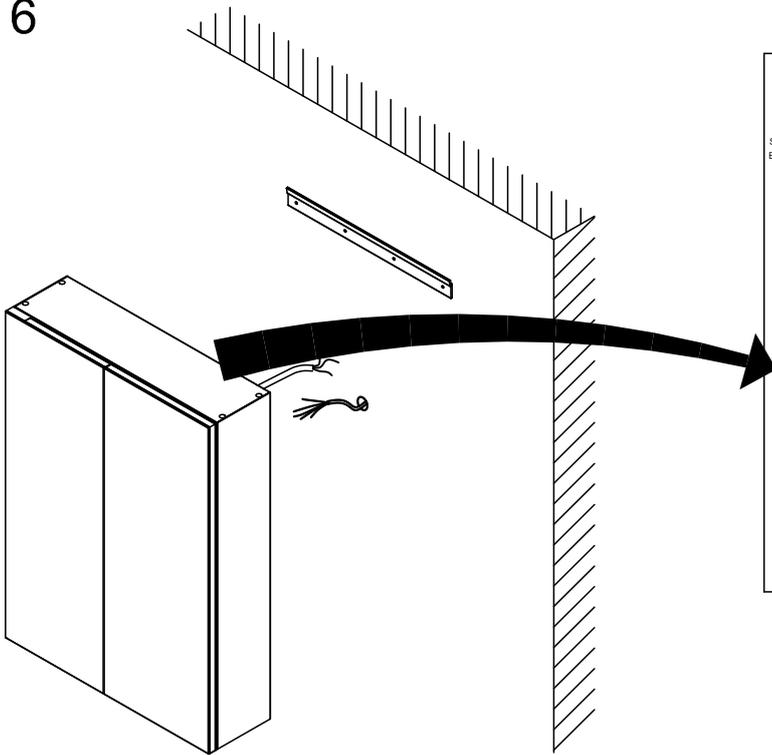


7

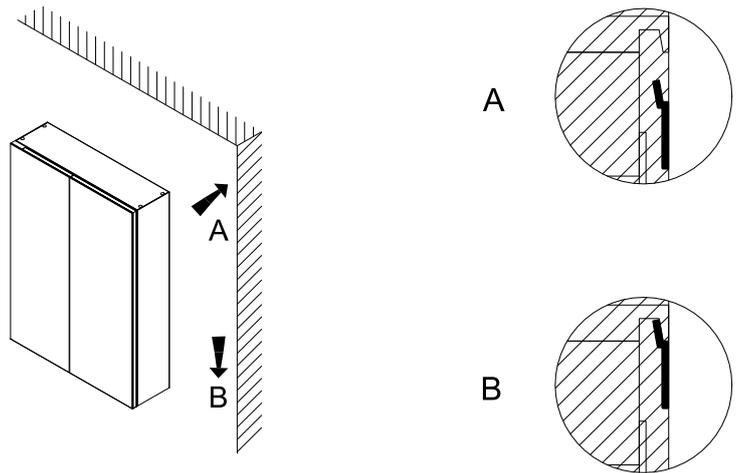

8

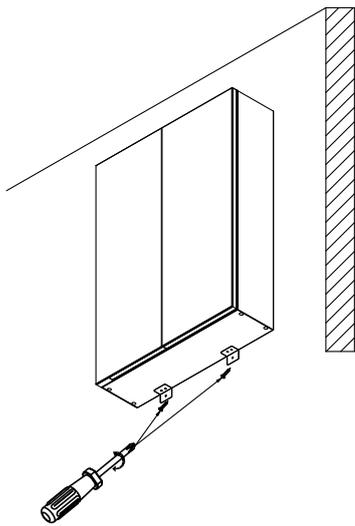

Two door cabinet

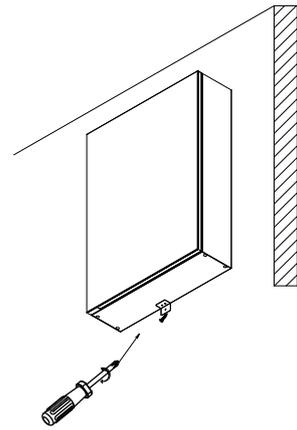

Single door cabinet

9

