SHOWER SET INSTALLATION

BEFORE YOU BEGIN

We recommend consulting a professional if you are unfamiliar with installing plumbing fixtures. Signature Hardware accepts no liability for any damage to the plumbing, floor, walls, tub, or for personal injury during installation.

GETTING STARTED

- Ensure that you have gathered all the required materials that are needed for the installation.
- For the following installation instructions, it is assumed that the wall has been opened and that the existing shower set has been removed.
- Before you begin, the main water supply to your home should be shut off.

TOOLS AND MATERLALS







Hex Wrench



Tape





Drill









Wood Blocking


Soldering Kit (for copper pipe)

1/2" Test Plug

Step 1: Valve Installation


 To prepare for installation, wood blocking should be installed between the two studs where the valve will mount. Use the guide printed on the valve's protective sleeve as a reference when installing the wood blocking.

Important: Take into consideration the thickness of the finished wall materials, such as tile, when calculating Measurements. If the finished wall extends beyond the maximum guideline marked, the trim pieces will not install.



2.Secure the valve to the prepared wood blocking using the provided hardware. Ensure that the hot outlet is pointing to the left, and the cold outlet is pointing to the right. Use a level to ensure that the valve is installed straight


Tip: Leave the protective sleeves on the valve stems until your finished wall is complete, and you are ready to install the trim pieces.

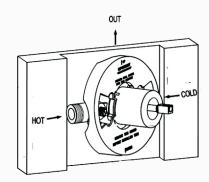

3. Route, assemble, and connect all in-wall piping to and from the shower valve Make connections appropriately depending upon the type of pipe that is being used For copper pipe, soldering will be required and should be completed by a licensed plumber. Apply plumber's tape to any threaded connections if applicable. Install any wood blocking that is necessary to support the piping and valve.


Notes:

- Female fittings will need to be installed where the hand shower's cradle and the shower arm will mount.
- The piping for the overhead shower should be connected to the bottom outlet of the rough-in valve Piping for the hand held shower should connect to the top.

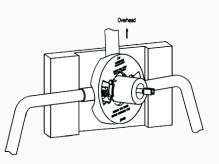

4. Once all piping is routed and connections have been made, use a/2 test plug to perform a water pressure test. Turn on the main water supply to your home and water test the installed plumbing. Ensure that there are no leaks, then shut the water off. Remove the testplug.

Note: Water pressure testing should be performed by a licensed plumber if you are not familiar with this procedure.

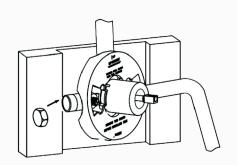



IMPORTANT: COMPLETE THE CONSTRUCTION OF YOUR WALL, INCLUDING ANY FINISHED WALL MATERIALS SUCH AS TILE. BEFORE PROCEEDING WITH THE REMAINDER OF THE INSTALLATION.




Step 2: Trim Installation


1. Once the finished wall is complete, remove the protective sleeves from the valve, if the test plug has not yet been removed, remove that as well.



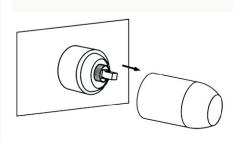


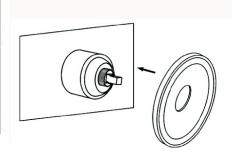

3. Remove the decorative screw cover from the valve handle. Slide the handle onto the valve stem and secure it by tightening the set screw with the provided hex wrench. Reinsert the screw cover to conceal the screw.

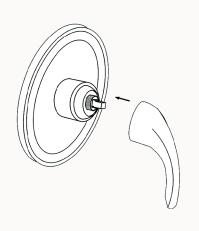

4. Side the decorative back plate onto the shower arm, and install the shower arm by threading it into its prepared female fitting .Apply thread sealant or plumber's tape to the threads before tightening.Hand tighten firmly





5. Install the shower head using the provided swivel joint.






6. Turn the main water supply back on, and test the completed shower system. Ensure that there are no leaks and that all functions are working properly.



DIMENSIONS





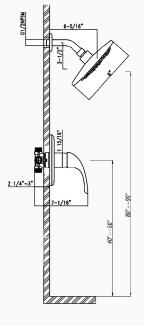

PRODUCT INFORMATION

Product specifications: Length 7 1/16"

width 6 25/32"

height 8"

Wrate(at 60 PSI): 9LPM

Spout Height: 80"~90"

Handle amount: Single Handle

Hot and cold water label: Laser Marking

Product material: Brass

Product standards: cUPC

Product grade: Premium products