
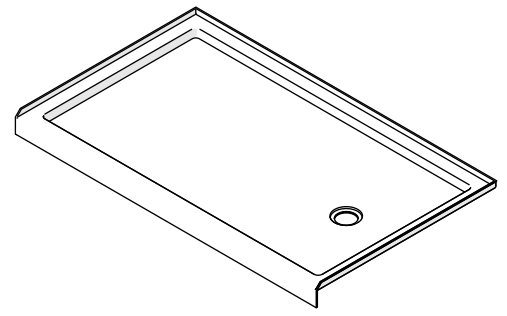
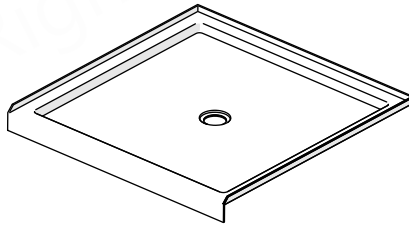


Low Profile Acrylic Shower Base


SHOWER BASE DIMENSIONS AND INSTALLATION INSTRUCTIONS

PLEASE REVIEW THIS ENTIRE MANUAL PRIOR TO INSTALLATION


Single Threshold Left, Center, Right drain (Certain models do not have all 3 drain locations)

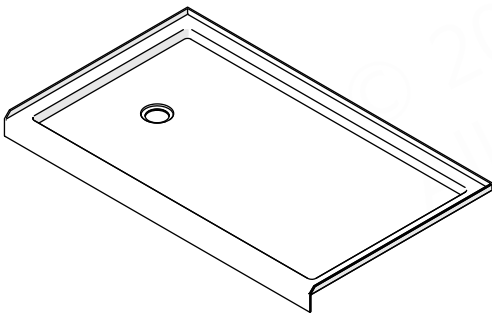




Neo Angle

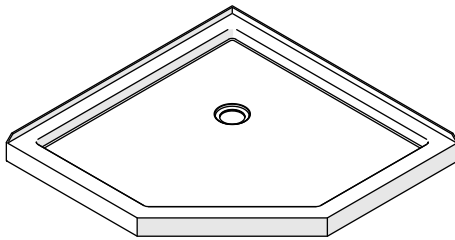

Quarter Round

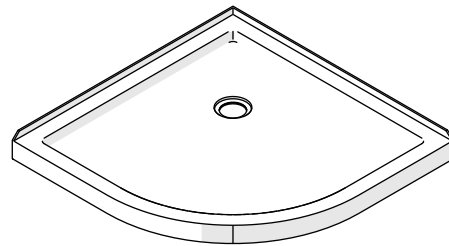

Double Threshold Left, Corner, Right drain

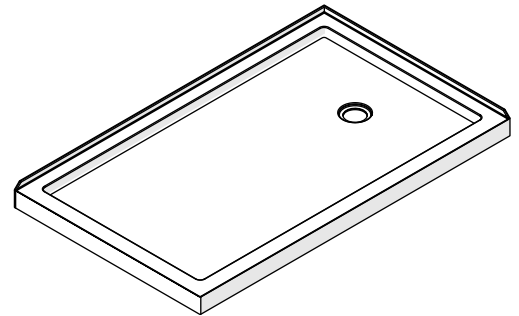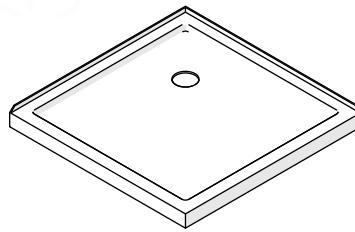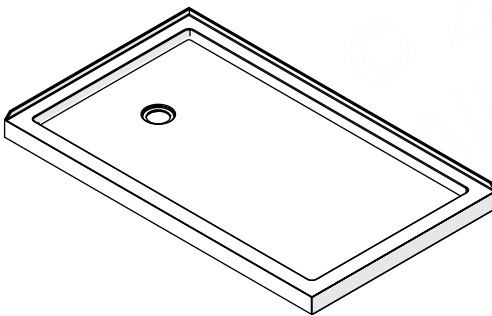

IMPORTANT!

The manufacturer reserves the right to alter, modify or redesign products at any time without prior notice for the purpose of product improvement and customer experience.

Record the following purchase information for your records or in the event you need to contact the manufacturer:

Purchase Order
Number _____

Store/Vendor
Purchased From _____

Installation Date _____

OD Number
(optional) _____
*found on the shipping box or label
if available.

Installed By: _____

SKU Number _____

Table of Contents

Section Title	Page #
Warnings and General Preparation	2
Tools and Materials	3
Model Specific Preparation	4-5
Model Types and Dimensions Guides	6-13
Detailed Cross Section Diagram	14
Installation Steps	15-20
Product Maintenance	22

Symbol Legend



TIP - for ease of installation.



CORRECT - recommended.



NOTE - take note of special feature; additional information.




INCORRECT - not recommended.



REQUIRED - requires special attention; signifies a warning.

Average Installation Time

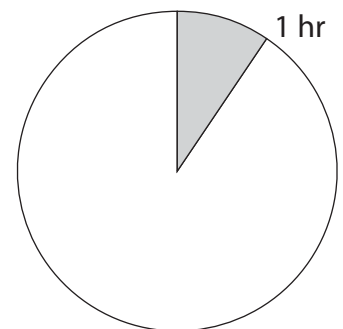

Warning Disclosure Statement

IMPORTANT

- The manufacturer reserves the right to alter, modify or redesign products any time without prior notice for product improvement and customer experience.
- This product should be installed by someone familiar with the construction requirements for this type of project and the care necessary for the safe installation and operation of the product.
- The safety of any installation is the responsibility of the installer.
- Professional installation recommended. *(All Models)*
- Professional installation required.
- To prevent damage or serious injury, Do Not lean against the installed panel/door/glass.
- To prevent damage or serious injury: Do Not attempt to lift or move a heavy lite of glass alone. Use an assistant and/or a professional grade glass suction cup.
- The installation of some models may require drilling down into the threshold. Contact the manufacturer of the base, tub, or threshold material with any questions regarding the drilling of holes into their product.
- All drawings in this installation manual are for illustrative purposes only and are not drawn to scale.

TEMPERED GLASS WARNING

- Your Shower Door Glass Could Shatter Without Warning if Improperly Installed or Mishandled
- Do Not install or operate a shower door if the glass has chipped corners, slivered edges or is otherwise damaged and/or has been dropped or banged into a hard surface such as tile, marble or glass.
- **The main causes of tempered glass breakage are:**
 - Improper handling, storage or installation
 - Misuse/abuse
 - Lack of maintenance
 - Failure to replace damaged glass
 - **Improper handling during storage, unpacking and installation:**
 - Corners and edges are the most susceptible area to damage on a lite of tempered glass and should be protected and handled with care during storage, unpacking, installation and operation. A concentrated point of pressure or impact with a surface harder than itself may cause the tempered glass to shatter. The tempered glass may release immediately, within several hours or even days later.
 - **Incorrect installation of door hardware, rollers, hinges, channels, stopper or glass:**
 - Improper installation may include: loose hardware and/or lack of proper gaskets between the hardware and glass. Additionally, improper alignment of guide rails, wall profiles or other hardware during installation or operation may place stress on the glass edges and cause it to break.
 - This product must be installed by a professional and experienced installer familiar with the safe handling of tempered glass.
 - **Improper use of this product:**
 - Aggressively opening or closing the door may cause trauma to the glass, which can lead to breakage. This may occur immediately or hours or even days later.
 - **The shower door hardware and glass should be inspected periodically:**
 - Instruct the homeowner how to perform a periodic inspection of the shower hardware and glass - some minor adjustments may be necessary based upon the use (or misuse) of the shower door. Ensure that the hardware remains tight and that the door alignment and operation are correct. Any adjustments should be made upon discovery to prevent damage to the product.
 - Additional considerations should be given to the installation of frameless tempered glass products in households with young children or an elderly person due to an increased chance of improper handling. In such cases, alternatives such as shower curtains or grab bars should be considered.

GENERAL PREPARATION

- After opening all boxes and packages, read this introduction carefully. Check that all the items are included in the package by marking off the components on the “**Detailed Diagram of Product Components**” page. Examine all boxes and packages for shipping damage. If the unit has been damaged, has a finishing defect, or is missing parts; please contact the manufacturer within 3 business days of the delivery date.
Please note that the manufacturer will not replace any damaged products or missing parts free of charge after 3 business days or if the product has been installed. Please contact the manufacturer if you have any questions.
- **Please note that you should refer to your local building codes with questions on installation compliance standards. Building and plumbing codes may vary by location, and the manufacturer is not responsible for code compliance standards for your project and will not accept any returns on that basis.**
- If this unit is going to be installed in a new construction, install all the required plumbing and drainage before installing the shower. **Use a competent and licensed (if required by local code) plumber for all plumbing installation.**
- Make sure that prior to beginning the installation, the surfaces are leveled and solid and will be able to support the total weight of the unit. Also make sure the walls are at right angles. Irregular installation surface level, radius corners or improper angle of side walls will result in serious problems for your installation. Please note that some adjustments and drilling will be necessary during the installation process.
- Protect all primary surfaces of the product during installation. Never set your glass down directly onto a tile floor. Leave corner protectors in place until it is necessary to remove them. Always use a piece of wood or cardboard to protect the bottom edge and corners of the glass prior to and during installation.
- This unit must be installed upon a finished threshold and against finished walls.
- *Shower doors are not designed to be installed into a fiberglass surround due to the radius corners and lack of a solid surface to mount the hardware.*

WARNING: TO AVOID THE RISK OF DAMAGE OR INJURY:

- **Follow all recommendations and requirements as shown in the installation instructions.**
- Perform a thorough inspection of the glass and all parts for any damage prior to installation. Any damage to tempered glass can cause breakage.
Do Not install damaged glass!
- Do Not install or operate a shower or tub door if the glass has chipped corners, slivered edges or is otherwise damaged. Do Not install or operate a shower or tub door that has been dropped or banged into a hard surface such as tile, marble or glass.
- **CAUTION:** Contact with any hard surface can damage tempered glass and cause it to shatter.
- This product uses tempered glass. Glass cannot be cut after it has been tempered.
Do Not attempt to cut tempered glass.
- Glass Shower doors, Tub doors, Inline panels, and Return panels can shatter due to improper handling or lack of maintenance. Conduct periodic inspections of glass and all parts for possible damage, missing or loose parts.
- Always wear proper safety equipment such as: safety goggles, work gloves and appropriate footwear during the installation process.
- **WARNING. Risk of leakage and/or damage.** Follow all instructions regarding the application of silicone sealant or caulk. Allow 24 hours for the sealant to cure before the initial use of the shower or tub product. Follow the silicone manufacturer's recommendations regarding the use of their product.
- **Thoroughly read these instructions before installing or using this product.**
- **Leave this manual for the end-user of the product.**



DO NOT drill holes through the tile flanges of the shower base. DO NOT attach the base to the studs with any type of fasteners. This will damage the base and void the warranty.




This product should be installed by someone familiar with the construction requirements for this type of project and the care necessary for the safe installation and operation of the product.




Professional Installation Recommended

Tools

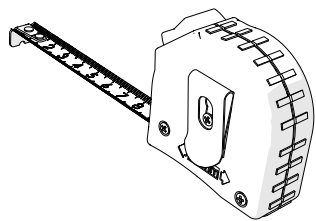


Tape Measure

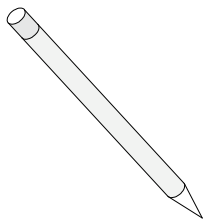

Pencil



2 FT




4 FT

Levels

Materials (Not Included)



Mortar Mix

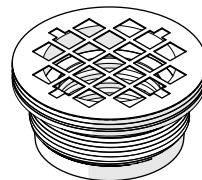

Drain Assembly



Verify that the correct model size has been ordered; measure the opening **before** proceeding with the installation.

Confirm that the opening is plumb and that the sub-floor is level.

Make sure that all required plumbing and drainage is installed before installing the product.

Use a good quality waterproof, mildew-resistant 100% silicone caulk.





Unpack your unit carefully and inspect it. If any parts are damaged or missing, please contact the manufacturer for replacement. The shipping boxes may contain extra parts not used in your model configuration. Retain these installation instructions for future reference.

Shower Bases for Alcove Installation (Single Threshold)



When installing an alcove shower base, consider how the **total thickness of the wall treatment (wallboard, tile, acrylic walls, etc.) will affect the finished opening size for a shower door.** Always order a shower door based on the **finished opening dimensions after the finished wall treatment has been installed.**

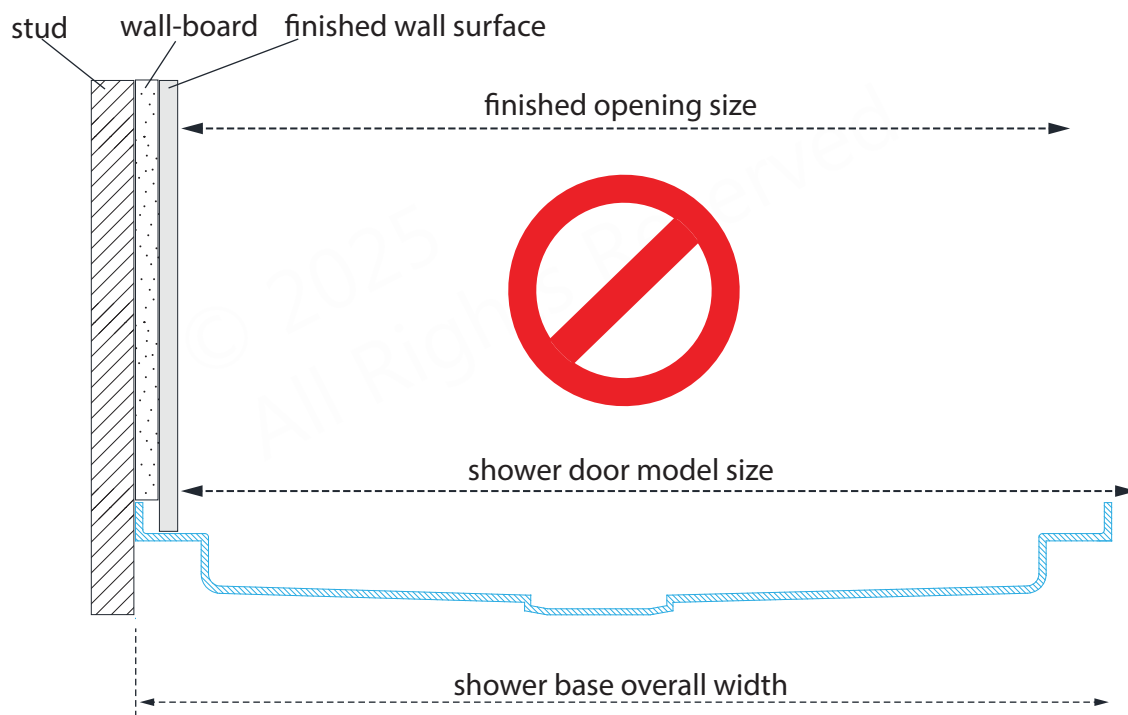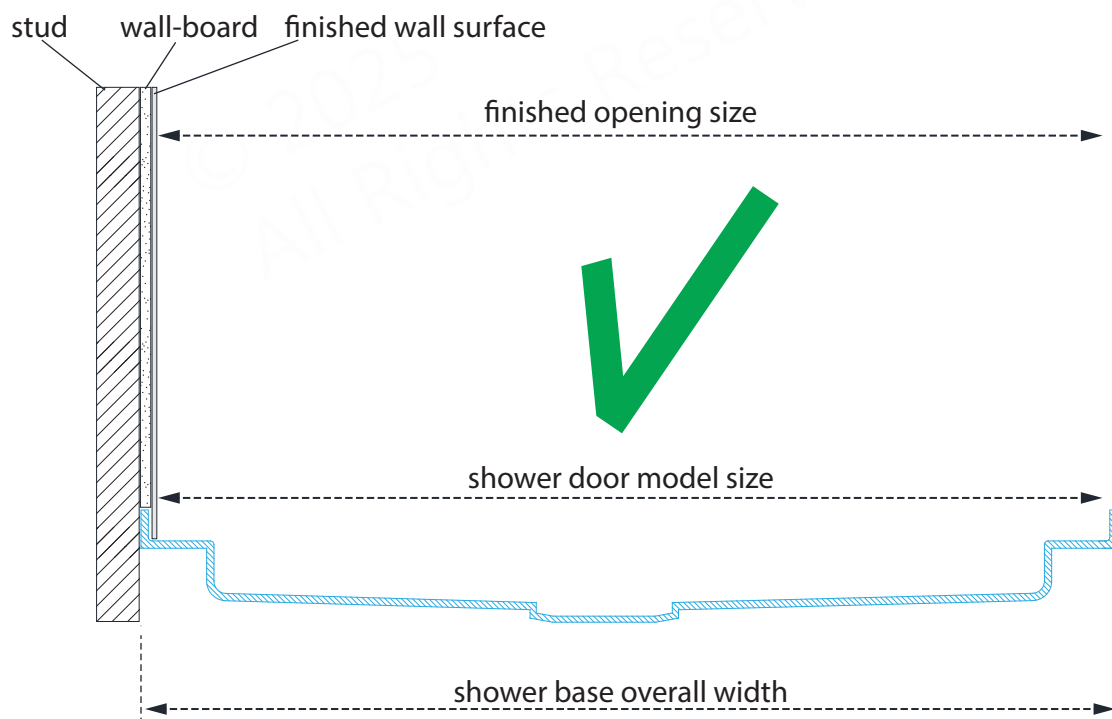


Shower Bases for Corner Installation

(Double Threshold, Neo Angle, Quarter Round)




When installing a shower base designed for corner installation, consider how the **total thickness of the wall treatment (wallboard, tile, acrylic walls, etc.)** will affect where the shower enclosure will sit on the threshold. Always order a shower enclosure based on the **finished opening dimensions after the finished wall treatment has been installed.**

stud wall-board finished wall surface


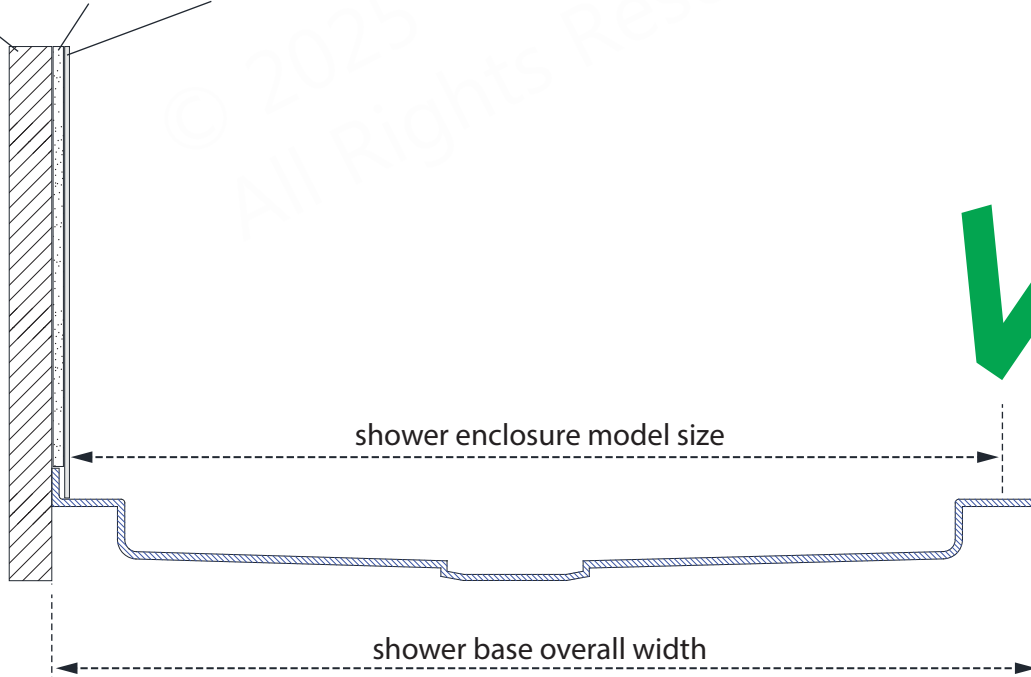


stud wall-board finished wall surface

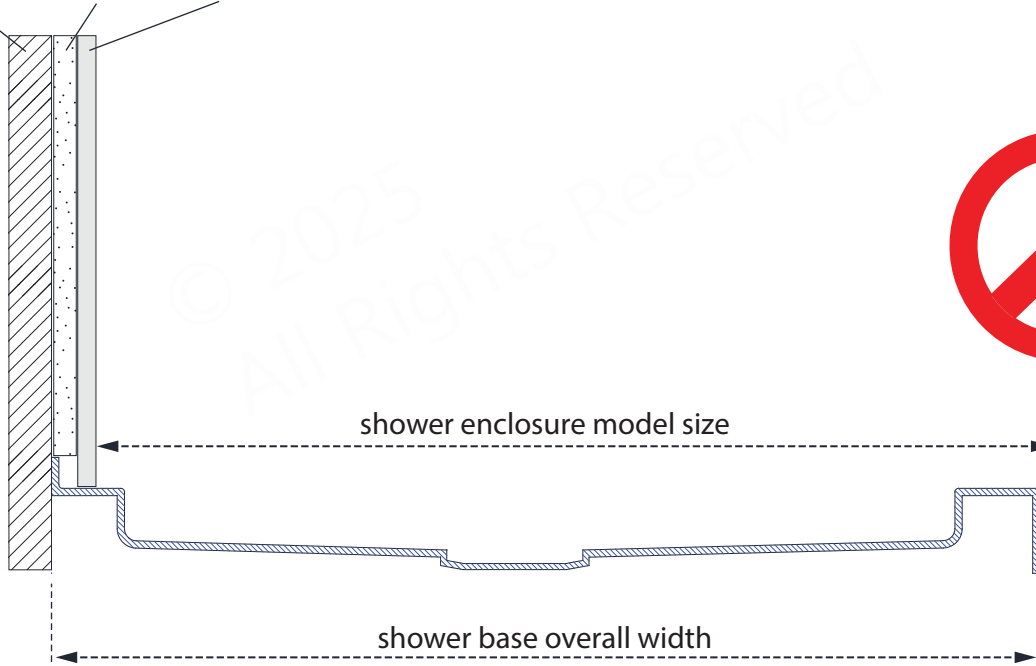



SINGLE THRESHOLD SHOWER BASE

Center Drain Configuration

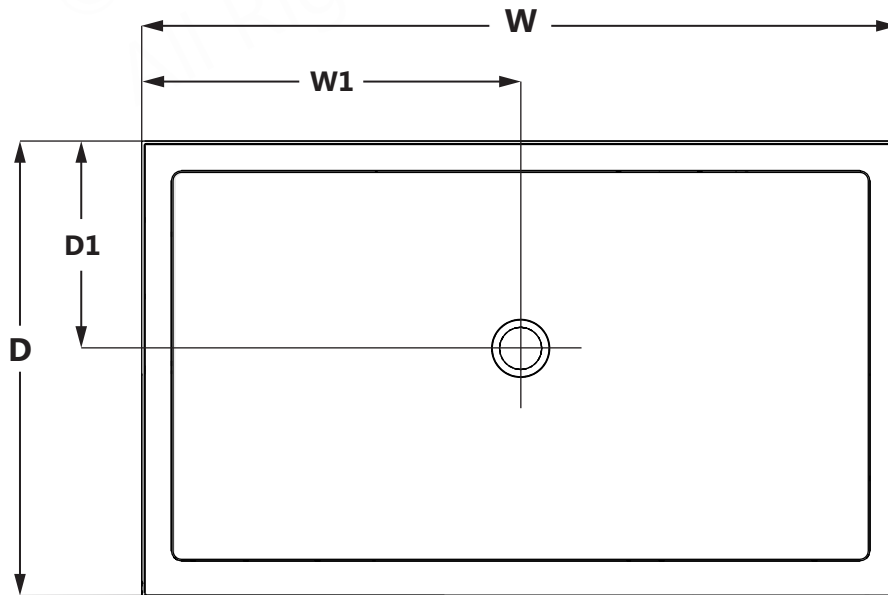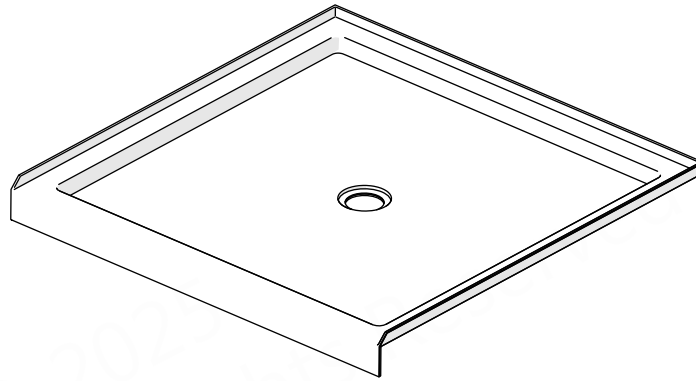

SPECIFICATION	D (in)	W (in)	D1 (in)	W1 (in)
32" x 32"	32"	32"	15"	16"
36" x 36"	36"	36"	15"	18"
32" x 42"	32"	42"	15"	21"
34" x 42"	34"	42"	15"	21"
36" x 42"	36"	42"	15"	21"
42" x 42"	42"	42"	15"	21"
32" x 48"	32"	48"	15"	24"
34" x 48"	34"	48"	15"	24"
36" x 48"	36"	48"	15"	24"
32" x 54"	32"	54"	15"	27"
34" x 54"	34"	54"	15"	27"
36" x 54"	36"	54"	15"	27"
30" x 60"	30"	60"	15"	30"
32" x 60"	32"	60"	15"	30"
34" x 60"	34"	60"	15"	30"
36" x 60"	36"	60"	15"	30"
42" x 36"	36"	42"	21"	18"
42" x 48"	42"	48"	21"	24"



SINGLE THRESHOLD SHOWER BASE
Left-Hand Drain Configuration

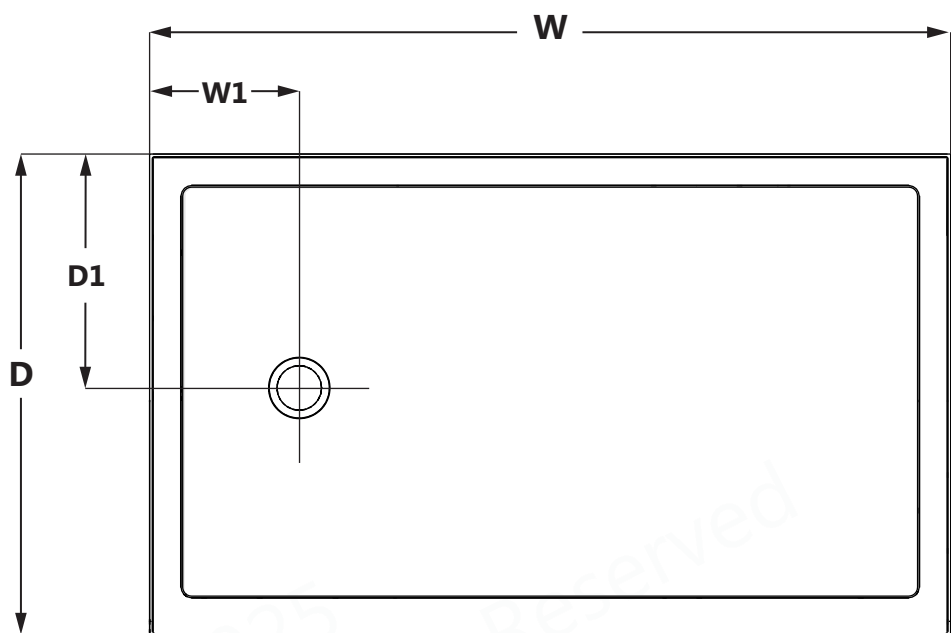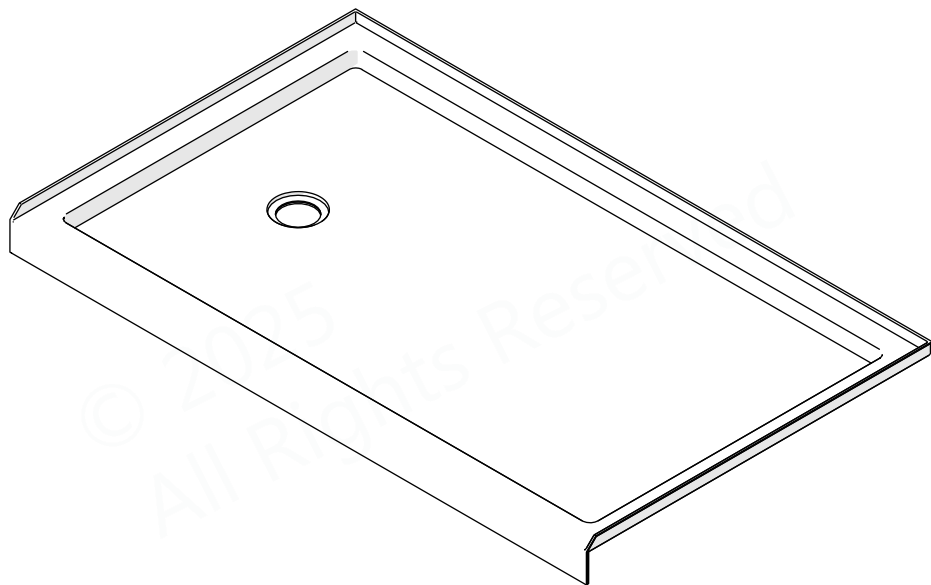

SPECIFICATION	D (in)	W (in)	D1 (in)	W1 (in)
30" x 60"	30"	60"	15"	12"
32" x 60"	32"	60"	15"	12"
34" x 60"	34"	60"	17"	12"
36" x 60"	36"	60"	18"	12"
42" x 60"	42"	60"	21"	12"



SINGLE THRESHOLD SHOWER BASE

Right-Hand Drain Configuration

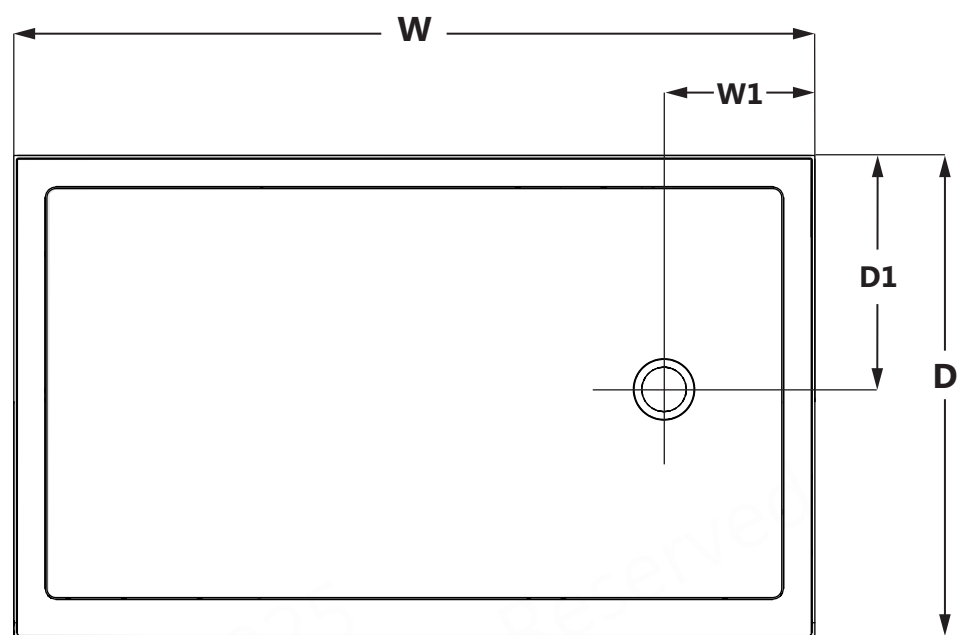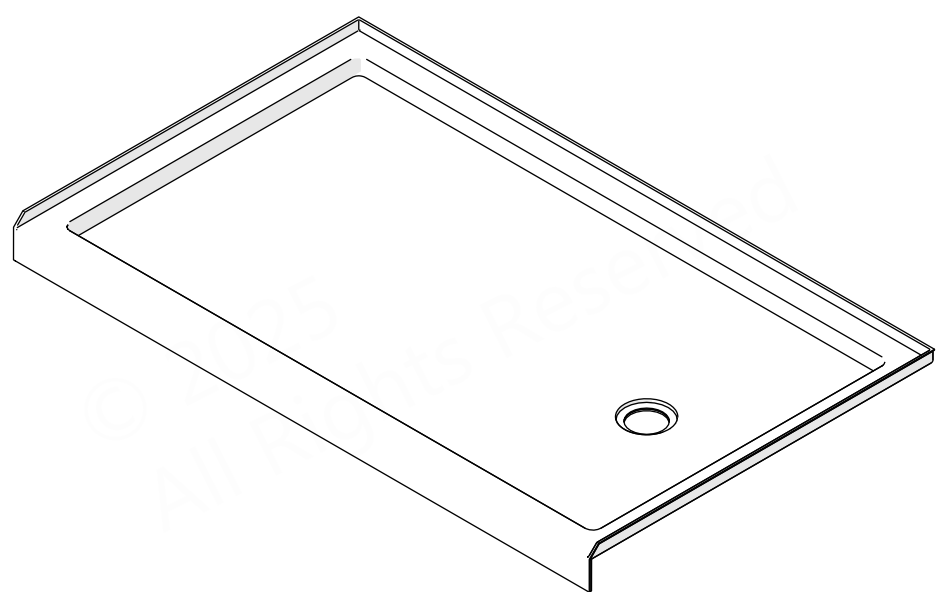



SPECIFICATION	D (in)	W (in)	D1 (in)	W1(in)
30" x 60"	30"	60"	15":	12"
32" x 60"	32"	60"	15"	12"
34" x 60"	34"	60"	17"	12"
36" x 60"	36"	60"	18"	12"
42" x 60"	42"	60"	21"	12"
42" x 48"	42"	48"	21"	24"
44" x 36"	42"	36"	21"	18"

NEO ANGLE SHOWER BASE

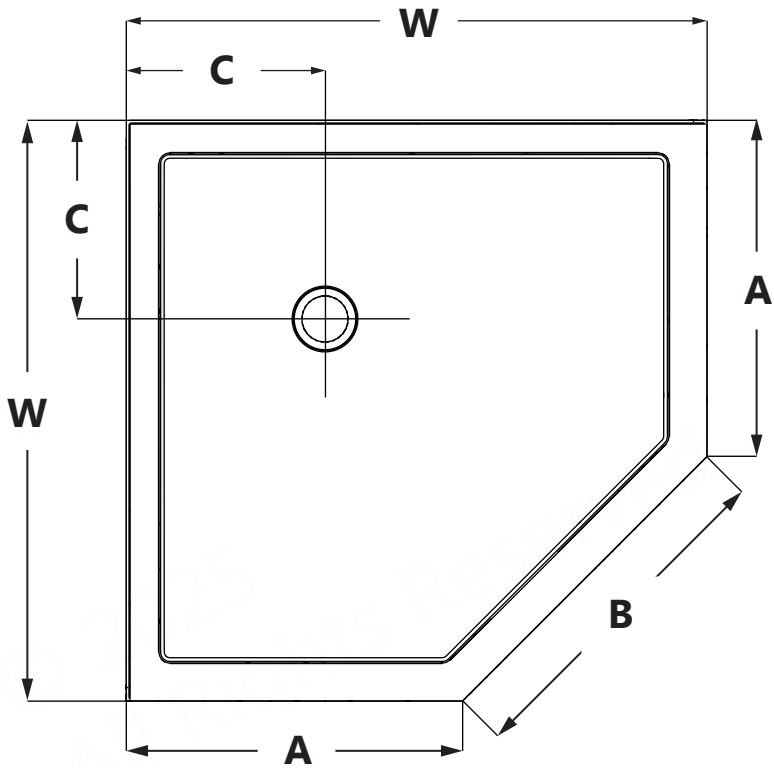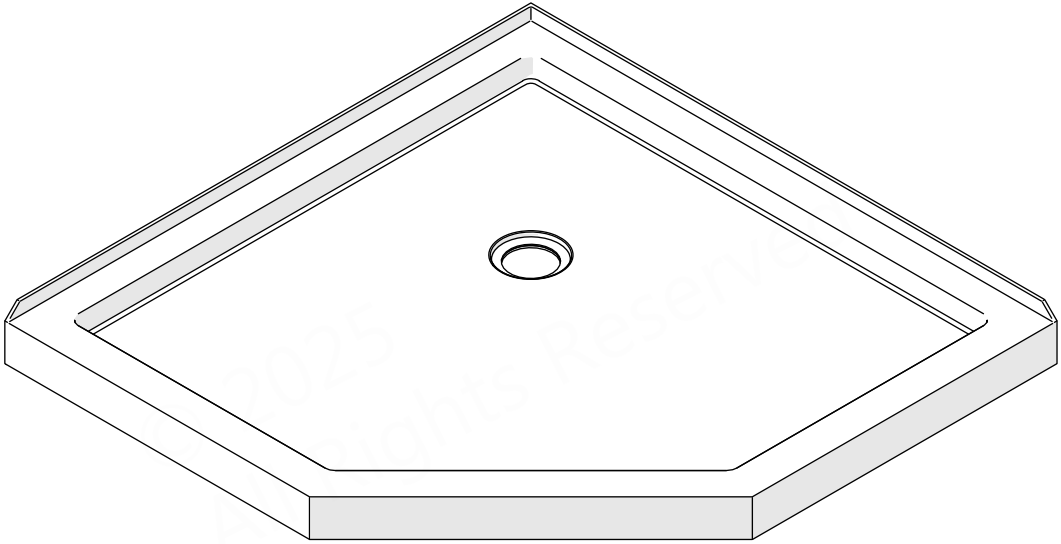

SPECIFICATION	W (in)	A (in)	B (in)	C (in)
36" x 36"	36"	18 5/16"	25"	12"
38" x 38"	38"	20 5/16"	25"	12"
40" x 40"	40"	22 5/16"	25"	14 3/8"
42" x 42"	42"	24 5/16"	25"	14 3/8"



QUARTER ROUND SHOWER BASE

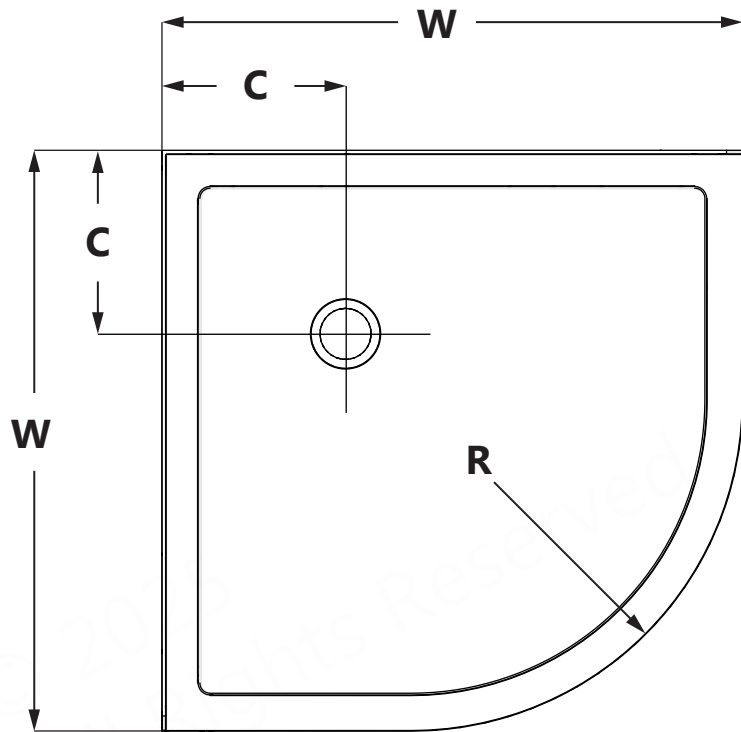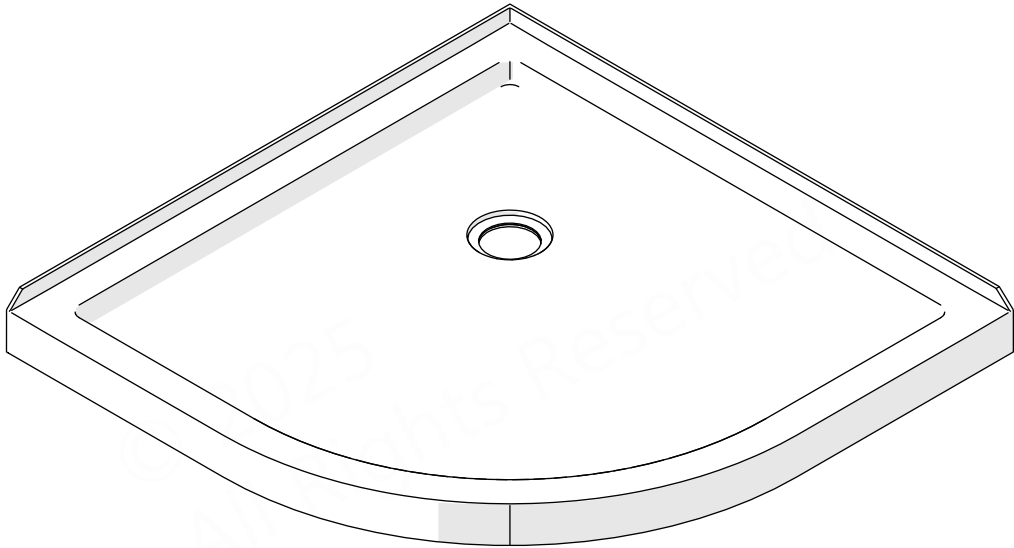

SPECIFICATION	W (in)	C (in)	R (in)
33" x 33"	33"	12"	21 5/8"
36" x 36"	36"	12"	21 5/8"
38" x 38"	38"	12"	21 5/8"



DOUBLE THRESHOLD SHOWER BASE

Corner Drain Configuration

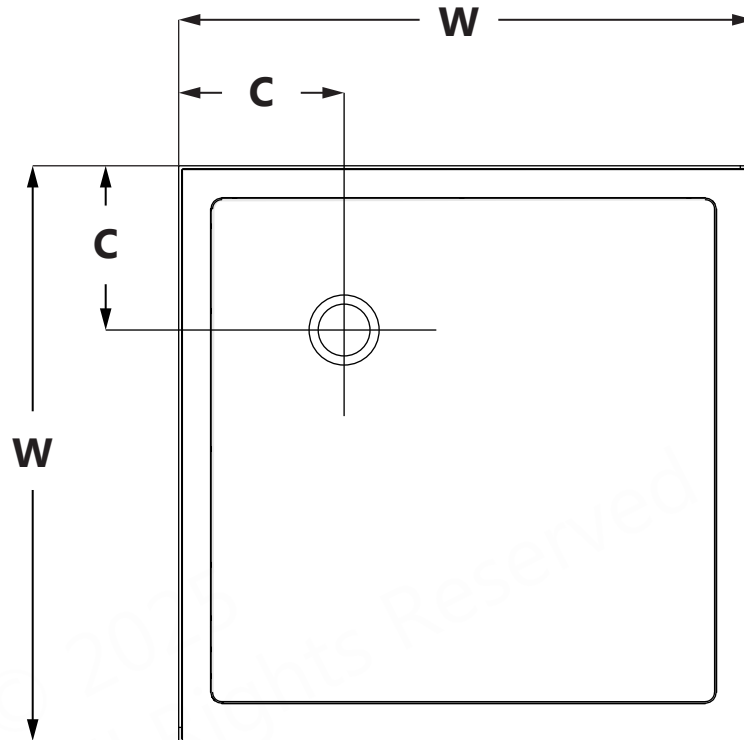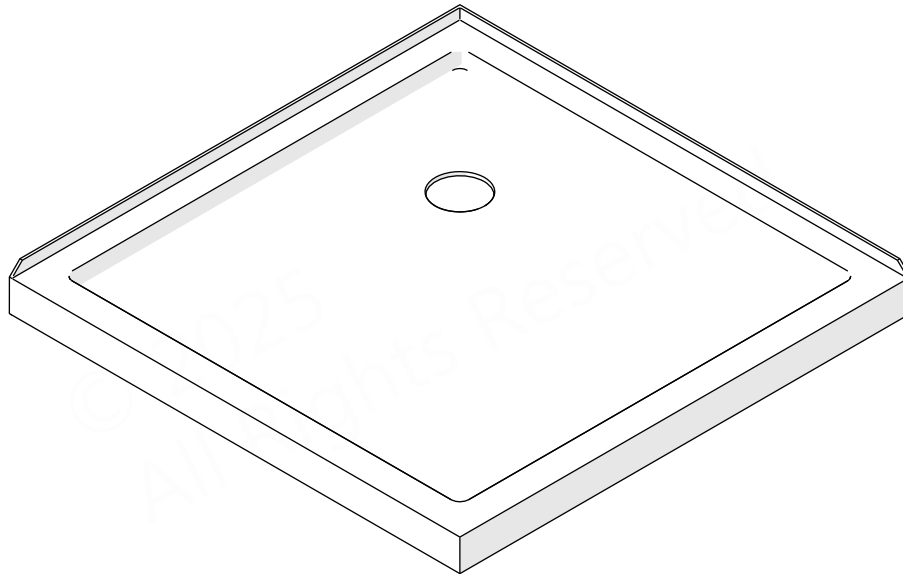

SPECIFICATION	W (in)	C (in)
32" x 32"	32"	12"
36" x 36"	36"	12"
42" x 42"	42"	12"



DOUBLE THRESHOLD SHOWER BASE
Left-Hand Drain Configuration

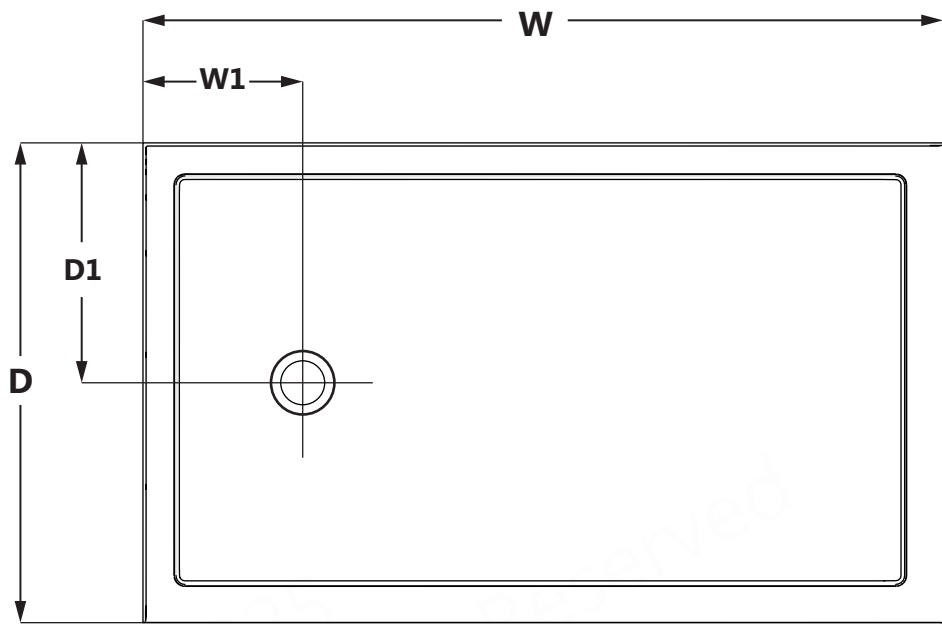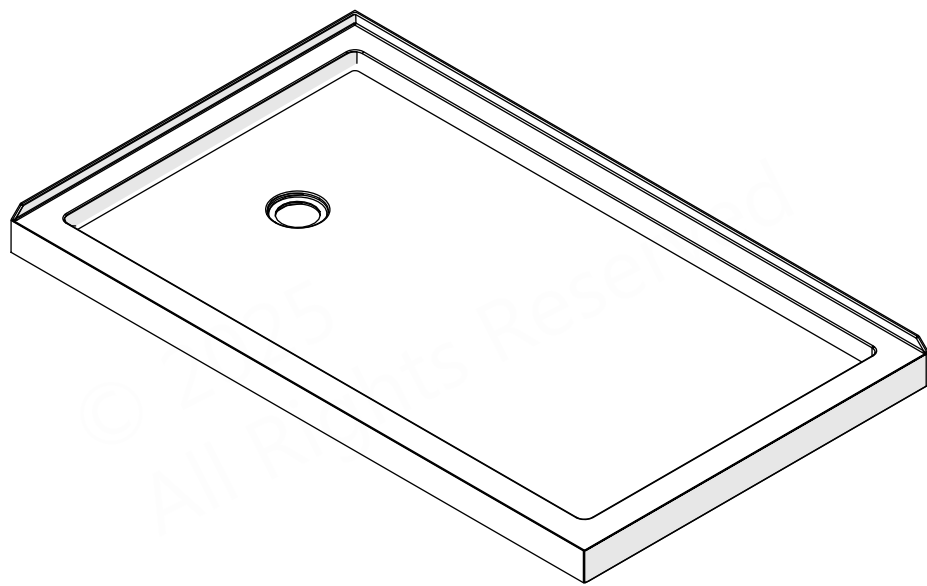

SPECIFICATION	D (in)	W (in)	D1 (in)	W1(in)
32" x 60"	32"	60"	15"	12"
36" x 60"	36"	60"	18"	12"
36" x 54"	36"	54"	18"	12"
32" x 48"	32"	48"	16"	12"
34" x 48"	34"	48"	17"	12"
36" x 48"	36"	48"	18"	12"


DOUBLE THRESHOLD SHOWER BASE

Right-Hand Drain Configuration

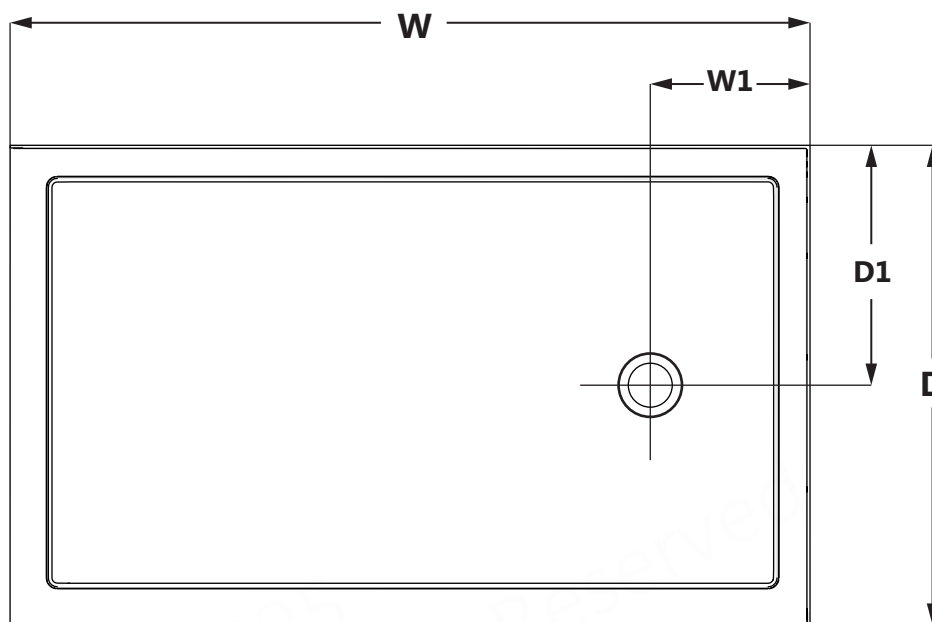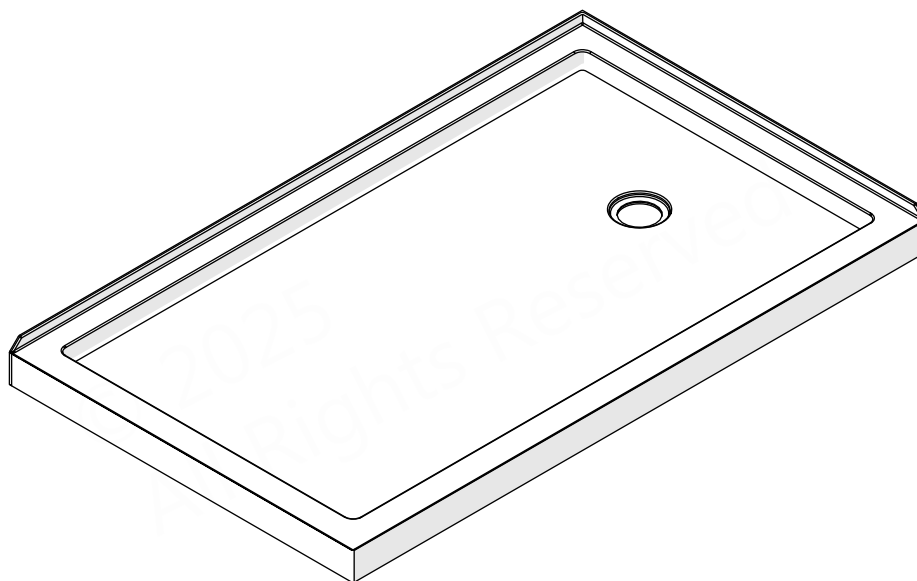

SPECIFICATION	D (in)	W (in)	D1 (in)	W1(in)
32" x 60"	32"	60"	15"	12"
36" x 60"	36"	60"	18"	12"
36" x 54"	36"	54"	18"	12"
32" x 48"	32"	48"	16"	12"
34" x 48"	34"	48"	17"	12"
36" x 48"	36"	48"	18"	12"

Shower Base Cross Section Diagram

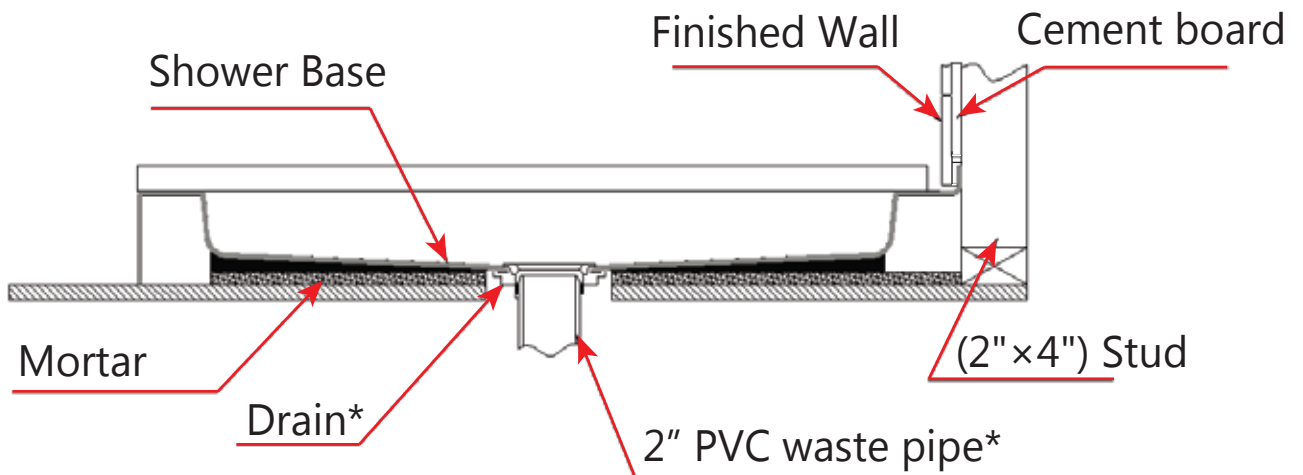

* not included



This product should be installed by someone familiar with the construction requirements for this type of project and the care necessary for the safe installation and operation of the product.

Corner Installation

Ensure that the floor and the studs are at right angles.

Provide a 5" x 5" opening in the sub-floor for the drain.

The 2" PVC waste pipe should extend above the surface of the sub-floor according to the drain installation instructions and the height of the Shower Base.

Refer to the product drawings and tables in this installation manual for the drain location.

(Fig 1a and Fig 1b)

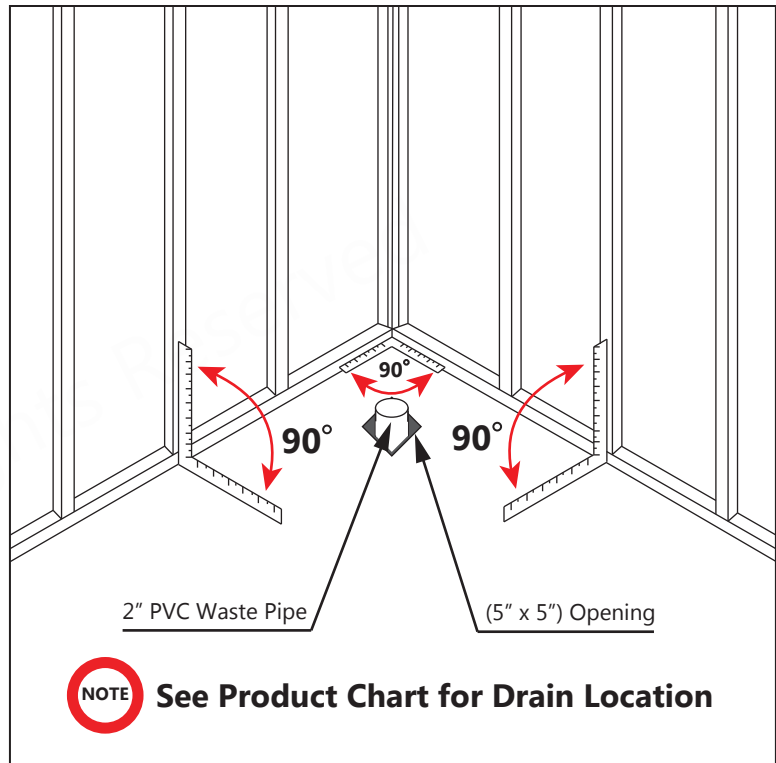


Fig 1a

Alcove Installation

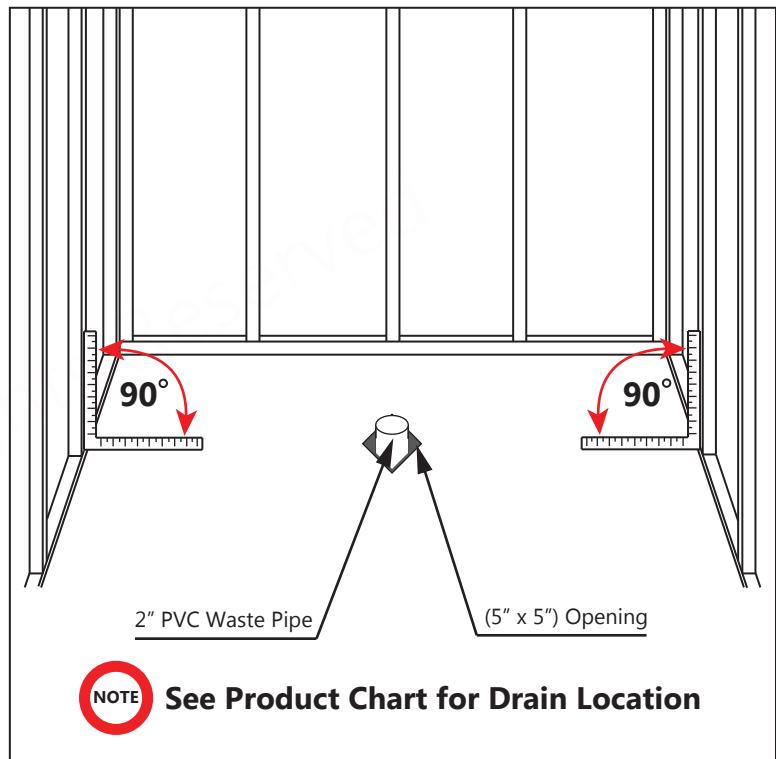


Fig 1b

NOTE

A drain assembly is not included, however, this shower base is designed to accept a standard 2" compression-fitted PVC shower drain.



Please carefully read and follow all of the installation instructions and requirements that come with the drain assembly you use for this shower base installation.

Install the shower drain according to the drain installation manual (supplied with the drain), then place the shower base into the designated position so that it butts up against the studs and the drain cutout drops around the drain pipe.

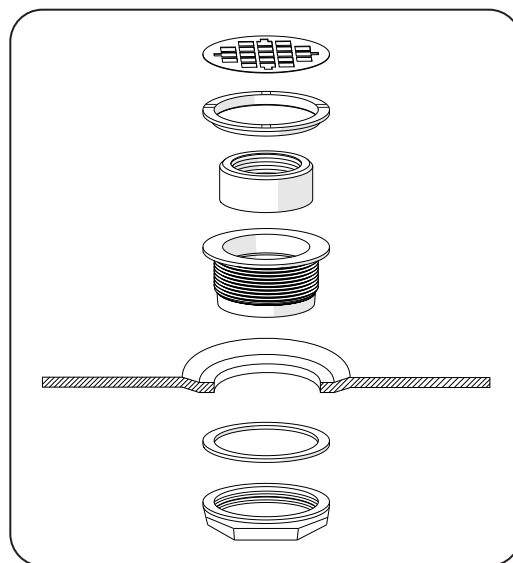


Fig 2a

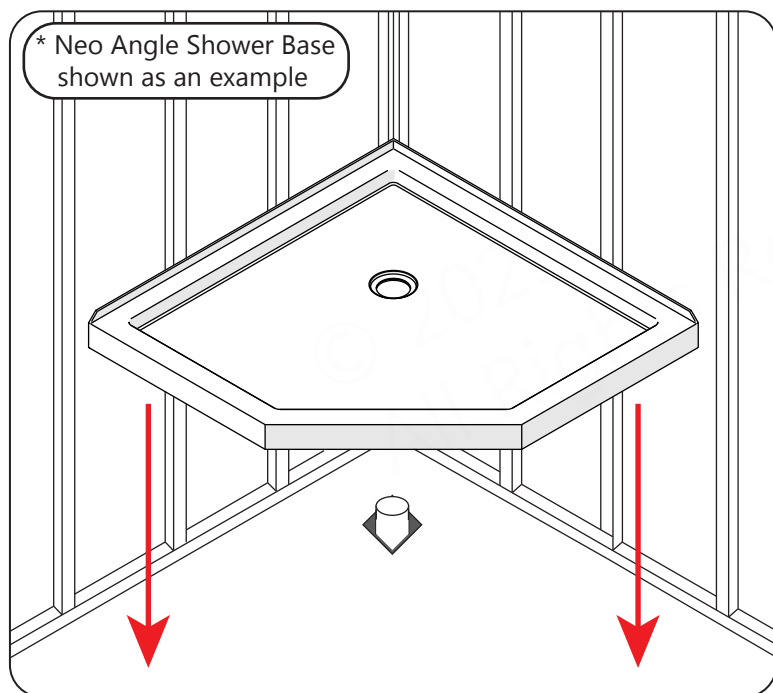


Fig 2b

Lower the base over the drain pipe and set it into place against the studs.

Level the base in two directions (left-to-right, and front-to-back). Once the base is perfectly level, place marks on the studs above the upper edge of the tile flanges.



DO NOT drill holes through the tile flanges of the shower base.
DO NOT attach the base to the studs with any type of fasteners.
 This will damage the base and void the warranty.

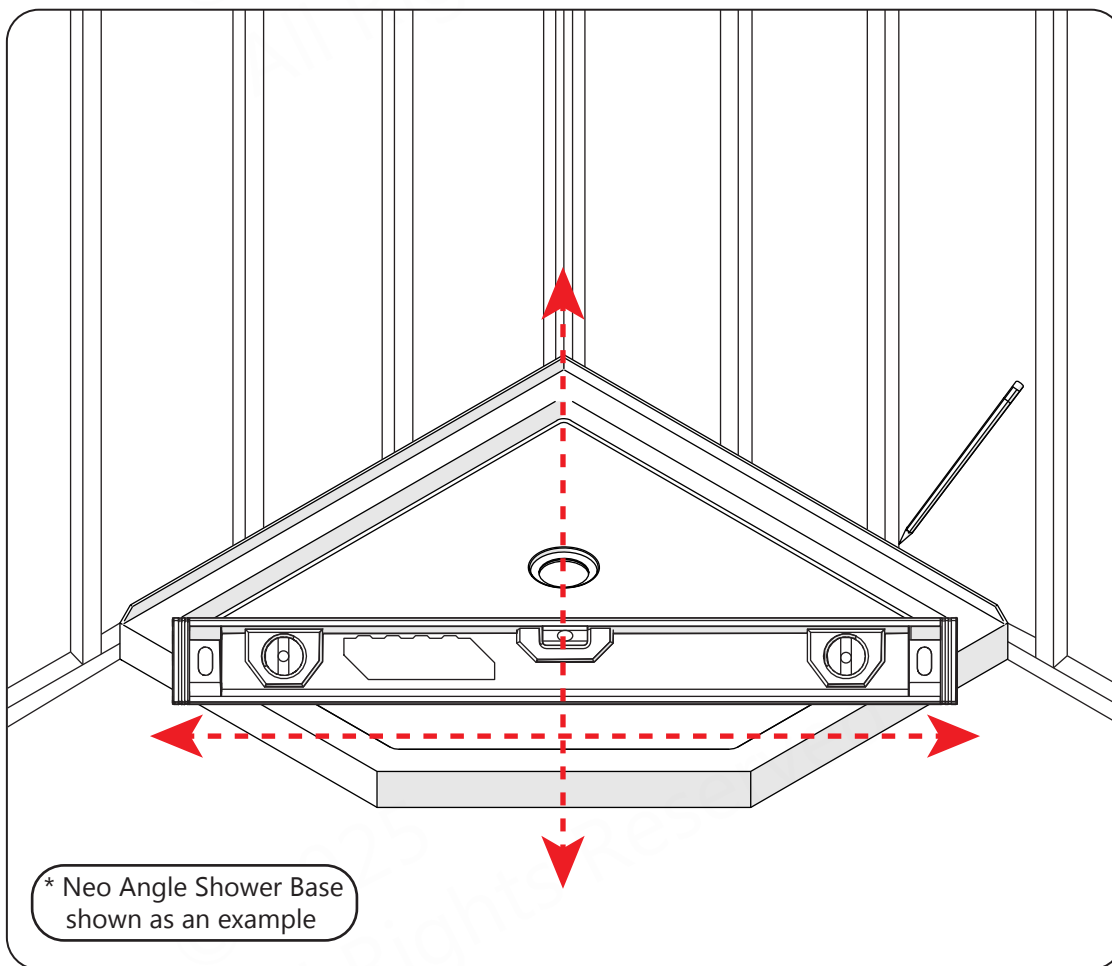


Fig 3




The shower base must be installed level in all directions so that water will drain properly. The sub-floor should be leveled prior to installation. **Do not** proceed with setting the shower base in a mortar bed until proper leveling of the base is confirmed.

NOTE

A sand-mix, topping/bedding mortar type is recommended for installation of this shower base. **Do Not** use concrete or plaster.

Carefully read the mixing directions on the bag of mortar. Mix the bedding material accordingly, then spread it onto the sub-floor. Apply enough bedding material to support the entire bottom of the shower base. This will provide additional stability and prevent the base from shifting position.

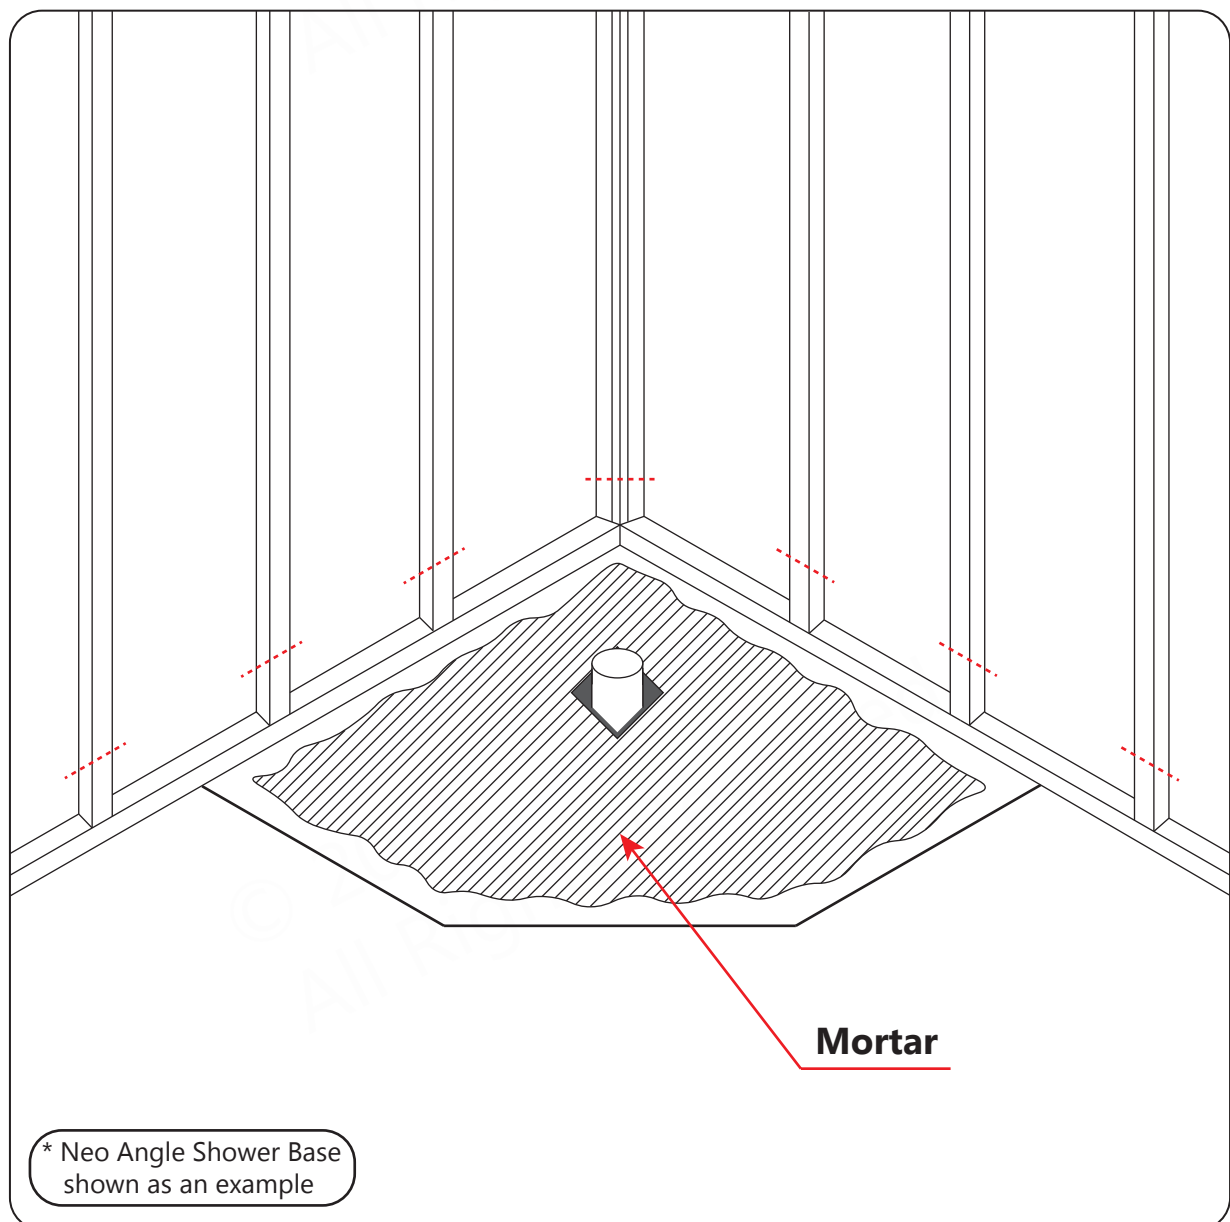**Fig 4**



DO NOT drill holes through the tile flanges of the shower base.
DO NOT attach the base to the studs with any type of fasteners.
This will damage the base and void the warranty.

After the bedding material has been poured and **before it sets**, place the shower base into position with the drain assembly sliding over the PVC waste pipe. It will be necessary to push the shower base down until the top edges of the tile flanges align with the marks drawn on the studs and the front edge is contacting the sub-floor along the entire length of the shower base. Ensure that the base is level in all directions. You may need to use shims to hold the base level until the bedding material fully sets and hardens. Remove all excess mortar.

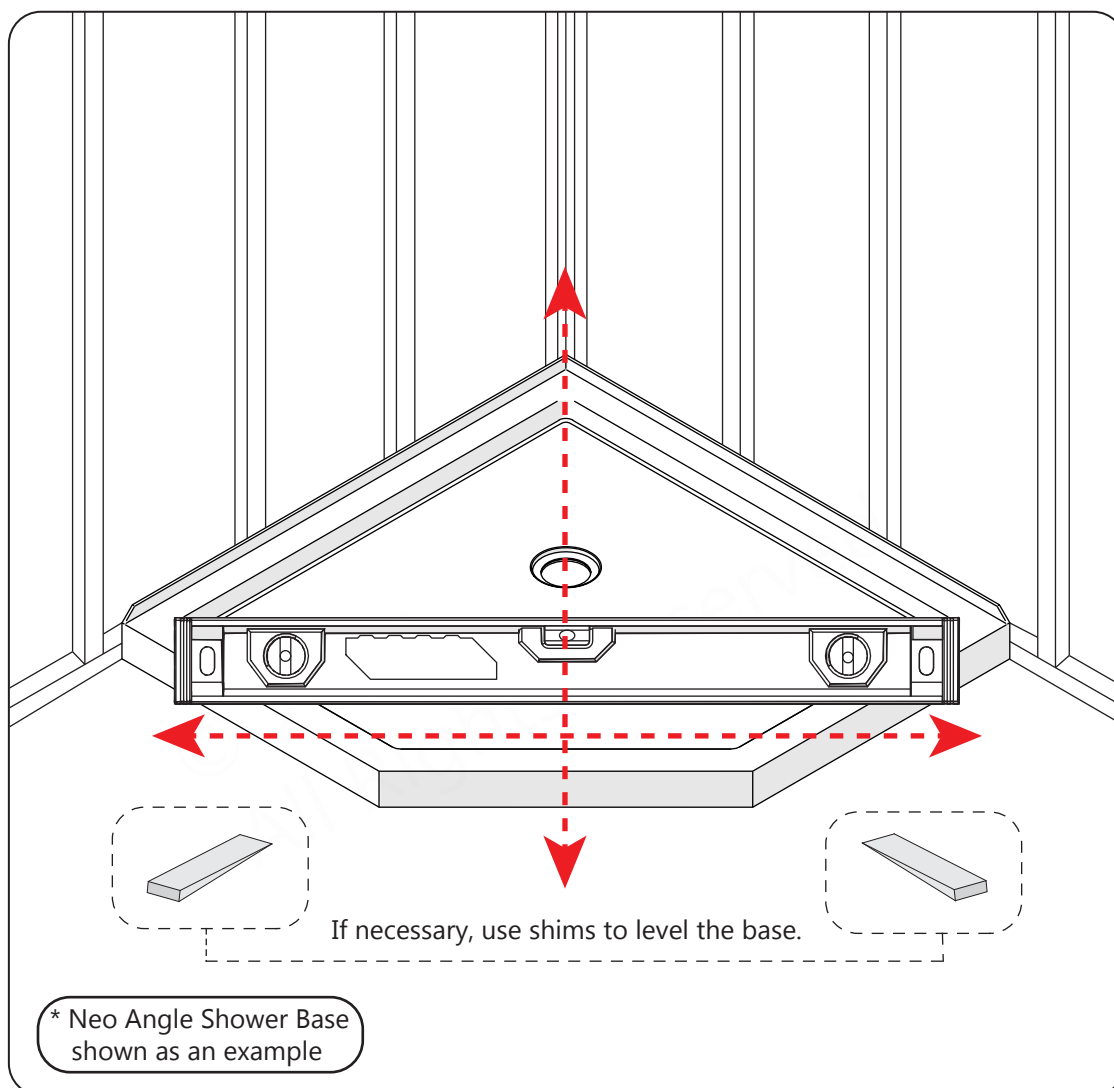






Fig 5


NOTE

Allow the mortar to completely cure and harden before applying weight to the bottom of the shower base.

Install the cement board (or wallboard) above the tile flanges and secure it to the studs.

Put the tiles (or other finishing wall material) over the over the cement board leaving a 1/8" gap between the bottom of the tile (or wall kit) and the shower base. Use 100% silicone caulk to fill the gap.

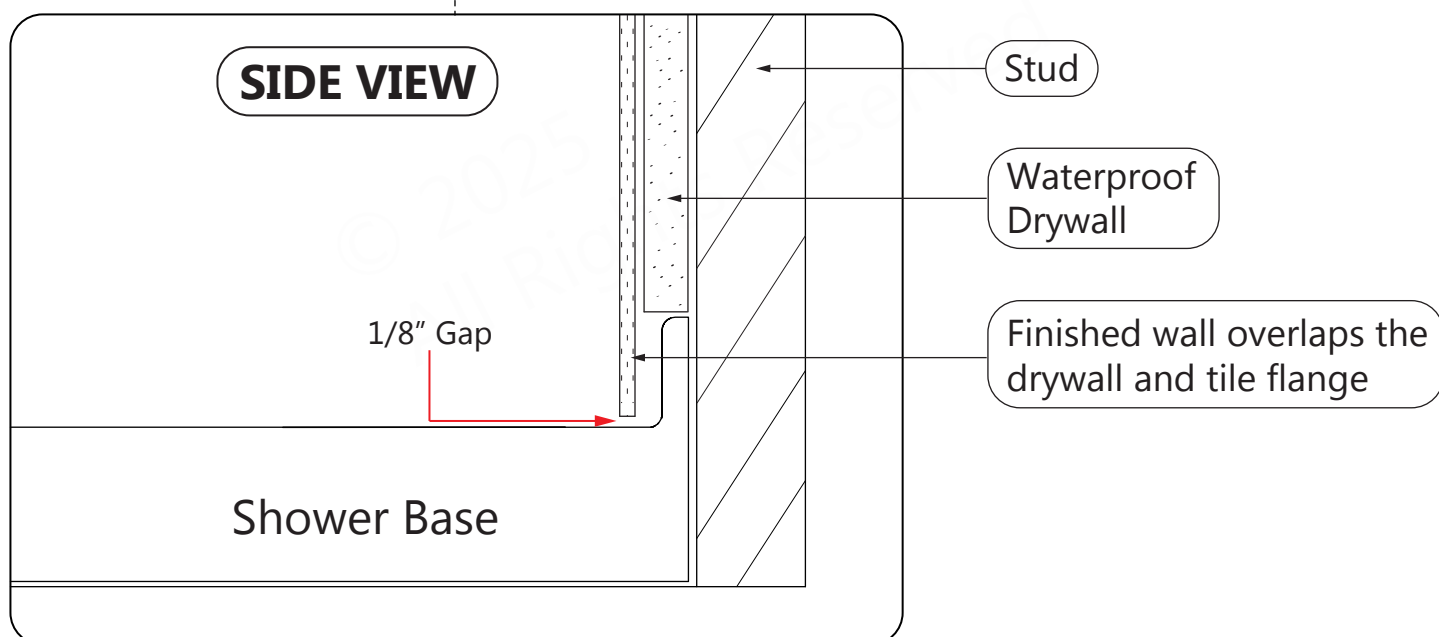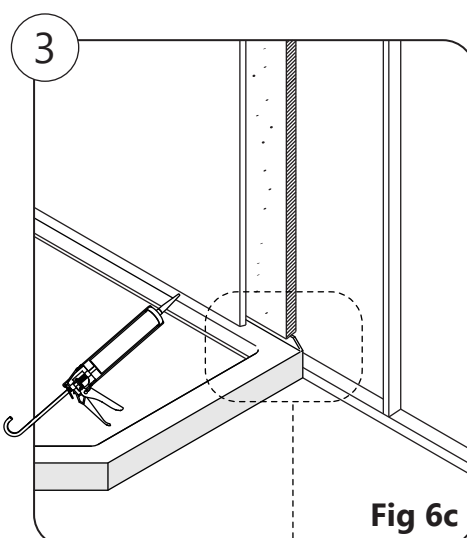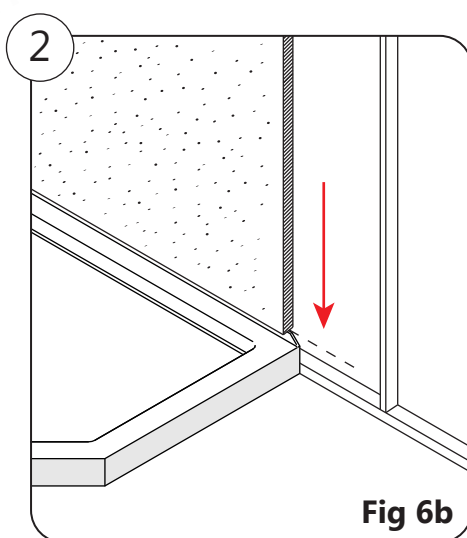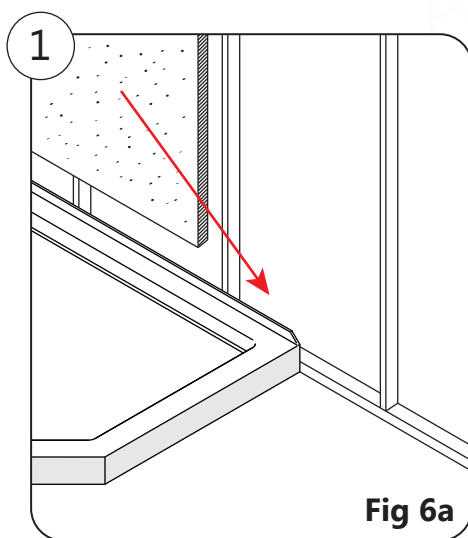

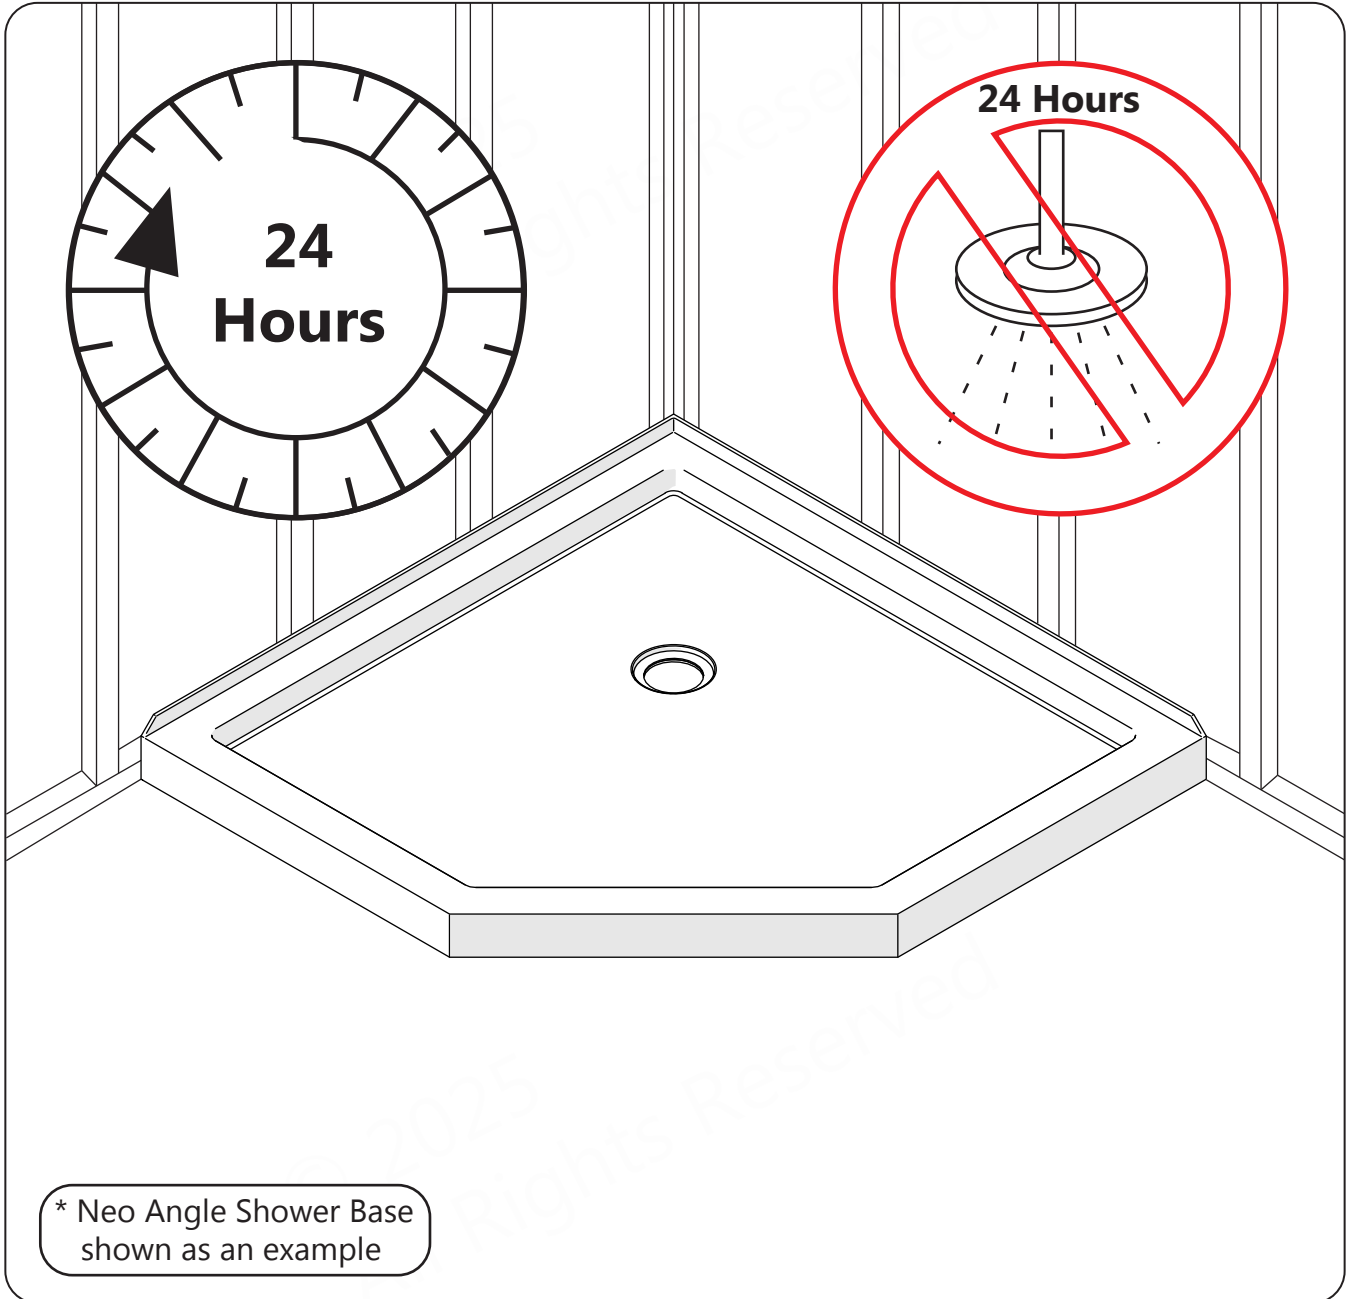


Product Maintenance

ACRYLIC BASES and BACK WALLS: To ensure long lasting life for your acrylic base and/or back walls, wipe them off after each use with a soft cloth. To clean the acrylic base and/or back walls, use non-abrasive sprays or cream-based cleaners. Avoid the use of aerosol spray cleaners. Never use abrasive cleansers, metal brushes, or scrapers that could scratch, damage, or dull the surface.

NOTES:

This image shows a single sheet of white paper with horizontal blue ruling lines. The lines are evenly spaced and run across the width of the page. There is no text or other markings on the paper.

Low Profile Acrylic Shower Base

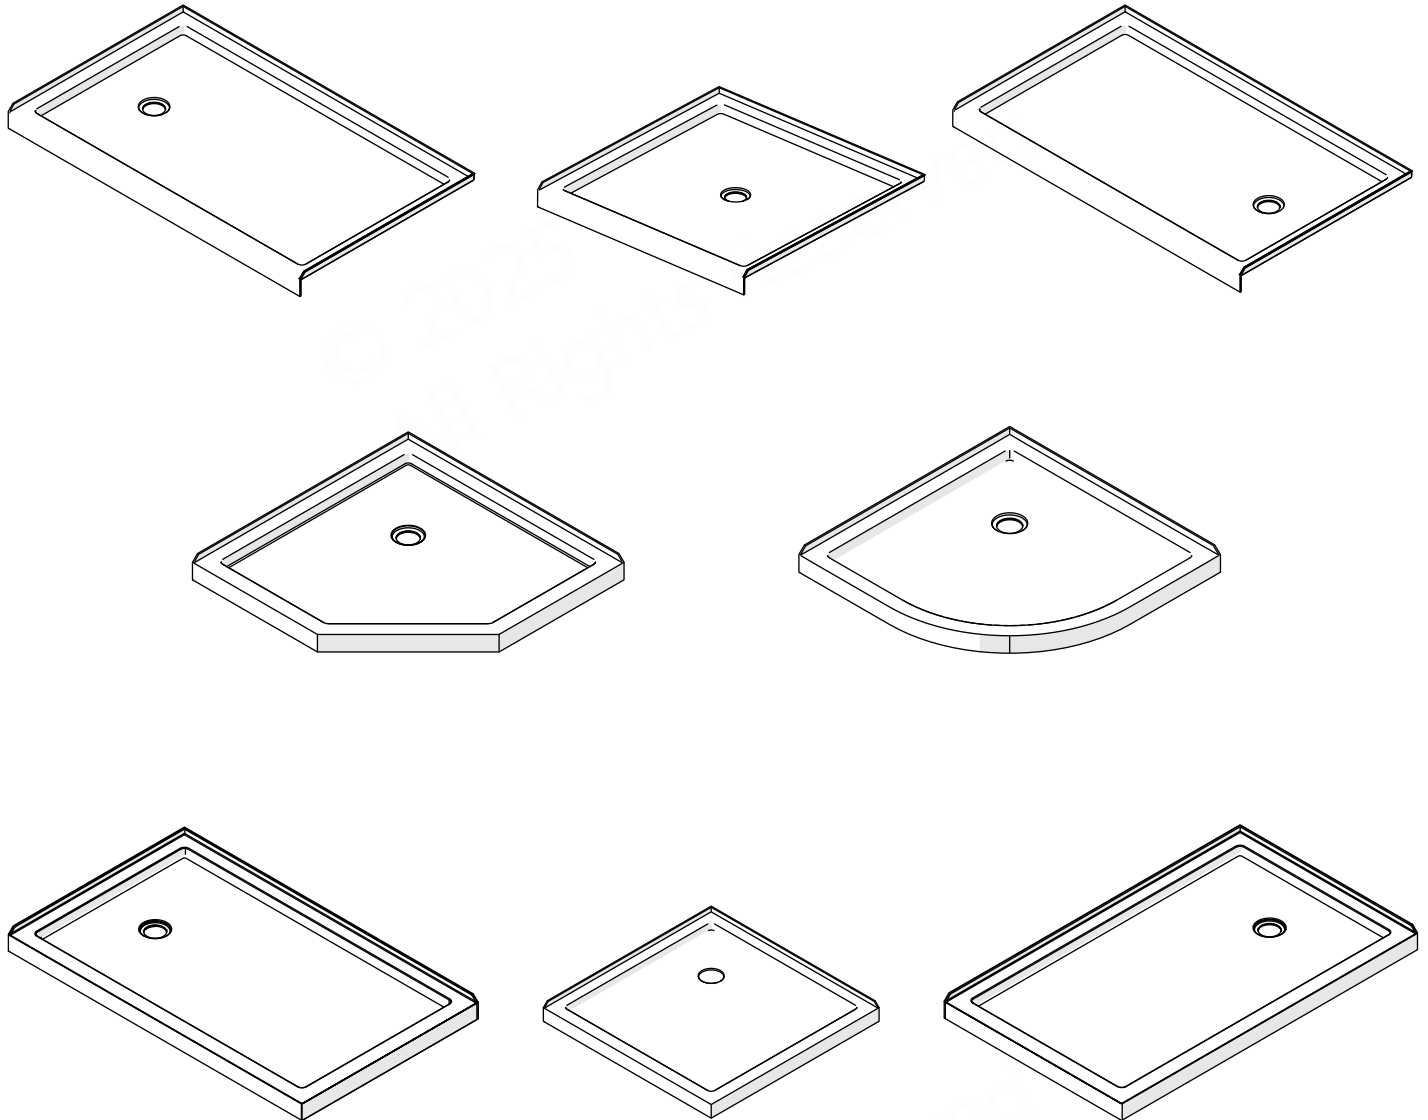

Prior to contacting the manufacturer, please have the following information readily available:

- Purchase Order Information
- Name, PO Number, Dealer/Vendor Name, etc.
- SKU/Model Number
- Factory Part Information

IMPORTANT!

The manufacturer reserves the right to alter, modify or redesign products at any time without prior notice for the purpose of product improvement and customer experience.



IMPORTANT!

The product owner should keep this installation manual for their records so they have it for future reference.

If you are a contractor installing this unit for a customer, it is recommended that you complete the section below, keep only this page for your own records, then leave the rest of this manual with your client.

Contact the manufacturer directly for more information on warranty, troubleshooting, replacement parts, customer support, etc.

Record the following purchase information for your records or in the event you need to contact the manufacturer:

Purchase Order
Number _____

Store/Vendor
Purchased From _____

Installation Date _____

OD Number
(optional) _____
*found on the shipping box or label
if available.

Installed By: _____

SKU Number _____