
Item Number: A03931

WARNING (To reduce the risk of fire, electric shock, or personal injury):

- 1. We suggest installation by a licensed electrician.
- 2. Please read the instruction carefully and save it as you may need it at a later time.
- 3. Before you start, **NEVER** attempt any work without shutting off the electricity until the work is done. A) Go to the main fuse, or circuit breaker, box in your home. Place the main power switch in the "**OFF**" position.
 - B) Place the wall switch in the "OFF" position.
- 4. Mounting surface should be clean, dry, flat, strong enough and 1/4" larger than the canopy on all sides. Any gaps between the mounting surface and canopy exceeding 3/16" should be corrected as required.
- 5. Make sure that the ceiling or wall can stand the weight of the lamp before installation.
- 6. Make sure the voltage you are using is **120V**. The maximum wattage is **40W** per bulb.
- 7. Keep the lamp away from acidic and alkaline substances in case of damaging the surface of the lamp.
- 8. When replacing bulbs, you should turn off or unplug the lamp and you must wait until it is cool as bulbs get hot quickly.
- 9. The safety instructions appearing in this manual are not meant to cover all possible conditions that may occur. It must be understood that common sense, caution and care must be used with any electrical products.

IMAGE FOR FINISHED PRODUCT:

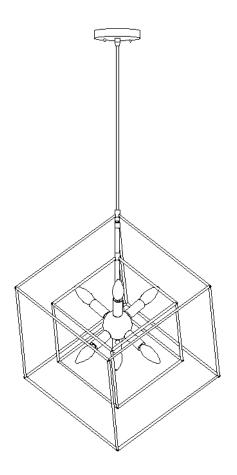


www.ihomeangel.com Page: -1-/4



TOOLS REQUIRED (NOT INCLUDED):

Before starting assembly and installation please prepare the needed tools as below picture

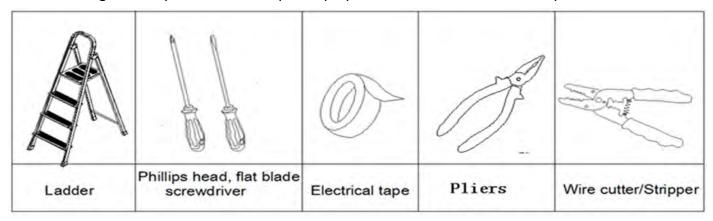

PARTS TYPE & QTY INCLUDING:

- (A) Mounting plate assembly (1)
- (B) Green ground screw (1)
- (E) Canopy (1)
- (F) Strain relief (2)
- (G) Ball knob (2)
- (H) Cord (1)
- (I) Iron frame (1)
- (J) Socket (6)

ACCESSORIES & QTY ENCLOSED:

- (C) Plastic Wire Connector (3)
- (D) Mounting screw (2)
- (K) Allen wrench (1)


A B B C C D D H K T I

ASSEMBLY & INSTALLATION INSTRUCTIONS:

- 1. Carefully remove the fixture from the carton and check that all parts and accessories are included as shown in the above illustration.
- 2. Turn off power


Before you start the installation, NEVER attempt any work without shutting off the electricity until the work is done.

- A) Go to the main fuse, or circuit breaker, box in your home. Place the mainpower switch in the "OFF" position.
- B) Place the wall switch in the "OFF" position.
- 3. Unscrew the ball knobs (G) from canopy (E) then gently remove the mounting plate assembly (A).

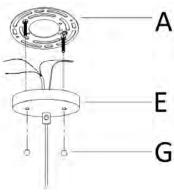


Page: -2-/4


- 6
- 4. Adjust the length of the cord (H) to achieve the desired height of the mounted fixture.
- 1) Use the Allen wrench (K) to unscrew the screw in strain relief (F), carefully pull and push the cord (H) through the strain relief (F) and the canopy (E) to lengthen or shorten the cord (H).
- 2) Once the desired height of fixture is achieved. Carefully tighten the screw till snug.

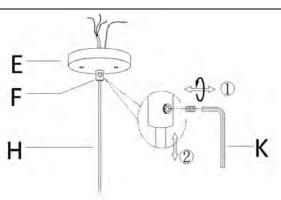

5. If needed, shorten the extra length of the fixture wires through the cord (H) so that they all are at least 6 inches (152.4 mm) long above the canopy (E) within the outlet box.

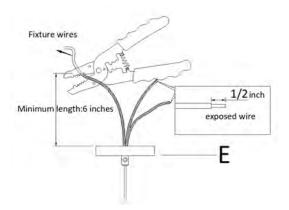


- 6. Carefully pass the fixture wires through the mounting plate assembly (A).
 - Secure the mounting plate assembly (A) to outlet box with the mounting screws (D).

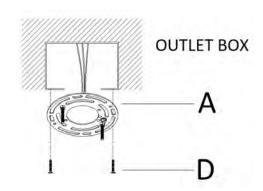

7. Make wire connections

Connect wires as below wires connection shown. PLEASE REFER TO THE FOLLOWING CHARTS, NEVER CONNECT OTHER WIRES TO GROUND WIRES.


Connect ground wires according to the below chart

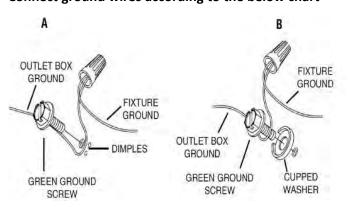

Connect wires according to the below chart

Connect Black or Red Supply Wire to:	Connect White Supply Wire to:
Black	White
*Parallel cord (round & smooth)	*Parallel cord (square & ridged)
Clear, Brown, Gold or Black without tracer	Clear, Brown, Gold or Black with tracer
Insulated wire (other than green) with copper conductor	Insulated wire (other than green with silver conductor

*Note: When parallel wires (SPT I & SPT II) are used. The neutral wire is square shaped or ridged and the other wire will be round in shape or smooth (see illus.)




Page: -3-/4

Twist wires together with plastic wire connector (C) until tightly joined, and wrap each connector with approved electrical tape for a more secure connection and carefully tuck all wires into the outlet box. Note: be sure that no wire strands are not exposed.

8. Remove the ball knobs (G) from the mounting plate assembly (A). Fix the canopy (E) to the mounting plate assembly (A) and secure with the ball knobs (G).

Note: The canopy (E) should be snug against the ceiling and the ball knobs (G). If not, adjust the length of the pre-assembled threaded nipples on the mounting plate assembly (A) by unscrewing the preassembled hex nuts and then screwing the threaded nipples in or out of the mounting plate (A) until the length is achieved. Tighten the hex nuts and back to step 8.

9. Install bulbs (Not included) (Please do not exceed the maximum wattage recommended on the socket.)

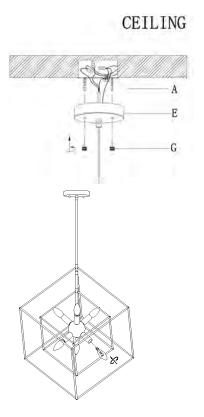

10. Check everything is already installed properly, then you could turn on the light. Enjoy!

CLEANING

To clean, wipe the fixture with a soft cloth. Do not use abrasive materials such as scouring pads or powders, steel wool or abrasive paper.

ORDERING PARTS

Keep this sheet for future reference in case you need to order replacement parts. All parts for this fixture can be ordered from the place of purchase. Be sure to use exact wording from illustration when ordering parts.