


Item Number:A05318

WARNING (To reduce the risk of fire, electric shock, or personal injury):

1. We suggest installation by a **licensed electrician**.
2. Please read the instruction carefully and save it as you may need it at a later time.
3. Before you start, **NEVER** attempt any work without shutting off the electricity until the work is done.
 - » Go to the main fuse, or circuit breaker, box in your home.
Place the main power switch in the **"OFF"** position.
 - » Place the wall switch in the **"OFF"** position.
4. Mounting surface should be clean, dry, flat, strong enough and 1/4" larger than the canopy on all sides. Any gaps between the mounting surface and canopy exceeding 3/16" should be corrected as required.
5. Make sure that the ceiling or wall can stand the weight of the lamp before installation.
6. Make sure the voltage you are using is **120V**. The maximum wattage is **LED, 25W**.
7. Keep the lamp away from acidic and alkaline substances in case of damaging the surface of the lamp.
8. When replacing bulbs, you should turn off or unplug the lamp and you must wait until it is cool as bulbs get hot quickly.
9. The safety instructions appearing in this manual are not meant to cover all possible conditions that may occur. It must be understood that common sense, caution and care must be used with any electrical products.

IMAGE FOR FINISHED PRODUCT:

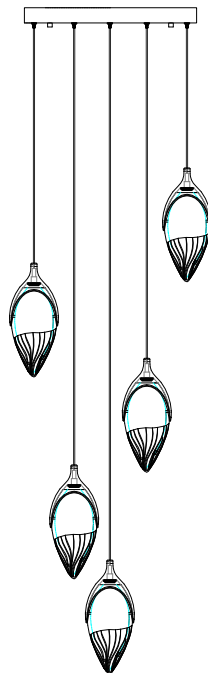

ORDERING PARTS





Keep this sheet for future reference in case you need to order replacement parts. All parts for this fixture can be ordered from the place of purchase. Be sure to use exact wording from illustration when ordering parts.

CLEANING

To clean, wipe the fixture with a soft cloth. Clean glass with a mild cleaner (such as mild and non-abrasive soap). Do not use abrasive materials such as scouring pads or powders, steel wool or abrasive paper.

TOOLS REQUIRED (NOT INCLUDED):

Before starting assembly and installation please prepare the needed tools as below picture

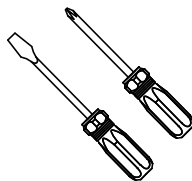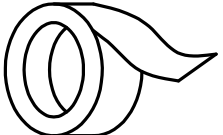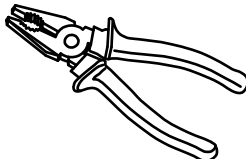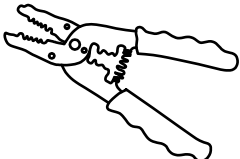
				
Ladder	Philips Head or Flat Blade Screwdriver	Electrical Tape	Pliers	Wire Cutter/Stripper

PARTS TYPE & QTY INCLUDED:

- (E) Mounting plate (1)
- (F) Canopy (1)
- (G) Lock nut (5)
- (H) Ball nut (4)
- (I) Cord (5)
- (J) Metal cover (5)
- (K) Screw (10)
- (L) Teardrop-shaped glass (5)
- (M) Quick link (1)
- (N) Rectangle shape slide buckle (5)


ACCESSORIES & QTY ENCLOSED:

- (A) Anchor (4)
- (B) Mounting screw (2)
- (C) Plastic Wire Connector (3)
- (D) Anchor screw (4)
- (K) Screw (2) (spare part)

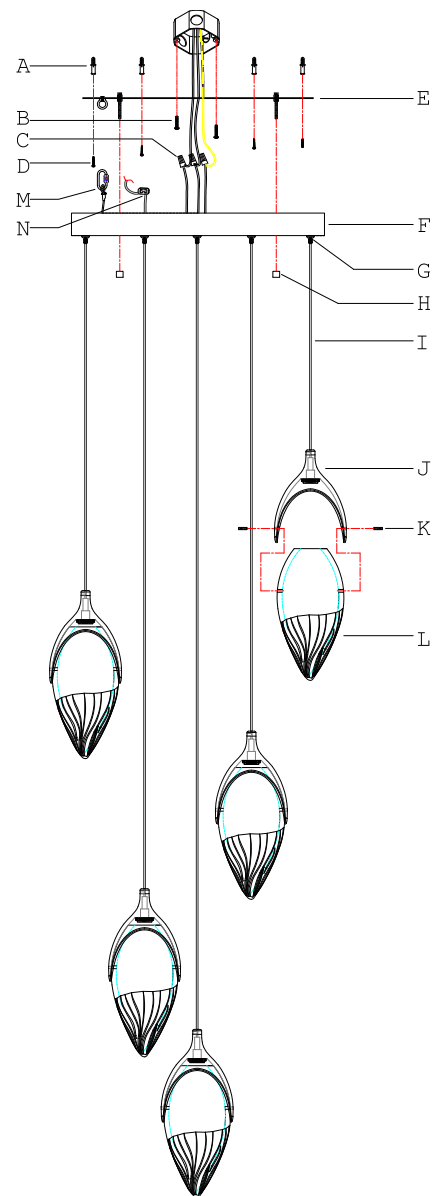


ASSEMBLY & INSTALLATION INSTRUCTIONS:

1. Carefully remove the fixture from the carton and check that all parts and accessories are included as shown in the above illustration.
2. Turn off power
Before you start the installation, NEVER attempt any work without shutting off the electricity until the work is done.
 - » Go to the main fuse, or circuit breaker, box in your home. Place the main power switch in the "OFF" position.
 - » Place the wall switch in the "OFF" position.
- 3 » 1) Unscrew ball nuts (H) from canopy (F).
2) Gently remove mounting plate (E) and then set them aside for later installation.

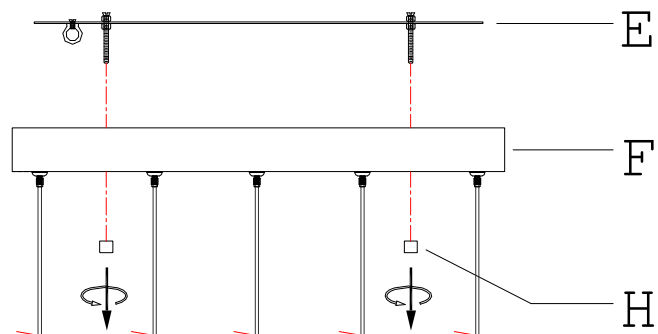


4 » Please adjust the hanging height of the fixture :

- 1) Screw lock sleeves from lock nuts (G).
- 2) Press down and hold lock nuts (G) of canopy by hand.
- Pull or push cords (I) in and out of canopy (F) to increase or decrease the hanging height.
- 3) Screw lock sleeves back to lock nuts (G) as shown in the illustration.
- **Please note that after adjusting the height of the fixture, please adjust rectangle shape slide buckles (N) to the bottom of canopy (F) with hands as shown in the illustration.**

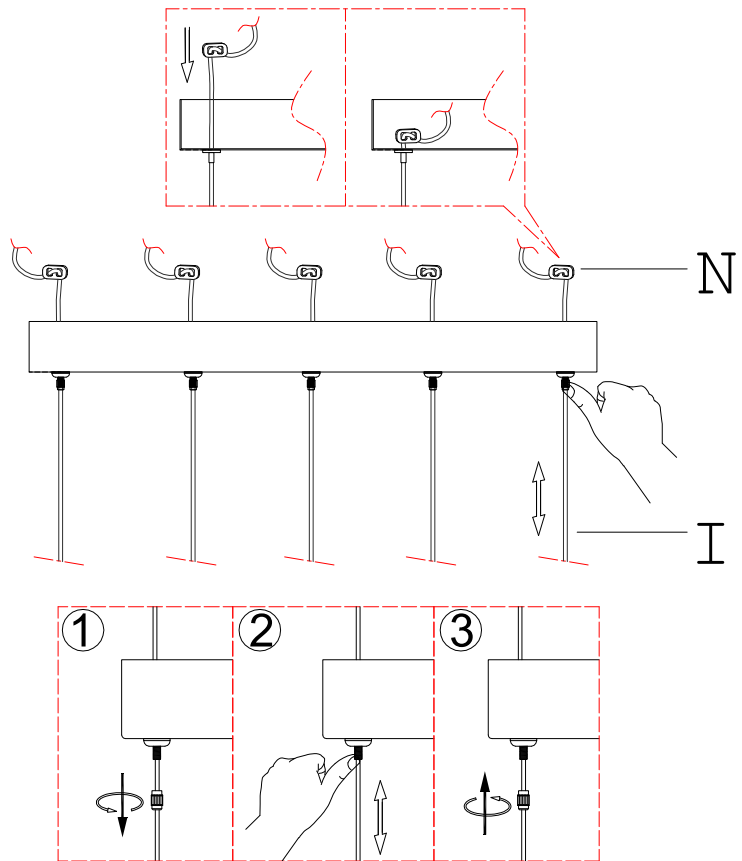

5 » Carefully pass the supply wires from the outlet box through mounting plate (E).

- NOTE: To drill the holes in the wall for anchors (A), attach mounting plate (E) to wall with screws (B & D)
- 4) Attach mounting plate (E) to outlet box and then mark the position of holes in the wall with a pen as shown in the illustration.
 - 5) Drill holes and gently knock anchors (A) into the marked holes until anchors (A) are level with the wall.
 - 6) Secure mounting plate (E) to the wall with screwing anchor screws (D) into anchors (A) and ,mounting screws (B) into holes of mounting plate (E).

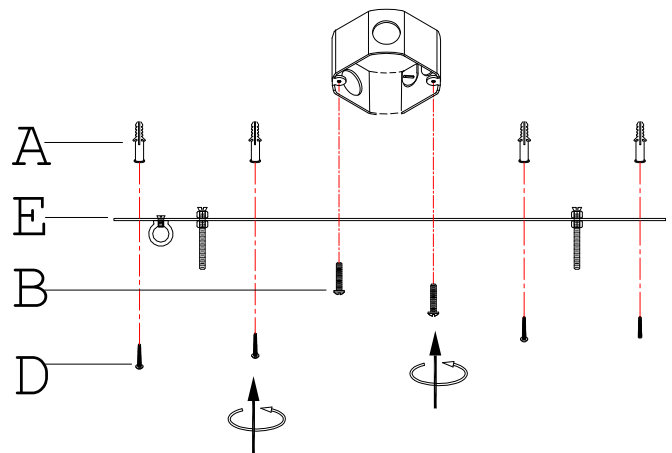


NOTE: the side of mounting plate (E) marked "GND" must face out.

6 » Make wire connections

Connect wires as shown in the charts below. **PLEASE NOTE THAT GROUND WIRE IS BARE COPPER WIRE, NEVER CONNECT OTHER WIRES TO GROUND WIRES.**

Connect ground wires according to the chart below

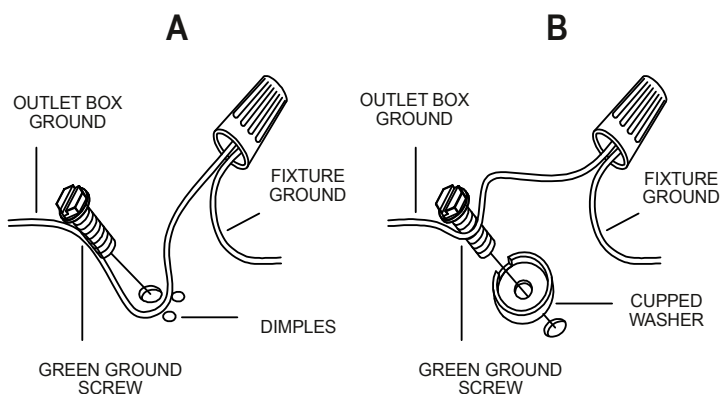

Connect wires according to the chart below


Connect Black or Red Supply Wire to:	Connect White Supply Wire to:
Black	White
*Parallel cord (round & smooth)	*Parallel cord (square & ridged)
Clear, Brown, Gold or Black without tracer	Clear, Brown, Gold or Black with tracer
Insulated wire (other than green) with copper conductor	Insulated wire (other than green) with silver conductor

* Note: When parallel wires (SPT I & SPT II) are used. The neutral wire is square shaped or ridged and the other wire will be round in shape or smooth (see illus.)


Neutral Wire

- **Twist wires together with plastic wire connectors until tightly joined.**
- **Wrap each connector with approved electrical tape.**
- **Be sure that no wire strands are exposed and then carefully tuck all wires into the outlet box.**

- 7 » 1) Open quick links (M), and then hang it onto mounting plate (E) as shown in the illustration.
- 2) Position canopy (F) in place.
- 3) Carefully thread ball nuts (H) through the holes in canopy (F) and mounting plate (E) and then secure them by tightening ball nuts (H).

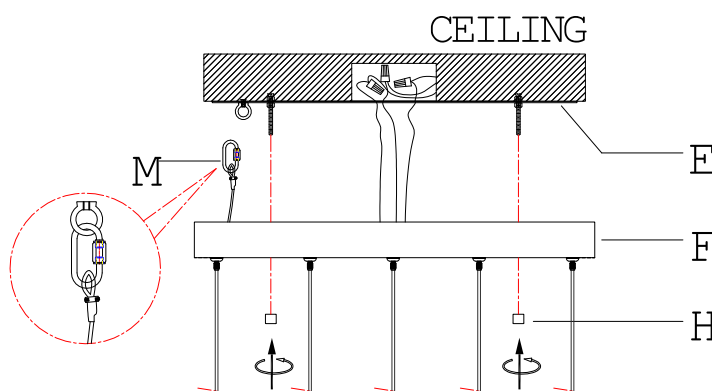

- 8 » 1) Align holes of teardrop-shaped glasses (L) and holes of metal covers (J), and then screw screws (K) into holes to secure the unit (L & J).
- **Before installation, please loosen the screws (K) slightly first, and do not completely remove the screws.**
- 2) Please adjust the hanging height of the fixture :
- (1) Screw lock sleeves from lock nuts (G).
- (2) Press down and hold lock nuts (G) of canopy by hand.
- (3) Pull or push cords (I) in and out of canopy (F) to increase or decrease the hanging height.
- (4) Screw lock sleeves back to lock nuts (G) as shown in the illustration.

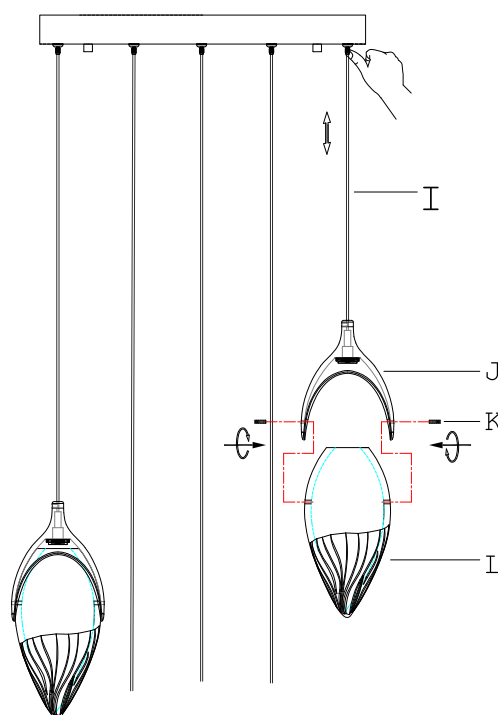

9. Check that everything is installed properly, then you can turn on the light. We hope you enjoy your new lighting!