

Technical Support and E-Warranty Certificate www.vevor.com/support

# 16 INCH PIZZA OVEN INSTRUCTION MANUAL

**MODEL: GB-GO16A-R** 


We continue to be committed to provide you tools with competitive price.

"Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and doses not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.



#### 16 INCH PIZZA OVEN

#### GB-GO16A-R

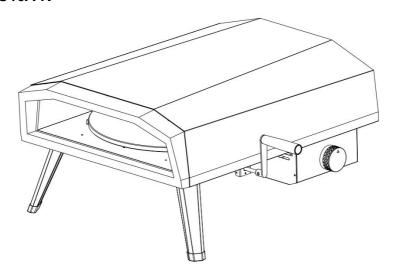

# **NEED HELP? CONTACT US!**

Have product questions? Need technical support? Please feel free to contact us:

CustomerService@vevor.com

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

#### **CSA-EN**

#### **WARNINGS**

# **A**WARNING

To reduce the risk of fire, burn hazard or other injury, read this safety manual carefully and completely before using this appliance.

# **A**WARNING

Before cleaning, make sure the gas supply and control knob is in the OFF position and that the burner and oven has cooled.

# **▲** DANGER

Never operate this appliance unattended. If a fire should occur, keep away from the appliance and immediately call your fire department. Do not attempt to extinguish an oil or a grease fire with water.

# **▲** DANGER

### If you smell gas:

- · Shut off gas from the appliance
- Extinguish any open flame
- If odor continues, keep away from the appliance and immediately call your gas supplier or your fire department.

Failure to follow these instructions could result in fire, explosion or burn hazard which could cause property damage, personal injury or death.

# **A**WARNING

#### FOR OUTDOOR USE ONLY.

# **A**WARNING

- a. Keep the fuel supply hose away from any heated surface(s).
- b. The use of alcohol, prescription or non-prescription drugs may impair the consumer's ability to properly assemble or safely operate the appliance.
- c.Keep children and pets away from the appliance at all times.
- d.Do not move the appliance when in use.
- e. This appliance is not intended for and should never be used as a heater.

# **A**WARNING

Spiders and insects can nest inside the burner of the appliance and disrupt gas flow. Inspect the burner at least once a year.

# **▲**WARNING

When using a match to light the appliance, make sure to use the included matchstick holder.

# **▲**WARNING

Do not store this appliance indoors unless the gas cylinder is disconnected.

# **A**WARNING

Do not store gas cylinder in a building, garage or any other enclosed area and keep out of reach of children at all times.

# **A**WARNING

This appliance is not intended to be installed in or on recreational vehicles and/or boats.

# **A**WARNING

Before each use, check all air supply connections for leaks. Do not use the appliance until all connections have been checked and there are no leaks.

# **A**WARNING

Do not smoke while leak testing. Neve use an open flame for the leak test.

# **A**WARNING

When lighting, keep your face and hands as far away from the appliance as possible.

# **A**WARNING

Minimum clearance from sides of unit to combustible construction is 914mm (36 inches).

# **A**WARNING

This instruction manual contains important information required for the proper assembly and safe use of the appliance. Read and follow all warnings and instructions before assembling and using the appliance. Follow all warnings and instructions when using the appliance.

Keep this manual for future reference.

# **A**WARNING

This manual states that an oven, fryer or broiler shall not be used on or under any apartment or condominium balcony or deck.

# **A**WARNING

This appliance is not intended to be installed in or on a boat. This appliance is not intended to be installed in or on a recreational vehicle.

# **A**WARNING

Keep the fuel supply hose away from any heated surface(s).

# **A**WARNING

This manual contains instructions for cleaning and inspecting the hoses before each use of the appliance. If there is evidence of abrasion, wear, cuts, or leaks, the hose must be replaced prior to the appliance being put into operation. The replacement hose assembly shall be that specified by the manufacturer.

# **▲**WARNING

This appliance shall be used only outdoors, and shall not be used in a building, garage, or any other enclosed area.

# **A**WARNING

This manual includes a list of required parts necessary for the safe operation of the appliance, directions for proper assembly and for assembly of installed parts and accessories supplied with the appliance, and proper procedures for gas leak testing.

# **A**WARNING

The appliance should not be located or used under overhead unprotected flammable building materials or surfaces. For grills, fryers or griddles, the minimum clearance to any structure or combustible material should be at least 10 feet (3 metres).

#### NOMINAL HOURLY GAS CONSUMPTION

GB-GO16A - Outdoor Use Gas Grill				
Gas Type	Number of Burners	Injector Size Main Burner	Total Gas Consumption BTU	Gas Pressure KPa
Propane	1	0.9	19100	2.74

#### **MANUFACTURER**

Guangdong Sheng Bao Industrial Co.,Ltd

Unit 601,602,603,Building 27,Shunde Zhifu garden, No.8, 2nd Ring Road, Gaozan village, Xingtan town, Shunde District Foshan, Guangdong 528325 China

#### **BEFORE LIGHTING**

Inspect the gas supply hose prior to turning on the gas. If there is evidence of cut, wear or abrasion, it must be replaced prior to use. Screw the regulator onto the gas cylinder. Check the hose and regulator connections for leaks with a soap and water solution before igniting the appliance.

# ALP GAS CYLINDER WARNING

- 1.Do not store spare liquid propane gas cylinder under or near this appliance.
- 2. Never fill the cylinder beyond 80 percent capacity.
- 3.Liquid propane cylinder must be fitted with an OVERFILL PROTECTION DEVICE (OPD).
- 4. If the above information is not strictly adhered to, a fire may occur resulting in death or serious injury.
- 5. This manual states that the installation must conform to local codes or, in the absence of local codes, to the National Fuel Gas Code, ANSI Z223.1/NFPA 54,

Storage and Handling of Liquefied Petroleum Gases, ANSI/NFPA 58; or Natural Gas and Propane Installation Code, CSA B149.1; Propane Storage and Handling, CSA B149.2.

#### SAFETY PRACTICES TO AVOID INJURY

When properly cared for, your oven will provide safe, reliable service for many years. However, extra care must be taken as the heat generated by the oven can increase the risk of accidents.

# When using this oven basic practices must be followed, including but not limited to following:

- Do not repair or replace any part of the oven unless specifically recommended in this manual. All other service should be referred to a qualified technician.
- Children should not be left alone or unattended in an area where the oven is being used. Do not allow children to sit, stand or play around the oven at any time.
- Never let clothing or other flammables come in contact with or too close to any burner or hot surface until it has cooled. Fabrics can catch fire and cause serious personal injury.
- For personal safety, wear proper apparel. Loose fittings garments or sleeves should never be worn while using the oven. Some synthetic fabrics are highly flammable and should not be worn while cooking.
- Do not heat unopened food containers as a build-up of pressure may cause the containers to burst. When lighting the burner, always pay close attention to what you are doing.
- When using the oven, do not touch the outer shell, stone baking board or immediate surroundings as these areas become extremely hot and could cause burns.
- Do not use the oven to cook extremely fatty meats or other products which increase flare-up.
- Keep the area surroundings the oven free from combustible material including fluids, trash and vapours such as gasoline or charcoal lighter fluid.
- Do not obstruct the flow of combustion and ventilation air.
- · Never use the oven in extremely windy conditions

• The temperature under the oven is high. Do not place the oven on a table with flammable table clothes, plastic or any other inflammable materials.

Guangdong Sheng Bao Industrial Co., Ltd

Unit 601,602,603,Building 27,Shunde Zhifu garden, No.8, 2nd Ring Road, Gaozan village, Xingtan town,

Shunde District Foshan, Guangdong 528325 China

#### the appliance is not intended for commercial us

- 1. In the event of an oil or grease fire, do not attempt to extinguish the fire with water. Call the fire service immediately. In some cases, type BC or ABC extinguishers may suppress the fire.
- 2. If it rains, snows, hails, sleet or other forms of precipitation, turn off the appliance burner and gas supply. Do not attempt to move the appliance or cooking vessel.
- 3. When cooking, the appliance fryer or boiler must be located on a horizontal, stable, non-combustible surface and free from combustible materials. For this reason, asphalt surfaces (tarred surfaces) may not be acceptable.

Do not move the appliance when in use. Allow the cooking vessel to cool to 115°  $F(45^{\circ}C)$  before moving or storing.

This appliance will be hot during and after use. Use insulated oven mitts or gloves for protection from hot surfaces or splatter from cooking liquids.

#### Avoid bumping of or impact with the appliance.

LPG cylinders used must be manufactured and marked in accordance with the specifications for LP gas cylinders, U.S. Department of Transportation (DOT) or the Standard for Cylinders, Spheres and Tubes for the Transportation of Dangerous Goods, CAN/CSA-B339;

Cylinders must be stored outdoors out of the reach of children and shall not be stored in a building,garage, or any other enclosed area;

the pressure regulator and hose assembly supplied with the appliance must be used. Replacement pressure regulators and hose assemblies shall be those


specified by the appliance manufacturer;

the cylinder supply system must be arranged for vapor withdrawal;

#### xii) a statement:

- 1.do not store a spare LP gas cylinder under or near this appliance;
- 2.never fill the cylinder beyond 80 percent full;and
- 3.if the instructions in(b)(xii)(1)and(b)(xii)(2)are not followed exactly, a fire causing death or serious injury may occur.

"Install dust caps on the cylinder valve outlet when the cylinder is not in use. Install only the type of dust cap on the cylinder valve outlet of the cylinder valve. Other types of dust caps or plugs may cause propane to leak."

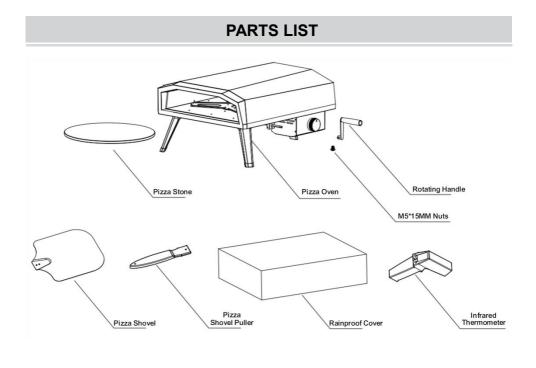


#### **ASSEMBLY**


Before assembly, make sure all parts are present. If any part is missing or

damaged, do not attempt to assemble the appliance. Contact customer service for replacement parts.


1.Insert the stone baking board.

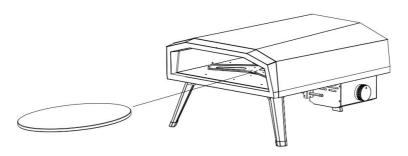

# 2.Unfold legs.

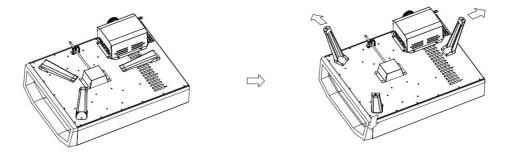

3.Install the handle of rotating base.

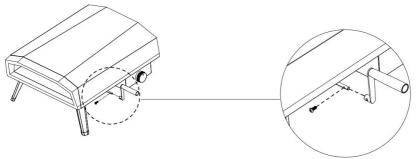


4.Gas hose has been preinstalled.



5. Connecting to gas tank.

## **A**WARNING

- · Please always keep the gas bottle in upright position.
- The 20 lb LPG cylinder measures 12.2 inches in diameter and 17.9 inches high.
- If the appliance is not in use, the gas must be turned off at the supply cylinder.
- The cylinder used must include a collar to protect the cylinder valve.
- The minimum distance for the appliance and the 20lb gas tank is 40 inches apart.

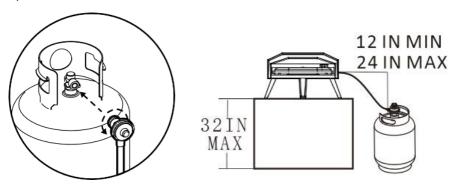

#### Xd01 GAS REGULATOR

This gas fitting is clockwise. Make sure that the tank is completely switched off and screw the regulator as far as possible into the gas tank valve.

#### CONNECTING THE LIQUID PROPANE GAS CYLINDER

1.To connect the liquid propane gas cylinder:

- 2. The cylinder valve should be in OFF position.
- 3.Make sure the burner valve is in OFF position.
- 4.Inspect the valve connections, port and regulator assembly. Remove debris and inspect the hose for damage.
- 5. When connecting the regulator assembly to the valve, tighten the nut clockwise by hand until it stops.
- Use of a wrench could damage the quick coupling nut and result in a hazardous situation.
- 6. Open the cylinder valve fully by turning the valve counterclockwise.
- 7.Before lighting the oven, use a soap and water solution to check all connections for leaks.
- 8.If a leak is found, turn the cylinder valve OFF, and do not use the oven until local liquid propane dealer can make repairs.

#### CONNECTING THE LIQUID PROPANE GAS CYLINDER

- 1. Turn the oven burner valve OFF and make sure the oven is cool.
- 2. Turn the liquid propane cylinder valve OFF by turning clockwise until it stops.
- 3.Detach the regulator assembly from the cylinder valve by turning the quick coupling nut counterclockwise.
- 4. Place dust cap for cylinder valve outlet whenever the cylinder is not in use.

#### **LEAK TESTING**

#### **GENERAL**

Although the gas connections of the appliance are leak tested prior to packing and shipment, a complete test must be performed at the installation site.

Before each use, check all the gas connections for leak testing using the procedure listed below. If the smell of gas is detected at any time, you should immediately stop using and check the entire system for leaks.

#### **BEFORE TESTING**

Make sure all packing material has been removed from the appliance.

Make a solution of one part liquid detergent and one part water. You will need a

spray bottle, brush or rag to apply the solution to the fittings.

#### TO TEST

- 1.Turn the burner valve OFF.
- 2. Turn the liquid propane cylinder valve on counterclockwise to open the valve.
- 3.Apply the soap solution to all gas fittings. Soap bubbles would appear where a leak is present.
- 4.If a leak is present, immediately turn the gas supply OFF and tighten leaky fittings.
- 5. Turn the gas back ON and recheck.
- 6. Should the gas continue to leak from any of the fittings, turn the gas supply OFF and contact customer service.

#### **OPERATING INSTRUCTIONS**

#### **USING THE OVEN**


Each burner is rated at 13600 BTU/Hr.

#### To begin:

- 1.Make sure the oven has been leak tested and properly placed.
- 2. Remove any remaining packing material.
- 3.Light the burner using the LIGHTING INSTRUCTIONS below.


# LIGHTING INSTRUCTION TO LIGHT THE BURNER

- 1.Make sure the control knob is in OFF position, and then turn the liquid propane cylinder valve ON by slowly turning counterclockwise.
- 2. Push in and slowly turn the control knob anticlockwise until you hear a click and the burner ignites.
- 3.If burner doesn't light, turn the knob OFF, wait 5 minutes and repeat the lighting.



#### TO LIGHT WITH A MATCH

- 1.If burner will not light after several attempts using the control knob, the burner may be lit with a match.
- 2.If you have already attempted to light the burner using the control knob, wait 5 minutes for any gas to dissipate.
- 3 Insert a match into the matchstick holder, ignite the match and insert through the oven opening to the burner.
- 4. Push and turn the control knob to HI slowly, the burner should ignite immediately.
- 5.If the burner does not light within seconds, turn the control knob OFF and wait 5 minutes and try again.

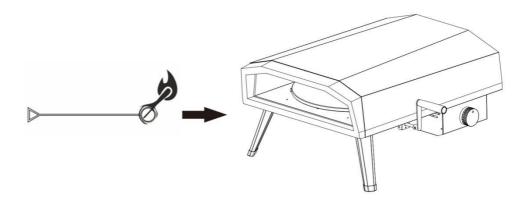

# **CARE AND MAINTENANCE**

When storing GB-GO13A, avoid direct sunlight if possible and store indoors for long-term storage. GB-GO13A should not be exposed to harsh weather conditions such as snow, heavy rain and strong winds.

Wait for GB-GO13A to cool completely before moving

The outer shell of GB-GO13A may fade over time and through use. This will not affect performance.

#### STONE BAKING BOARD

1.DO NOT use the stone over an open flame.

- 2. Avoid extreme temperature change to the stone. DO NOT place frozen foods on a hot stone.
- 3. The stone is fragile and can break if bumped or dropped.
- 4. The stone is very hot during use and stays hot for a long time after use.
- 5.DO NOT cool the stone with water when the stone is hot.
- 6.After cleaning the stone with water, please dry the stone before use. This can be done in a conventional oven at 60°C (140°F) for 2 hours.

Problem	Possible Cause	Prevention/Solution
Burner will not light	<ol> <li>No gas flow.</li> <li>Coupling nut and regulator not fully connected.</li> <li>Obstruction of gas flow.</li> <li>Disengagement of burner to valve.</li> <li>Incorrect assembly.</li> </ol>	1.Check to see if propane tank is empty.  2.Turn the coupling nut about one- half to three quarters additional turn until solid stop.  Tighten by hand only - do not use tools.  3.Clear burner tube.  4.Reengage burner and valve.  5.Check steps in assembly instructions.
Sudden drop in gas flow or low flame	1. Out of gas.	1.Check for gas in propane tank.  2.Turn off gas control knob, wait 30 seconds and light oven. If flames are still low, turn off gas control knob and propane tank valve.  Disconnect regulator. Reconnect regulator and leak test. Turn on propane tank valve, wait 30 seconds and then light oven.

Flames blow out	1.High or gusting winds. 2.Low on propane gas.	1.Turn front of oven away from wind. 2.Refill propane tank. 3.Refer to sudden drop in gas flow above.
Flare-up	1.Grease build up. 2.Excessive fat in meat. 3.Excessive cooking temperature. 4.Excess flour on the cooking surface.	1.Clean oven.  2.Trim fats from meat before cooking.  3.Adjust (lower) temperature accordingly.  4.Brush remnant flour from cooking surface.
Flashback (fire in burner tube, roaring sound from burner)	1.Burner and/or burner tubes are blocked. 2.Pressure drop during ingition.	1.Turn gas control knob off. Clean burner and/or burner tubes. 2.Turn off oven, ensure the tank valve is fully open (if applicable) and relight.



**Technical Support and E-Warranty Certificate** www.vevor.com/support