


# Outdoor shower column

Product ID. Q2XNI




Scan for Support  
[support@garvee.com](mailto:support@garvee.com)

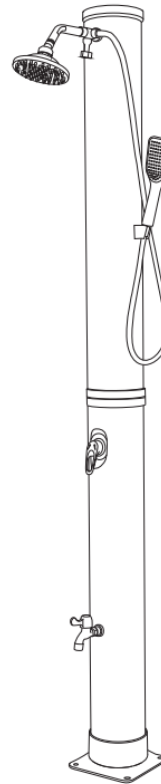

Distributed by  
**GARVEE**.com

# Solar Shower Instruction

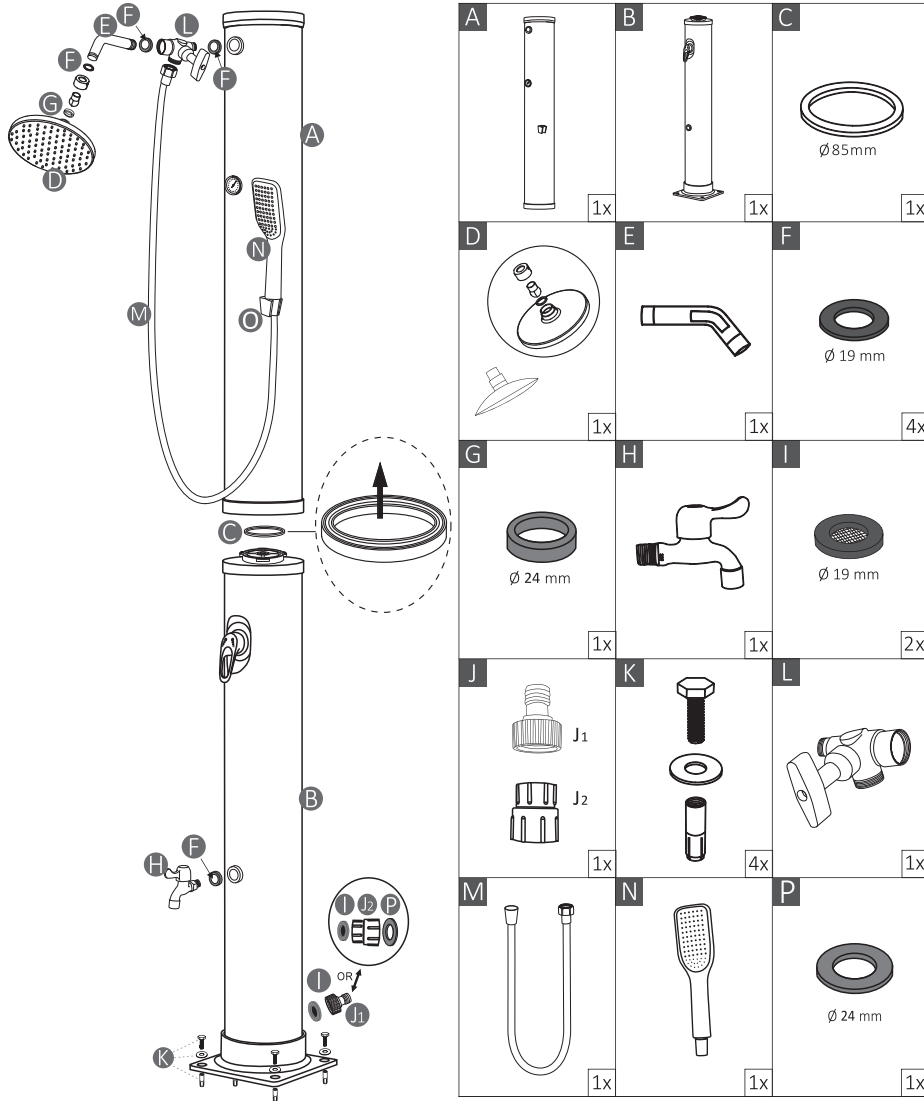

## ASSEMBLY INSTRUCTIONS

1. Choose a location that can access sunlight for your solar shower.
2. Attach the lower stand with a shower base (B) to a concrete slab or wood base using four bolts, washers and nuts (K). It is recommended to use a wrench.
3. Attach the shower head (D) with the gasket (G) & (F) to the extension pipe (E). Attach the extension pipe (E) to the diverter (L) using a gasket (F). Attach the diverter (L) onto the upper stand (A) using a gasket (F). Adjust these parts with your hands, do not use a wrench. Connect the diverter (L) and the hand shower (N) using the shower hose (M). Then put the hand shower (N) onto the holder (O).
4. Place the O-ring (C) onto the lower stand (B).
5. Place the upper stand (A) onto the lower stand (B). Connect the hoses.
6. Turn the locking ring clockwise to connect the two stands (A & B). The handle and shower head (D) need to face in the same direction.
7. Attach the footwash (H) to the lower stand (B) using a gasket (F).
8. Attach connector (J1) with gasket (I) or connector (J2) with gasket (P) and gasket (I) to the lower stand (B).

## INITIAL SET UP OF THE SOLAR SHOWER

1. Open the handle and turn it to position "hot". This ensures that no air pockets are trapped in the hoses while filling with water.
2. Attach your garden hose to the hose connector (J1 General standard or J2 US standard). Turn on the water to fill the solar shower. It will take some minutes to fill up the solar shower.
3. When the water flows out of the shower head (D), turn the handle off. Now the solar shower begins to heat the water.
4. Depending on available sunlight and outside temperature, the solar shower will take about two hours to fully heat the water.
5. Water temperature in the solar shower can reach up to 60°C (140°F) during strong sunshine.

**WARNING:** To avoid scalding, pay attention to turning the handle to "cold" water position before using the solar shower. Then adjust the desired temperature.

## WINTERIZATION

1. Turn off and disconnect the garden hose.
2. Open the handle and turn it to position "hot" to allow the water to drain out of the hoses and solar shower (This takes app. 8-10 minutes). Do not touch or turn the handle while draining, otherwise the water will stop draining out.
3. Turn the locking ring counter-clockwise to unthread the upper stand (A) from the lower stand (B). After this, please disconnect the hose connection. Now the water in the solar shower can run out.
4. Disassemble the lower stand (B) and pour the remaining water out of the solar shower.
5. Clean and dry all solar shower parts.
6. Store all solar shower parts indoors and in a dry place during winter season to prevent frostbite.

## ATTENTION:

- Do not use salt or other anti-freezing methods.
- Recommended water pressure: maximum 3.5 bars (50psi) bars. Not under any circumstances should the solar shower be operated by an additional pump or domestic water supply.
- The heating of the water results in an expansion of the water. This allows the water to escape minimally out of the shower head.
- During initial use of the shower, in order to get rid of plastic and oil smell, please let water run out for several minutes with the shower inner parts with flowing water.

**GARVEE**  
support@garvee.com