
Item Number: A04985H3

WARNING (To reduce the risk of fire, electric shock, or personal injury):

- 1. We suggest installation by a **licensed electrician**.
- 2. Please read the instruction carefully and save it as you may need it at a later time.
- 3. Before you start, **NEVER** attempt any work without shutting off the electricity until the work is done.
 - So to the main fuse, or circuit breaker, box in your home. Place the main power switch in the "OFF" position.
 - » Place the wall switch in the "OFF" position.
- 4. Mounting surface should be clean, dry, flat, strong enough and 1/4" larger than the canopy on all sides. Any gaps between the mounting surface and canopy exceeding 3/16" should be corrected as required.
- 5. Make sure that the ceiling or wall can stand the weight of the lamp before installation.
- 6. Make sure the voltage you are using is **120V**. The maximum wattage is **Type B, Max 60W** per bulb.
- 7. Keep the lamp away from acidic and alkaline substances in case of damaging the surface of the lamp.
- 8. When replacing bulbs, you should turn off or unplug the lamp and you must wait until it is cool as bulbs get hot quickly.
- 9. The safety instructions appearing in this manual are not meant to cover all possible conditions that may occur. It must be understood that common sense, caution and care must be used with any electrical products.

IMAGE FOR FINISHED PRODUCT:

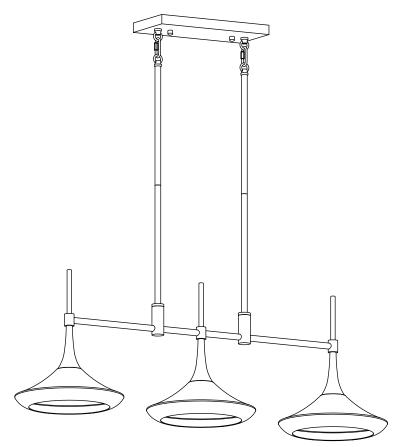


TOOLS REQUIRED (NOT INCLUDED):

Before starting assembly and installation please prepare the needed tools as below picture

				Contraction of the second seco
Ladder	Philips Head or Flat Blade Screwdriver	Electrical Tape	Pilers	Wire Cutter/Stripper

PARTS TYPE & QTY INCLUDING:

- (C) Green ground screw (1)
- (D) Mounting plate (1)
- (E) Canopy (1)
- (F) Loop (4)
- (G) Quick link (2)
- (H) Knob nut (2)
- (I) Stem (4)
- (J) Iron frame (1)
- (K) Pipe (3)
- (L) Socket (3)
- (M) Lampshade (3)
- (N) Socket ring (3)

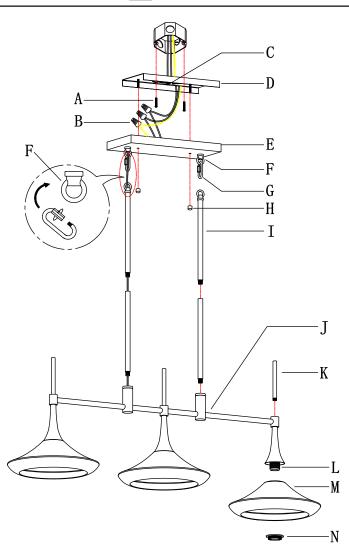


ACCESSORIES & QTY ENCLOSED:

- (A) Mounting screw (2)
- (B) Plastic wire connector (3)

ASSEMBLY & INSTALLATION INSTRUCTIONS:

- 1. Carefully remove the fixture from the carton and check that all parts and accessories are included as shown in the above illustration.
- 2. Make pre-installation

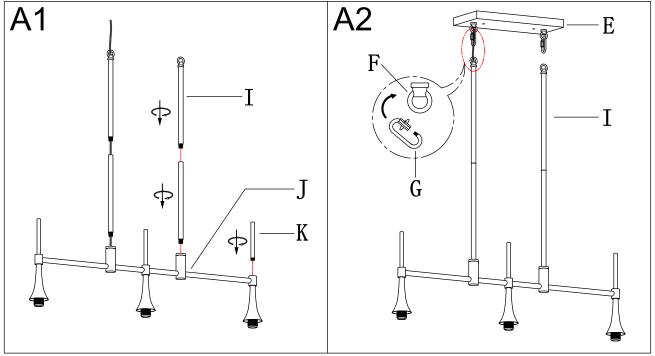


- Step A1 » Connect stems (I) and then screw stems (I) and pipes (K) into iron frame (J) as shown in the illustration.
- Step A2 » Attach quick links (G) to the loops (F) of canopy (E) and the loop(F) of stems (I) to connect them as shown in the illustration.

3. Turn off power

Before you start the installation, NEVER attempt any work without shutting off the electricity until the work is done.

- Go to the main fuse, or circuit breaker, box in your home.
 Place the main power switch in the "OFF" position.
- » Place the wall switch in the "**OFF**" position.



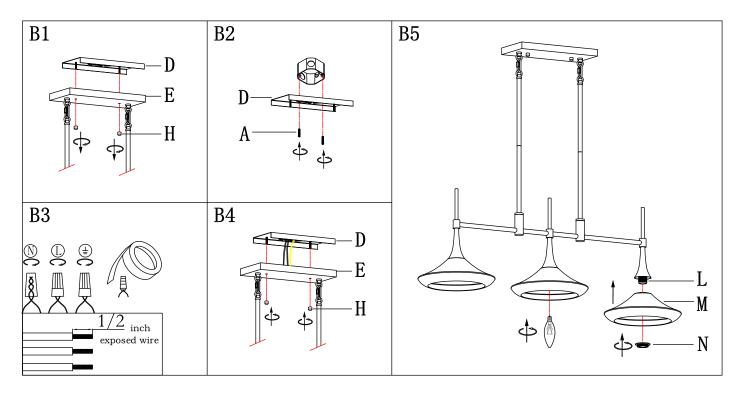



Step B2 » Attach mounting plate (D) to the outlet box with mounting screws (A).

Step B3 » Make wire connections

Connect wires as below wires connection shown. *PLEASE NOTE THAT GROUND WIRE IS BARE COPPER WIRE, NEVER CONNECT OTHER WIRES TO GROUND WIRES.*

GREEN GROUND

SCREW



FIXTURE

GROUND

DIMPLES

GREEN GROUND

SCREW

Connect wires according to the below chart

	Ŭ		
	Connect Black or Red Supply Wire to:	Connect White Supply Wire to:	
	Black	White	
//	*Parallel cord (round & smooth)	*Parallel cord (square & ridged)	
FIXTURE GROUND	Clear, Brown, Gold or Black without tracer	Clear, Brown, Gold or Black with tracer	
_	Insulated wire(other than green) with copper conductor	Insulated wire(other than green) with silver conductor	
CUPPED WASHER	* Note: When parallel wires (SPT SPT II) are used. The neutral wire square shaped or ridged and the other wire will be round in shape c smooth (see illus.)	& Seutral Wire	

Twist wires together with plastic wire connectors until tightly joined.

CUPPED WASHER

• Wrap each connector with approved electrical tape. • Be sure that no wire strands are exposed and then carefully tuck all wires into the outlet box.

Step B4 » Raise canopy (E) to the ceiling and secure canopy (E) in place by tightening knob nuts (H) onto pre-assembled screws on mounting plate (D).

> NOTE: canopy (E) should be snug against the ceiling with knob nuts (H). If not, remove canopy (E), adjust the threaded length of pre-assembled mounting screws on mounting plate assembly (D):

- First, unscrew the pre-assembled hex nuts.
- Then, screw the pre-assembled mounting screws in or out of mounting plate (D).
- When the secure length is achieved, tighten the pre-assembled hex nuts and back to Step B5.
- Step B5 » 1) Remove socket rings (N) from sockets (L).
 - 2) Place Lampshades (M) on sockets (L) and secure them with socket rings (N).
 - 3) Install bulbs (not included) (Please do not exceed the maximum wattage recommended on the socket.)

5. Check everything is already installed properly, then you could turn on the light. Enjoy!

ORDERING PARTS

Keep this sheet for future reference in case you need to order replacement parts. All parts for this fixture can be ordered from the place of purchase. Be sure to use exact wording from illustration when ordering parts.

CLEANING

To clean, wipe the fixture with a soft cloth. Do not use abrasive materials such as scouring pads or powders, steel wool or abrasive paper.