


INSTALLATION MANUAL

Floor Drain

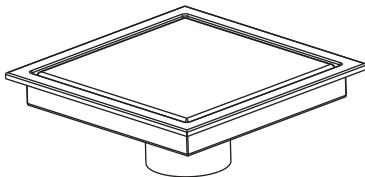

ENGLISH

SAFETY NOTES

-  **WARNING:** To prevent product failure, property damage, and personal injury, please follow these guidelines:
-  The shower is designed exclusively for bathing, personal hygiene, and body cleaning purposes.
-  The shower arm is intended solely to support the showerhead. Do not hang any additional items from the shower arm.
-  Regularly clean your CRANACH product as needed to prevent the buildup of mineral scale and/or soap residue.
-  Please refer to the Cleaning Recommendations when choosing a cleaning agent for this product. Avoid using cleaning products that contain chlorine bleach, lye, hydrochloric acid, formic acid, acetic acid, or abrasive materials.

FAILURE TO ADHERE TO THESE INSTRUCTIONS MAY LEAD TO PRODUCT DAMAGE, MALFUNCTION, AND VOIDING OF THE WARRANTY.

INSTALLATION CONSIDERATIONS

CRANACH recommends that this unit be installed by a licensed professional plumber.

Before starting the installation, please read these instructions carefully and make sure you have all the required tools and materials on hand.

To avoid the risk of scalding, ensure that the maximum output temperature of the shower mixing valve (not included) does not exceed 120°F (49°C).

Keep this booklet and the receipt (or other proof of date and place of purchase) for this product in a safe place. The receipt is required should it be necessary to request warranty parts.

Warranty Services

Scan the QR code to quickly register and activate your product warranty or access warranty-related information.



cranachhome.com/warranty/

Installation Manual

Scan the QR code to instantly access the installation manual for your product. Download it to your device for convenient future reference and to ensure a smooth setup process.



cranachhome.com/installation/

Need instant assistant? Reach out via our 24-hour customer support line at 888.263.8999 or via email at support@cranachhome.com.

RECOMMENDED TOOLS TO PREPARE



Safety Glasses



Teflon Tape



Level



Hammer



Power Drill



Screwdriver



Pencil



Adjustable Wrench

PARTS IN THE BOX

Read over these instructions thoroughly before beginning installation. Make sure that you have all tools and supplies needed to complete the installation.




Installation Manual



Specification




Strainer Hook



Shower Drain Grate




Hair Strainer



Shower Drain Body

INSTALLATION


1

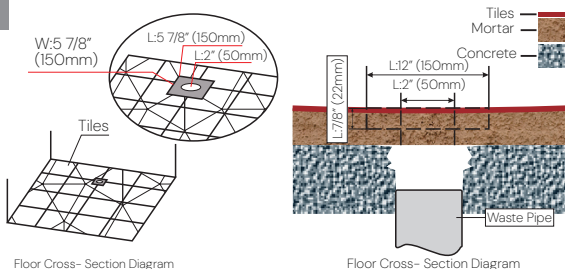

1.1 Locate the position of the bathroom waste pipe, and use a tool to cut a hole as shown in the diagram (the diameter of the central round hole is 2" (50mm), the top square hole is 5 7/8" (150mm) long, 5 1/8" (150mm) wide, and 7/8" (22mm) deep). Ensure that the tile surface is flush with the top surface of the floor drain.

1.2 Be careful not to let debris fall into the waste pipe to avoid damaging or clogging the drainage system.

2

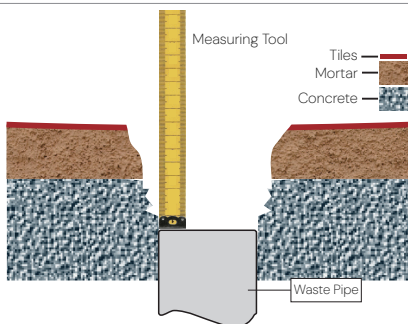


2. Use a measuring tool to check if the depth of the waste pipe meets the required installation depth for the shower drain body. The top of the waste pipe must extend into the bottom of the shower drain body by 1" (25mm) - 1 1/8" (28mm).

⚠ Caution:

The diagram is for reference only. Please follow the actual construction structure.


The set does not include a waterproof membrane and extension pipe, which need to be prepared separately.

3

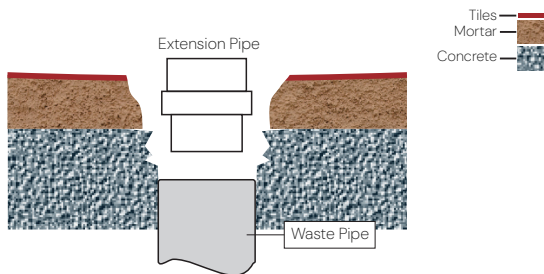

3. If there is a gap, mark the appropriate length on the extension pipe, cut it properly and use glue to connect it to the waste pipe. (The parts list does not include an extension pipe; it needs to be purchased separately.)

4

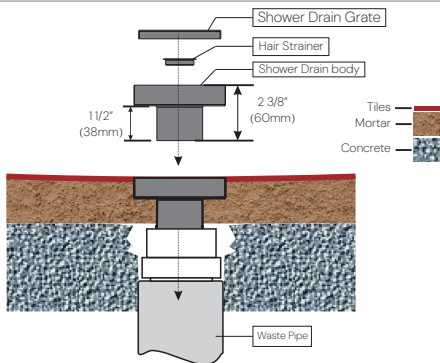

4. Finally, evenly apply waterproof fixing material around the area, place the floor drain, press it firmly, and clean off the excess material to complete the installation.



Caution:

The diagram is for reference only. Please follow the actual construction structure. The set does not include a waterproof membrane and extension pipe, which need to be prepared separately.

WARRANTY

Parts and Finishes:

CRANACH warrants all parts (excluding electronic components and batteries) and finishes of this product, purchased from authorized CRANACH sellers, to be free from defects in material and workmanship.

- Residential Use:
Lifetime warranty, for as long as the original consumer purchaser owns the home in which the product is installed.
- Commercial or Multi-Family Use:
For a period of ten (10) years from the date the product is received by the original purchaser or their authorized representative.

Electronic components:

If applicable, electronic components (excluding batteries) of CRANACH products purchased from cranachhome.com or authorized CRANACH sellers are warranted to the original consumer purchaser to be free from defects in material and workmanship.

- Residential Use:
For a period of five (5) years from the date the product is received.
- Commercial or Multi-Family Use:
For a period of one (1) year from the date the product is received.

What We Will Do:

During the applicable warranty period, if a defect is found in material or workmanship under normal installation, use, and service, CRANACH will provide replacement parts free of charge. Before returning your product to CRANACH, please visit our website or contact our customer service team (via phone or email) for troubleshooting assistance.

Exclusions & Limitations:

This warranty does not cover:

- Damage caused by abuse, misuse, improper care, lack of maintenance, or improper installation.
- Damage from freezing water or excessive water pressure.
- Damage from abrasive cleaning products or use in violation of applicable codes or regulations.
- Labor charges incurred during installation, removal, or repair of the product.
- Incidental or consequential damages.



7933 Ley Rd
Houston, TX, 77028
cranachhome.com

Installation_ C82.SD02_ Rev1.1