
Item Number: 5069568

WARNING (To reduce the risk of fire, electric shock, or personal injury):

- 1. We suggest installation by a **licensed electrician**.
- 2. Please read the instruction carefully and save it as you may need it at later time.
- Before you start, NEVER attempt any work without shutting off the electricity until the work is done. A). Go to the main fuse, or circuit breaker, box in your home. Place the main power switch in the "OFF" position. B). Place the wall switch in the "OFF" position.
- 4. Mounting surface should be clean, dry, flat, strong enough and 1/4" larger than the canopy on all side. Any gaps between the mounting surface and canopy exceeding 3/16" should be corrected as required.
- 5. Make sure that the ceiling or wall can stand the weight of the lamp before installation.
- 6. Make sure the voltage you are using is **120V**. The maximum wattage is **40W** per bulb.
- 7. Keep the lamp away from acidic and alkaline substances in case of damaging the surface of the lamp.
- 8. When replacing bulb, you should turn off or unplug the lamp and you must wait until it is cool as bulbs get hot quickly.
- 9. The safety instructions appearing in this manual are not meant to cover all possible conditions that may occur. It must be understood that common sense, caution and care must be used with any electrical products.

IMAGE FOR FINISHED PRODUCT:

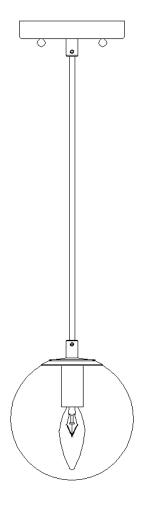

TOOLS REQUIRED (NOT INCLUDED):

Before making assembly and installation please prepare the needed tools as below picture

		\bigcirc		The second secon
Ladder	Phillips head, flat blade screwdriver	Electrical tape	Pliers	Wire cutter/Stripper

PARTS TYPE & QTY INCLUDING:

(A) Mounting plate assembly (1) (B) Green ground screw (1) (E) Canopy (1) (F) Strain relief (2) (G) Ball knob (2) (H)Cord (1) (I) Threaded ring (1) (J) Glass (1) **ACCESSORIES & QTY ENCLOSED:** (C) Plastic Wire Connector (3) (D) Mounting screw (2)


(K) Allen wrench (1)

ASSEMBLY & INSTALLATION INSTRUCTIONS:

- 1. Carefully remove the fixture from the carton and check that all parts and accessories are included as shown in the above illustration.
- 2. Turn off power

Before you start the installation, NEVER attempt any work without shutting off the electricity until the work is done. A) Go to the main fuse, or circuit breaker, box in your home. Place the main power switch in the "OFF" position. B) Place the wall switch in the "OFF" position.

3. Unscrew the ball knobs (G) from canopy (E) then gently remove the mounting plate assembly (A).

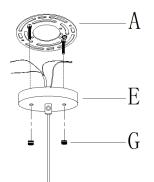

OUTLET BOX

E

G

-H

uolfin@newdecorworld.com

+1 850 296 2377 Working hours : Mon - Fri 9:00 a.m. - 16:00 p.m. EST

4. Adjust the length of the cord (H) to achieve the desired height of the mounted fixture.

- Use the allen wrench (K) to unscrew the screw in strain relief (F), carefully pull and push the cord (H) to lengthen or shorten the cord (H).
- Once the desired height of the fixture is achieved, Carefully tighten the screw till snug.


5. If needed, after the desired length of cord is fixed, shorten the length of fixture wires so that the fixture wires above the mounting plate is at least 6 inches (152.4 mm) long within the outlet box.

 Carefully pass wires through the center of the mounting plate assembly (A).
Secure the mounting plate assembly (A) to outlet box with the mounting screws (D).

7. Make wire connections

Connect wires as below wires connecting shown. PLEASE NOTE THAT GROUND WIRE IS BARE COPPER WIRE, NEVER CONNECT OTHER WIRES TO GROUND WIRES.


Connect ground wires according to the below chart

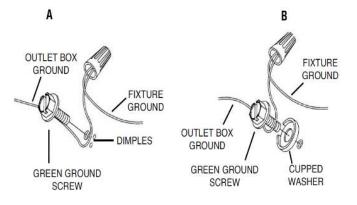


Connect wires according to the below chart

Connect Black or	Connect	
Red Supply Wire to:	White Supply Wire to:	
Black	White	
*Parallel cord (round & smooth)	*Parallel cord (square & ridged)	
Clear, Brown, Gold or Black	Clear, Brown, Gold or Black	
without tracer	with tracer	
Insulated wire (other than green)	Insulated wire (other than green)	
with copper conductor	with silver conductor	
*Note: When parallel wires (SPT I & 3 are used. The neutral wire is square s or ridged and the other wire will be ro shape or smooth (see illus.)	shaped	

Twist wires together with plastic wire connector(C) until tightly joined, and wrap each connector with approved electrical tape for more secure connection and carefully tuck all the wires into the outlet box.

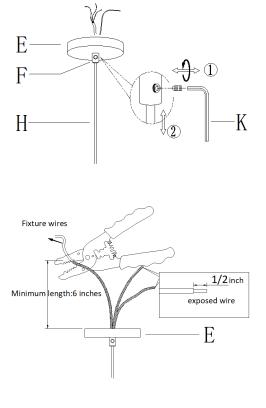

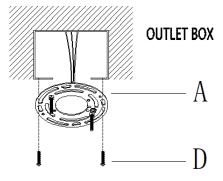

uolfin@newdecorworld.com

8. Remove the ball knobs (G) from the mounting plate assembly(A). Fix the canopy (E) to the mounting plate assembly (A) and secure the canopy (E) with the ball knobs (G).

Note: The canopy (E) should be snug against the ceiling and the ball knobs(G). If not, adjust the length of the nipples on the mounting plate assembly (A) by unscrewing the pre-assembled hex nuts and then screwing the mounting screws in or out of the mounting plate until the secure length is achieved. Tighten the pre-assembled hex nuts and back to step 8.

Install bulb (Not included) (Please do not exceed the maximum wattage recommended on the socket.)
Screw the glass (J) onto the threaded ring (I).


10. Check everything is already installed properly, then you could turn on the light. Enjoy!

CLEANING

To clean, wipe the fixture with a soft cloth. Do not use abrasive materials such as scouring pads or powders, steel wool or abrasive paper.

ORDERING PARTS

Keep this sheet for future reference in case you need to order replacement parts. All parts for this fixture can be ordered from the place of purchase. Be sure to use exact wording from illustration when ordering parts.

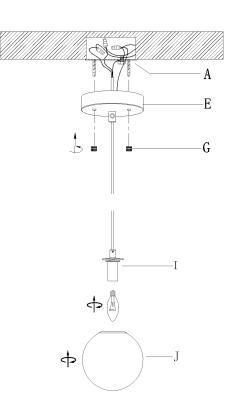

CEILING