
## Item Number: A05266

## WARNING (To reduce the risk of fire, electric shock, or personal injury):

- 1. We suggest installation by a **licensed electrician**.
- 2. Please read the instruction carefully and save it as you may need it at a later time.
- 3. Before you start, **NEVER** attempt any work without shutting off the electricity until the work is done.
  - **»** Go to the main fuse, or circuit breaker, box in your home. Place the main power switch in the "**OFF**" position.
  - » Place the wall switch in the "OFF" position.
- 4. Mounting surface should be clean, dry, flat, strong enough and 1/4" larger than the canopy on all sides. Any gaps between the mounting surface and canopy exceeding 3/16" should be corrected as required.
- 5. Make sure that the ceiling or wall can stand the weight of the lamp before installation.
- 6. Make sure the voltage you are using is 120V. The maximum wattage is Type A, Max 60W per bulb.
- 7. Keep the lamp away from acidic and alkaline substances in case of damaging the surface of the lamp.
- 8. When replacing bulbs, you should turn off or unplug the lamp and you must wait until it is cool as bulbs get hot quickly.
- 9. The safety instructions appearing in this manual are not meant to cover all possible conditions that may occur. It must be understood that common sense, caution and care must be used with any electrical products.


# **IMAGE FOR FINISHED PRODUCT:**

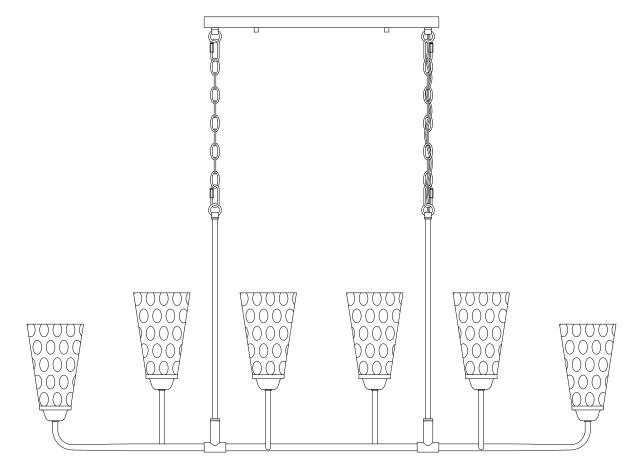

TOOLS REQUIRED (NOT INCLUDED):

Before starting assembly and installation please prepare the needed tools as below picture

				the second secon
Ladder	Philips Head or Flat Blade Screwdriver	Electrical Tape	Pliers	Wire Cutter/Stripper

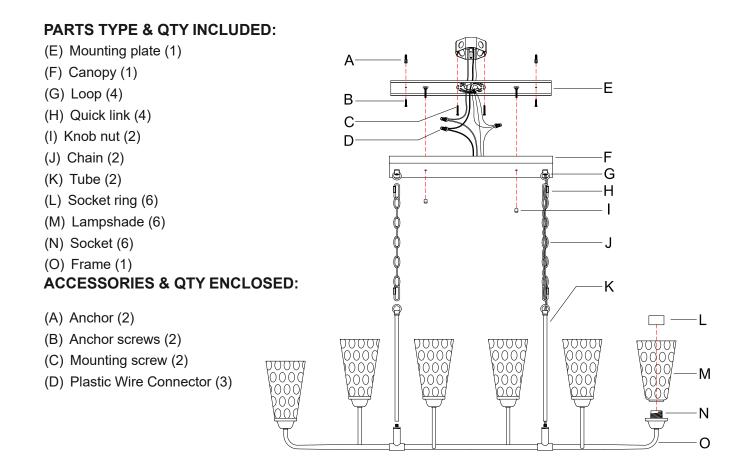


# **ASSEMBLY & INSTALLATION INSTRUCTIONS:**

1. Carefully remove the fixture from the carton and check that all parts and accessories are included as shown in the above illustration.

## 2. Turn off power

Before you start the installation, NEVER attempt any work without shutting off the electricity until the work is done.

- Go to the main fuse, or circuit breaker, box in your home.
  Place the main power switch in the "OFF" position.
- » Place the wall switch in the "OFF" position.

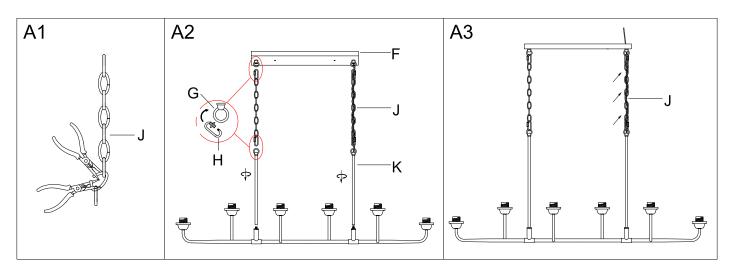

- Step A1 » By measuring, determine the correct number of links needed for proper hanging height. Using the chain pliers, disconnect and discard the unwanted part.
- Step A2 » 1) Carefully pass the fixture wires through one sides of tubes (K) and loop (G), and then screw tubes (K) onto nipples of frame (O).
  - 2) Attach quick links (H) to loops (G) on canopy (F) and loops (G) on the top of tubes (K) as shown in the illustration.


Step A3 » Carefully pass the fixture wires through one of chain (J).

### 3. Turn off power

Before you start the installation, NEVER attempt any work without shutting off the electricity until the work is done.

- Go to the main fuse, or circuit breaker, box in your home.
  Place the main power switch in the "OFF" position.
- » Place the wall switch in the "OFF" position.

#### 4. Make installation

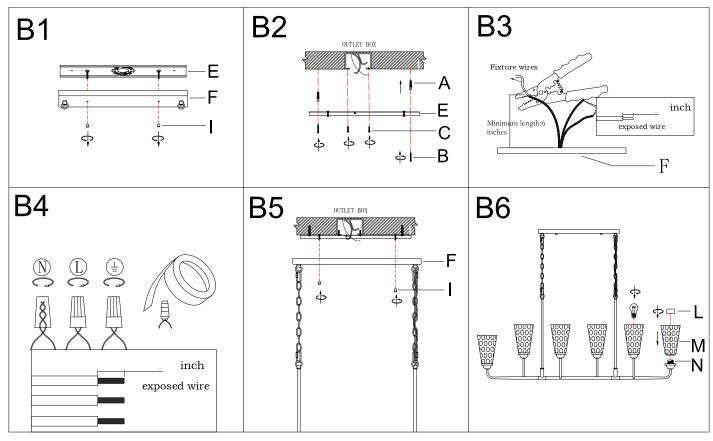


Step B1 » Unscrew knob nuts (I) and carefully remove mounting plate (E).

- Step B2 » Carefully pass the supply wires from the outlet box through mounting plate (E).
  - 1) NOTE:To drill the holes in the wall for anchors (A), attach mounting plate (E) to wall with screws ( B & C )
  - 2) Attach mounting plate (E) to outlet box and then mark the position of holes in the wall with a pen as shown in the illustration.
  - 3) Drill holes and gently knock anchors (A) into the marked holes until anchors (A) are level with the wall.
  - 4) Secure mounting plate (E) to the wall with screwing anchor screws (B) into anchors (A) and mounting screws (C) into holes of mounting plate (E).

Step B3 » If needed, shorten the fixture wires length. At this point, the remaining wire length measured above mounting plate (E) is at least 6".

Step B4 » Make wire connections

Connect wires as shown in the charts below. *PLEASE NOTE THAT GROUND WIRE IS BARE COPPER WIRE, NEVER CONNECT OTHER WIRES TO GROUND WIRES.* 

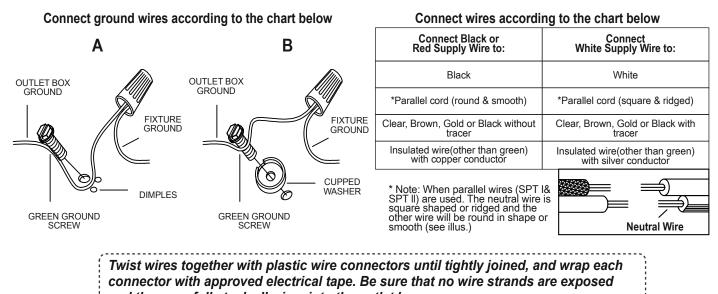

and then carefully tuck all wires into the outlet box.

Step B5 » Raise canopy (F) to the ceiling and secure canopy (F) in place by tightening knob nuts (I) onto the pre-assembled mounting screws on mounting plate (E).

NOTE: canopy (F) should be snug against the ceiling with knob nuts (I). If not, remove canopy (F), adjust the threaded length of pre-assembled mounting screws on mounting plate (E):

- Unscrew the pre-assembled hex nuts.
- Screw the pre-assembled mounting screws in or out of mounting plate (E).
- When the secure length is achieved, tighten the pre-assembled hex nuts and back to Step B5.

\_\_\_\_\_

- Step B6 » 1) Remove socket rings (L) from sockets (N).
  - 2) Carefully hang lampshades (M) onto sockets (N), and then screw socket rings (L) to sockets (N) to secure them as shown in the illustration.
  - When installing socket rings (L), the orientation of socket rings (L) is that the side of rolled edge faces upward.
  - 3) Install bulbs (not included) (Please do not exceed the maximum wattage recommended on the socket.)
- 5.Check that everything is installed properly, then you can turn on the light. We hope you enjoy your new lighting!

#### **ORDERING PARTS**

Keep this sheet for future reference in case you need to order replacement parts. All parts for this fixture can be ordered from the place of purchase. Be sure to use exact wording from illustration when ordering parts.

#### CLEANING

To clean, wipe the fixture with a soft cloth. Clean glass with a mild cleaner (such as mild and non-abrasive soap). Do not use abrasive materials such as scouring pads or powders, steel wool or abrasive paper.