


# INSTALLATION AND OPERATING INSTRUCTIONS

## LUX HP2110 SERIES PROGRAMMABLE HEAT PUMP THERMOSTAT

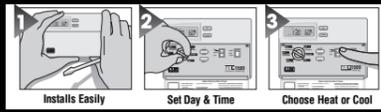

Easy as 1-2-3

LUX PRODUCTS CORPORATION • Mt. Laurel, New Jersey 08054, USA  
**WARNING: Use Energizer® or DURACELL® Alkaline Batteries Only.**  
 Energizer® is a registered trademark of Eveready Battery Company, Inc.  
 DURACELL® is a registered trademark of The Gillette Company, Inc.



Complete, Easy To Read Programming And Installation Instructions Inside 52012


### IMPORTANT!

READ INSTALLATION INSTRUCTIONS FIRST

Thank you for your confidence in our product. To obtain the best results from your investment, please read these instructions and acquaint yourself with your purchase before installing your new thermostat. Then follow the installation procedures, one step at a time. This will save you time and minimize the chance of damaging the thermostat and the systems it controls. These instructions may contain information beyond that required for your particular installation. Please save for future reference.

### FEATURES

- This unit was specifically designed for use in 24 volt, two stage heat pumps.** It may also be used to control 24 volt gas, oil or electric heating and single stage air conditioning systems, single stage heat pumps or gas millivolt heating systems.
- The Unit is programmable.** There are four programming periods per day. Each period can be programmed separately.
- You can use the built-in time/temperature programs, or alter them to suit your schedule.** The Unit provides separate programming for every day of the week- for both heating and cooling. You can override the programmed temperatures for as little as one programming period or for an entire vacation.
- In cool weather,** when the system switch is set to HEAT, the Unit will maintain cooler "set back" room temperatures to save energy. It will then change to warmer "comfort" settings - all automatically, at specified times during the day.
- In warm weather,** when the system switch is set to COOL, the Unit will maintain warmer "set back" room temperatures to save energy. It will then change to cooler "comfort" settings - all automatically, at specified times during the day.
- A large liquid crystal display** shows time, day of the week, and room and set temperatures. It will remind you when the filter should be changed in your blower and track your system's energy usage.
- Temperature swing adjustment** lets you fine-tune your system for maximum comfort and economy.
- A 4-minute minimum on/off time** in COOL prevents your air conditioning system from being damaged.
- Two Energizer® or DURACELL® "AA" alkaline batteries** (not included) are used to retain your time and temperature programs.

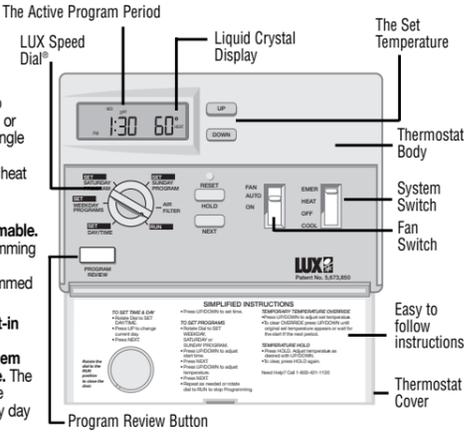

### CAUTION


Do not allow wires to touch each other or parts on thermostat. Wires must be trapped between black spacer and brass terminal. Also, be sure to tighten securely all terminal screws.

#### TERMINAL DESIGNATIONS

OLD TERMINAL DESIGNATIONS	NEW THERMOSTAT TERMINAL DESIGNATIONS	TYPICAL CONNECTION
B	B	Heating Changeover Valve
C, X, X1, X2, Z	TAPE OFF	Common
E, K	E	Emergency Heat Relay
G, F	G	Fan Relay
L, A, A1	TAPE OFF	Check Heat Pump Indicator
O	O	Cooling Changeover Valve
R, V	R	24V System or Heating Transformer
W2, H2, R4, W3, Y	W2	Stage 2 Heating Relay or Auxiliary Heat Relay
Y, C1, M, Y1	Y	Stage 1 Compressor Contractor

NOTE: A typical hookup will require either a "B" or "O" wire, but not both. If you have both a "B" and "O" wire, please call technical service.

#### TYPICAL HOOKUP

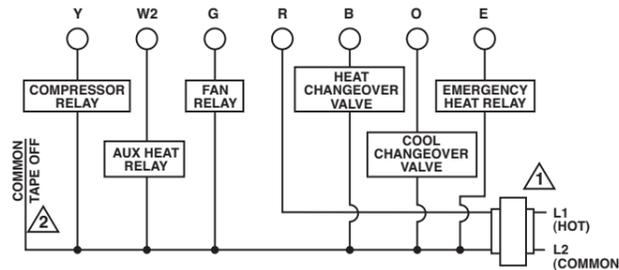

- POWER SUPPLY PROVIDE DISCONNECT MEANS AND OVERLOAD PROTECTION AS REQUIRED.
- IF YOUR OLD INSTALLATION HAS A "C" WIRE (COMMON WIRE FROM THE TRANSFORMER), TAPE IT OFF. IT IS NOT USED ON THIS THERMOSTAT.


#### SETTING THE FAN AND SYSTEM SWITCHES

<b>FAN ON</b>	The fan runs continuously for increased air circulation.
<b>FAN AUTO</b>	Normal Setting. Fan is energized with the system.
<b>EMER</b>	Auxiliary heat is used for heating. The compressor is deenergized.
<b>HEAT</b>	The thermostat controls your heating.
<b>OFF</b>	Both heating and cooling are off.
<b>COOL</b>	The thermostat controls your cooling.

#### INSTALLING BATTERIES

The Unit requires batteries to operate your furnace and retain its programming in memory. Replace the batteries when the REPLACE indicator appears in the display or at least once a year.

**NOTE**  
When replacing batteries, you have approximately 1 minute before programs are lost.

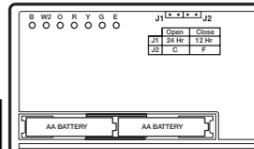

#### REPLACE BATTERIES WHEN INDICATOR APPEARS

**CAUTION**  
The Unit is protected against normal static electric discharges. However, in extremely dry weather you should touch another metal object before the Unit to avoid potential loss of programs.

- Remove fresh batteries from their carton.
- Remove body of thermostat as described at bottom of first column.
- Remove the battery clip and batteries.
- Install two new Energizer® or DURACELL® "AA" size alkaline batteries in the battery clip. Observe the polarity marking shown in the clip.

**WARNING: Use Energizer® or DURACELL® Alkaline Batteries Only.**

- Place body back on the wall. Hook the bottom of the body onto the base, swing the body up, and snap the body onto the base.

Installation is now complete. Be sure to turn the power back on to your heating and /or air conditioning system. If this is the first time you are installing batteries, the thermostat will display "SUN 12:00 AM". Within 90 seconds the thermostat will begin to display the room temperature alternately with the time. To correct the display, see "Setting the TIME and DAY," after you set the programs.

### OPERATION

The Unit alternately displays the current time and the room temperature. It also displays the day of the week and the currently active program period that is controlling the temperature: MORN, DAY, EVE, or Night.

The set point temperature will appear in the right side of the display. In the winter, set the system switch to HEAT to control your heating system. In the summer, set the switch to COOL to control your air conditioner. In spring and fall or when windows are open, you can set the system switch OFF.

Setting the FAN switch to AUTO automatically runs your system's fan during heating and cooling. Setting the FAN switch to ON runs your system's fan continuously even without heating or cooling.

**NOTE**  
The FAN switch works only if your system provides a wire for the Unit's "G" terminal.

#### THE BUILT IN PROGRAMS

Push in the RESET key. This sets the built-in heating and cooling programs. To review the built-in programs, press NEXT or PREVIOUS repeatedly; when you are done, press RETURN.

You can use the built-in programs as shown, or change them as you wish. Each day is divided into four periods. Each period has its own starting time and temperature.

	PERIOD	HEAT	COOL
WEEKDAYS preprograms	MORN	6:00 AM 70°	6:00 AM 75°
	DAY	8:30 AM 60°	8:30 AM 85°
	EVE	3:00 PM 70°	3:00 PM 75°
	NITE	11:00 PM 65°	11:00 PM 80°
SAT & SUN preprograms	MORN	6:00 AM 70°	6:00 AM 75°
	DAY	6:15 AM 70°	6:15 AM 75°
	EVE	3:00 PM 70°	3:00 PM 75°
	NITE	11:00 PM 65°	11:00 PM 80°

#### PROGRAM REVIEW

While the dial is in the RUN position, you may press the PROGRAM REVIEW button. The Thermostat will show the entire week's programming one period at a time in the display. This is very helpful to review the thermostat's current programming before making adjustments.

### PROGRAMMING CHART

DAY	PERIOD	HEAT		COOL	
		TEMP.	TIME	TEMP.	TIME
MONDAY THROUGH FRIDAY	MORN				
	DAY				
	EVE				
	NIGHT				
SATURDAY	MORN				
	DAY				
	NIGHT				
SUNDAY	MORN				
	DAY				
	EVE				

© COPYRIGHT 2006 LUX PRODUCTS CORPORATION. ALL RIGHTS RESERVED

#### PROGRAMMING THE UNIT

You can change any preset times and/or temperatures to suit your schedules for the weekday, Saturday and Sunday programs. Each period (Morning, Day, Evening, and Night) is programmed for HEAT and for COOL. A blank programming chart is provided for you to record your temperature settings in that chart.

**NOTE**  
HEAT and COOL may have different temperatures.



Select HEAT to program the unit for controlling your heater.

OR Select COOL to program the unit for controlling your air conditioner.

Rotate dial to SET WEEKDAY PROGRAM. To program SATURDAY or SUNDAY, rotate the dial to SET SATURDAY or SET SUNDAY PROGRAM. With dial on SET WEEKDAY PROGRAM, you will see this display:



- UP/DOWN: To change the start time for MORN.
- NEXT: To program temperature.
- UP/DOWN: To change the temp. setting for MORN.
- NEXT: To move to DAY.
- UP/DOWN: To change start time for DAY.
- NEXT: To program temperature.
- UP/DOWN: To change the temp. setting for DAY.
- NEXT: To move to EVE.
- UP/DOWN: To change the start time for EVE.
- NEXT: To program temperature.
- UP/DOWN: To change the temp. setting for EVE.
- NEXT: To move to NIGHT.
- UP/DOWN: To change the start time for NIGHT.
- NEXT: To program temperature.
- UP/DOWN: To change the temp. setting for NIGHT.

Rotate dial to RUN position to start the programs or SET SUNDAY PROGRAM to continue programming.

#### SETTING THE TIME OF DAY



**CAUTION**  
The unit is protected against normal static electric discharges. However, in extremely dry weather you should touch another metal object before the unit to avoid potential loss of programs.

Open the drop down door on the front of the thermostat. Rotate the dial to the SET DAY/TIME position. You should see the display pictured above with a day of the week flashing. When you are finished setting the day and time, rotate the dial to RUN to return to normal operation or to another position to continue programming.

- UP: To change current day.
- NEXT: To set current time. The (e.g. "12:00") will be flashing.
- UP/DOWN: To change the current time.

#### TEMPERATURE OVERRIDE AND TEMPERATURE HOLD

These features let you change the current Set Temperature without changing the programs stored in your thermostat's memory.

##### TEMPORARY TEMPERATURE OVERRIDE



Press UP/DOWN to change the current temperature setting. The OVERRIDE indicator appears on display. The Override feature will be automatically canceled at the start of the next program period. To cancel OVERRIDE prior to next program period press UP/DOWN until original set temperature appears. OVERRIDE indicator will disappear from display.

##### VACATION TEMPERATURE HOLD



Press HOLD. Adjust temperature as desired with UP/DOWN. Temperature setting will not change even after next program period begins. To clear, press HOLD again.

### ADVANCED FEATURES

#### FILTER USAGE MONITOR

The FILTER Monitor counts the hours since the filter in your blower was last changed. After 250 hours of use, FILTER will appear in the display. After you change the filter, set the thermostat's FILTER Monitor back to zero as follows.

Rotate the dial to FILTER

- UP/DOWN: To reset the counter



To change the FILTER Usage Monitor limit

Rotate the dial to FILTER

- NEXT: Hold for two seconds
- UP/DOWN: To change the limit from 0-500 hours



To disable the FILTER Usage Monitor set the limit to 0 hours

#### TEMPERATURE SWING

A thermostat works by turning your heating or cooling system on and off whenever the room temperature varies a certain number of degrees from the set-point temperature. This variation is the "swing."

Your system should cycle on about 3 to 6 times per hour. A smaller swing number increases the number of cycles, so room temperature is more constant. A larger swing number decreases the number of cycles, to save energy in most cases.



- HOLD/NEXT: Press together
- UP/DOWN: To change the temp. swing between 1-9 (4= approx. ±1°F)
- NEXT: Press to set.

#### TEMPERATURE CALIBRATION



Rotate the dial to SET DAY/TIME

- HOLD/NEXT: Press together
- UP/DOWN: To adjust the thermostat

#### PROGRAM LOCK

To prevent tampering with set programs.

The sequence of keys to lock and unlock the program:

- NEXT/NEXT/NEXT/HOLD



**NOTE**  
You must press "RESET" after enabling the features below. This will require you to reprogram your thermostat. Please copy your programs into the blank chart provided to assist reprogramming. Please reference the figure under "INSTALLING BATTERIES" which shows the JUMPER LOCATIONS

#### CHANGING FROM °F TO °C AND A 12HR CLOCK TO A 24HR CLOCK

**WARNING:** Making these changes will require you to reset the thermostat. Copy any of your customized programs onto the chart. This will be your reference to reenter the programs afterwards.

- To change to Celsius - remove jumper -J2.
- To change to a 24HR clock - remove jumper- J1.
- Press the reset key on the front of the thermostat for changes to take effect.
- Reprogram as necessary.

#### TECHNICAL SERVICE

If you have any problems installing or using this thermostat, please carefully and thoroughly review the instruction manual. If you require assistance, please contact our Technical Assistance Department at 856-234-8803 during regular business hours between 8:00AM and 4:30PM Eastern Standard Time, Monday through Friday. You can also receive technical assistance online anytime day or night at <http://www.luxproducts.com>. Our web site offers you answers to the most common technical questions, and also permits you to email your questions to our technical support staff at your convenience.

#### WARRANTY

Limited Warranty: If this unit fails because of defects in materials or workmanship within three years of date of original purchase, LUX Products Corporation will, at its option, repair or replace it. This warranty does not cover damage by accident, misuse, or failure to follow installation instructions. Implied warranties are limited in duration to three years from date of original purchase. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. Please return malfunctioning or defective units to the participating retailer from which purchase was made, along with proof of purchase. Please refer to "TECHNICAL ASSISTANCE" before returning thermostat. Purchaser assumes all risks and liability for incidental and consequential damage resulting from installation and use of this unit. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state. Applicable in the U.S.A. only.

### INSTALLATION

Please read all instructions carefully before beginning installation.

#### TOOLS REQUIRED

#1 Phillips screwdriver (small)

Drill with 3/16-in. (4.8mm) bit

#### THERMOSTAT LOCATION

On replacement installations, mount the new thermostat in place of the old one unless the conditions listed below suggest otherwise. On new installations, follow the guidelines listed below.

- Locate the thermostat on an inside wall, about 5 ft. (1.5m) above the floor, and in a room that is used often.
- Do not install it where there are unusual heating conditions, such as: in direct sunlight; near a lamp, radio, television, radiator, register, or fireplace; near hot water pipes in a wall; near a stove on the other side of a wall.
- Do not locate in unusual cooling conditions, such as: on a wall separating an unheated room; or in a draft from a stairwell, door, or window.
- Do not locate in a damp area. This can lead to corrosion that will shorten thermostat life.
- Do not locate where air circulation is poor, such as: in a corner or an alcove; or behind an open door.
- Do not install the unit until all construction work and painting has been completed.
- This thermostat does not require leveling.

#### REMOVING THE OLD THERMOSTAT

Switch electricity to the furnace and air conditioner OFF; then proceed with the following steps.

- Remove cover from old thermostat. Most are snap-on types and simply pull off. Some have locking screws on the side. These must be loosened.
- Note the letters printed near the terminals. Attach labels (enclosed) to each wire for identification. Remove and label wires one at a time. Make sure the wires do not fall back inside the wall.
- Loosen all screws on the old thermostat and remove it from the wall.


#### MOUNTING THE UNIT ON THE WALL

- Strip insulation 3/8 in. (9.5mm) from wire ends and clean off any corrosion.
- Fill wall opening with non-combustible insulation to prevent drafts from affecting the thermostat.
- Press up on the button on bottom of thermostat and swing the body away from the base and up to remove the body from the base.



### CAUTION

Be careful not to drop the body or disturb electronic parts. Leave the cover closed while the body is being removed from the base.

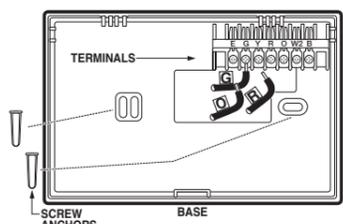

#### Attaching Wires

- Hold the base against the wall, with the wires coming through wherever it is convenient for wiring. Route the wires to below the terminal block. Position the base for best appearance (to hide any marks from an old thermostat). Attach the base to the wall with the two screws provided.

**NOTE**  
If you are mounting the base to a soft material like plasterboard or if you are using the old mounting holes, the screws may not hold. Drill a 3/16-in. (4.8mm) hole at each screw location, and insert the plastic anchors provided. Then mount the base as described below.

