


IRIS KEYPAD

by **LOWE'S**

Iris Keypad can be placed near entry points to easily enable or disable your alarm.

LOWE'S ITEM #
690406

MODEL
3405-L

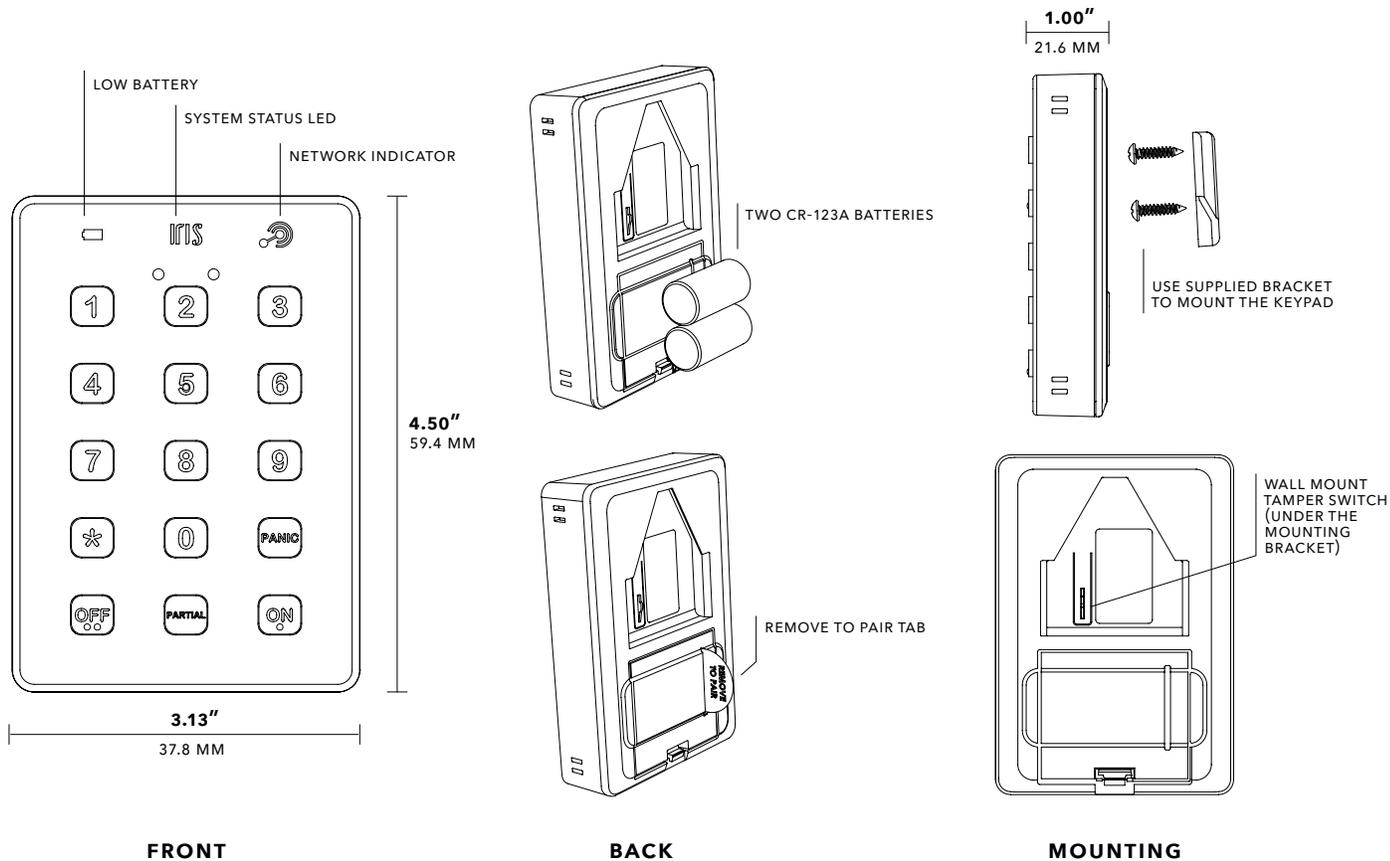

KEY FEATURES

Large LED Status Indicators:

The Lowe's Iris Security Keypad features large light bars for displaying the security system's status. Positioned above and below the keypad, these indicators display multiple colors to show the type of arming selected.

Proximity Sensor:

The built-in proximity detector recognizes when a user's hand is nearing the device and triggers the keypad to wake. When the keypad wakes, the status LED and keypad backlight activate.

Audible Feedback for Arming:

The keypad's audible feedback driver provides users with alerts, key press confirmation, and arming countdown.

Easy 2-Step Join Process:

The Security Keypad is factory-configured to search for open ZigBee networks the first time it is powered on. Simply open the hub for joining, insert batteries into the keypad, and it will search and join any open network.

GETTING STARTED

Step 1

Put your Iris hub in pairing mode by selecting the + sign and then "Devices" in the App.

Step 2

Remove the battery tab labeled "Remove to Pair". The hub will beep when pairing is complete.

COMPATIBILITY

The Lowe's IRIS Keypad is fully ZigBee HA 1.2 certified and will work with other open ZigBee HA 1.2-certified systems.

LED BEHAVIORS

Pattern Name	Pattern Description	When It Occurs
<i>Busy</i>	Flash arm LED's back and forth	Joining or communication with hub has been lost
<i>Join Scanning</i>	One blink every 3 seconds	Looking for a network
<i>Joined Network</i>	Rapid blink	Successfully joined the network
<i>Armed Mode</i>	When the system is armed	When the system is armed the status LEDs (located at the top of the device) will be red as well as the Arm key for the specific arm mode the device is in, whenever the device is awake
<i>Not Ready</i>	Blinking amber	System is not ready to arm. Typically an open door, motion sensor, etc.
<i>Disarmed</i>	Status LED is solid green Off button is lit	System is not armed
<i>Panicking Mode</i>	Status LED flashing red Audible alarm	Panic mode activated
<i>Arming Mode</i>	Any arm mode button is lit Blinking red status LED	System is in process of being armed
<i>Alarming Mode</i>	Arming mode button and status LED flashing RED Audible alarm	Alarm has been triggered

ARMING



Press this button to fully arm your system.



Press this button to fully disarm your system.



Press this button to arm only preset portions of your system.



Press this button to trigger emergency panic notifications.

APPROVALS (ENGLISH)

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Conforms to FCC Part 15B
Contains FCC ID: T3L-SS011
IC: 12192A-SS011

Industry Canada licence-exempt RSS Standards. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

This equipment complies with FCC and IC radiation exposure limits set forth for an uncontrolled environment. This equipment is in direct contact with the body of the user under normal operating conditions. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Changes or modifications not expressly approved by Lowes, Inc. could void the user's authority to operate the equipment.

For more information, visit IrisByLowes.com.

APPROVALS (FRANÇAIS)

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.

Pour plus d'informations, visitez IrisByLowes.com.

TROUBLESHOOTING

Step 1

Remove and replace batteries.

Step 2

Remove the keypad from the wall and press the wall tamper switch 5 times.

Step 3

Remove batteries from keypad. Press and hold the wall tamper switch while reinstalling a battery. Once the keypad illuminates, release the wall tamper switch. Refer to "Getting Started" to rejoin the keypad.

FOR ADDITIONAL HELP

Check out support.IrisByLowes.com or call 1-855-469-IRIS (4747).

TECHNICAL SPECIFICATIONS

Electrical

Power: 3V - 2x CR-123a Batteries

Environmental

Operating Temperature: 0° to 40°C

Shipping/Storage

Temperature: -20° to 50°C

Humidity Range: 0 to 90% RH.
(non-condensing)

Approvals



Wireless RF Protocol

Protocol: ZigBee HA 1.2

TX Strength: +2 dBm

RF Channels: 16

Range: 100+ ft.