
# **CONTACT INFORMATION**

We want to hear your voice! Feel free to touch base if you encounter any issue when using our product(s) or want to know more about our brand. We will be more than happy to provide top-notch pre-sales & after-sales service 24/7.

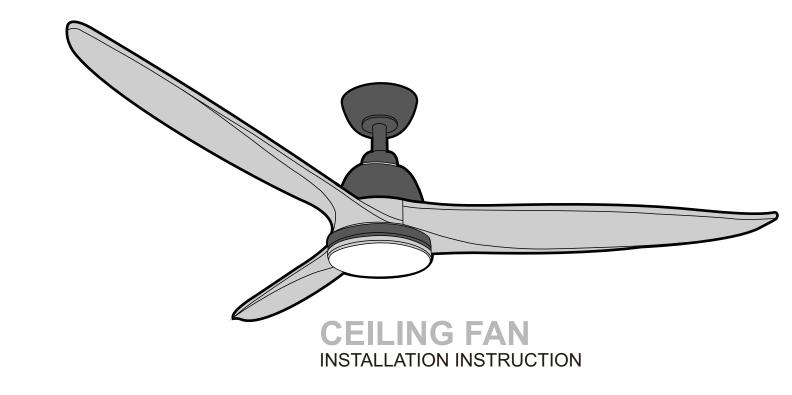

SAFETY INFORMATION	01
PRE-INSTALLATION	03
INSTALLATION INSTRUCTION	05
OPERATION INSTRUCTION	14
SPECIFICATIONS	15
TROUBLESHOOTING	16

# SAFETY INFORMATION

Please read all safety information and instructions before installing the ceiling fan and save this manual for future reference.




# **SAFETY INFORMATION**



- Before connecting the power supply, make sure that the power supply used matches the specifications of the ceiling fan.
- All wiring must comply with national and local electrical codes ANSI/NFPA70. If you are not familiar with wiring, please use a qualified electrician.
- To reduce the risk of fire or electric shock, turn off the power to the fuse box or circuit breaker before installing the fan.
- To reduce the risk of personal injury, attach the fan directly to the building's support structure and ensure that it can accept at least 35 pounds (15.9 kg).
- Make sure that the installation location allows the fan blades to rotate without obstacles.

## **Installation Location**

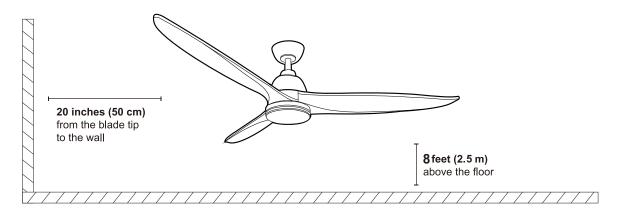




- · Do not install the fan with wet hands.
- · Do not insert foreign objects between the rotating fan blades.
- Do not bend the fan blades when installing or cleaning the fan.
- Do not disassemble or modify this product or use non-original parts without permission.
- · Keep children away from your working area.
- · Properly dispose of the fan's packaging material.
- Make sure the ceiling fan is firmly secure to the ceiling. Double check all connections before you restore power.
- Turn off the fan and wait for the blades to stop completely before performing any maintenance or cleaning.

# PRE-INSTALLATION

**Tools Required (Not Included)** 







Screwdriver





Step Ladder





Electrical Tape



# **Parts List**





Mounting Bracket X 1



Coupling Cover X 1



Blade Screw Gasket X 8



Fan Blade X 3



Canopy X 1



Canopy Cover X 1



Remote Bracket Screw X 2



Remote Control Bracket X

LED Board X 1

Light Cover X 1

Expansion Bolt X 2



Motor X 1








Self-tapping Screw X 4




Remote Control X



Wire Caps Screw Terminals X 3




Blade Screw X 8




## Receiver + Power cord X 1

# **INSTALLATION INSTRUCTION**

## **Step 1: Mounting Bracket Installation**

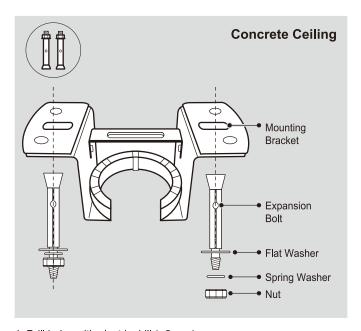


- 1. Drill holes with electric drill (φ8 mm).
- 2. Use expansion screws to fix the mounting bracket to the ceiling.

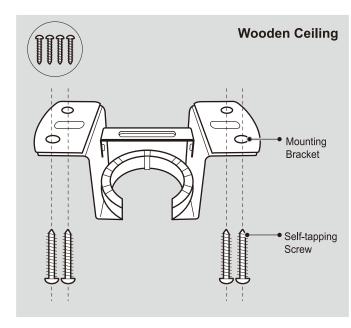

Fasten the mounting bracket to the ceiling with self-tapping screws.




# **Step 2: Fan Blade Installation**

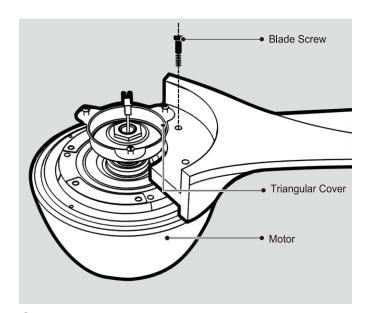

1 Clamp the fan blade under the triangular cover and fix the fan blade to the motor with screws and gaskets.


#### Note:


- The fan blade needs to be aligned with the "center" position of the screw hole group.
- Do not lock the screws when installing the blades and then tighten all the screws after all the fan blades are installed.

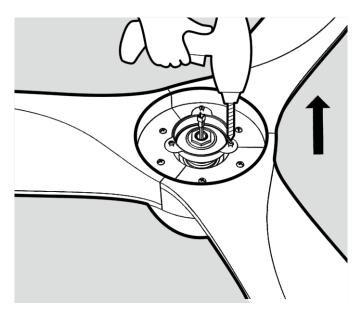


2 Loosen the screws of the upper triangular cover of the motor with an electric drill.


# Step 3: Installation of LED Boa

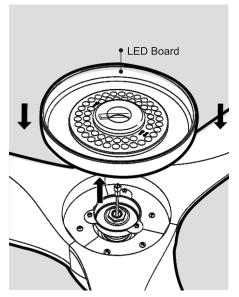




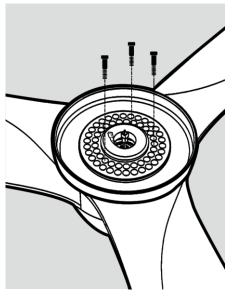

4 Install the screws on the triangular cover into the corresponding holes.

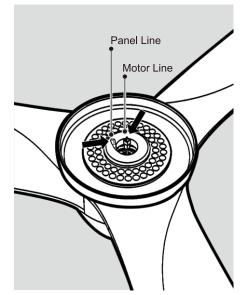


**5** Connect the motor line and the lamp panel line.









# **Step 4: Downrod Installation**

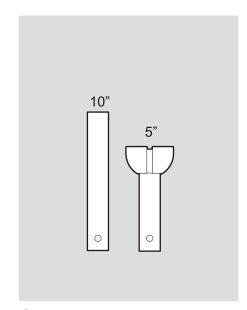


Select a suitable downrod. (3 lengths are available 5"/10")

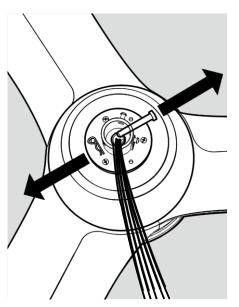


2 Take out clevis pin on the motor.

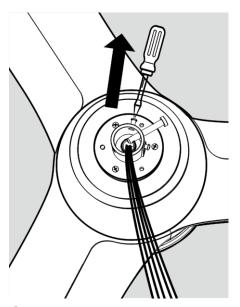

3 Loosen the screws on the motor, and do not take them out completely.

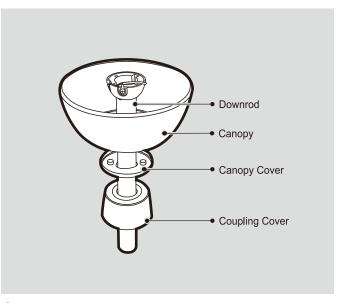


4 Assemble the canopy, canopy cover and coupling cover to the downrod in turn.

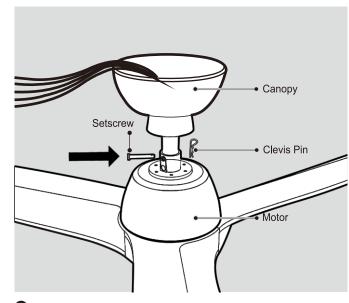


**5** Thread the motor wire through the lower pull rod, lock the fixing screw with the clevis pin, and tighten the motor screw.

# **Step 5: Installation of the Assembled Fan**

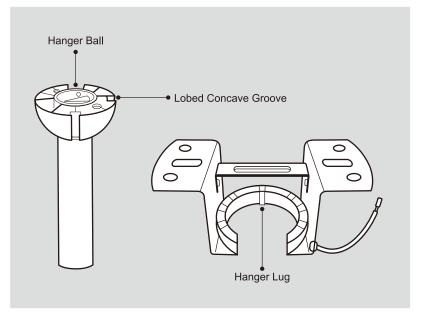


1 Lift the assembled fan onto the mounting bracket.

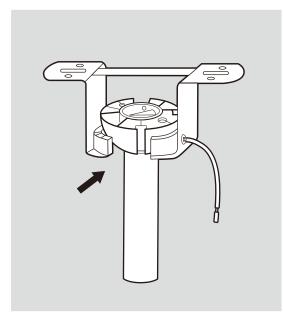


2 Ensure the concave groove of the hanger ball is positioned on the hanger lug of the mounting bracket.

# **Step 6: Wiring Instruction**


A Shut off the power to the fuse box or circuit breaker before wiring.

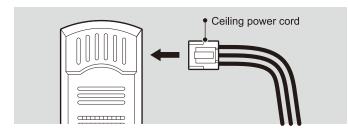


1 Connect the ceiling power cord to the receiver.

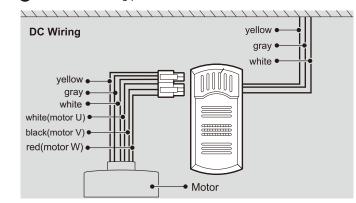

2 The receiver is connected to the motor power cord and the ceiling power cord respectively.

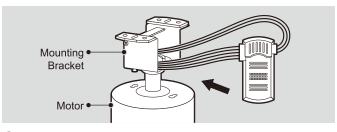

3 Put the receiver into the mounting bracket.

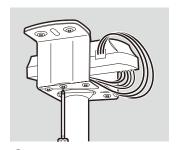

4 Cover the receiver and power cord and tighten the screws.




**5** Cover the position of the screw hole with a flat cover.

#### Note:


Connect wires color to color, plug to plug.



# **Step 7: Install the Lampshade**

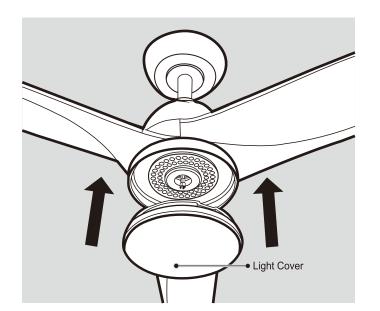

1 Put the light cover to the LED board.

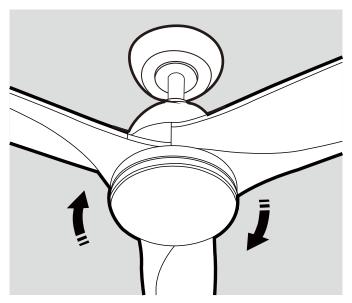


2 Spin forward to tighten the light cover.

# Step 8: Change Downrod(OPT)


#### How to choose different lengths of downrod

- 1. The ceiling of the house is 100 inches from the ground, suitable for installing a 5-inch downrod.
- 2. The ceiling distance of the house is 110 inches, which is suitable for installing a 10-inch downrod.
- 3. The ceiling of the house is 120 inches from the ground, which is suitable for installing a 14-inch downrod.


#### If you need to change different length downrod, please follow these steps:

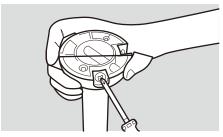


1 Loosen the screws on the hanging ball.

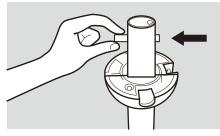


2 Remove the metal bar.

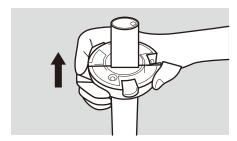

3 Take off the hanging ball from the original downrod.

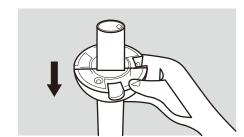


4 Install the hanging ball to an appropriate downrod.

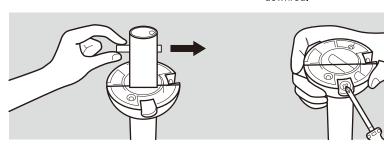

**5** Insert the metal bar and tighten the screws.



# **OPERATION INSTRUCTION** Control Method

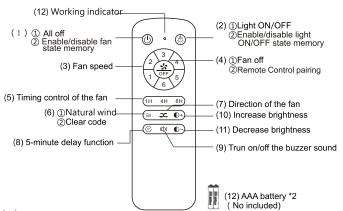

#### Notice:

The remote controller only needs to be paired once. After the paired product, the controller will have memory. The products have been paired before leaving the factory. When the remote control is damaged or lost, it is necessary to implement remote control pairing before using a new remote control.

#### (1) **All OFF**:

- Turn OFF the Fan and Light together.
- O Long press:press and hold the key for 2-3 seconds. A long press produces a long beep to activate the memory function for the fan's state before power-off. A long Pressing again will produce two short beeps to deactivate the memory function

#### (2) Light ÓN/OFF:

- Press the key to turn on or turn off the light.
- O Long press:press and hold the key for 2-3 seconds. A long press produces a long beep to activate the memory function for the light's state(on or off) before power-off. A long Pressing again will produce two short beeps to deactivate the memory function.
- (Just remember the state (on or off) of the light, not the light's color temperature)

#### (3) Fan speed:

- Press keys 1-6 to adjust the fan speed.
- (4) Fan OFF / Remote control pairing:
- Turn OFF the fan.
- For remote control pairing, press and hold the button for 3-5 seconds within 30 seconds of powering on. The buzzer will emit a long beep to confirm that the pairing is complete.
- Note: The remote controller only needs to be paired once. After pairing, it will retain memory. Products are pre-paired at the factory. If the remote control is damaged or lost, pairing with a new remote control is necessary before use.

#### (5) Timing control of the Fan:

- Press the 1H/4H/8H keys to set the fan timer for 1, 4, or 8 hours. The fan will automatically turn off when the timer ends. During the timing function, all functions of the ceiling fan can be operated. To cancel the timer setting, press key(1) or key(7) while the timing function is active.
- (6) Natural wind:
- Press the key to activate the natural wind mode, which automatically adjusts the fan speed between levels 1 and 6.
- Press and hold this button until a long beep is heard to clear the code. Then, press and hold the 'FAN OFF' button to re-pair and restore the program to factory settings.
- (7) Direction of the fan:
- Change the direction of the fan using the appropriate controls.
- (8) 5-minute delay function:
- Press the key to activate the 5-minute delay function for the light, after which it will automatically turn off.
- Note: After the delay, the fan remains unchanged. This function is primarily for pre-sleep lighting delays. If used before leaving, you'll need to manually turn off the fan with 'Fan OFF'.
- (9) Turn ON/OFF the buzzer sound:
- Press the key to toggle the buzzer sound on or off.
- (10) Increase brightness:
- Press the key to increase brightness.
- (11) Decrease brightness:
- Press the key to decrease brightness.

#### AAA battery (2):

- Remove the batteries when not in use for an extended period.

#### Note

Sensing Distance: 33 ft - 49 ft (10 m - 15 m) Diection of the fan / Reverse Switch

#### Reversible Function



#### Summer (Forward):

A downward airflow creates a cooling effect.



#### Winter (Reverse):

An upward airflow increases the indoor temperature.

PS: If you want to change the fan's rotation direction, please press the button while the fan is running.

#### Timing Control


1H: The fan will automatically shut off after 1 hour.

4H: The fan will automatically shut off after 4 hours.

8h: The fan will automatically shut off after 8 hours.

Close the Timing Control: Press the button "FAN ON/OFF"

# **SPECIFICATIONS**

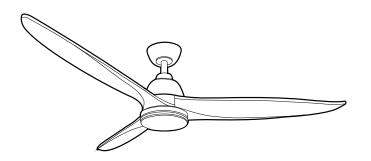

Product Name	56-inch Wood Ceiling Fan
Rated Voltage	110V~240V
Motor Power	40 <b>W</b>
control method	Remote Control
Lamp configuration	20W bi-Color LED
N/G.W.	6/7KG
lampshade size	7.4 Inch
Motor Spec	6*0.4 Inch
Overall height	14/19 Inch(With Down rods 5/10 Inch)
Fan blade	3 Solid wood Fan Blades



If there is a problem with the fan during use, please check the following tips for solutions. If the problem still cannot be solved, please contact our after-sales team.

#### The Fan Dose Not Respond to the Remote Control.

- · Check that all wire connections are correct and secure.
- Verify that the power is turned on and reaching the receiver.
- Verify that the batteries of the remote control are installed with the correct polarity, making sure to install the + (positive) end of the batteries on the solid end and the - (negative) end on the spring.

## The Fan Makes a Repetitive Ticking Noise.

- Check for obstructions in the rotor path.
- Make sure mounting hardware at the ceiling is firmly fasten.
- · Make sure all other hardware and blade attachments are tight.
- Give the fan a "Break in Period" of a few hours to a few days, then repeat the steps above.

## The Fan Makes a Humming Noise.

- · Make sure the controls you use are supplied with your fan.
- Make sure all accessories are securely fastened. Loose parts often cause a vibrating noise or buzzing sound.
- Disassemble the fan and reinstalling it can sometimes remedy this resonant vibrating noise.

#### The Fan Wobbles.

- Make sure the mounting plate and hardware at the ceiling are firmly fastened.
- Make sure all screw fittings on the fan are tight.
- If necessary, use the self-tapping screws provided to further secure the bracket to the joist.

