

EdenDirect



INTRODUCTION MANUAL

OL50D-D024D

Please read this manual before operating and save it for future reference. You are covered with 2-year free warranty offered by BUBLUE that is automatically valid from the date of purchase. To extend the warranty or express any questions or concerns, please email BUBLUE at s.frankie@aoutkehome.com

CONTENT

BEFORE YOU BEGIN	1
FOR YOUR SAFETY	2
PRODUCT OVERVIEW	4
INSTALLATION	5
OPERATION	6
MAINTENANCE	10
TROUBLESHOOTING	11
DECOMMISSIONING	12

BEFORE YOU BEGIN

Please read the operating instructions carefully before using your dehumidifier for the first time.

1.1 PRODUCT DESCRIPTION

The dehumidifier is used to remove excessive moisture from the air. The resulting reduction in relative humidity protects buildings and their interiors from the adverse effects of excess humidity.

1.2 SYMBOLS FROM THE UNIT AND USER MANUAL

	Read the USER MANUAL carefully before operation.
	Further information is available in the USER MANUAL, SERVICE MANUAL
	Service personnel are required to carefully read the USER MANUAL and SERVICE MANUAL before operation.

1.2 THE FOLLOWING SHOULD ALWAYS BE OBSERVED FOR SAFETY

- This appliance is intended to be used by expert or trained users in shops, light industries, and farms, or for commercial use by consumers.
- This appliance can be used by children aged 8 or above, people with impaired physical, sensory, or mental capabilities, or people lacking the experience and knowledge if they are given supervision or instruction on the safe use of the appliance and understand the hazards involved. Children shall not play with the appliance. Cleaning and maintenance shall not be implemented by children without supervision.
- The refrigerant loop is sealed. Only a qualified technician should attempt to service.
- Do not discharge the refrigerant into the air.
- Refrigerant could collect in low areas first but can be circulated by the fans.
- If propane gas is present or even suspected, do not allow untrained personnel to attempt to find the cause.
- The propane gas used in the unit has no odor.
- The lack of smell does not indicate a lack of escaped gas.
- If a leak is detected, evacuate all people from the space immediately, ventilate the room and contact the local fire department to inform them that a propane leak has occurred.
- Do not let any people re-enter the room until the qualified service technician has arrived and informs that it is safe to return to the room.
- No open flames, cigarettes, or other possible sources of ignition should be used inside or in the vicinity of the units.
- This appliance's component are designed for propane with non-incentive and non-sparking. Components shall only be replaced with identical repair parts.

FAILURE TO ABIDE BY THIS WARNING COULD RESULT IN AN EXPLOSION, DEATH, INJURY, OR PROPERTY DAMAGE

Your safety is the most important thing we concern!

⚠ Please read this manual carefully and fully understand it before operating your dehumidifier.

2.1 OPERATIONAL PRECAUTIONS

WARNING- to reduce the risk of fire, electric shock, or injury to people or property:

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid hazards.
- The appliance shall be disconnected from its power source during maintenance.
- Always operate the unit from a power source of equal voltage, frequency, and rating as indicated on the product identification plate.
- Always use a power outlet that is grounded.
- Unplug the power cord when cleaning or not using.
- Do not operate with wet hands. Prevent water from spilling onto the unit.
- Do not immerse or expose the unit to rain, moisture, or any other liquid.
- Do not leave the unit running unattended. Do not tilt or turn over the unit.
- Do not unplug while the unit is operating.
- Do not unplug by pulling on the power cord.
- Do not use an extension cord or an adapter plug.
- Do not put objects on the unit.
- Do not climb or sit on the unit.
- Do not insert fingers or other objects into the air outlet.
- Do not touch the air inlet or the aluminum fins of the unit.
- Do not operate the unit if it is dropped, damaged, or showing signs of product malfunction.
- Do not clean the appliance with any chemicals.
- Ensure the unit is far away from fire, inflammable, or explosive objects.
- The unit shall be installed in accordance with national wiring regulations.
- Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer.
- The appliance shall be stored in a room without continuously operating sources (for example: open flames, an operating gas appliance, an operating electric heater).
- The appliance shall be stored so as to prevent mechanical damage from occurring.
- Do not piece or burn, even after using.
- Be aware that refrigerants may not have an odor.
- Pipe-work shall be protected from physical damage and shall not be installed in an unventilated space that's smaller than 4 m².
- Compliance with national gas regulations shall be observed.
- Keep any required ventilation openings clear of obstruction.
- The appliance shall be stored in a well-ventilated area where the room size corresponds to the dimension specified for operation.

⚠ Any person who is involved with working on or breaking into a refrigerant circuit should hold a current valid certificate from an industry-accredited assessment authority, which certifies their competence in handling refrigerants safely in accordance with an industry-recognized assessment specification.

⚠ Servicing shall only be performed as recommended by the equipment manufacturer. Maintenance and repair requiring the assistance of other skilled personnel shall be carried out under the supervision of the person competent in the use of flammable refrigerants.

If you don't understand something or need help, please contact the dealer services.

2.2 SAFETY PRECAUTIONS ON SERVICING

Please follow these warnings when servicing a dehumidifier.

2.2.1 Checks to the area

Prior to beginning working on systems containing flammable refrigerants, safety checks are necessarily present to ensure that the risk of ignition is minimized. For repairing the refrigerating system, the following precautions shall be complied with prior to the actual conduction of the work.

2.2.2 Work procedure

Work shall be undertaken under a controlled procedure so as to minimize the risk of a flammable gas or vapor being present while the work is being performed.

2.2.3 General work area

All maintenance staff and people working in the local area shall be instructed on the nature of the work being carried out. Work in confined spaces shall be avoided. The area around the workspace shall be sectioned off. Ensure that the conditions within the area have been made safe by the control of flammable material.

2.2.4 Checking for the presence of refrigerant

The area shall be checked with an appropriate refrigerant detector prior to and during work, to ensure the technician is aware of the potentially flammable atmospheres. Ensure that the leak detection equipment being used is suitable for using with flammable refrigerants, i.e. no sparking, adequately sealed or intrinsically safe.

2.2.5 Presence of fire extinguisher

If any hot work is to be conducted on the refrigeration equipment or any associated parts, appropriate fire extinguishing equipment shall be available at hand. Have a dry powder or CO2 fire extinguisher adjacent to the charging area.

2.2.6 No ignition sources

No person carrying out work in relation to a refrigeration system that involves exposing any pipe work containing flammable refrigerant shall use any sources of ignition in such a manner that it may lead to the risk of fire or explosion. All possible ignition sources, including cigarette smoking, should be kept sufficiently far away from the site of installation, repairing, removing, and disposal, as during which flammable refrigerant can possibly be released to the surrounding space. Prior to the work taking place, the area around the equipment should be examined to make sure that there are no flammable hazards or ignition risks. "No Smoking" signs shall be displayed.

2.2.7 Ventilated area

Ensure that the area is adequately ventilated before breaking into the system or conducting any hot work. Ventilation shall continue while the work is carried out. Ventilation should safely disperse any released refrigerant and preferably expel it externally into the atmosphere.

2.2.8 Checks to the refrigeration equipment

The place where electrical components are being changed should be suitable for this purpose and the correct specification. The manufacturer's maintenance and service guidelines shall be followed at all times. If in doubt, consult the manufacturer's technical department for assistance.

The following checks shall be applied to installations using flammable refrigerants:

- The charge size is in accordance with the room size within which the refrigerant containing parts are installed;
- The ventilation machinery and outlets are operating adequately and are not obstructed;
- If an indirect refrigerating circuit is being used, the secondary circuit shall be checked for the presence of refrigerant;
- Markings to the equipment need to be visible and legible. Markings and signs that are illegible shall be corrected;
- refrigeration pipe or components are installed in a position where they are unlikely to be exposed to any substance which may corrode refrigerant-containing components, unless the components are constructed of materials that are inherently resistant to being corroded or are suitably protected against being corroded.

2.2.9 Checks to electrical devices


Repair and maintenance of the electrical components shall include initial safety checks and component inspection procedures. If a fault exists that could compromise safety, then no electrical supply shall be connected to the circuit until it can be safely used. If the fault cannot be corrected immediately but it is necessary to continue operation, an effective temporary solution shall be used. This shall be reported to the owner of the equipment so all parties are informed.

Initial safety checks shall include:

- those capacitors are discharged: this shall be done in a safe manner to avoid the possibility of sparking;
- that there are no live electrical components and wiring being exposed while charging, recovering, or purging the system;
- that there is the continuity of earth bonding (always remain grounded?)

PRODUCT OVERVIEW

3.1 PRODUCT VIEW

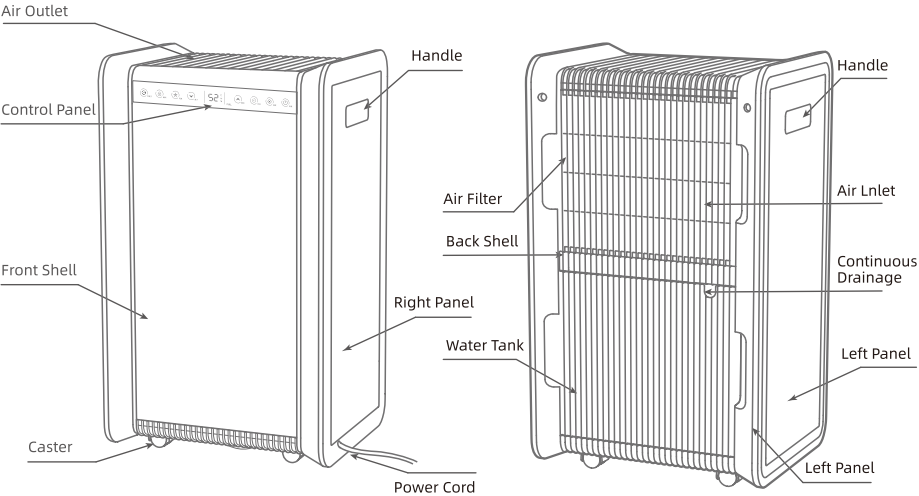

3.2 SPECIFICATIONS

MODEL	OL50-D024D
Power Supply	115V~60Hz
Dehumidification Capacity	125Pints/D(95°F/90%RH)
	100Pints/D(86°F/80%RH)
	45Pints/D(65°F/60%RH)
Rated Input Current	5.5A(86°F/80%RH)
	3.5A(65°F/60%RH)
Refrigerant/Charge	R410A/12.0oz
Low Side Pressure	261psi
High Side Pressure	580psi
BCSC	15A
Compressor Input	RLA:3.12A/LRA:20A
Fan Motor Power	0.077HP


INSTALLATION

4.1 LOCATION

1. Place the unit on a firm, horizontal surface in an area with at least 30cm of free space around it to allow for proper air circulation.

2. Never install the unit at a place that could be subject to :

- Heat sources such as radiators, heat registers, stoves, and other products that produce heat.
- Possible splashing of oil or water
- Direct sunlight
- Mechanical vibration or shock
- Excessive dust
- Lack of ventilation, such as cabinet or bookcase
- Uneven surface

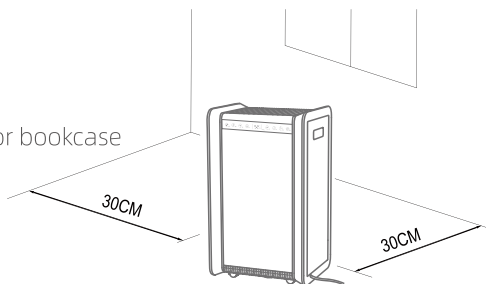

⚠ WARNING

Install the unit in rooms whose areas exceed 43 ft².


NOTE

The manufacturer may provide other suitable examples or additional information regarding the refrigerant odor.

4.2 OPERATING THE DEVICE SAFELY

- Check the device after unpacking for any damages or scratches on it.
- Operate this unit in an ambient temperature ranging from 41°F to 95°F.
- Do not use the device in outdoor settings, as it is intended for indoor residential applications only.
- Do not operate the device in close proximity to walls, curtains, or other objects that may block inlet and outlet.
- Keep the air inlet and outlet free of obstacles.
- Adjust the wind deflector in the upward direction prior to start up.
- If the device is being tipped more than 45°, allow it to set upright for at least 24 hours before start up.
- Keep doors and windows close for better energy saving.
- Do not operate or store the unit in direct sunlight or rain.
- It is normal for air outlet to feel warm to touch after continuous operation on hot days.
- Empty the water tank before moving the device.
- Make sure the water tank is correctly fitted, otherwise the unit will not operate properly.
- The dehumidifier starts up in the mode selected when the unit was last used.
- The dehumidifier starts to dehumidify if the room's humidity level is 3% higher than the selected humidity level.
- There is a protective 3-minute time delay for the compressor. Wait 3 minutes for the dehumidifier to resume dehumidification.

5.1 CONTROL PANEL



POWER

After switching on the power, all the indicators and the screen will be on for 1 second and then off. After a buzzer, the power indicator will be on and the machine will be in standby mode.

Press this button, the machine will start to run, whose initial humidity will be 50%RH and will be in the default automatic mode and high wind operation.

Press this button again, the machine will stop running, and the fan will be closed.

MODE

Auto mode - continuously drying mode-sleep mode cycle, press once to switch the mode from one to another, with the corresponding indicator lighting up.

- **Intelligent mode:** when environmental humidity $\geq$ set humidity +3%, the fan begins working and the compressor begins working after 3 seconds. The indicator appears blue.

When environmental humidity $\leq$ set humidity -3%, the compressor stops working and the fan shuts down after a delay.

Both fan speed and humidity can be adjusted under auto mode.

- **Continuous mode:** The compressor runs continuously without being affected by the humidity, and the fan runs continuously at high speed; the indicator appears red, and the wind speed and humidity are not adjustable. The indicator appears green.

- **Sleeping mode:** The wind speed is automatically switched to low speed and cannot be adjusted, and the buzzer is disabled. After 10 seconds of operation stoppage, the sleep indicators (water full light, power light, defrost light, and child lock light) are dimmed, and the other indicators are extinguished. Press any button to turn on the indicator, and then press again to activate the device.

The compressor stops running when the ambient humidity is $\leq 57\%$, and the fan stops after a delay of 30s.

The fan starts to run when the ambient humidity is $\geq 63\%$, and the compressor starts to run after 3 seconds.

The indicator appears green, and the wind speed and humidity are not adjustable.

TIMER

Press this button to set time of 0-12 hours enabled by the timer function. The interval is 1 hour. Each time you press this button, the value increases by 1 hour, with its current number displayed on the screen. Set the time to "00" to exit the timer function, and the indicator light will turn off accordingly.

After the time is set, the timer LED is on during the timing period, and turns off automatically after the period is over.

In the non-timing state: press the "timing" button to enter the time-setting state, where the digits flash to display the setting time; during the flashing period, press the adjustment button (or up and down buttons) to adjust the setting time (0 ~ 12h).

In the timing state: press the "timing" button to display the remaining set time, and press the "timing" button during the digital flashing period to cancel the timing.

In the running state: set the time to turn off the machine.

In the standby state: set the time to turn on the machine.

ADD

Press this button to increase the humidity level and timer's time.

The humidity adjustment sequence is 55%-60%-65%-70%-75%-80%-30%-35%-40%-45%-50%.

The time is originally set to "00". Press this button, "00" will be displayed and flash, and each further press of the button increases the value of time by 1 hour.

MINUS

Press this button to decrease the humidity level and timer's time.

The humidity adjustment sequence is 55%-50%-45%-40%-35%-30%-80%-75%-70%-65%-60%.

The time is originally set to "00". Press this button, "00" will be displayed and flash, and each further press of the button decreases the value of time by 1 hour.

SPEED

The wind speed can only be adjusted in the auto mode. Press this button to switch between the high and low wind speed. The indicator appears green for the low wind speed, and red for the high wind speed.

LOCK

In the power-on state, press and hold the child lock button for 3s to activate the child lock function with an accompanying buzzer sound. The child lock indicator then lights up, and all the device's buttons are locked and cannot be operated.

Another long press of this button for 3s deactivates this function and the corresponding indicator with a buzzer sound, and all buttons resume their functionality.

The child lock function is automatically turned off once the device is shut down or the power is off.

ION

In the power-on state, press this button to activate the ionizer purification function and its corresponding indicator. Press this button again to turn off the function and the indicator.

Water Full indicator

After the water is full for 5 seconds, an alarm will ring, the "Water Full" light will light up, the device will stop functioning with all buttons being deactivated, and the buzzer will ring 5 times to remind the user of this water-full state (the buzzer will not ring if in sleep mode). After the water-full state is dismissed, the device will automatically resume its functioning state before the water became full.


Dismissing the Water Full alarm

- When the alarm is ringing, press the power button can dismiss the alarm sound but cannot alter the device's functioning state. After emptying the water tank and repositioning it to the right place, the device will automatically resume normal operation.

5.2 WATER DRAINAGE :


EMPTYING THE WATER TANK

- When the tank is full, the device will make a buzzing sound, and the “Water Full” light will get turned on
- Press the POWER button to turn off the device.
- Pull on the water tank to simply slide it out of the body of the dehumidifier.
- Dispose the water by pouring it into an area with a drain or outside.
- Clean the inside of the tank as well as the outside.
- Place the empty tank back into the device.
- Press the POWER button to resume operation.
- If the “Water Full” light does not extinguish, check if the water tank is correctly put in place.

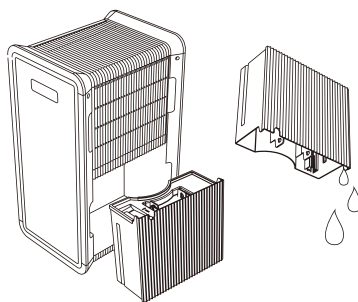

Warning

1.Do not discard water tank magnets and plastic rivets. Otherwise, the machine will not automatically stop working when the water tank is full, and the condensate will overflow and damage the floor of the room.

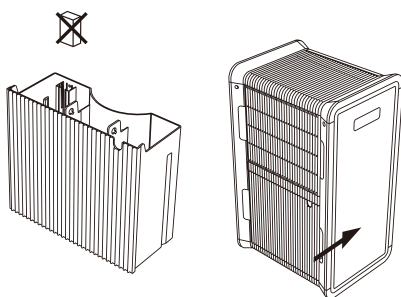

2.Please clean the condensate in the water tank before resetting the work mode of the machine.

3.If the water tank is dirty, rinse it with clean water. Avoid using detergents, steel balls, chemical dust removers, diesel oil, benzene, diluents, or other solvents. Otherwise, the water tank will be damaged and leak.


4.Put the empty tank back into the device after cleaning. Otherwise, the “Water Full” indicator may remain red and the machine cannot restart.

CONTINUOUS DRAINING

For continuous operation or unattended dehumidification, please connect the attached drain hose to the unit. Condensate can automatically flow into a bucket or drain by gravity.

1. Straighten the drainage pipe

2. Insert one end of the drain hose into the cistern hole and connect the other end to bathroom, outdoor space, bucket-like container, or the prescribed area for drainage.

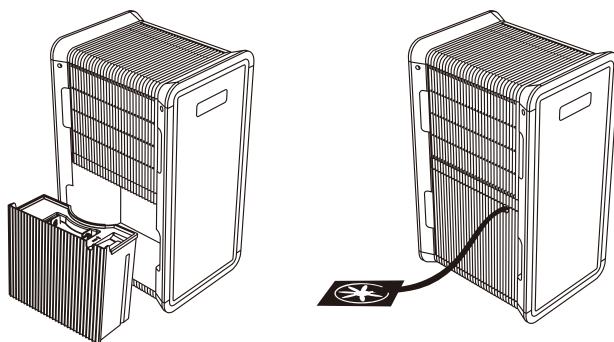

Warning

1. Please do not block the drain or drain pipe, otherwise the condensate will flow into the water tank.

2. Please do not bend the drain pipe. The height of the drain pipe should be lower than the outlet.

3. The drain pipe shall be securely connected to the outlet;


Note: before cleaning and implementing maintenance of the machine, make sure to turn off the machine and pull out the power plug to prevent electric shock.

6.1 CLEANING THE AIR FILTER (every two weeks)

Dust collected on the filter restricts airflow, which reduces the efficiency of the dehumidification system and can cause damage to the device if the dust blocks the filter.

The air filter is removable and requires regular cleaning. Do not operate the device without an air filter, as which might cause the evaporator to be contaminated.

1. Take the water tank out of the device's body, and then pull out the filter from the bottom of the device's rear shell;
2. Use a vacuum cleaner to gently absorb the dust on the surface. If the filter is very dirty, wash it with water and a soft detergent and dry it thoroughly afterwards.
3. Put the filter back.

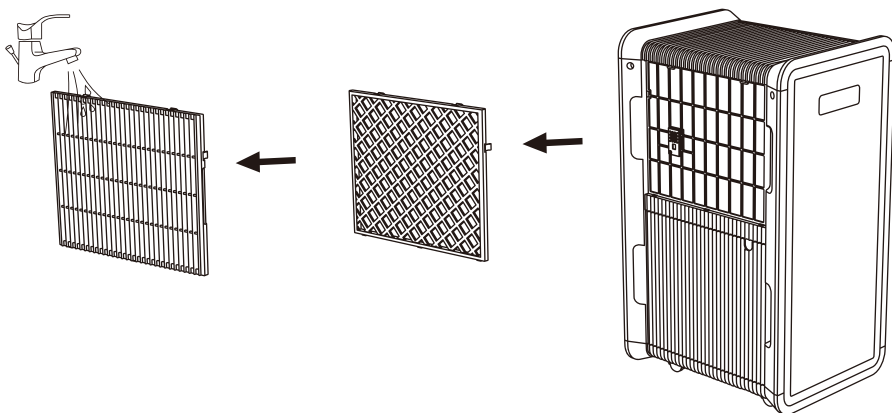

TROUBLE SHOOTING

7.1 FUNCTIONING TEMP.

The compressor stops working when the ambient temp. is $<41^{\circ}\text{F}$ or $>95^{\circ}\text{F}$, or when the humidity sensor malfunctions.

When $41^{\circ}\text{F} \leq \text{Ambient temp.} \leq 64.4^{\circ}\text{F}$, the compressor automatically defrosts at intervals; during defrosting, the compressor stops and the fan keeps running.

7.2 BEFORE CALLING FOR SERVICE

Before contacting the customer service, please review the following trouble shooting list that includes common problems that are not the result of a defect in workmanship or materials.

TROUBLE SHOOTING		
Problem	Possible Cause	Solution
Not working	No power supply	Connect to a functioning outlet and switch on
	"Water Full" indicator flashes	Drain water tank and reset it, or re-position the water tank to the right place
	Room temperature $<41^{\circ}\text{F}$, or $>95^{\circ}\text{F}$	Self-Protection designed to protect the unit. Cannot work under such temperature
Bad functioning	Is the air filter clogged?	Clean the air filter as instructed
	Is the intake duct or discharge duct obstructed?	Remove the obstruction from the discharge duct or intake duct.
No air intake	Is the filter clogged?	Wash the filter
Loud noise when running	Is the machine put on an uneven surface?	Put the machine on the flat ground
	Is the filter clogged?	Wash the filter
E2	Humidity sensor problem	Change the sensor
LO	Environmental humidity $< 20\%$	Only the compressor does not work; the fan and the ionizer purification function are turned off after a delay of 30 seconds.
CL	Low temperature protection, the environmental temperature $< 41^{\circ}\text{F}$	
CH	High temperature protection, the environmental temperature $> 95^{\circ}\text{F}$	
HI	Environmental humidity $>90\%$	The compressor/fan works to dehumidify normally.

DECOMMISSIONING

8.1 STORAGE

Long-term storage - If you will not be using the unit for an extended period of time (more than a few weeks) it is the best to clean the unit and dry it completely.

Please store the unit according to the following steps:

1. Press the power button to switch off and unplug the unit.
2. Drain the remaining water from the unit.
3. Clean the filter and let the filter dry completely in a shaded area.
4. Collect the power cord at the water tank.
5. Re-install the filter at its position.
6. The unit must be kept in an upright position when in storage.
7. Preserving the machine in a ventilating, dry, corrosive gas-free, and safe indoor space.

ATTENTION:

The evaporator inside the machine has to be dried before the unit is packed to avoid component damage and molds. Unplug the unit and place it in a dry open area for days to dry it out. Another way to dry the unit is to set the humidity level more than 5% higher than the ambient humidity to force the fan to dry the evaporator for a couple of hours.

8.2 DISPOSAL

WARNING!!!

Releasing refrigerant into the atmosphere is strictly forbidden!

Do not dispose electrical appliances as unsorted municipal waste, but use separate collection facilities. Contact your local government for information regarding the collection systems available.

If electrical appliances are disposed in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, which thus impairs your health and well-being.

EdenDirect

CONFORMS TO UL STD.60335-1&60335-2-40
CERTIFIED TO CSA STD.60335-1&60335-2-40

