



UNDERCOUNTER ICE MAKER WITH STAINLESS STEEL DOOR

USER MANUAL

Model #: IM-150USA



IMPORTANT SAFETY INSTRUCTIONS

⚡WARNING⚡	FOLLOW THESE BASIC PRECAUTIONS TO REDUCE THE RISK OF FIRE, ELECTRICAL SHOCK, OR INJURY WHEN USING YOUR ICE MAKER.
<ul style="list-style-type: none">• READ ALL INSTRUCTIONS BEFORE USING THE ICE MAKER.• DANGER: RISK OF CHILD ENTRAPMENT. CHILD ENTRAPMENT AND SUFFOCATION ARE NOT PROBLEMS OF THE PAST. JUNKED OR ABANDONED APPLIANCES ARE STILL DANGEROUS.• BEFORE YOU THROW AWAY YOUR ICE MAKER: TAKE OFF THE DOOR.• NEVER ALLOW CHILDREN TO OPERATE, PLAY WITH, OR CRAWL INSIDE THE APPLIANCE.• NEVER CLEAN ICE MAKER PARTS WITH FLAMMABLE FLUIDS. THE FUMES CAN CREATE A FIRE HAZARD OR EXPLOSION.• DO NOT STORE OR USE GASOLINE OR ANY OTHER FLAMMABLE VAPORS AND LIQUIDS IN THE VICINITY OF THIS OR ANY OTHER APPLIANCE. THE FUMES CAN CREATE A FIRE HAZARD OR EXPLOSION.	

INSTALLATION INSTRUCTIONS

➤ **BEFORE USING YOUR ICE MAKER**

- REMOVE THE EXTERIOR AND INTERIOR PACKING.
- VERIFY THAT YOU HAVE ALL OF THE FOLLOWING PARTS:
 - 1 ICE BUCKET
 - 1 PLASTIC SCOOP
 - 1 HOSE, 25 FT.
 - 1 INSTRUCTION MANUAL
- BEFORE INSTALLING AND USING YOUR NEW ICE MAKER, LET IT STAND UPRIGHT FOR A MINIMUM OF 4 HOURS. THIS WILL REDUCE THE POSSIBILITY OF A COOLING SYSTEM MALFUNCTION FROM IMPROPER HANDLING DURING TRANSPORTATION.
- CLEAN THE INTERIOR SURFACE WITH LUKEWARM WATER USING A SOFT CLOTH.
- THE ICEMAKER REQUIRES A CONTINUOUS WATER SUPPLY WITH A MINIMUM PRESSURE OF 14.5 PSIG AND A STATIC PRESSURE NOT TO EXCEED 80 PSIG.
- THE ICEMAKER REQUIRES A COLD WATER SUPPLY INLET OF ¼" (6.35MM) SOFT COPPER TUBING WITH A SHUT OFF VALVE.

➤ **INSTALLATION OF YOUR ICE MAKER**

- THIS APPLIANCE IS DESIGNED TO EXHAUST HOT AIR THROUGH THE FRONT VENT. THIS ALLOWS FOR INSTALLATION IN A RECESSED OR BUILT-IN APPLICATION, IF DESIRED.
- PLACE YOUR ICE MAKER ON A LEVEL SURFACE THAT IS STRONG ENOUGH TO SUPPORT THE ICE MAKER WHEN IT IS FULLY LOADED. REMEMBER THAT THE UNIT WILL BE SIGNIFICANTLY HEAVIER ONCE IT IS OPERATIONAL AND FULLY LOADED. LEVEL YOUR ICE MAKER BY ADJUSTING THE LEGS AT THE FRONT OF THE ICE MAKER.
- LOCATE THE ICE MAKER AWAY FROM DIRECT SUNLIGHT AND OTHER HEAT SOURCES (STOVE, HEATER, RADIATOR, ETC.). DIRECT SUNLIGHT MAY AFFECT THE FINISH. HEAT SOURCES MAY INCREASE ELECTRICAL CONSUMPTION. EXTREMELY COLD AMBIENT TEMPERATURES MAY CAUSE THE ICE MAKER TO MALFUNCTION. THIS ICE MAKER IS DESIGNED FOR INSTALLATION AND USE INDOORS IN CONTROLLED AMBIENT CONDITIONS.
- AVOID LOCATING THE ICE MAKER IN MOIST/HUMID AREAS. EXCESS MOISTURE IN THE AIR MAY CAUSE FROST TO FORM QUICKLY ON THE EVAPORATOR AND CABINET, REQUIRING FREQUENT DEFROSTING. THE ICE MAY ALSO STICK TOGETHER

- PLUG THE ICE MAKER INTO A DEDICATED, PROPERLY INSTALLED GROUNDED WALL OUTLET. DO NOT UNDER ANY CIRCUMSTANCES CUT OR REMOVE THE THIRD (GROUND) PRONG FROM THE POWER PLUG. ANY QUESTIONS CONCERNING POWER AND/OR GROUNDING SHOULD BE DIRECTED TOWARD A CERTIFIED ELECTRICIAN.

•

➤ **ELECTRICAL CONNECTION**

⚡ WARNING ⚡

IMPROPER USE OF THE GROUNDED PLUG CAN RESULT IN THE RISK OF ELECTRICAL SHOCK. IF THE POWER CORD IS DAMAGED, HAVE IT REPLACED BY AN AUTHORIZED TECHNICIAN.

- THIS ICE MAKER SHOULD BE PROPERLY GROUNDED FOR YOUR SAFETY. THE POWER CORD OF THIS ICE MAKER IS EQUIPPED WITH A THREE-PRONG PLUG WHICH MATES WITH STANDARD THREE PRONG WALL OUTLETS TO MINIMIZE THE POSSIBILITY OF ELECTRICAL SHOCK.
- DO NOT UNDER ANY CIRCUMSTANCES CUT OR REMOVE THE THIRD GROUNDING PRONG FROM THE SUPPLIED POWER CORD.
- DO NOT USE AN EXTENSION CORD TO CONNECT POWER TO THE UNIT.
- DO NOT USE A TWO-PRONG GROUNDING ADAPTER.
- IF YOU ONLY HAVE A TWO-PRONG WALL RECEPTACLE, CONTACT A QUALIFIED ELECTRICIAN TO HAVE IT REPLACED WITH A GROUNDED 3-PRONG RECEPTACLE IN ACCORDANCE WITH APPLICABLE ELECTRICAL CODES.
- THIS ICE MAKER REQUIRES A STANDARD 115 VOLTS A.C. 60HZ GROUNDED ELECTRICAL OUTLET WITH THREE-PRONG.
- THE CORD SHOULD BE SECURED BEHIND THE ICE MAKER AND NOT LEFT EXPOSED OR LOOSE.

➤ **EXTENSION CORD**

BECAUSE OF POTENTIAL SAFETY HAZARDS, THIS APPLIANCE IS NOT RECOMMENDED FOR USE WITH AN EXTENSION CORD. HOWEVER, IF YOU MUST USE AN EXTENSION CORD, USE ONLY A UL/CUL-LISTED, 3-WIRE GROUNDING TYPE APPLIANCE EXTENSION CORD WITH A GROUNDING TYPE PLUG AND OUTLET. THE ELECTRICAL RATING OF THE CORD MUST BE 115 VOLTS AND AT LEAST 10 AMPS.

➤ **CONNECTING THE WATER SUPPLY**

⚡ WARNING ⚡

**IMPROPER WATER LINE CONNECTION MAY RESULT IN FLOODING
YOU MUST USE A LICENSED PLUMBER
REVIEW STATE AND LOCAL PLUMBING CODES BEFORE INSTALLATION**

- ALL THE NECESSARY HARDWARE IS **NOT PROVIDED** (AS THE PLUMBING FIXTURES AT THE INSTALLATION POINT MAY DIFFER) FOR INSTALLATION SO IT IS NECESSARY TO HIRE A PROFESSIONAL LICENSED PLUMBER TO COMPLETE THE INSTALLATION.
- CONNECT TUBING (SUPPLIED WITH UNIT) TO THE NEAREST COLD WATER SOURCE. HAVE SUFFICIENT TUBING TO ALLOW UNIT TO BE MOVED FREELY FOR CLEANING AND SERVICE. ALSO MAKE SURE THAT THE TUBING IS NOT PINCHED OR DAMAGED DURING TRANSPORTATION AND/OR INSTALLATION.
- POSITION UNIT TO ALLOW AIRFLOW THROUGH THE FRONT GRILL (SEE FIGURE 1).
- WIPE THE INSIDE OF UNIT AND ICE BUCKET WITH A DAMP CLOTH.

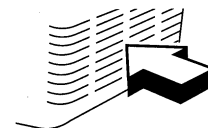


FIGURE 1

➤ **REVERSING THE DOOR SWING OF YOUR ICE MAKER**

THIS ICE MAKER IS DESIGNED TO ALLOW THE DOOR TO BE OPENED FROM EITHER THE LEFT OR RIGHT SIDE. THE UNIT IS DELIVERED TO YOU WITH THE DOOR OPENING FROM THE LEFT SIDE (HINGED ON THE RIGHT). PLEASE CONTACT CUSTOMER SERVICE FOR INSTRUCTIONS ON REVERSING THE DOOR SWING.

OPERATING YOUR ICE MAKER

➤ **INITIAL START-UP OPERATION**

1. A LICENCED PLUMBER MUST PROPERLY INSTALL THE UNIT.
2. MAKE SURE THE ON-OFF SWITCH IS IN THE "OFF" POSITION.
3. PLUG THE APPLIANCE INTO AN 115V POLARIZED AND GROUNDED ELECTRICAL OUTLET.
4. TURN THE ON-OFF SWITCH TO THE "ON" POSITION.
5. MAKE SURE THE METAL LEVER INSIDE IS PUSHED DOWN INTO THE ON POSITION
6. MAKE SURE THE WATER SUPPLY IS ON. AS SOON AS THE INNER MECHANISM REACHES THE PROPER TEMPERATURE, THE ICEMAKER WILL BEGINS TO FILL WITH WATER.
7. THE FIRST CUBES MAY BE SMALL DUE TO AIR IN THE WATER LINE. LATER CUBES WILL BE OF STANDARD CRESCENT MOON SHAPE AND SIZE.
8. THE APPROXIMATE TIME FOR THE FIRST CYCLE IS BETWEEN 50-60 MINUTES.
9. EACH CYCLE WILL CONSUME ABOUT 4 FL. OZ. OF WATER SO YOU SHOULD HAVE A FULL TRAY, AFTER 8 HOURS.

IMPORTANT: THROW AWAY ALL ICE CUBES MADE DURING THE FIRST 3 HOURS OF OPERATION.

- WHEN THE ICE BUCKET IS FULL, THE ICE MAKING MECHANISM WILL AUTOMATICALLY SHUT OFF. THE REFRIGERATION SYSTEM WILL CONTINUE TO COOL AND MAINTAIN FREEZING TEMPERATURES WITHIN THE UNIT.
- THE ICE MAKING FUNCTION MAY BE TEMPORARILY STOPPED BY RAISING THE METAL ARM TO THE UPRIGHT POSITION. (SEE FIGURE 2)
- IF THE ICEMAKER IS NOT USED REGULARLY, WE RECOMMEND THAT THE ICE BUCKET BE EMPTIED PERIODICALLY TO ENSURE FRESH ICE.
- THE CUBES MAY APPEAR WHITE OR CLOUDY. THIS IS NORMAL AND SHOULD NOT BE A CAUSE FOR CONCERN. THIS WILL NOT AFFECT THE TASTE OR SMELL OF THE ICE.
- THE FRONT GRILL SHOULD BE KEPT FREE OF DUST AND LINT TO PERMIT UNRESTRICTED AIRFLOW.
- THIS UNIT SHOULD BE DEFROSTED ABOUT EVERY 4-6 WEEKS OR WHEN FROST ON THE ICE MAKER WALLS IS EXCESSIVE ($\frac{1}{4}$ " OR THICKER). TO DEFROST, TURN THE UNIT OFF, REMOVE/DISCARD THE EXISTING CUBES AND KEEP DOOR OPEN AT LEAST TWO INCHES. YOU MAY WANT TO PLACE A TOWEL UNDERNEATH THE OPEN DOOR TO SOAK UP ANY WATER.
- **DO NOT SCRAPE OFF THE FROST WITH ANYTHING EXCEPT A PLASTIC SCRAPER.**

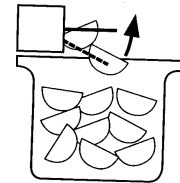


FIGURE 2

CARE AND MAINTENANCE

CAUTION

FAILURE TO UNPLUG THE ICE MAKER PRIOR TO CLEANING, MOVING, OR SERVICING COULD RESULT IN ELECTRICAL SHOCK OR PERSONAL INJURY.

➤ **CLEANING YOUR ICE MAKER**

- TURN THE SWITCH CONTROL TO "OFF" POSITION, UNPLUG THE ICE MAKER AND REMOVE THE BUCKET.
- WASH THE INSIDE WITH A WARM WATER AND BAKING SODA SOLUTION. THE SOLUTION SHOULD BE ABOUT 2 TABLESPOONS OF BAKING SODA TO A QUART OF WATER.
- WASH THE BUCKET WITH A MILD DETERGENT SOLUTION.
- THE OUTSIDE OF THE ICE MAKER SHOULD BE CLEANED WITH MILD DETERGENT AND

WARM WATER.

- THE STAINLESS STEEL COMPONENTS OF THE DOOR SHOULD BE CLEANED WITH STAINLESS STEEL CLEANER
- THE CONDENSER COILS SHOULD BE VACUUMED WHEN THEY ARE DUSTY OR DIRTY.

NOTE: PLACING THE ICE BUCKET IN THE DISHWASHER MAY CAUSE DISTORTION OF THE ICE BUCKET.

➤ **POWER FAILURE**

MOST POWER FAILURES ARE CORRECTED WITHIN A FEW HOURS AND SHOULD NOT AFFECT THE TEMPERATURE OF YOUR ICE MAKER IF YOU MINIMIZE THE NUMBER OF TIMES THE DOOR IS OPENED. IF THE POWER IS GOING TO BE OFF FOR AN EXTENDED PERIOD OF TIME, YOU SHOULD TAKE PRECAUTIONARY STEPS TO ENSURE WATER FROM THE DEFROSTING DOES NOT LEAK OUT.

➤ **VACATION TIME/STORAGE**

1. SHUT OFF THE WATER SUPPLY AT THE MAIN WATER VALVE.
2. DISCONNECT THE WATER SUPPLY LINE FROM THE VALVE.
3. ALLOW THE UNIT TO RUN FOR AN HOUR OR TWO UNTIL ALL REMAINING ICE CUBES HAVE BEEN EJECTED AND ALL WATER HAS CYCLED THROUGH THE SYSTEM AND HAS BEEN MADE INTO ICE CUBES.
4. DISCONNECT THE UNIT FROM THE MAIN POWER SOURCE.
5. DRY OUT EXCESS WATER FROM THE ICE MAKER ASSEMBLY
6. LEAVE THE DOOR OPEN AT LEAST TWO INCHES.

➤ **MOVING YOUR ICE MAKER**

- SECURELY TAPE DOWN ALL LOOSE ITEMS INSIDE YOUR ICE MAKER.
- TURN THE LEVELING SCREWS UP TO THE BASE TO AVOID DAMAGE.
- TAPE THE DOOR SHUT.
- MAKE SURE THE ICE MAKER STAYS IN THE UPRIGHT POSITION DURING TRANSPORTATION.

➤ **ENERGY SAVING TIPS**

- THE ICE MAKER SHOULD BE LOCATED IN THE COOLEST AREA OF THE ROOM, AWAY FROM HEAT SOURCES, AND OUT OF THE DIRECT SUNLIGHT.

ICE CUBE QUANTITY AND CYCLE TIME:

PLEASE USE THE INFORMATION BELOW TO DETERMINE THE CYCLE TIMES FOR YOUR ICE MAKER PRIOR TO CALLING CUSTOMER SERVICE.

Your ice maker will make the first batch of ice in approx. 2-hours from the time you first turn in on. It will start consistently making ice every 40~50 minutes after first batch. The water pump delay is to allow the machine to reach a low enough temperature to maintain ice structure.

	ICE CUBE QTY	WATER PUMP DELAY	FIRST BATCH CYCLE TIME	NORMAL CYCLE TIME	climate class
IM-150USA	8	20-30 min	50-60 min	40-50 min	N

PROBLEMS WITH YOUR ICE MAKER?

YOU CAN SOLVE MANY COMMON ICE MAKER PROBLEMS EASILY, SAVING YOU THE TROUBLE OF A SERVICE CALL. TRY THE SUGGESTIONS BELOW BEFORE CONTACTING CUSTOMER SERVICE.

TROUBLESHOOTING GUIDE

PROBLEM	POSSIBLE CAUSE OR FIX
THE ICE MAKER DOES NOT OPERATE	NOT PLUGGED IN. THE CIRCUIT BREAKER TRIPPED OR A BLOWN FUSE. THE POWER SWITCH IS SET TO "OFF".
NO ICE PRODUCED	AIRFLOW FROM THE FRONT GRILL IS BLOCKED. THE ICE MAKER ARM IS SET TO THE OFF POSITION. THE WATER SUPPLY IS TURNED OFF. THE WATER LINE IS CRIMPED OR FROZEN. THE UNIT HAS EXCESSIVE FROST BUILD UP.
THE COMPRESSOR TURNS ON AND OFF FREQUENTLY	THE ROOM TEMPERATURE IS WARMER THAN NORMAL. THE DOOR IS OPENED TOO FREQUENTLY.. THE DOOR IS NOT CLOSED COMPLETELY. THE DOOR GASKET DOES NOT SEAL PROPERLY. THE ICE MAKER DOES NOT HAVE ADEQUATE VENTILATION (GRILL OBSTRUCTED OR CONDENSER COILS DIRTY?)
EXCESSIVE VIBRATION	CHECK TO MAKE SURE THAT THE ICE MAKER IS LEVELED. ADJUST THE LEVELING LEGS IF NEEDED.
THE ICE MAKER SEEMS TO MAKE TOO MUCH NOISE	A RATTLING NOISE MAY COME FROM THE FLOW OF THE REFRIGERANT, WHICH IS NORMAL. AS EACH CYCLE ENDS, YOU MAY HEAR GURGLING SOUNDS CAUSED BY THE FLOW OF REFRIGERANT IN YOUR ICE MAKER. CONTRACTION AND EXPANSION OF THE INSIDE WALLS MAY CAUSE SOME POPPING AND CRACKLING NOISES. THE ICE MAKER IS NOT LEVELED.
THE DOOR WILL NOT CLOSE PROPERLY	THE ICE MAKER IS NOT LEVELED. THE DOOR IS NOT PROPERLY INSTALLED. THE GASKET IS DIRTY OR DAMAGED. THE ICE BUCKET IS OUT OF POSITION.
THE ICE CUBES ARE MELTED TOGETHER	THE DOOR IS OPENED TOO FREQUENTLY. WATER PRESSURE IS TOO LOW OR BLOCKED



Your Guarantee

If this product is found to be faulty as a result of faulty materials or workmanship within one year from date of purchase, it will be repaired free of charge.

This guarantee is subject to the following terms:

- Sunpentown must be notified of the fault.
- Proof of purchase must be presented to Sunpentown's nominated representative.
- The warranty will be void if the product is modified, misused or repaired by an unauthorized person.
- The warranty after repair will not be extended beyond the original one-year period.
- All replacement parts will be new or reconditioned.
- Parts, which are replaced, become the property of Sunpentown.
- The warranty applies for the use of the product in the USA only.

What is NOT COVERED:

- Warranty does not include freight charges.
- Damage due to installation error, product abuse and/or misuse.
- Incidental or consequential damage caused by possible defects with this product.
- Labor cost incurred for the installation and/or removal of a possible defective unit.
- Damage to product caused by improper power supply voltage, accident, fire, floods or acts of nature.
- Failure of product resulting from unauthorized modifications to the product.
- Improper installation or failure to perform the necessary maintenance.
- Normal wear and tear on parts or replacement of parts designed to be replaced.
- Damage to personal property from use of product.
- Replacement or repair of household fuses, circuit breakers, wiring or plumbing.

This GUARANTEE is in addition to your Statutory Rights

SUNPENTOWN INTERNATIONAL INC.
14625 Clark Ave. City of Industry, CA 91745
Tel: 800-330-0388
service@sunpentown.com
www.sunpentown.com