


# USE AND CARE GUIDE

## 20 INCH CEILING FAN

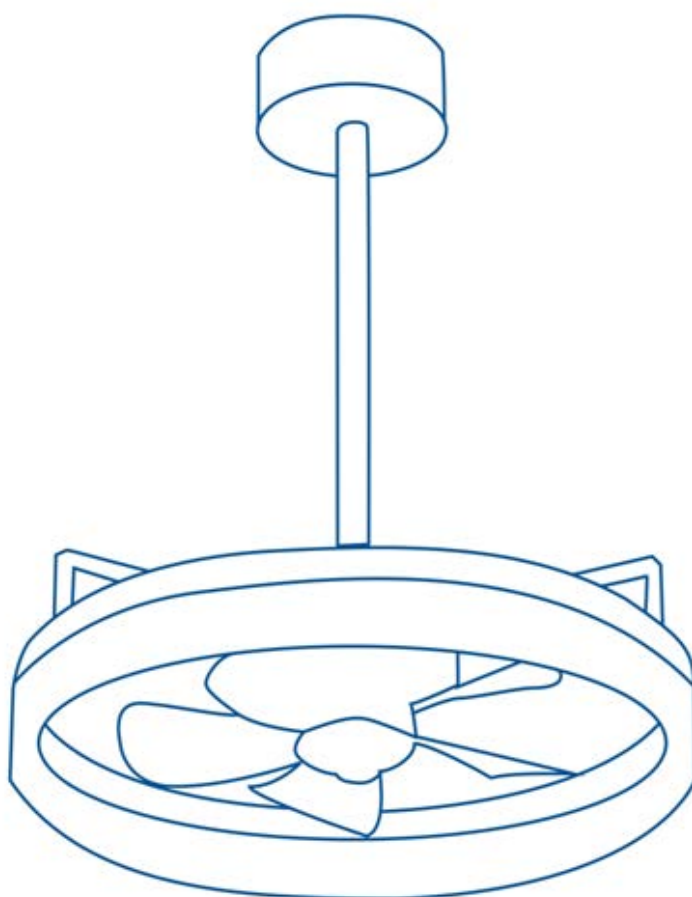

# TABLE OF CONTENTS

---

INSTRUCTIONS ADDITIONAL SAFETY .....	3
ENERGY EFFICIENT USE OF CEILING FANS.....	4
ELECTRICAL AND STRUCTURAL REQUIREMENTS .....	5
PRE INSTALLATION.....	6
UNPACKING INSTRUCTIONS.....	7
FAN BLADE DISASSEMBLY DIAGRAM.....	8
EXPLODED-VIEW ILLUSTRATION .....	9
HOW TO ASSEMBLE YOUR CEILING FAN.....	10
HOW TO ASSEMBLE YOUR CEILING FAN (CONTINUED) .....	11
HOW TO HANG YOUR CEILING FAN.....	12
WIRE YOUR CEILING FAN.....	13/14/15
HOW TO INSTALL YOUR CANOPY HOUSING.....	16
HOW TO OPERATE YOUR CEILING FAN.....	17/18
HOW TO OPERATE YOUR CEILING REMOTE.....	19
TROUBLESHOOTING.....	20

## ADDITIONAL SAFETY INSTRUCTIONS



**WARNING:** Do not operate this fan with a variable (Rheostat) wall controller or dimmer switch. Doing so could result in damage to the ceiling fan's remote control unit. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:  
so (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. If the intentional radiator can be classified as a Class B digital device or a PC peripheral, then shall include the following or equivalent:



**NOTE:** This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in residential installations. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on. The user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

For a Class A digital device, statements of 15.105 (a) must be included when appropriate for the device in question.

## WARRANTY

We warrant the fan motor to be free from defects in workmanship and material present at time of shipment from the factory for a period of lifetime after the date of purchase by the original purchaser. We also warrant the light kit, to be free from defects in workmanship and material present at time of shipment from the factory for a period of five years after the date of purchase by the original purchaser, excluding any glass or acrylic components and wooden blades, to be free from defects in workmanship and material at the time of shipment from the factory for a period of two years after the date of purchase by the original purchaser. We agree to correct such defects without charge or at our option replace with a comparable or superior model if the product is returned. To obtain warranty service, you must present a copy of the receipt as proof of purchase. All costs of removing and reinstalling the product are your responsibility. Damage to any part such as by accident, misuse, improper installation or by affixing any accessories, is not covered by this warranty. Because of varying climatic conditions this warranty does not cover any changes in brass finish, including rusting, pitting, corroding, tarnishing or peeling. Brass finishes of this type give their longest useful life when protected from varying weather conditions. A certain amount of "wobble" is normal and should not be considered a defect. Servicing performed by unauthorized persons shall render the warranty invalid. There is no other express warranty. We hereby disclaim any and all warranties, including but not limited to those of merchant ability and fitness for a particular purpose to the extent permitted by law. The duration of any implied warranty which cannot be disclaimed is limited to the time period as specified in the express warranty. Some states do not allow limitation on how long an implied warranty lasts, so the above limitation may not apply to you. The manufacturer shall not be liable for incidental, consequential, or special damages arising out of or in connection with product use or performance except as may otherwise be accorded by law. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion or limitation may not apply to you. This warranty gives specific legal rights, and you may also have other rights which vary from state to state. This warranty supersedes all prior warranties. Shipping costs for any return of product as part of a claim on the warranty must be paid by the customer.

## ENERGY EFFICIENT USE OF CELING FANS

Ceiling fan performance and energy savings rely heavily on the proper installation and use of the ceiling fan. Here are a few tips to ensure efficient product performance.

### Choosing the Appropriate Mounting Location

Ceiling fans should be installed, or mounted, in the middle of the room and at least 10 feet from floor to the blade and 18 inches from wall to the blade. If ceiling height allows, install the fan 8–9 feet from floor to the blade for optimal airflow.

### Turn Off When Not in the Room

### Using the Ceiling Fan Year Round

**Summer Season:** Use the ceiling fan in the clockwise direction. The airflow produced by the ceiling fan creates a wind–chill effect, making you "feel" cooler. Select a fan speed that provides a comfortable breeze, lower speed consume less energy.

**Winter Season:** Reverse the motor and operate the ceiling fan at low speed in the counter clock–wise direction. This produces a gentle updraft, which forces warm air near the ceiling down into the occupied space. Remember to adjust your thermostat when using your ceiling fan—additional energy and dollar savings could be realized with this simple steps!

## ELECTRICAL AND STRUCTURAL REQUIREMENTS



Your new ceiling fan will require a grounded electrical supply line of 120 volts AC, 60 HZ, 15 Amp Circuit. Electrical code requires use of a fan–rated outlet box to support the extra weight and motion associated with a ceiling fan. A fan–rated box will be labeled as such and typically supports up to a 70lb ceiling fan. Fan–Rated Outlet Boxes vary in ratings and design. Ensure the ratings of your ceiling fan outlet box meet the requirements for the ceiling fan being installed. Figure 1, Figure 2 and Figure 3 depicts different structural configurations that may be used for mounting the outlet box.

### Low-profile use (Figure 1)

A 12in. deep pancake box is meant to be screwed to a joist or block. It's used if only one cable is coming into the box. It is also available in a saddle–mount configuration.

### Deep-profile use (Figure 2)

A 21in. deep box can be attached to blocking between joists and is roomy enough to handle more than one cable.

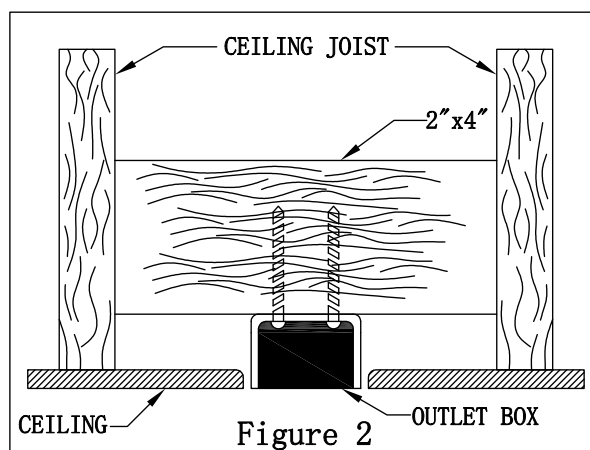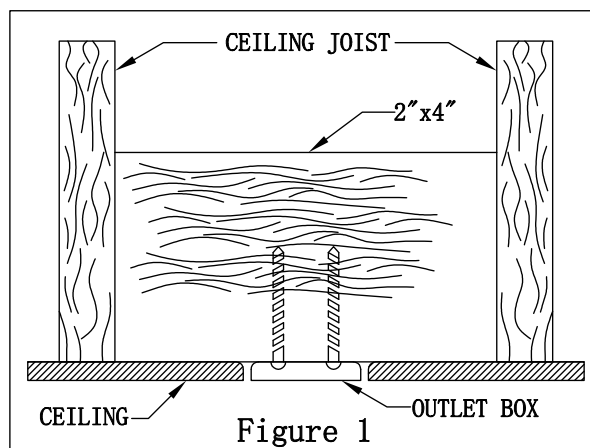

# ELECTRICAL AND STRUCTURAL REQUIREMENTS (CONTINUED)


## Brace use (Figure 3)

Paired with a deep box, this hanger is meant to span between two joists and takes the place of wooden blocking.




**WARNING** To reduce the risk of fire, electrical shock, or personal injury, mount fan to outlet box marked acceptable for fan support of 15.9 kg (35 lbs) or less. Use screws supplied with outlet box. Most outlet boxes commonly used for support of light fixtures are not acceptable for fan support and may need to be replaced. Consult a qualified electrician if in doubt.

If your fan is to replace an existing light fixture, turn electricity off at the main fuse box at this time and remove the existing light fixture.

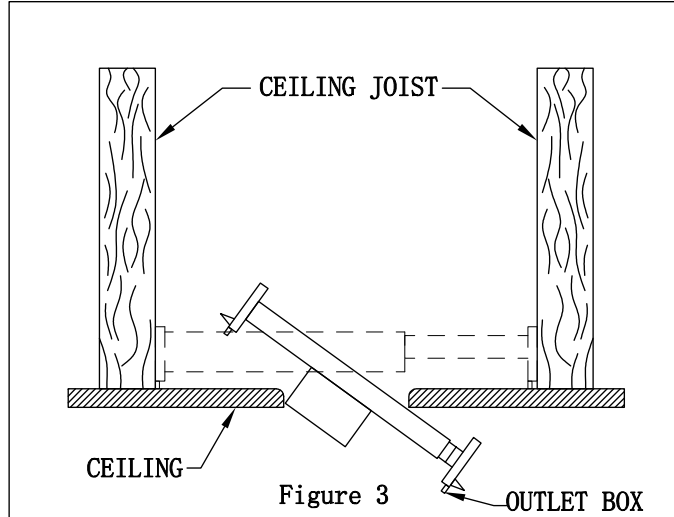

### WARNING:

Turning off wall switch is not sufficient. To avoid possible electrical shock, be sure electricity is turned off at the main fuse box before wiring. All wiring must be in accordance with National and Local code and the ceiling fan must be properly grounded as a precaution against possible electrical shock.

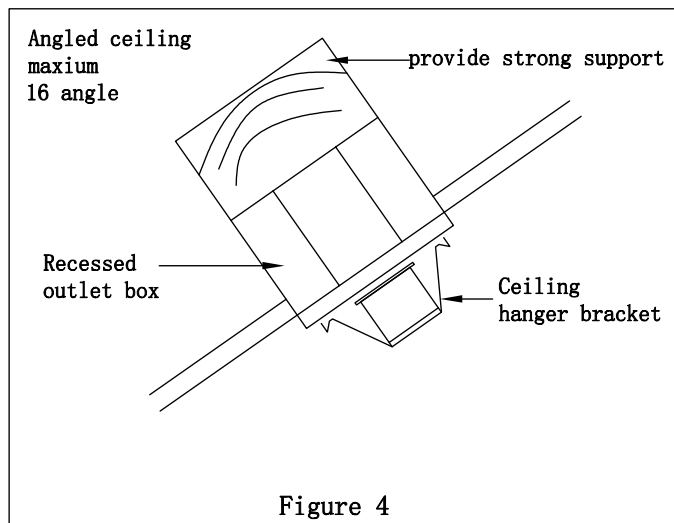

### WARNING:

To avoid fire or shock, follow all wiring instructions carefully. Any electrical work not described in these instructions should be done or approved by a licensed electrician.



### WARNING:

Do not operate this fan with a variable (Rheostat) wall controller or dimmer switch. Doing so could result in damage to the ceiling fan's remote control unit.



### Notice:

There are two down rods for your choice. 5 IN (Shorter) and 10 IN (Longer)

## Angled ceiling use place (Figure 4)

Angled ceiling maximum 16 angle


## PRE-INSTALLATION

This manual is designed to make it as easy as possible for you to assemble, install, operate and maintain your ceiling fan

### Tools Needed for Assembly (Not Included)



Phillips  
screwdriver



Wire strippers/  
cutters



One  
stepladder



One 1/4" blade  
screwdriver

## MATERIALS NEEDED

Wiring outlet and connectors of type required by the local code. The minimum wire would be a 3-con (2-wire with ground) of the following size:

Installed wire length	Wire Size A. W. G
Up to 50 ft.	12
50-100 ft.	12



**NOTE:** Place the parts from the loose parts bags in a small container to keep them from being lost. If any parts are missing contact your local retailer.



### **WARNING:**

Before assembling your ceiling fan, refer to section on proper method of wiring your fan (page 10). If you feel you do not have enough wiring knowledge or experience, have your fan installed by a licensed electrician.

# UNPACKING INSTRUCTIONS

## PACKAGE CONTENTS

For your convenience, check-off boxes are provided next to each step. As each step is completed, place a check mark in the box. This will insure that all steps have been completed and will be helpful in finding your place should you be interrupted.




### WARNING:

Do not install or use fan if any part is damaged or missing. This product is designed to use only those parts supplied with this product and/or any accessories designated specifically for use with this product by ean group. Substitution of parts or accessories not designated for use with this product by erangroup could result in personal injury or property damage.

1. Check to see that you have received the following parts:




**NOTE:** If you are uncertain of part description, refer to exploded view illustration provided on the last page of this install manual.

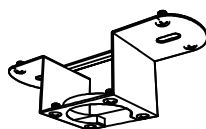


Hanger Bracket Assembly(1)




Motor Coupling Cover Assembly(1)

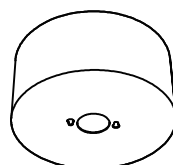


Ceiling Canopy(1)

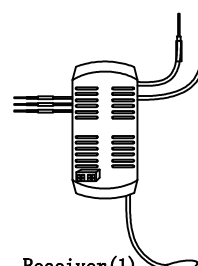


Receiver(1)  
Wire Connectors(6)



Downrod/Hanger Ball Assembly(1)  
-Downrod  
-Hanger Ball  
-Set screw  
-Hairpin Cilp  
-Clevis Pin  
-Pin

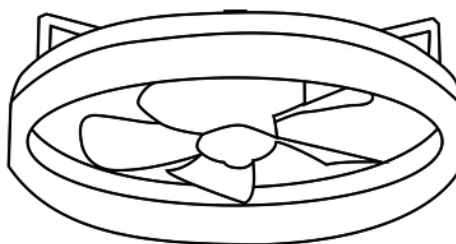

Motor Assembly(1)

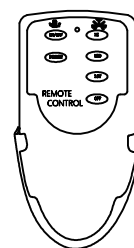

Hand-Held Remote  
Battery AAA (not include)

### Hardware Bag



Wire Connectors(6)



Lock Washer(4)



Flat Washer(4)



Spring Washer(4)




Machine Screw(2)



Wood Screw(2)

For further questions, please contact customer service support@breezary.com

# EXPLODED REVIEW ILLUSTRATION

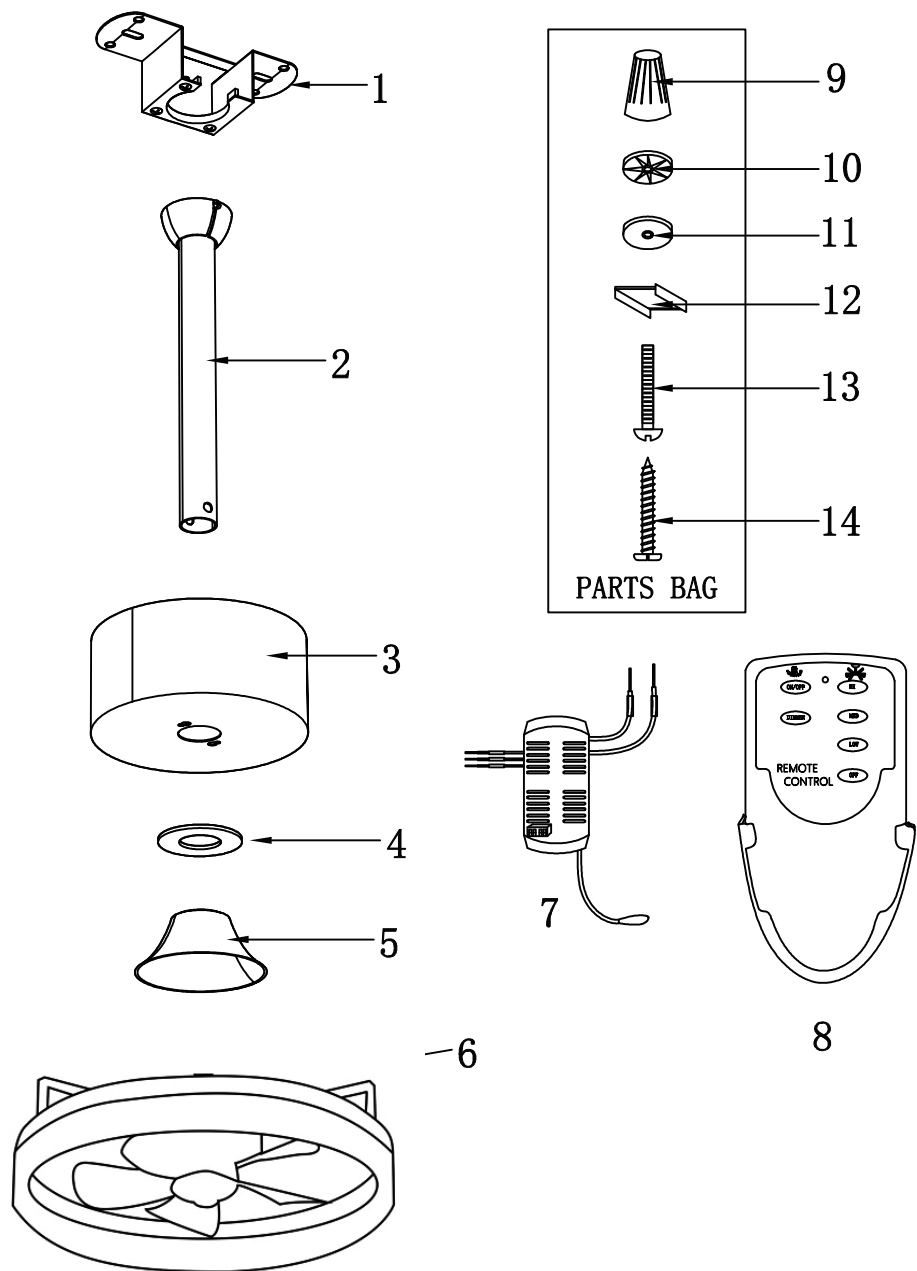

## NOTE:



The illustration shown is not scale or its actual configuration may vary. Product/parts are subject to change without notice.

Figure 1




## REPLACEMENT AND DISASSEMBLY DIAGRAM OF FAN BLADES.

Fan blade cleaning and disassembly  
installation diagram, wipe with dry  
cloth or chicken blanket Do not wash  
with water (figure 1)

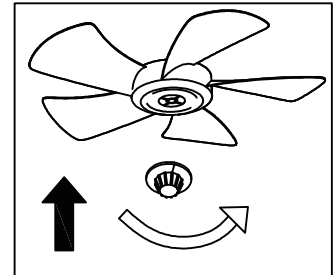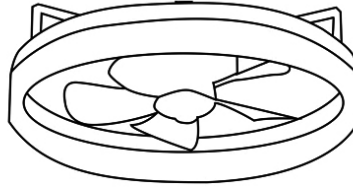


# HOW TO ASSEMBLE YOUR CEILING FAN


- Remove the hanger ball portion from the downrod/hanger ball assembly by loosening the set screw in the hanger ball until the ball falls freely down the downrod. Remove the pin from the downrod, then remove the hanger ball. Retain the pin and hanger ball for reinstallation in Step 6. (Figure 1)

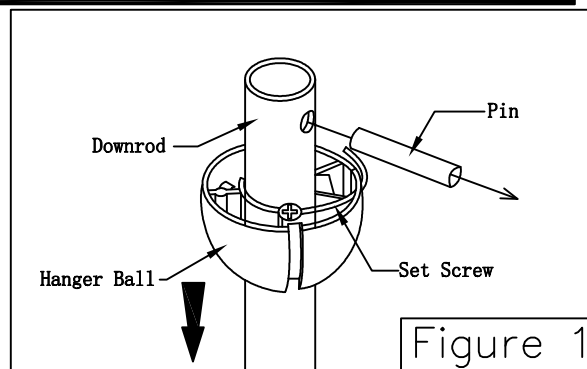



- Remove the hairpin clip and clevis pin from the bottom of the downrod. Retain the pin and clip for reinstallation in Step 4. (Figure 2)

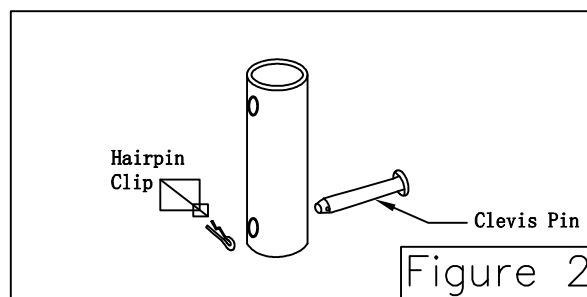


- Loosen the two set screws in the downrod support of the motor assembly. Route the black, white and blue wires through the downrod. (Figure 3)

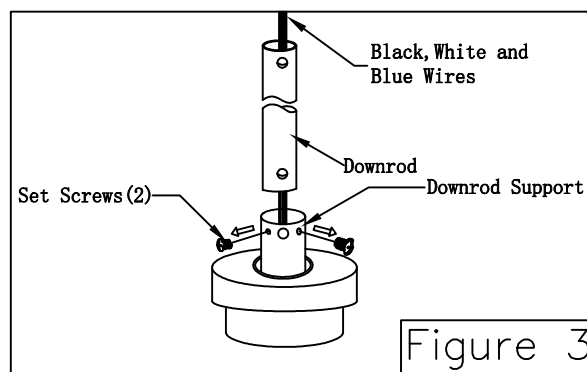

- Thread downrod into the downrod support on top of the motor. Install the clevis pin by aligning the hole in the downrod support with holes in the downrod. Secure clevis pin with hairpin clip. Tighten the two setscrews with in the downrod support. (Figure 4)

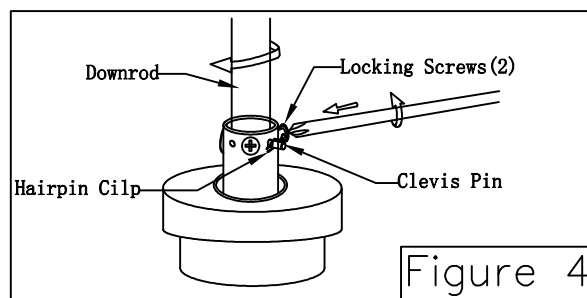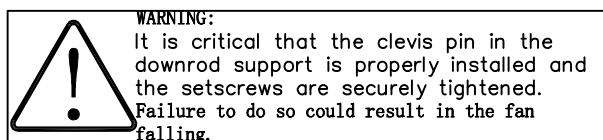


- Route wires through motor coupling cover, canopy screw cover and ceiling canopy. (Figure 5)


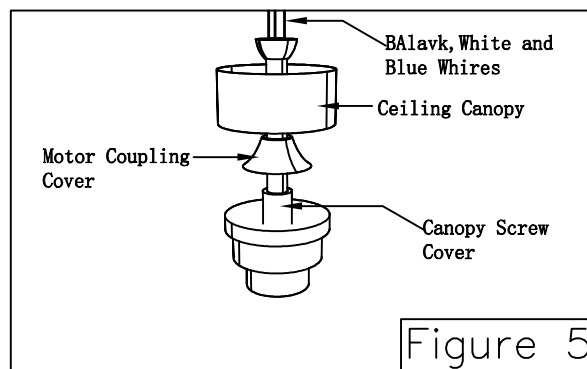


## HOW TO ASSEMBLE YOUR CEILING FAN (CONTINUED)


- Reinstall the hanger ball on the downrod as follows. Route the black, white and blue wires through the hanger ball. Position the pin through the two holes in the downrod and align the hanger ball so the pin is captured in the groove in the top of the hanger ball. Pull the hanger ball up tight against the pin. Securely tighten the set screw in the hanger ball. A loose setscrew could create fan wobble. (Figure 6)

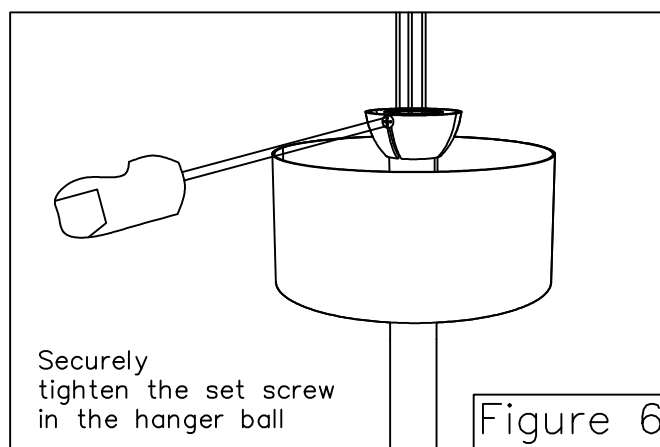

- Cut off excess lead wire approximately 6 to 9 inches above top of the downrod. Strip insulation off 1/2 inch from the end of each lead wire. (Figure 7)

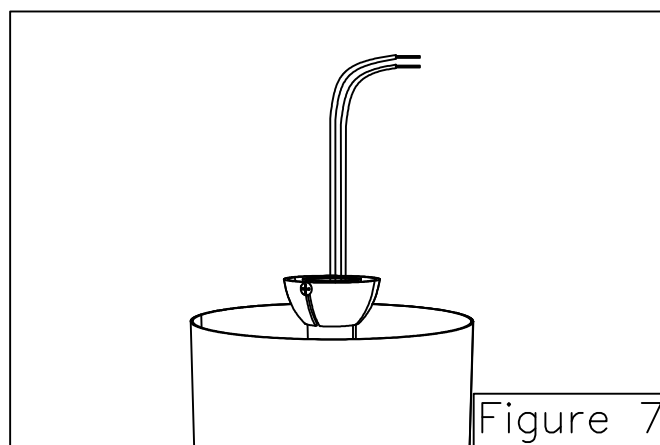

- Remove one of the two shoulder screws in the hanger bracket and retain the screw for later. Loosen the second shoulder screw without fully removing it. (Figure 8)

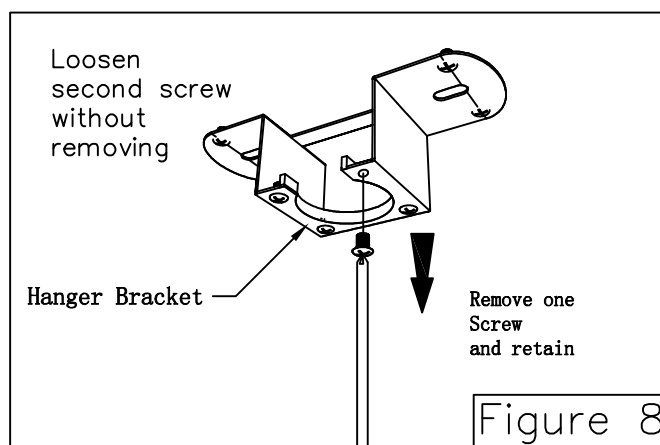

## HOW TO HANG YOUR CEILING FAN



### WARNING:

To avoid possible re or shock, be sure electricity is turned off at the main fuse box before hanging. (Figure 1)




### NOTE:

If you are not sure if the outlet box is grounded, contact a licensed electrician for advice, as it must be grounded for safe operation.




**WARNING:** The fan must be hung with at least 11.5ft. from floor to ceiling fan. (Figure 2)

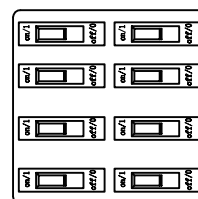

MAIN FUSE BOX

Figure 1

CEILING

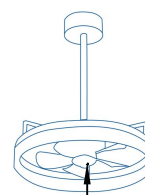

The recommended height is 11.5ft. from the ground

FLOOR

Figure 2

Securely attach the hanger bracket to the outlet box using the outlet box screws and washers supplied with the outlet box. (Figure 3)



### WARNING:

The outlet box must be securely anchored. Hanger bracket must seat firmly against outlet box. If the outlet box is recessed, remove wall board until bracket contacts box. If bracket and/or outlet box are not securely attached, the fan could wobble or fall.

Hanger Bracket

Lock Washer (4)

Flat Washer (4)

Screw (4)

Use machine screw or wood screws

Figure 3

Carefully lift the fan and seat the downrod/hanger ball assembly onto the hanger bracket that was just attached to the outlet box. Be sure the groove in the ball is lined up with tab on the hanger bracket. (Figure 4) This fan is intended for standard and angled mounting options only. Close mount and flush mount options are not available. For angled ceilings, note the angle can be no more than 16°.



### WARNING:


Failure to seat tab in groove could cause damage to electrical wires and possible shock or re hazard.



### WARNING:

To avoid possible shock, do not pinch wires between the hanger ball assembly and the hanger bracket.

Hanger Bracket

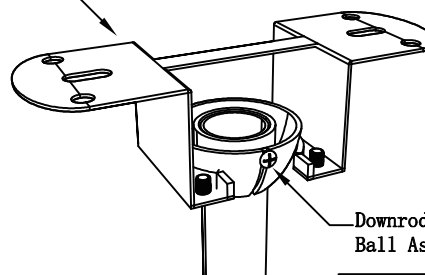

Downrod/Hanger Ball Assembly

Figure 4

## PAIR REMOTE & RECEIVER



**NOTE:**  
The remote unit has 16 different code combinations. To prevent possible interference from or to other remote units, simply change the combination code in the remote and receiver.

To set the code on receiver unit, slide dip switches to the same positions as set on the remote. (Figure 1)

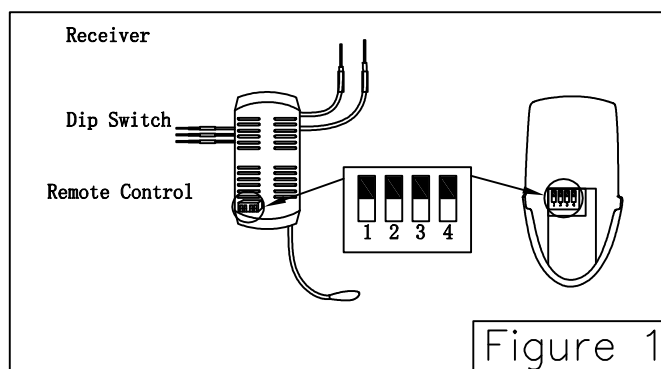


Figure 1



**NOTE:**  
Factory default setting is dip switches all up. Do not use this position.

## WIRE THE CEILING FAN



**WARNING:**  
To avoid possible electrical shock, be sure electricity is turned off at the main fuse box before wiring. (Figure 2)



**NOTE:**  
If you are not sure if the outlet box is grounded, contact a licensed electrician for advice, as it must be grounded for safe operation.

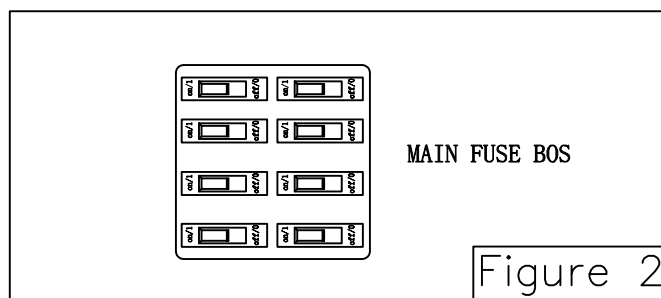


Figure 2

Turn electricity off at the main fuse box before wiring the fan.

# WIRING YOUR CEILING FAN


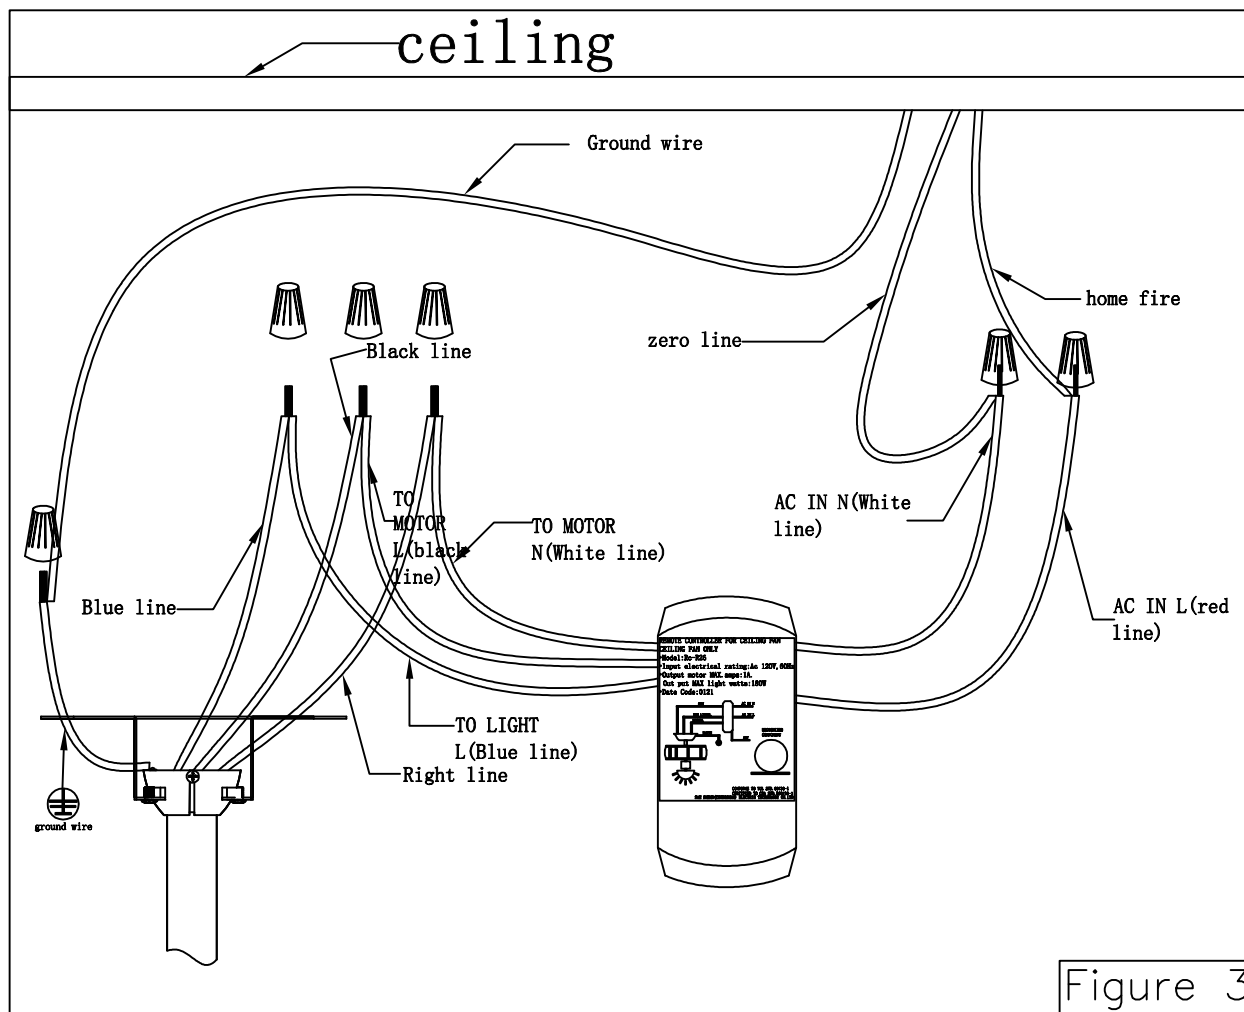


Figure 3

- ☐ Slide the receiver into the hanger bracket.
- ☐ Connect green wires from hanger bracket and downrod and wave filter to bare (ground) wire using wire connector.
- ☐ Connect black wire from wave filter unit marked "AC IN L" to black supply wire using wire connector.
- ☐ Connect white wire from wave filter unit marked "AC IN N" to white supply wire using wire connector.
- ☐ Connect white wire from receiver unit marked "TO MOTOR N" to white wire from fan using wire connector supplied with receiver unit.
- ☐ Connect black wire from receiver unit marked "TO MOTOR L" to black wire from fan using wire connector supplied with receiver unit.
- ☐ Lastly, connect blue wire from receiver unit to the blue fan light wire using wire connector supplied with receiver unit. (Figure 3)

## HARDWARE USED:

WIRE  
CONNECTORS



X 6



## NOTE:

If you feel that you do not have enough electrical wiring knowledge or experience, have your fan installed by a licensed electrician.

## WIRING YOUR CEILING FAN (CONTINUED)



**WARNING:**

Check to see that all connections are tight, including ground, and that no bare wire is visible at the wire connectors except for the ground wire. Do not operate fan until the blades are in place. Noise and motor damage could result.

- After connections have been made, turn leads upward and carefully push leads into the outlet box, with the white and green leads to one side of the box and the black leads to the other side. (Figure 4)

After the wires are connected, bundle the wires with cable ties, and then place the junction box in the hanger

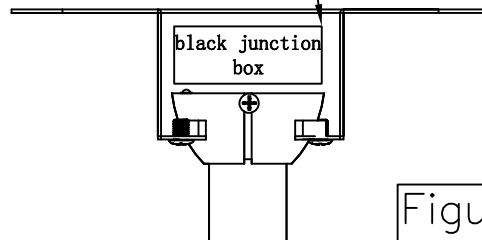


Figure 4

- Use bandage to extend into the wave filter mounting hole and the screw hole of the hanger bracket, and tighten bandage (for subsequent installation of the ceiling Canopy) . (Figure 5)

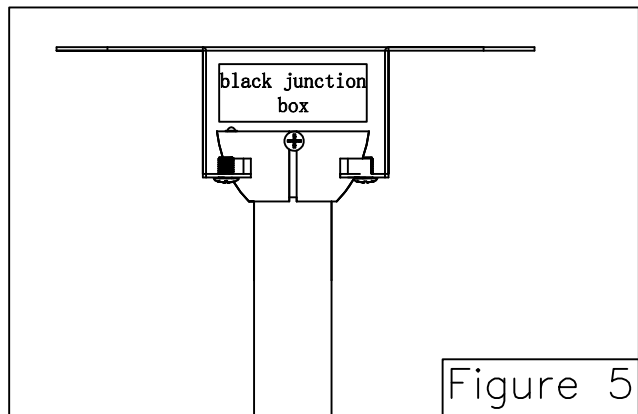


Figure 5

## HOW TO INSTALL YOUR CANOPY HOUSING



### NOTE:

This step is applicable after the necessary wiring is completed.



Assemble canopy by rotating key slot in canopy over shoulder screw in hanger bracket, taking care not to pinch the wires. Tighten shoulder screw. Fully assemble and tighten second shoulder screw that was previously removed. (Figure 1)



### WARNING:

To avoid possible fire or shock, make sure that the electrical wires are completely inside the canopy housing and not pinched between the housing and the ceiling.

Securely attach and tighten the three "L" tabs of canopy screw cover over the three slots of canopy utilizing the key slot twist-lock feature. (Figure 2)

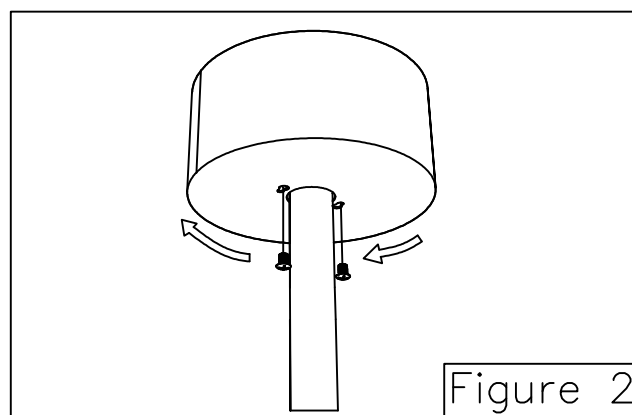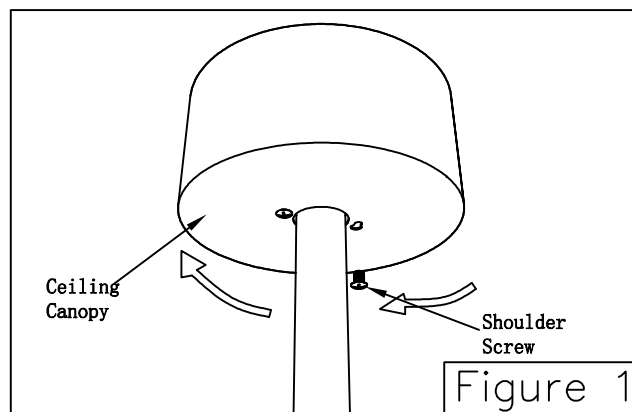




# HOW TO OPERATE YOUR CEILIN FAN

## □ IMPORTANT:

Using a full range dimmer switch (not included) to control fan speed will damage the fan. To reduce the risk of fire or electrical shock, do not use a full range dimmer switch to control the fan speed. (Figure 1)

- Restore electrical power to the outlet box by turning the electricity on at the main fuse box. (Figure 2)

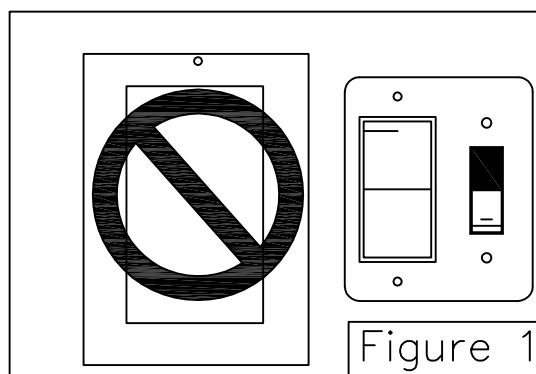

### WARNING:

Check to see that all connections are tight, including ground, and that no bare wire is visible at the wire connectors, except for the ground wire. Do not operate fan until the blades are in place. Noise and fan damage could result.



### WARNING:

Do not operate this fan with a variable (Rheostat) wall controller or dimmer switch. Doing so could result in damage to the ceiling fan's remote control unit.





### NOTE:

The remote unit has 16 different code combinations. To prevent possible interference from or to other remote units, simply change the combination code in there mote and receiver.




### NOTE:

Factory default setting is dip switches all up. Do not use this position.

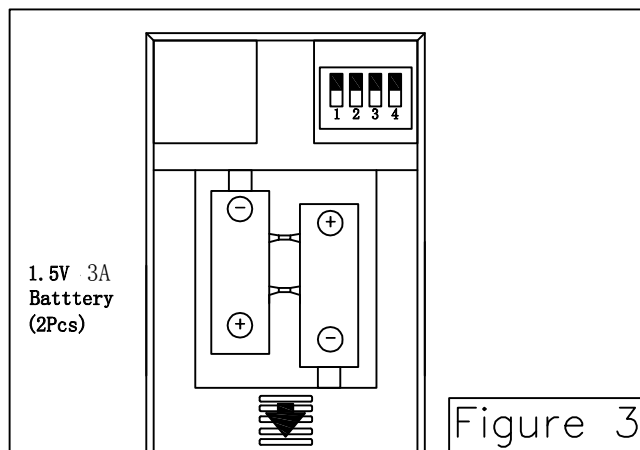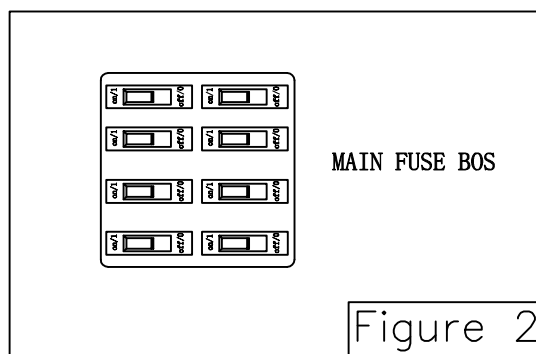

- To set the remote code same positions as the receiver with a small screwdriver or ball point pen (neither included), slide dip switches firmly up or down. (Figure 4)

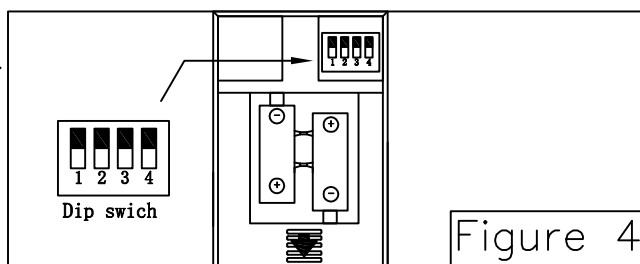

## HOW TO OPERATE YOUR CEILING FAN (CONTINUED)





### NOTE:

Wait for the fan to stop before reversing the direction of the blade rotation.

- If airflow is desired in the opposite direction, turn the fan off and wait for the blades to stop turning. Slide the reverse switch on top of motor assembly to the opposite position and turn fan on again (Figure 6)

Reverse Switch Information		
Season	Rotation Direction	Switch Position
Summer	Clockwise	Left
Winter	Counter-Clockwise	Right

- Warm weather- (Forward) A downward air flow creates a cooling effect as shown in. (Figure 7) This allows you to set your air conditioner on a higher setting without affecting your comfort.
- Cool weather- (Reverse) An upward airflow moves warm air off the ceiling area as shown in. (Figure 8) This allows you to set your heating unit on a lower setting without affecting your comfort.

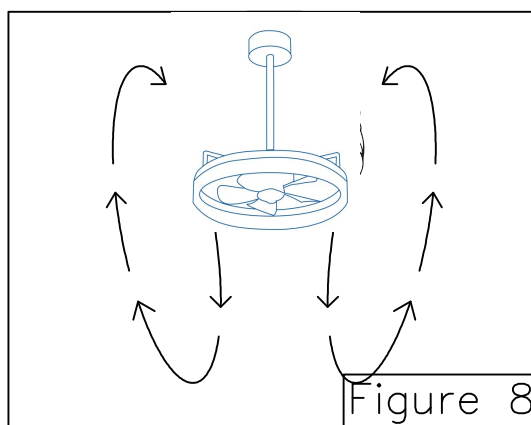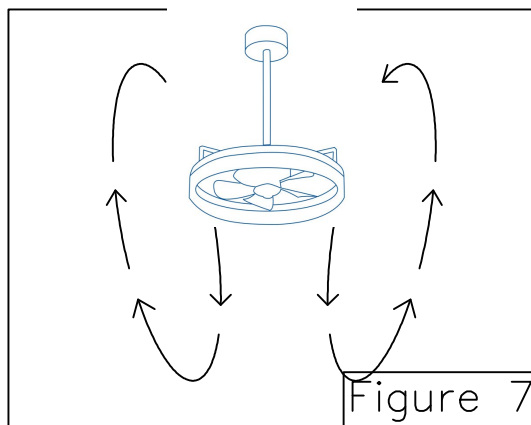

## MAINTENANCE

Periodic cleaning of your new ceiling fan is the only maintenance that is needed. When cleaning, use only soft brush or lint free cloth to avoid scratching the finish. Abrasive cleaning agents are not required and should be avoided to prevent damage to finish.



### CAUTION

Do not use water when cleaning your ceiling fan. It could damage the motor or the finish and create the possibility of electrical shock.

# HOW TO OPERATE YOUR CEILING FAN (CONTINUED)

## □ Remote functions: (Figure 5)

• **Indicator LED light:** When the remote control is operated to send commands, the indicator light is on normally (if the indicator light is not on when sending the command, the battery may be low or the remote control may be damaged)



**ON/OFF:** Turn fans ON/OFF

**HI:** High speed

**MED:** Medium speed

**LOW:** Low Speed

**OFF:** Turn light ON/OFF

**Dimmer:** This unit is Non-dimmable, please ignore the dimmer button

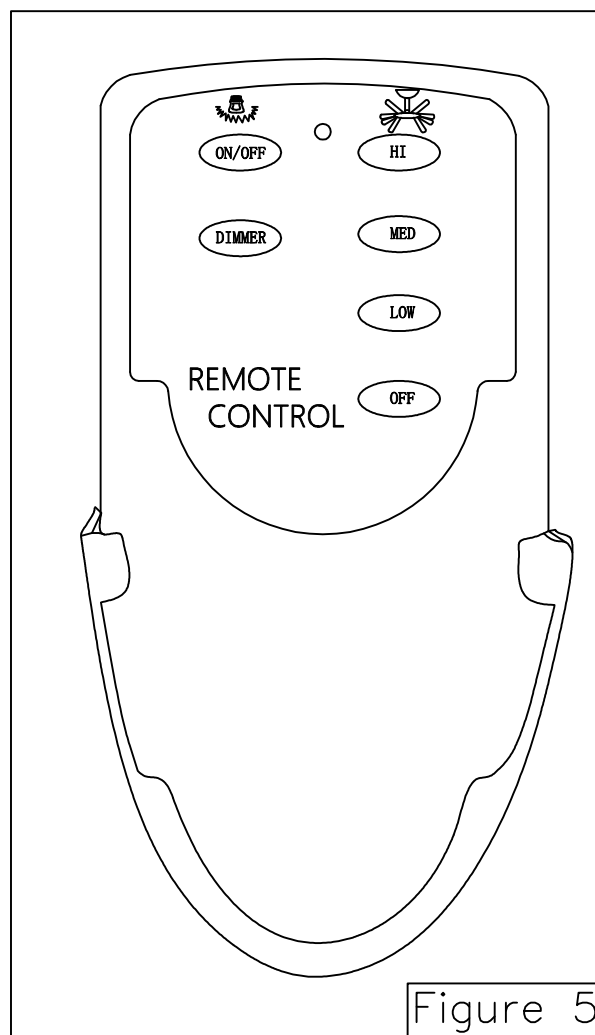


Figure 5

## **IMPORTANT POINTS:**

1. Please read this instruction, and save it for further use.
2. Before installation, TURN OFF THE POWER TO YOUR CEILING FAN (at the main switch box or fuse box)
3. Please note that all wiring appliances should be installed by a qualified electrician.
4. This unit is to be used in a AC 110V~120V 50Hz/60Hz supply only. (Rating: max. 100W, Min. 15W for fan motor max. 300W, Min. 5W for light kits)
5. Do not install in damp locations or immerse in water. (For indoor use only.)
6. Do not pull on or cut leads shorter.
7. Do not drop or bump the unit.
8. PLEASE NOTE: The battery will weaken with age and should be replaced before leaking takes place as this will damage the transmitter.
9. The batteries must be removed from the transmitter before it is scrapped and the batteries shall be disposed of safety.
10. The switch shall be mounted at a height greater than 5ft.
11. The electric shock protection of the receiver shall be depended on its installation.
12. The remote controller shall be used within its rating range, otherwise overheating and dangerous phenomenon may occur.
13. CAUTION: To reduce the risk of fire or injury, do not use this product in conjunction with any variable (rheostat) wall control.

Remote control only: Install the two 'AAA' 1.5 volt batteries (NOT included)

# TROUBLESHOOTING



## WARNING:

For your own safety turn off power at fuse box or circuit breaker before trouble shooting your fan.

TROUBLE	PROBABLE CAUSE	SUGGESTED REMEDY
1. FAN WILL NOT START	<ol style="list-style-type: none"> <li>1. Fuse or circuit breaker blown.</li> <li>2. Loose power line connections to the fan, or loose switch wire connections in the switch housing</li> <li>3. Dead battery in remote control.</li> <li>4. Reversing switch in neutral position.</li> </ol>	<p><b>CAUTION: Make sure main power is turned off!</b></p> <ol style="list-style-type: none"> <li>1. Check main and branch circuit fuses or circuit breakers.</li> <li>2. Check line wire connections to fan and switch wire connections in the switch housings.</li> <li>3. Replace with new battery.</li> <li>4. Make sure reversing switch position is all the way to one side.</li> </ol>
2. FAN SOUNDS NOISY	<ol style="list-style-type: none"> <li>1. Loose screws in motor housing.</li> <li>2. Wire connectors inside housing rattling.</li> <li>3. Motor noise caused by solid state variable speed control</li> </ol>	<p><b>CAUTION: Make sure main power is turned off!</b></p> <ol style="list-style-type: none"> <li>1. Check to make sure all screws in motor housing are snug (do not over-tighten) .</li> <li>2. Check to make sure wire connectors in switch housing are not rattling against each other or against the interior wall of the switch housing.</li> <li>3. Some fan motors are sensitive to signals from solid-state variable speed controls. Solid-state controls are not recommended, choose an alternative control method.</li> </ol>
3. FAN WOBBLER EXCESSIVELY	<ol style="list-style-type: none"> <li>1. Set screw in down rod support is loose.</li> <li>2. Setscrew in down rod/hanger ball assembly is loose.</li> <li>3. Hanger bracket and/or ceiling outlet box is not securely fastened.</li> </ol>	<ol style="list-style-type: none"> <li>1. Tighten both setscrews securely in down rod support.</li> <li>2. Tighten the setscrew in the down rod/hanger ball assembly.</li> <li>3. Tighten the hanger bracket screws to the outlet box, and secure outlet box.</li> </ol>
4. NOT ENOUGH AIR MOVEMENT		<ol style="list-style-type: none"> <li>1. If possible, consider using a longer 10 in. down rod (include)</li> </ol>

For further questions, please contact customer service  
[support@breezary.com](mailto:support@breezary.com)