


# KOBALT™

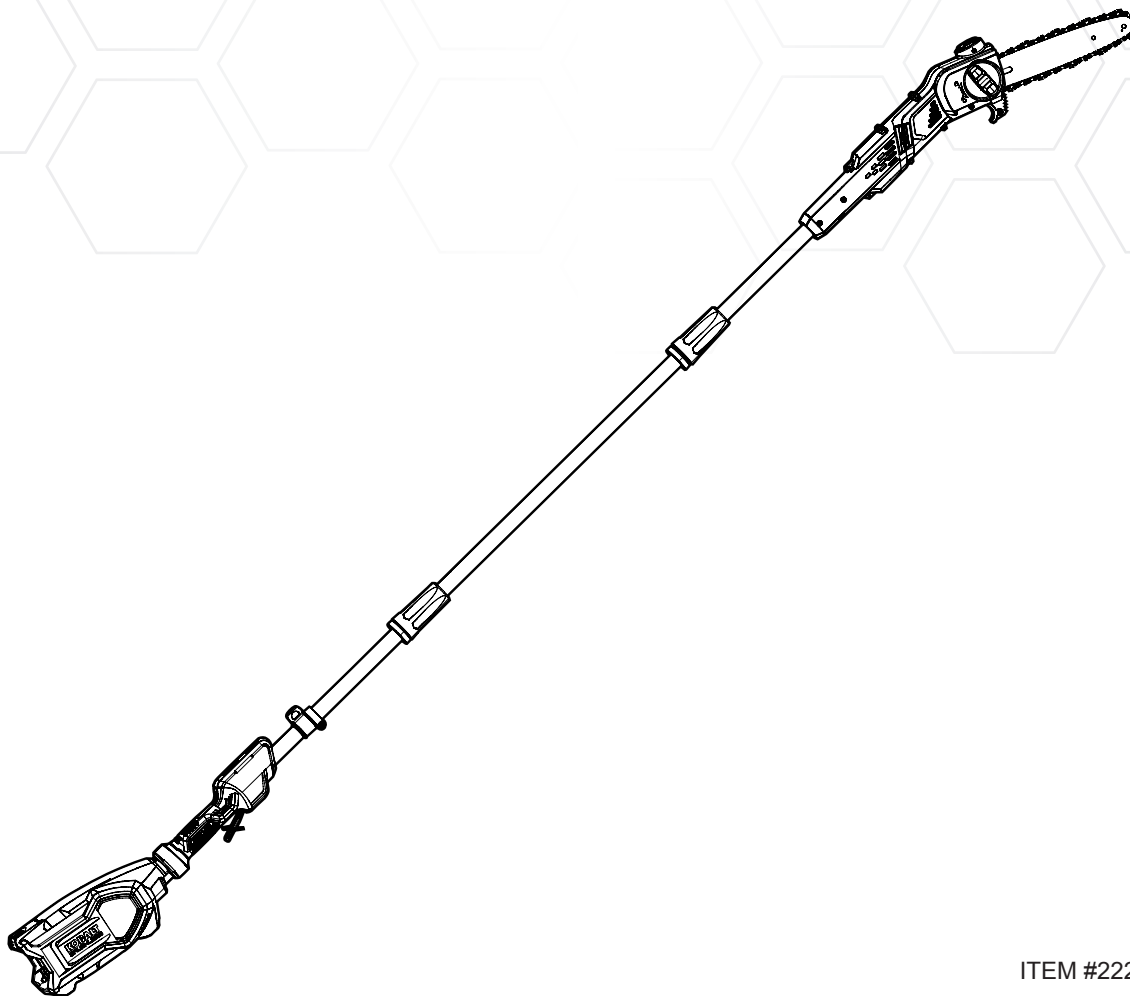

ITEM #2220273/2220274

## 80 V LITHIUM-ION CORDLESS POLE SAW

MODEL #KPS 1081-06

**Español p. 26**

---

**ATTACH YOUR RECEIPT HERE**

**Serial Number** \_\_\_\_\_ **Purchase Date** \_\_\_\_\_

---



**Questions, problems, missing parts?** Before returning to your retailer, call our customer service department at **1-888-3KOBALT** (1-888-356-2258), 8 a.m. - 8 p.m., EST, Monday - Sunday.

**TABLE OF CONTENTS**

---

Product Specifications ..... 3

Package Contents ..... 4

Symbols ..... 6

Safety Information ..... 8

Preparation ..... 11

Assembly Instructions ..... 12

Operating Instructions ..... 14

Care and Maintenance ..... 16

Troubleshooting ..... 24

Warranty ..... 24

Replacement Parts List ..... 25

## PRODUCT SPECIFICATIONS


---

SPECIFICATIONS	
Type	Cordless, Battery-powered
Battery	80 V Lithium-ion
Bar length	10 in. (254 mm)
Chain pitch	1/4 in. (6.3 mm)
Chain type	25AP058X
Guide bar type	100SDAA041
Weight (without battery)	9.8 lbs. (4.45 kg)




### The recommended ambient temperature range:

Item	Temperature
Appliance storage temperature range	-4°F (-20°C) - 158°F (70°C)
Appliance operation temperature range	6.8°F (-14°C) - 104°F (40°C)
Battery charging temperature range	39°F (4°C) - 113°F (45°C)
Charger operation temperature range	39°F (4°C) - 113°F (45°C)
Battery storage temperature range	32°F (0°C) - 73°F (23°C)
Battery discharging temperature range	6.8°F (-14°C) - 113°F (45°C)

PACKAGE CONTENTS

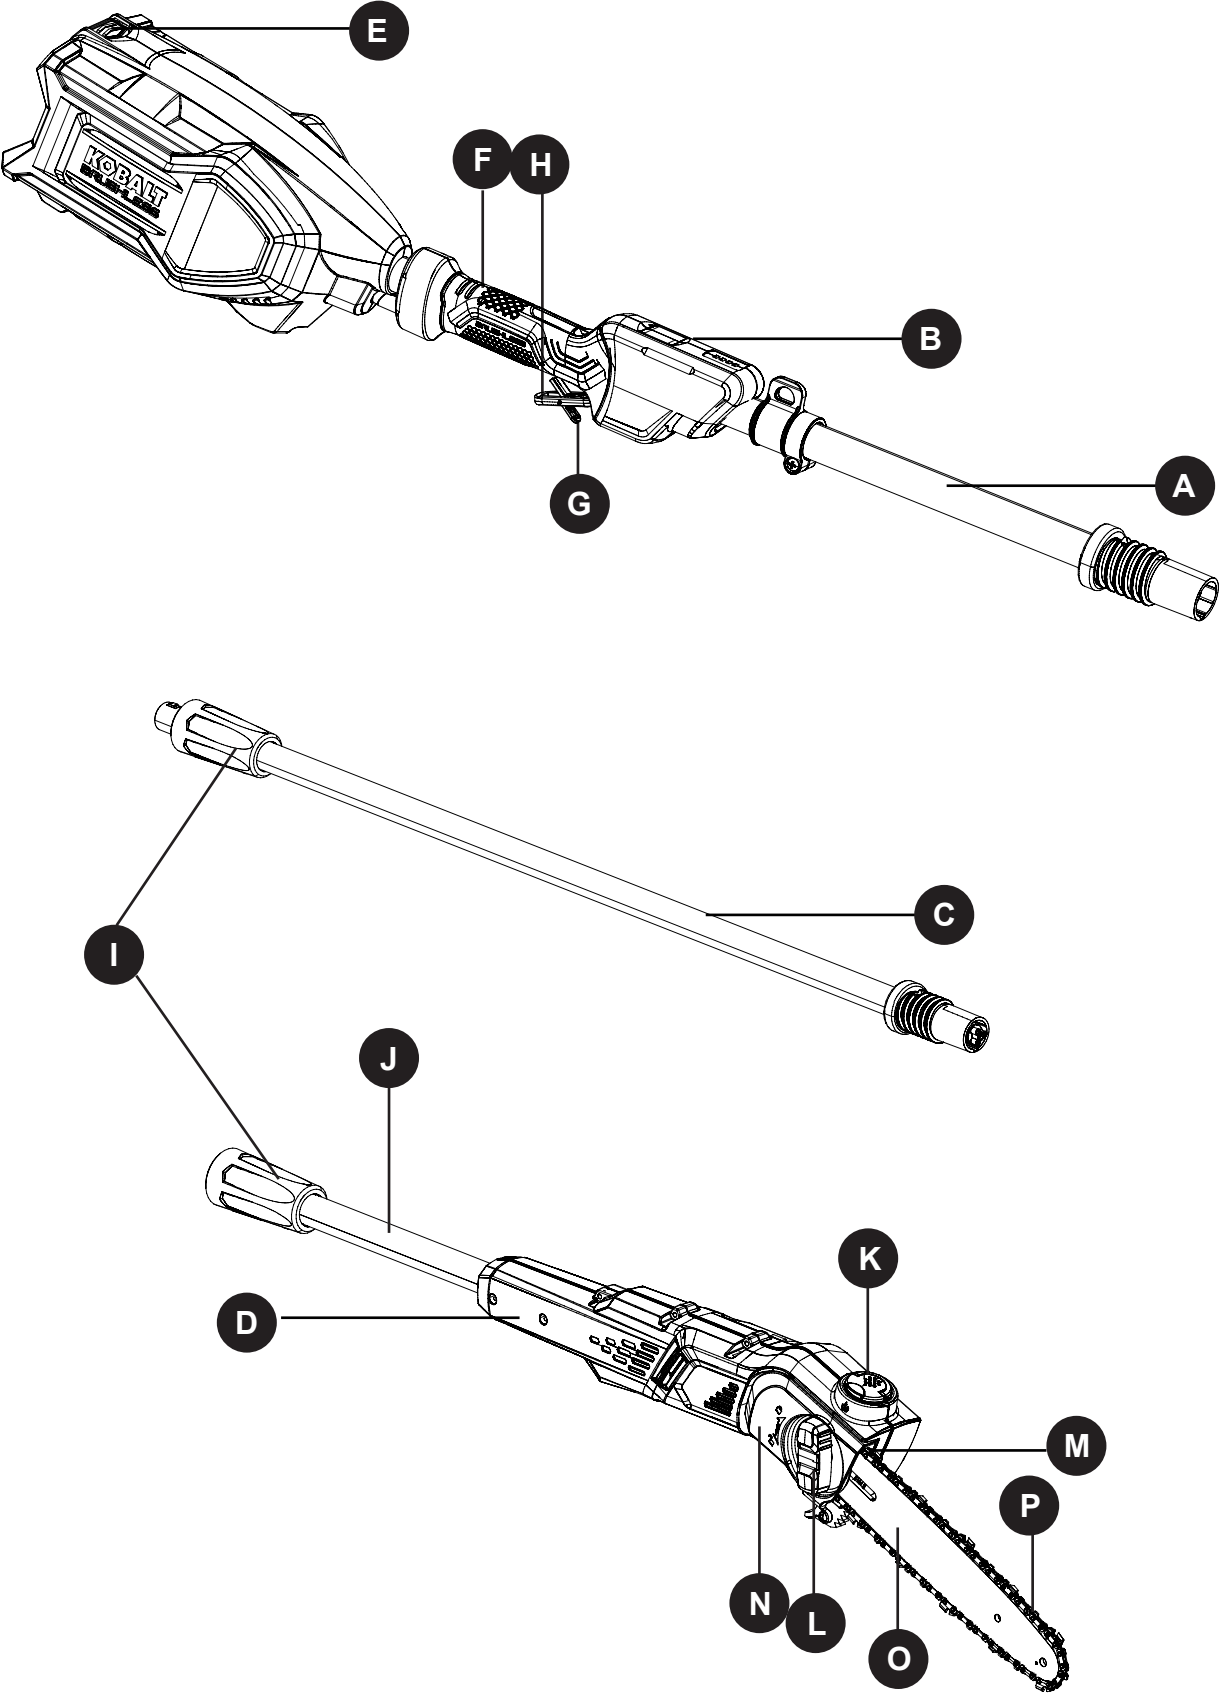

## PACKAGE CONTENTS

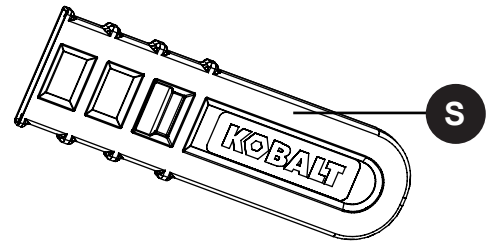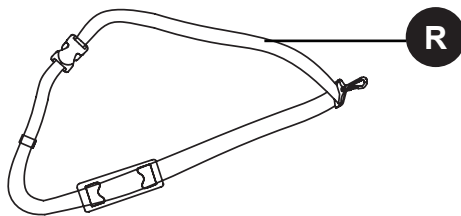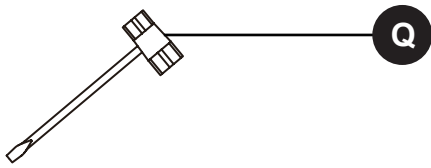











PART	DESCRIPTION	QUANTITY
A	Lower Tube	1
B	Handle Pole	1
C	Extension pole	1
D	Power head pole	1
E	Battery Release Button	1
F	Rear Handle	1
G	Lock-off Lever	1
H	Trigger Switch	1
I	Collar	1
J	Upper Tube	1
K	Oil Cap	1
L	Bar Cover Knob	1

PART	DESCRIPTION	QUANTITY
M	Chain Tension Screw	1
N	Bar Cover	1
O	Bar	1
P	Saw Chain	1
Q	Wrench	1
R	Strap	1
S	Scabbard	1

## SYMBOLS




Some of the following symbols may be used on this product. Please study them and learn their meaning. Proper interpretation of these symbols will allow you to operate the product better and safer.

SYMBOL	DESIGNATION	EXPLANATION
V	Volts	Voltage
A	Amperes	Current
Hz	Hertz	Frequency (cycles per second)
W	Watt	Power
$n_0$	No Load Speed	Rational speed, at no load
/min	Per Minute	Revolutions, strokes, surface speed, orbits etc., per minute
— — —	Direct Current	Type or a characteristic of current
	Read the Operator's Manual	To reduce the risk of injury, user must read and understand operator's manual before using this product.
	Safety Alert	Precautions that involve your safety.
	Wet Conditions Alert	Do not expose to rain or use in damp locations
	Ear Protection	Wear ear protection when operating this equipment.
	Eye and Head Protection	Wear eye and head protection when operating this equipment.
	Gloves	Wear non-slip, heavy-duty protective gloves when handling the chain saw and the blade.
	Safety Footwear	Wear non-slip safety footwear when using this equipment.
	Kickback	Tip contact can cause the guide bar to move suddenly upward and backward, which can cause serious injury.
	Risk of Electrocution/ Keep Bystanders Away	DANGER! Risk of electrocution! Keep tool 50 ft. away from electrical lines. Keep all bystanders at least 50 ft. away.
	Electric Shock	Failure to use in dry conditions and to observe safe practices can result in electric shock.


## **SYMBOLS**

---

The following signal words and meanings are intended to explain the levels of risk associated with this product.

<b>SYMBOL</b>	<b>SIGNAL</b>	<b>MEANING</b>
	DANGER	Indicates an imminently hazardous situation, which, if not avoided, will result in death or serious injury.
	WARNING	Indicates a potentially hazardous situation, which, if not avoided, could result in death or serious injury.
	CAUTION	Indicates a potentially hazardous situation, which, if not avoided, may result in minor or moderate injury.
	CAUTION	(Without Safety Alert Symbol) Indicates a situation that may result in property damage.

## **WARNING**

- To avoid serious personal injury, do not attempt to use this product until you have read this Owner's Manual thoroughly and understand it completely. If you do not understand the warnings and instructions in this Owner's Manual, do not use this product. Call 1-888-356-2258 for assistance.
-  The operation of any power tool can result in foreign objects being thrown into your eyes, which can result in severe eye damage. Before beginning power tool operation, always wear safety goggles or safety glasses with side shields and, when needed, a full-face shield. We recommend a wide vision safety mask for use over eyeglasses or standard safety glasses with side shields. Always use eye protection which is marked to comply with ANSI Z87.1.

## SAFETY INFORMATION

---

### Read All Instructions

#### WARNING

Do not operate near electrical power lines. The unit has not been designed to provide protection from electric shock in the event of contact with overhead electric lines. Consult local regulations for safe distances from overhead electric power lines and ensure that the operating position is safe and secure before operating the saw chain pole pruner.

#### WARNING

Read all safety warnings and all instructions. *Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.*

**Save all warnings and instructions for future reference.**

*The term “power tool” in all of the warnings listed below refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.*

### FOR ALL APPLIANCES

- **Avoid Dangerous Environment – Don’t use appliances in damp or wet locations.**
- **Don’t Use In Rain.**
- **Keep Children Away – All visitors should be kept at a distance from work area.**
- **Dress Properly – Do not wear loose clothing or jewelry. They can be caught in moving parts. Use of rubber gloves and substantial footwear is recommended when working outdoors. Wear protective hair covering to contain long hair.**
- **Use Safety Glasses – Always use face or dust mask if operation is dusty.**
- **Use Right Appliance – Do not use appliance for any job except that for which it is intended.**
- **Avoid Unintentional Starting – Don’t insert battery pack in appliance with finger on switch. Be sure switch is off when insert battery pack.**
- **Don’t grasp the exposed cutting blades or cutting edges when picking up or holding the appliance.**
- **Don’t Force Appliance – It will do the job better and with less likelihood of a risk of injury at the rate for which it was designed.**
- **Don’t Overreach – Keep proper footing and balance at all times.**
- **Stay Alert – Watch what you are doing. Use common sense. Do not operate appliance when you are tired.**
- **Store Idle Appliances Indoors – When not in use, appliances should be stored indoors in dry, and high or locked-up place – out of reach of children.**
- **Maintain Appliance With Care – Keep cutting edge sharp and clean for best performance and to reduce the risk of injury. Follow instructions for lubricating and changing accessories. Inspect appliance cord periodically, and if damaged, have it repaired by an authorized service facility. Inspect extension cords periodically and replace if damaged. Keep handles dry, clean, and free from oil and grease.**
- **Check Damaged Parts – Before further use of the appliance, a guard or other part that is damaged should be carefully checked to determine that it will operate properly and perform its intended function. Check for alignment of moving parts, binding of moving parts, breakage of parts, mounting, and any other condition that may affect its operation. A guard or other part that is damaged should be properly repaired or replaced by an authorized service center unless indicated elsewhere in this manual.**
- **Use only Kobalt 80-volt batteries (KB 280-06, KB 2580-06, KB 380-06).**





## **SAFETY INFORMATION**

---

- Use only Kobalt charger (KRC 80-06, KRC 30-06).

### **POLE SAW SAFETY WARNINGS**

- Keep all parts of the body away from the saw chain. Do not remove cut material or hold material to be cut when blades are moving. Make sure the switch is off when clearing jammed material. Saw chain continues to move after the switch is turned off. A moment of inattention while operating the extended-reach pruner may result in serious personal injury.
- Carry the pole saw by the handle with the saw chain stopped. When transporting or storing the pole saw, always fit the saw chain device cover. Proper handling of the pole saw will reduce possible personal injury from the saw chain.
- Hold the pole saw by insulated gripping surfaces only, because the saw chain may contact hidden wiring. A saw chain contacting a "live" wire may make exposed metal parts of the pole saw "live" and could give the operator an electric shock.
- Do not use the pole saw in bad weather conditions, especially when there is a risk of lightning. This decreases the risk of being struck by lightning.
- To reduce the risk of electrocution, never use near any electrical power lines. Contact with or use near power lines may cause serious injury or electric shock resulting in death.
- Always use two hands when operating the extended-reach pruner. Hold the extended-reach pruner with both hands to avoid loss of control.
- Always use head protection when operating the extended-reach pruner overhead. Falling debris can result in serious personal injury.
- Prevent unintentional starting. Ensure the power switch is in the off-position before connecting to battery pack, picking up or carrying the appliance. Carrying the appliance with your finger on the power switch or energizing appliance that have the power switch on invites accidents.
- Make sure the power switch is off and the battery pack is removed before clearing jammed material, making adjustments, changing accessories, storing or servicing the appliance. Unexpected actuation of the appliance while clearing jammed material or servicing may result in serious personal injury.
- Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- Use appliances only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.
- When battery pack is not in use, keep it away from other metal objects like paper clips, coins, keys, nails, screws or other small metal objects that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
- Under abusive conditions, liquid may be ejected from the battery; avoid contact with it. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
- Do not use a battery pack or appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- Do not expose a battery pack or appliance to fire or excessive temperature. Exposure to fire or temperature above 265°F may cause explosion.
- Follow all charging instructions and do not charge the battery pack or appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.



## **SAFETY INFORMATION**

---

- Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.
- Do not modify or attempt to repair the appliance or the battery pack (as applicable) except as indicated in the instructions for use and care.



### **WARNING (PROPOSITION 65)**

Some dust created by power sanding, sawing, grinding, drilling, and other construction activities contains chemicals known to cause cancer, birth defects or other reproductive harm. Some examples of these chemicals are:

- Lead from lead-based paints
- Crystalline silica from bricks and cement and other masonry products and
- Arsenic and chromium from chemically treated lumber.

Your risk of exposure to these chemicals varies depending on how often you do this type of work. To reduce your exposure to these chemicals, work in a well-ventilated area and work with approved safety equipment, such as dust masks that are specially designed to filter out microscopic particles.

**SAVE THESE INSTRUCTIONS**

## PREPARATION

---

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list. If any part is missing or damaged, do not attempt to assemble the product.

Helpful Tools: Wrench for tightening the chain and connecting the poles.

## UNPACKING

- This product has been shipped unassembled.
- Carefully remove the product and any accessories from the box. Make sure that all items listed in the Package Contents list are included.
- Inspect the product carefully to make sure no breakage or damage occurred during shipping.
- Do not discard the packing material until you have carefully inspected and satisfactorily operated the product.
- If any parts are damaged or missing, please call **1-888-3KOBALT** (1-888-356-2258) for assistance.



## WARNING

- If any parts are damaged or missing, do not operate this product until the parts are replaced. Failure to heed this warning could result in serious personal injury.
- Do not attempt to modify this product or create accessories not recommended for use with this product. Any such alteration or modification is misuse and could result in a hazardous condition leading to possible serious personal injury.
- Do not install the battery until assembly is complete. Failure to comply could result in accidental starting and possible serious personal injury.


## ASSEMBLY INSTRUCTIONS

### 1. Connecting the poles

- Insert the extension pole (C) into the handle pole (B) and slide together.
- Lower the collar (I) on the extension pole (C) to the threaded base on the handle pole (B) and rotate clockwise to secure.
- Repeat this process to attach the extension pole (C) to the power head pole (D).

#### **WARNING**

Periodically check the connections to ensure that they are tightened securely.

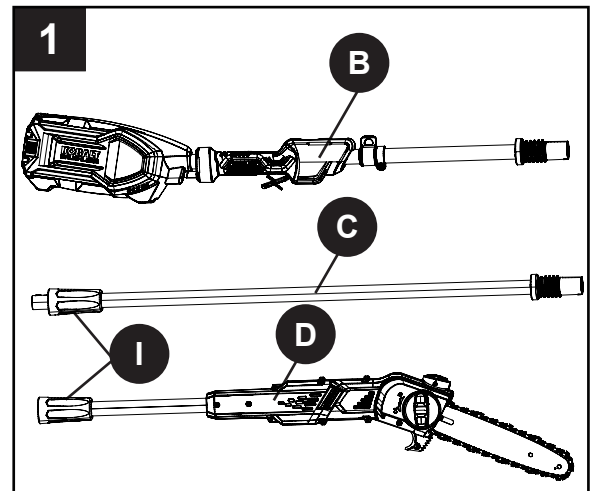


### 2. Adding bar and chain lubricant

Use a bar and chain lubricant (not included) with this product. It is designed for chains and chain oilers, and is formulated to perform over a wide temperature range with no dilution required.

**Note:** This pole saw comes from the factory with no bar and chain oil added.

The level should also be checked after every 20 minutes of use and refilled as needed.

- Flip up the tab and twist to remove the oil cap (K).
- Carefully pour the bar and chain oil into the tank.
- Wipe off excess oil and replace cap.
- Check and fill the oil tank when quick view oil indicator is below the MIN. line.
- Repeat as needed.

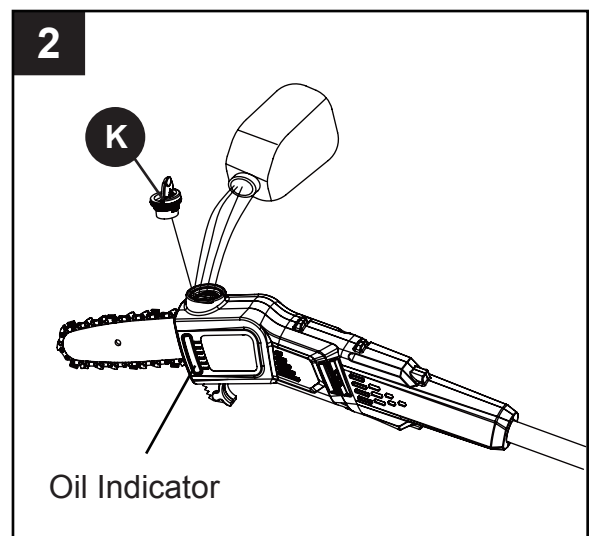


#### **Note:**

- Do not use dirty, used or otherwise contaminated oils. Damage may occur to the bar or chain.
- It is normal for oil to seep from the saw when not in use. To prevent seepage, empty the oil tank after each use then run for one minute. When storing the unit for a long period of time (three months or longer) be sure the chain is lightly lubricated; this will prevent rust on the chain and bar sprocket.

#### **WARNING**

To preserve natural resources, please recycle or dispose of oil properly. Consult your local waste authority for information regarding available recycling and/disposal options.

### 3. Battery

 **IMPORTANT:** The battery may not be fully charged when purchased. Before using the pole saw for the first time, place the battery in the battery charger and charge. Make sure to read all safety precautions, and follow the instructions in the battery and charger manuals.


## ASSEMBLY INSTRUCTIONS

### 3a. To install the battery:

- Align the battery (not included) with the battery compartment.
- Insert battery into the battery compartment until battery release button (E) locks into place. You should hear a “click” once it is installed.

### 3b. To remove the battery:

- Press the battery release button (E) on the battery compartment.  
This will cause the battery to raise out of the tool slightly.
- Grasp the pole saw firmly and pull the battery out of the tool.

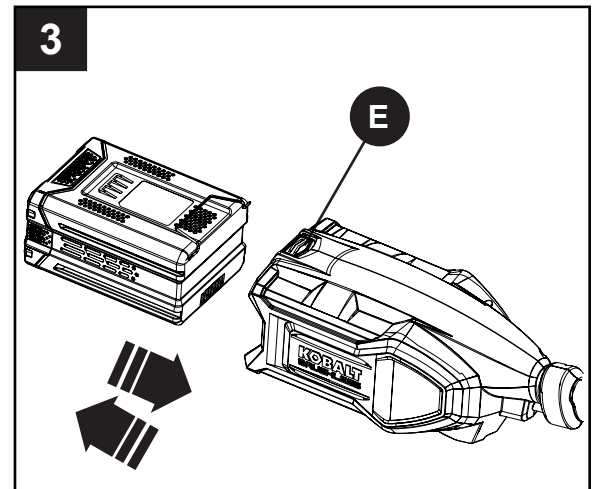

### WARNING

Follow these instructions in order to avoid injury and to reduce the risk of electric shock or fire:

- Replace the battery or the charger immediately if the battery case or charger cord is damaged.
- Verify that the switch is in the OFF position before inserting or removing the battery pack.
- Verify that the battery is removed before inspecting, adjusting or performing maintenance on any part of the pole saw.
- Read, understand and follow the instructions contained in the charger manual.


### IMPORTANT

This Lithium-ion battery is equipped with an internal protection, which will automatically shut off the power to the tool and then reset itself once cooled. Follow these steps if an overload occurs while under heavy use:

- Release the power switch and restart tool by depressing switch.
- The battery may need to be removed for approximately 1 minute, allowed to cool and then reinstalled for use.

### 4. Using the strap harness

- Rotate the strap harness to the upward position.
- Hook the strap to the strap connection.

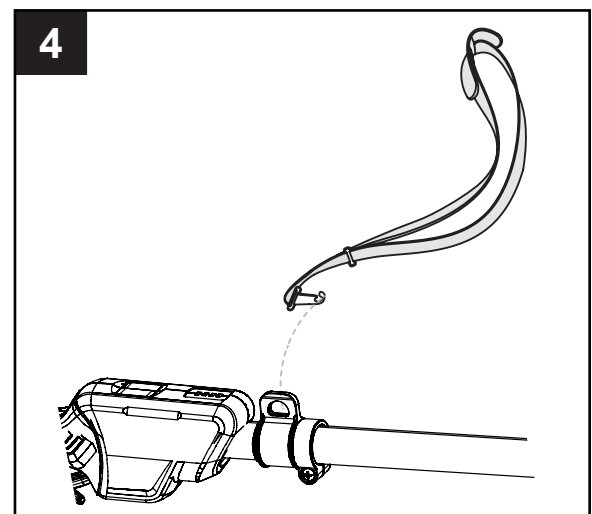


## OPERATING INSTRUCTIONS

---

### To turn on and off

- Slide the lock-off lever (G). Squeeze the trigger switch (H) to start.
- Release the trigger switch (H) to stop.

**Note:** The lock-off lever must be engaged before the trigger is active. Once the trigger is engaged, release the lock-off lever.

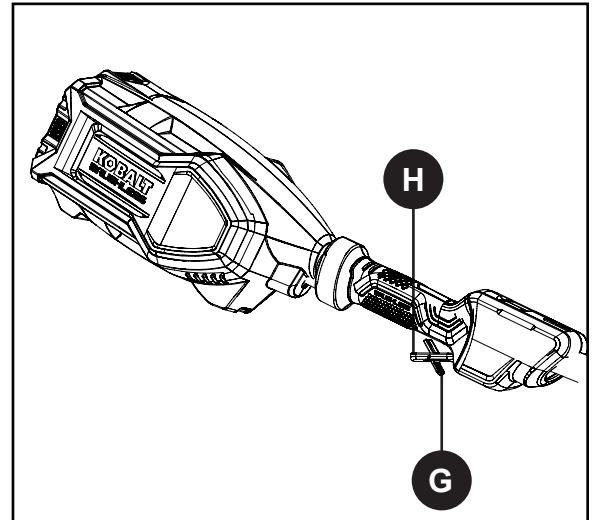

### Preparation for cutting

- Wear non-slip gloves for maximum grip and protection.
- Maintain a proper grip on the unit whenever the motor is running. Use your right hand to firmly grip the rear handle while your left hand has a firm grip on the pole shaft.
- Hold unit firmly with both hands. Always keep your left hand on the pole shaft and your right hand on the rear handle so that your body is to the left of the chain line. Never use a left-handed (crosshanded) grip or any stance that places your body or arm across the chain line.
- Never stand directly under the limb you are cutting.
- Be certain the couplers are fully tightened before operating equipment; check them periodically for tightness during use to avoid serious injury.

### Basic cutting procedure


Follow the steps below to prevent damage to tree or shrub bark. Do not use a back-and-forth sawing motion.

- Make a shallow first cut (1/4 of limb diameter) on the underside of the limb close to the main limb or trunk.
- Make a second cut from the top side of the limb outboard from the first cut. Continue the cut through the limb until the limb separates from the tree. Be prepared to balance the weight of the tool when the limb falls.
- Make a final cut close to trunk.

## OPERATING INSTRUCTIONS

- Release the trigger as soon as the cut is completed. Failure to follow proper cutting procedures will result in the bar and chain binding and becoming pinched or trapped in the limb. If this should happen:
- Stop the motor and remove the battery from the pole saw.
- If the limb can be reached from the ground, lift the limb while holding the saw. This should release the “pinch” and free the saw.
- If the saw is still trapped, call a professional for assistance.



**Note:** For second and final cuts (from top of limb or branch), hold front cutting guide against the limb being cut. This will help steady the limb and make it easier to cut. Allow chain to cut for you; exert only slight downward pressure. If you force the cut, damage to the bar, chain or motor can result.

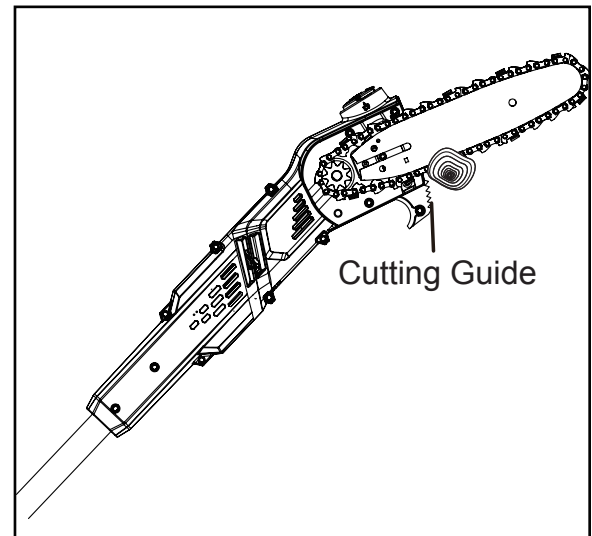

### Limbing and pruning

This unit is designed for trimming small branches and limbs up to 6 in. (15.2 cm) in diameter. For best results, observe the following precautions:

- Plan the cut carefully. Be aware of the direction in which the branch will fall.
- Branches may fall in unexpected directions. Do not stand directly under the branch being cut.
- The most typical cutting application is to position the unit at an angle of 60° or less, depending on the specific situation. As the angle of the pole saw shaft to ground increases the difficulty of making the first cut (from underside of limb) increases.
- Remove long branches in several stages.
- Cut lower branches first to allow the top branches more room to fall.
- Work slowly, keeping both hands on the saw with a firm grip. Maintain secure footing and balance.

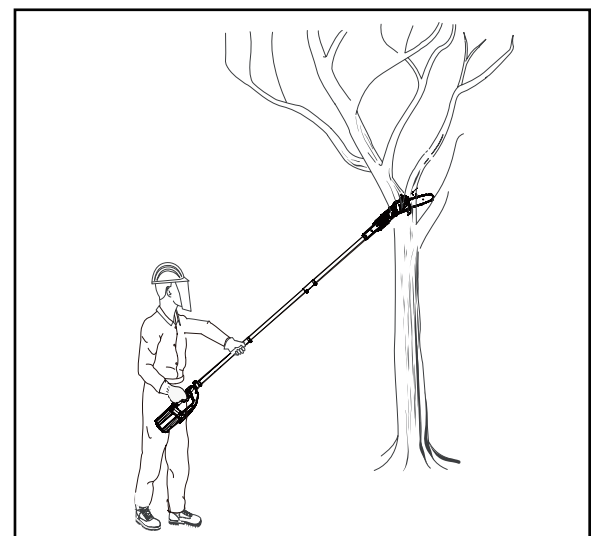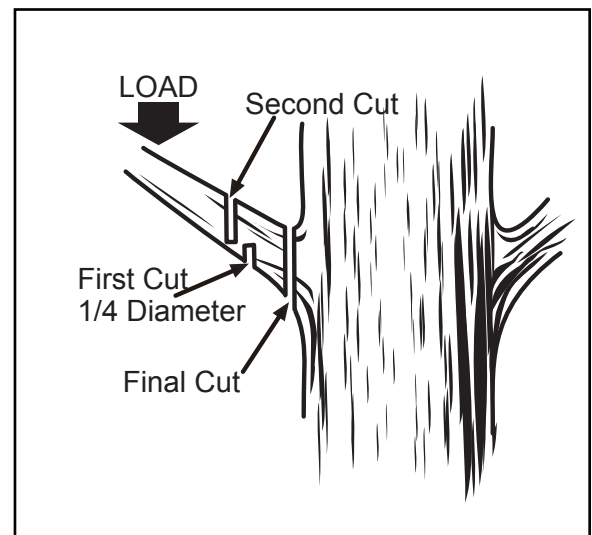


## OPERATING INSTRUCTIONS

- Keep the tree between you and the chain while limbing. Cut from the side of the tree opposite of the branch you are cutting.
- Do not cut from a ladder; this is extremely dangerous. Leave this operation for professionals.
- Do not make the flush cut next to the main limb or trunk until you have cut off the limb further out to reduce the weight.

Following proper cutting procedures will prevent stripping the bark from the main member.

- Do not use the pole saw for felling or bucking.
- To prevent electrocution, do not operate within 50 ft. (15 m) of overhead electrical lines.
- Keep bystanders at least 50 ft. (15 m) away.

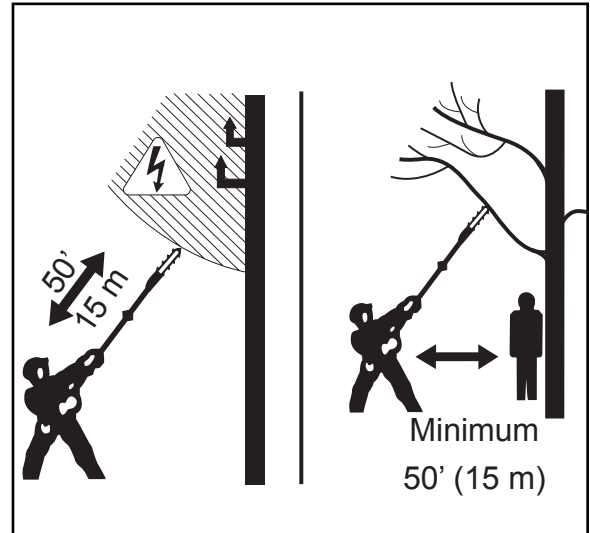

## CARE AND MAINTENANCE

### **! WARNING**

- When servicing, use only identical replacement parts. Use of any other parts may create a hazard or cause product damage.
- Always wear safety goggles or safety glasses with side shields during power tool operation or when blowing dust. If operation is dusty, also wear a dust mask.
- Before inspecting, cleaning or servicing the unit, stop the motor, wait for all moving parts to stop and remove the battery. Failure to follow these instructions can result in serious personal injury or property damage.

### General Maintenance

- Avoid using solvents when cleaning plastic parts. Most plastics are susceptible to damage from various types of commercial solvents and may be damaged by their use. Use clean cloth to remove dirt, dust, oil, and grease, etc.
- Do not at any time let brake fluids, gasoline, petroleum-based products, penetrating oils, etc., come in contact with plastic parts. Chemicals can damage, weaken or destroy plastic, which may result in serious personal injury.
- All pole saw service, other than the items listed in the instruction manual maintenance instructions, should be performed by authorized service centers.

### **! WARNING**

To avoid possible serious injury, never touch or adjust the chain while the motor is running. The saw chain is very sharp; always wear protective gloves when performing maintenance to the chain.




## CARE AND MAINTENANCE


### Chain & Bar Assembly

During use, the chain will stretch and become dull. Debris and saw dust can also collect underneath the bar cover. Use the following steps to maintain your pole saw and chain.


- Release chain tension by turning the chain tension screw (M), located behind the bar and chain, counterclockwise with the wrench (Q).

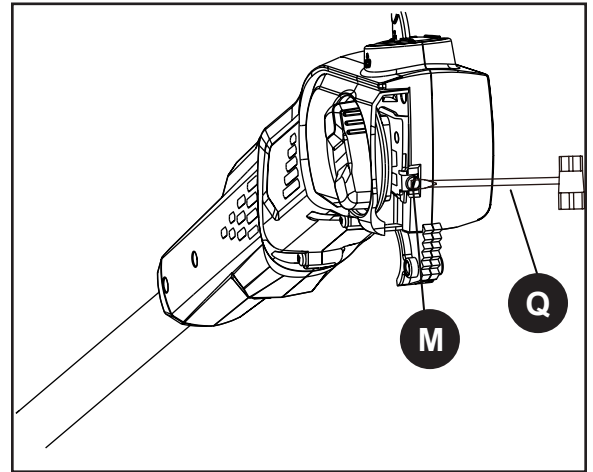

- Unscrew the bar cover knob (L).

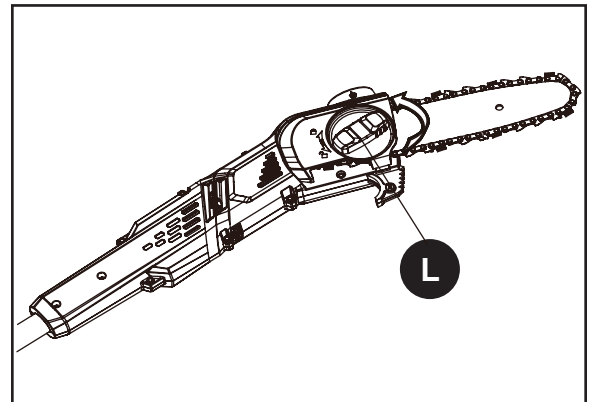


- Remove the cover.
- The bar (O) and chain (P) can now be removed by lifting it away from the main body of the saw and releasing the chain from the sprocket.
- The pole saw can now be cleaned with a brush and/or rag to remove sawdust and oil.

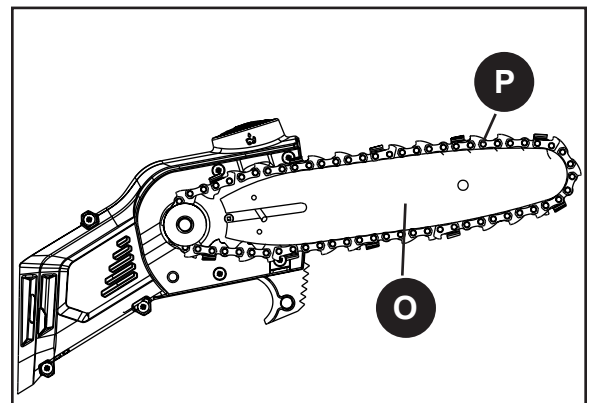


## CARE AND MAINTENANCE

---


- To replace the bar and chain, loop the chain over the sprocket and place the bar against the bar stud slot.

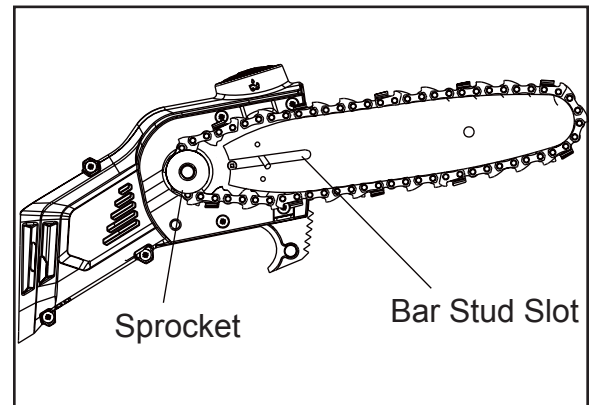

- Ensure that the chain tensioning pin is located in the tensioning hole on the chain bar.
- Also ensure that the rubber block and chain bar are free of oil, as this helps to keep tension on the chain.

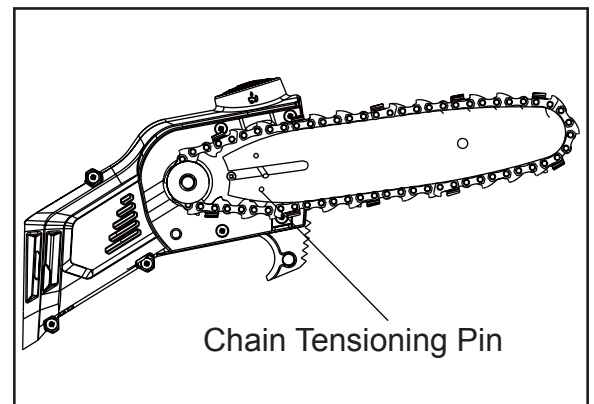


- Replace the side cover and bar cover knob (L), but do not fully tighten.

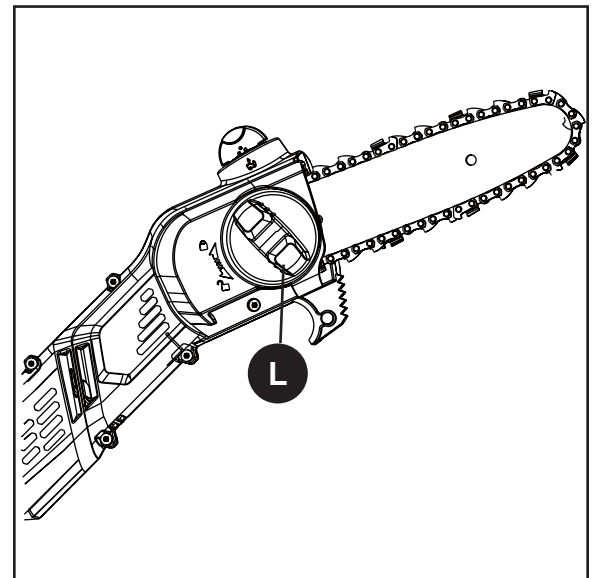


## CARE AND MAINTENANCE

- Using the wrench (Q) on the chain tension screw (M), turn clockwise.

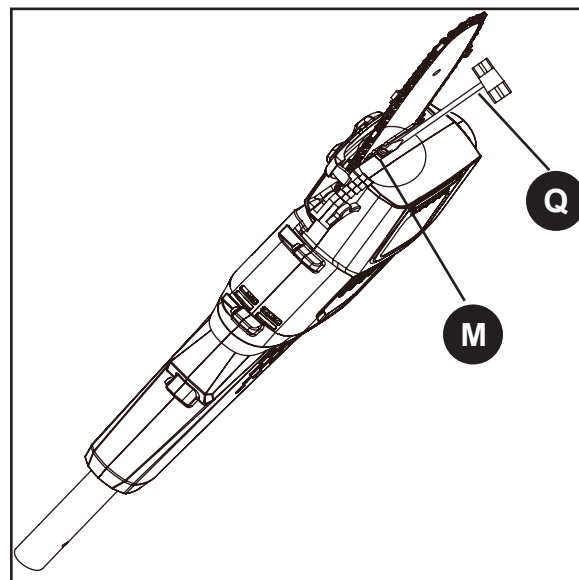

- Turn clockwise until there is enough play that the chain can be pulled away from the bar, but not so much that the runners can be pulled out of the bar.
- Once you have the correct tension, fully tighten the locking knob.

**Note:** Chains stretch with use. Check tension often. Never tension a warm chain before storing, as chains shrink when cool. This can damage chain, bar and saw.

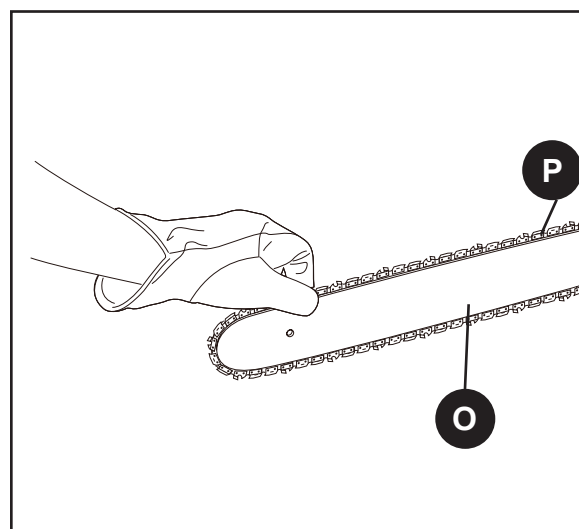

## CARE AND MAINTENANCE



### Chain tension

- Stop the motor and remove the battery before setting the chain tension. Turn the bar cover knob counterclockwise to loosen the bar cover but do not remove the bar cover. Turn the chain tensioning screw clockwise to tension chain. Turn the guide bar knob clockwise to tighten. Refer to the Replacing the bar and chain section for additional information.

**Note:** A cold chain is correctly tensioned when there is no slack on the underside of the guide bar, the chain is snug, but it can be turned by hand without binding.

- Chain must be retensioned whenever the flats on the drive links hang out of the bar groove.
- During normal operation, the temperature of the chain will increase. The drive links of a correctly tensioned warm chain will hang approximately 1/16 in. (1.58 mm) out of the bar groove.

**Note:** New chain tends to stretch; check chain tension frequently.

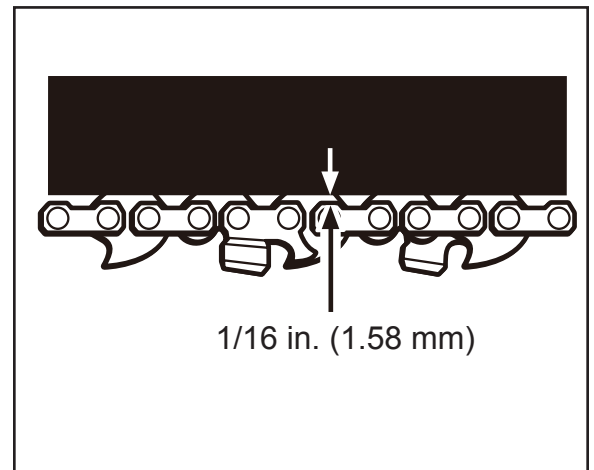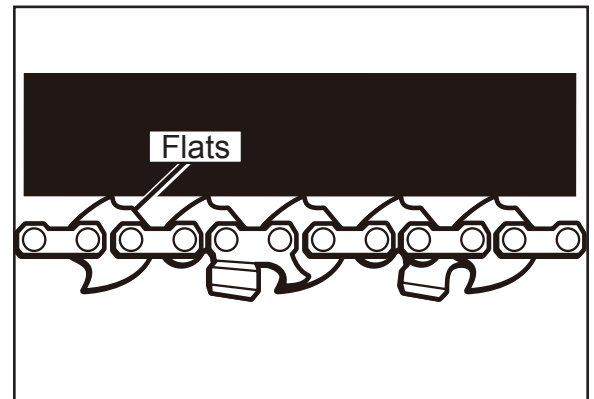

## CARE AND MAINTENANCE

---


### Chain Oiler

#### **WARNING**

To avoid possible serious injury, stop the motor and remove the battery from the pole saw before replacing the bar, chain or performing any maintenance operation.

- Use Premium Bar and Chain Lubricant. It is designed for chains and chain oilers and is formulated to perform over a wide temperature range with no dilution required.
- Remove the cap (K) and carefully pour into the bar lube reservoir.
- Replace the cap and tighten securely.
- Check and refill the bar lube reservoir every time the pole saw is used.

**Note:** Do not use dirty, used or otherwise contaminated lubricants. Damage may occur to the oil pump, bar or chain.

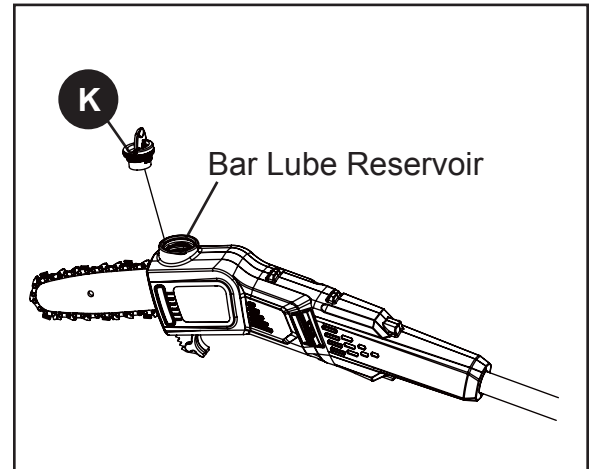

## CARE AND MAINTENANCE


### Chain maintenance

For smooth and fast cutting, the chain needs to be maintained properly. The following conditions indicate that the chain requires sharpening:

- Wood chips are small and powdery.
- Chain must be forced through the wood during cutting.
- Chain cuts to one side.

During maintenance of the chain, consider the following:


- Improper filing angle of the side plate can increase the risk of severe kickback.
- Depth gauge (or raker clearance) setting determines the height the cutter enters the wood and the size of the wood chip that is removed. Too much clearance increases the potential for kickback. Too little clearance decreases the size of the wood chip thus decreasing the chain's cutting ability.
- If cutter teeth have hit hard objects such as nails or stones, or have been abraded by mud or sand on the wood, have service dealer sharpen chain.

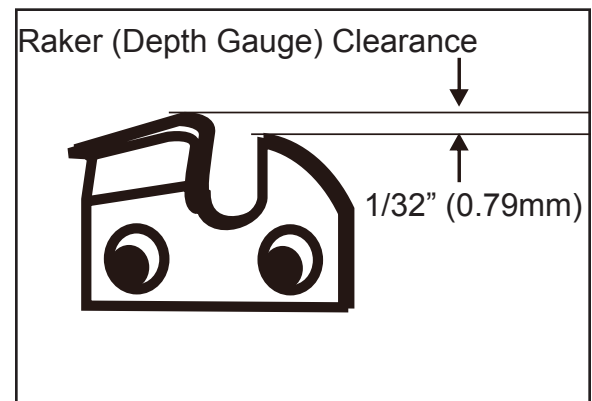

### How to sharpen the cutters

Be careful to file all cutters to the specified angles and to the same length, as fast cutting can be obtained only when all cutters are uniform.

- Tighten the chain tension enough that the chain does not wobble. Do all of your filing at the midpoint of the bar. Wear gloves for protection.
- Use a round file and holder.
- Keep the file level with the top plate of the tooth. Do not let the file dip or rock.

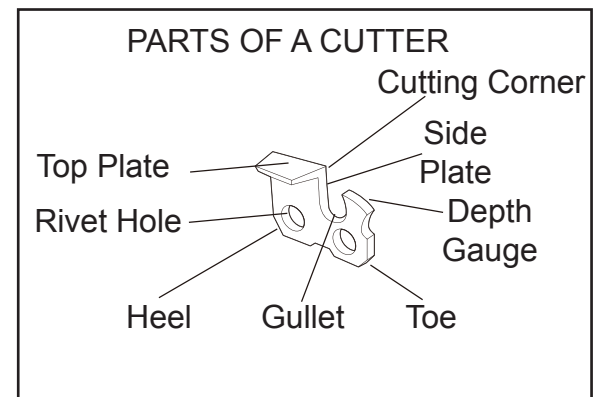

## CARE AND MAINTENANCE




- Using light but firm pressure, stroke towards the front corner of the tooth. Lift file away from the steel on each return stroke.
- Put a few firm strokes on every tooth. File all left hand cutters in one direction. Then move to the other side and file the right hand cutters in the opposite direction.
- Remove filings from the file with a wire brush.

### CAUTION

Dull or improperly sharpened chain can cause excessive motor speed during cutting which may result in severe motor damage.

### WARNING

Improper chain sharpening increases the potential of kickback. Failure to replace or repair damaged chain can cause serious injury.

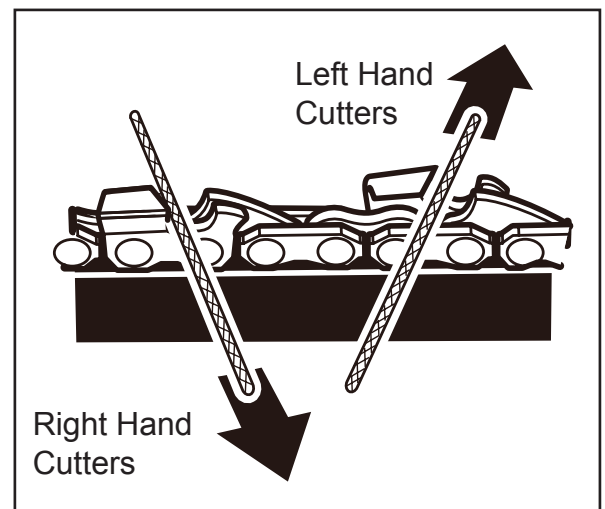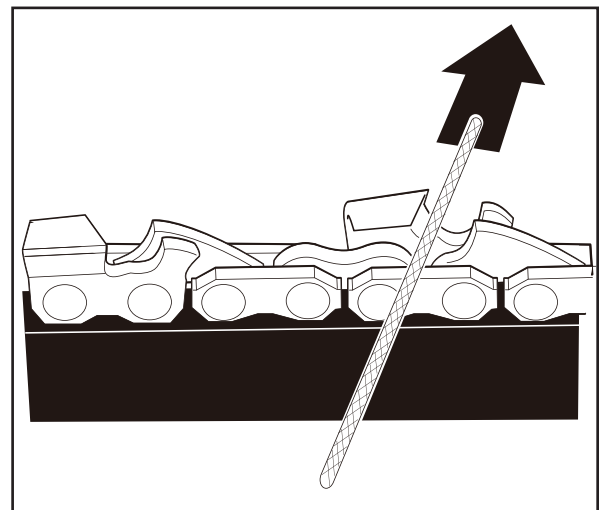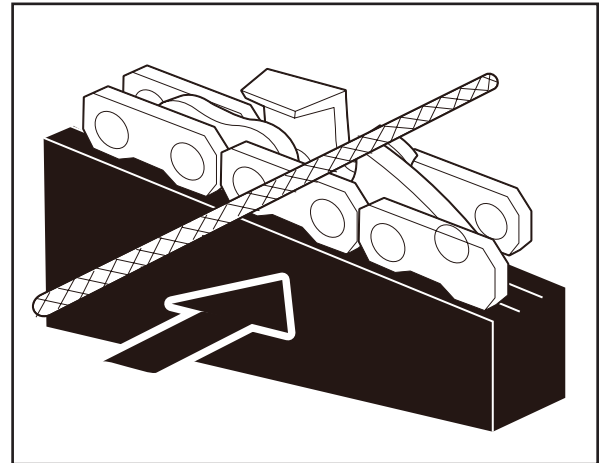

## TROUBLESHOOTING

---

If you still have questions or an unresolved issue after going through this troubleshooting guide, or just want to speak to a Kobalt product expert, please call our customer service department at 1-888-3KOBALT (1-888-356-2258), 8 a.m. - 8 p.m., EST, Monday – Sunday.

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
Bar and chain running hot and smoking.	1. Check chain tension for overtightened condition. 2. Bar lube reservoir empty.	1. Tension chain. Refer to Chain Tension earlier in this manual. 2. Check bar lube reservoir.
Motor runs, but chain is not rotating.	1. Chain tension too tight. 2. Check guide bar and chain assembly. 3. Check guide bar and chain for damage.	1. Re-tension chain. Refer to Chain Tension earlier in this manual. 2. Refer to Replacing the Bar and Chain earlier in this manual. 3. Inspect guide bar and chain for damage.

## WARRANTY

---

### 5-YEAR LIMITED WARRANTY

This Kobalt 80 V Lithium-ion pole saw is warranted to the original purchaser from the original purchase date for five (5) years subject to the warranty coverage described herein.

This Kobalt 80 V Lithium-ion pole saw is warranted for the original user to be free from defects in material and workmanship.

If you believe that the Kobalt 80 V Lithium-ion pole saw is defective at any time during the specified warranty period, simply return the 80 V Lithium-ion pole saw along with proof of purchase to the place of purchase for a free replacement or refund or call 1-888-3KOBALT (1-888-356-2258) for warranty service.


This warranty is void if: defects in materials or workmanship or damages result from repairs or alterations which have been made or attempted by others or the unauthorized use of nonconforming parts; the damage is due to normal wear, damage is due to abuse (including overloading of the tool beyond capacity), improper maintenance, neglect or accident; or the damage is due to the use of the tool after partial failure or use with improper accessories or unauthorized repair or alteration.

This warranty gives you specific legal rights, and you may also have other rights that vary from state to state.



**REPLACEMENT PARTS LIST**

For replacement parts, call our customer service department at **1-888-3KOBALT** (1-888-356-2258), 8 a.m. - 8 p.m., EST, Monday - Sunday.

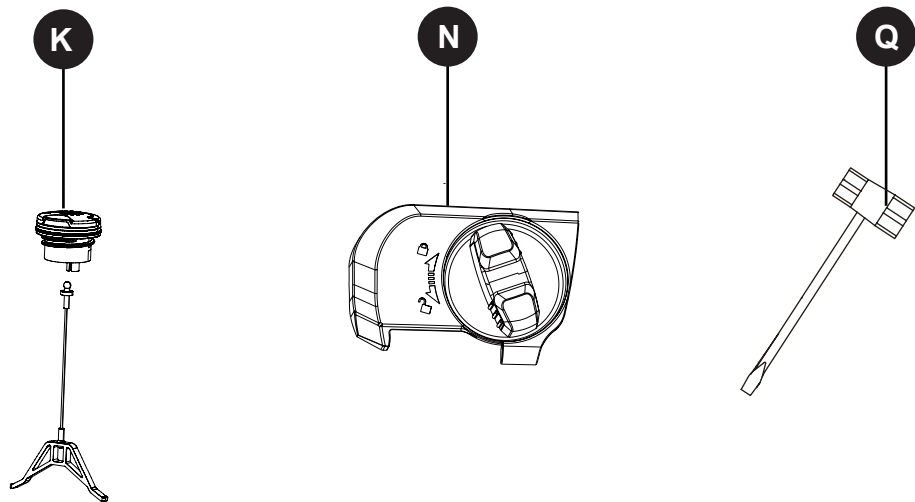

PART	DESCRIPTION	PART #
K	Oil Tank Cap	C1102459-00
N	Bar Cover	341031726D
Q	Wrench	333101726