


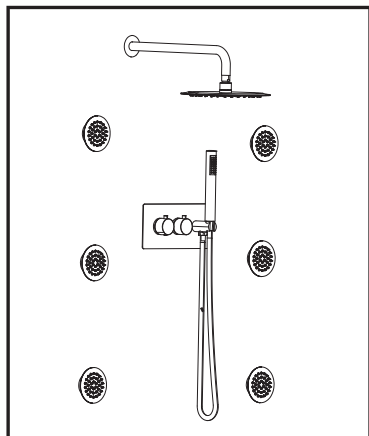

Model: BCB1924BN BCB1924MB BCB1924BG

Brushed Nickel (BN)

Matte Black (MB)

Brushed Gold (BG)



Luxury Shower System

Thermostatic Mixing Valve 3-Function Shower

- Shower arm
- 10 inch shower head
- Valve included
- Round body jets
- Hand shower

Max 2.5 gpm 9.5L/min @ 80psi

Meets ASME A112.18.1



LIMITED LIFETIME
WARRANTY

BUILD WITH CONFIDENCE

STANDARDS:

Meets ASME A112.18.1/CSA B125.1-18 and all applicable requirements referenced therein, as well as California Proposition 65.

INSTALLATION:

For proper installation and to ensure compliance with applicable standards, this product must be installed by a qualified plumber.

DESCRIPTION:

- Shower arm.
- 10 inch shower head.
- Valve included.
- Round body jets.
- Hand shower.

FINISH:

Matte Black. Brushed Nickel. Brushed Gold.






Limited Lifetime Warranty

www.wellfor.com

service@wellfor.com

Product Designed in the USA

MADE IN CHINA

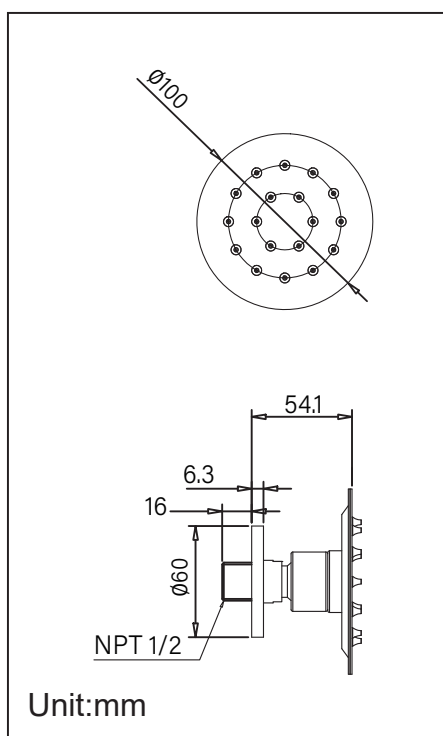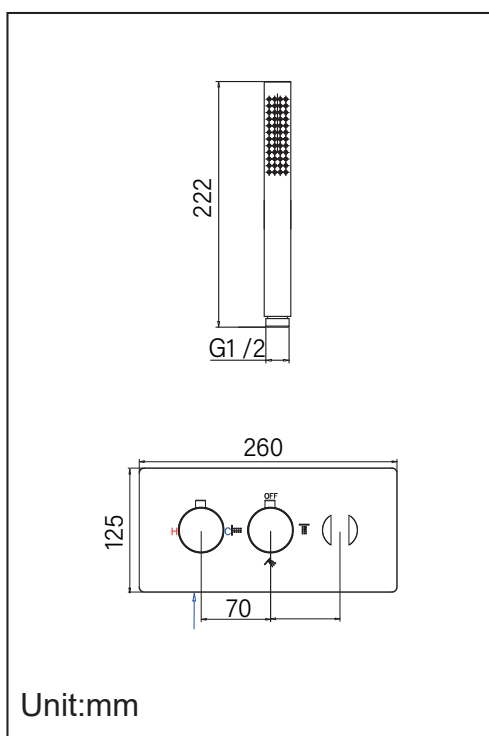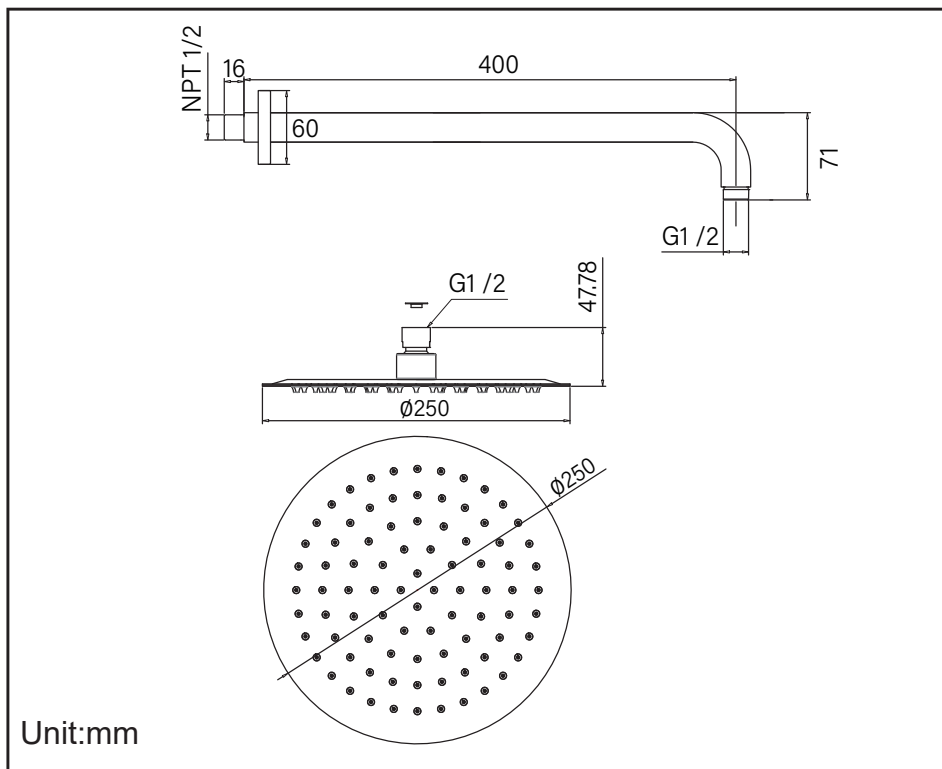

3-FUNCTION SHOWER SYSTEM

BEFORE YOU BEGIN

We recommend consulting a professional if you are unfamiliar with installing plumbing fixtures. Wellfor accepts no liability for any damage to the plumbing, floor, walls, tub, or for personal injury during installation.

Observe all local plumbing and building codes.

Unpack and inspect the item for shipping damage. If any damage is found, contact our Customer Relations team at 206.809.0093.

GETTING STARTED

Ensure that you have gathered all the required materials that are needed for the installation.

For the following installation instructions, it is assumed that the wall has been opened and that the existing shower set has been removed.

Before you begin, the main water supply to your home should be shut off.

TOOLS AND MATERIALS:



Plumbers
Tape



Tape Measure



Phillips
Screwdriver



Adjustable
Wrench



Drill



Hex Wrench



Wood Blocking



Soldering Kit
(for copper pipe)




1/2" Test Plug



Level



Pencil or
Marker



Hacksaw



***All dimensions and specifications are nominal and may vary.
Use actual products for accuracy in critical situations.***




***Accessories size, style and shape may vary from the picture above.
Instruction purpose only.***

3-Function Thermostatic Shower


Model:BCB1924BN/BCB1924MB/BCB1924BG

ACCESSORIES LIST


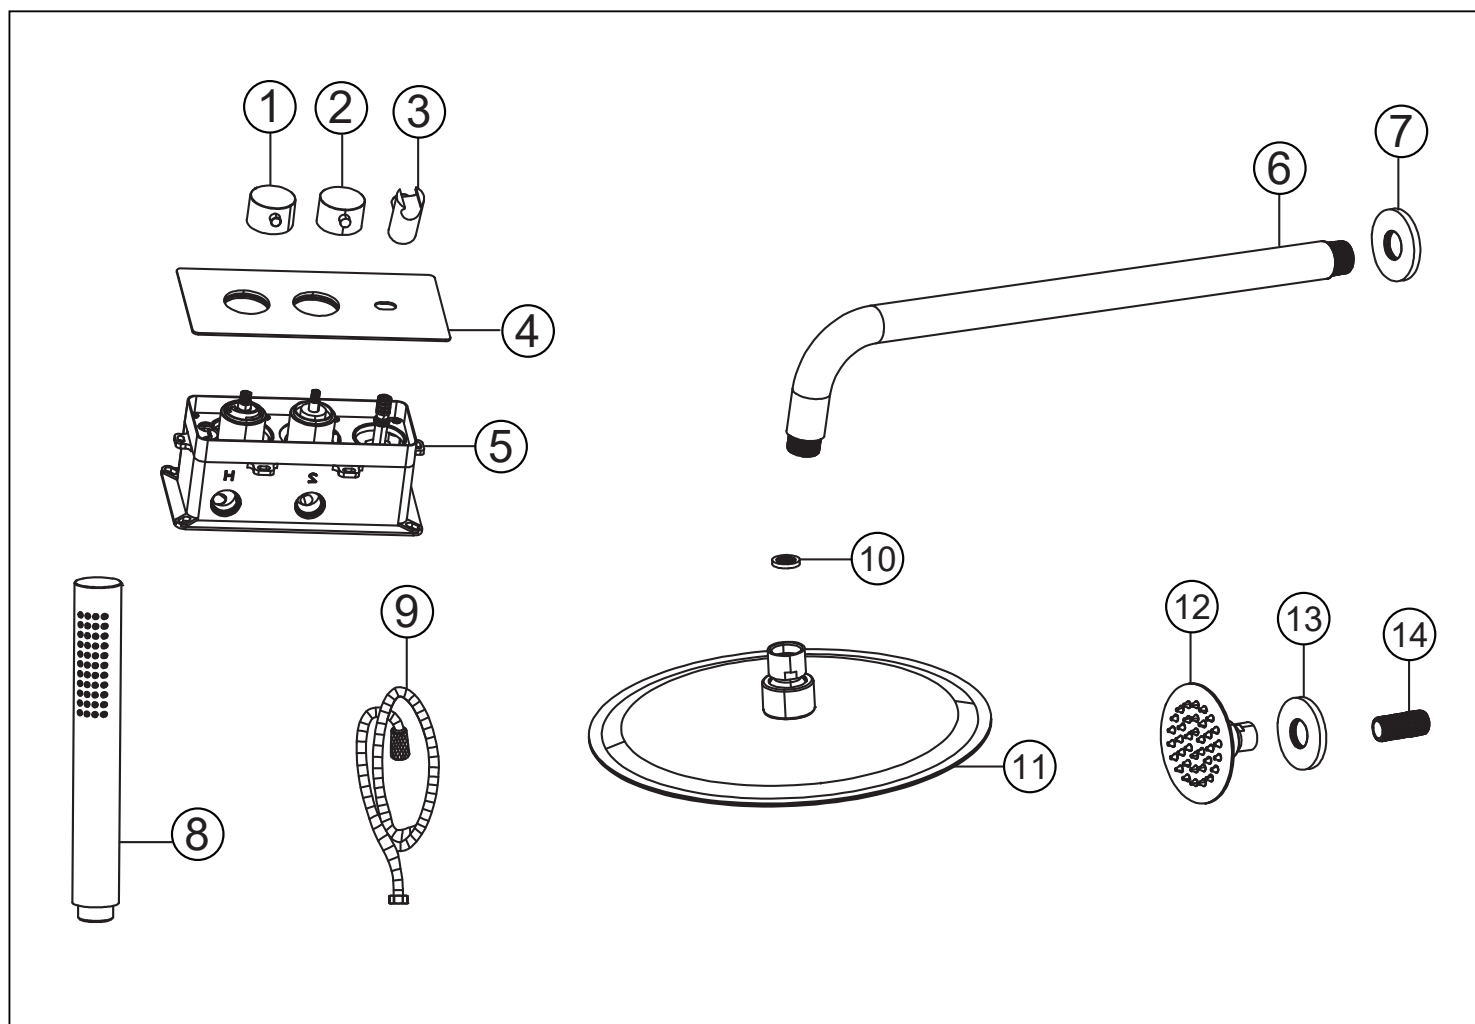


S/N	MODELS	QTY	S/N	MODELS	QTY
1	Knob for water temp	1	8	Hand shower	1
2	Diverter knob	1	9	Shower hose	1
3	Hand shower holder	1	10	Rubber Gasket	1
4	Metal Plate	1	11	Head shower	1
5	Thermosatic valve	1	12	Body jet	6
6	Shower arm	1	13	Body jet flange	6
7	Shower arm flange	1	14	Thread connector	6


INSTALLATION FEATURE

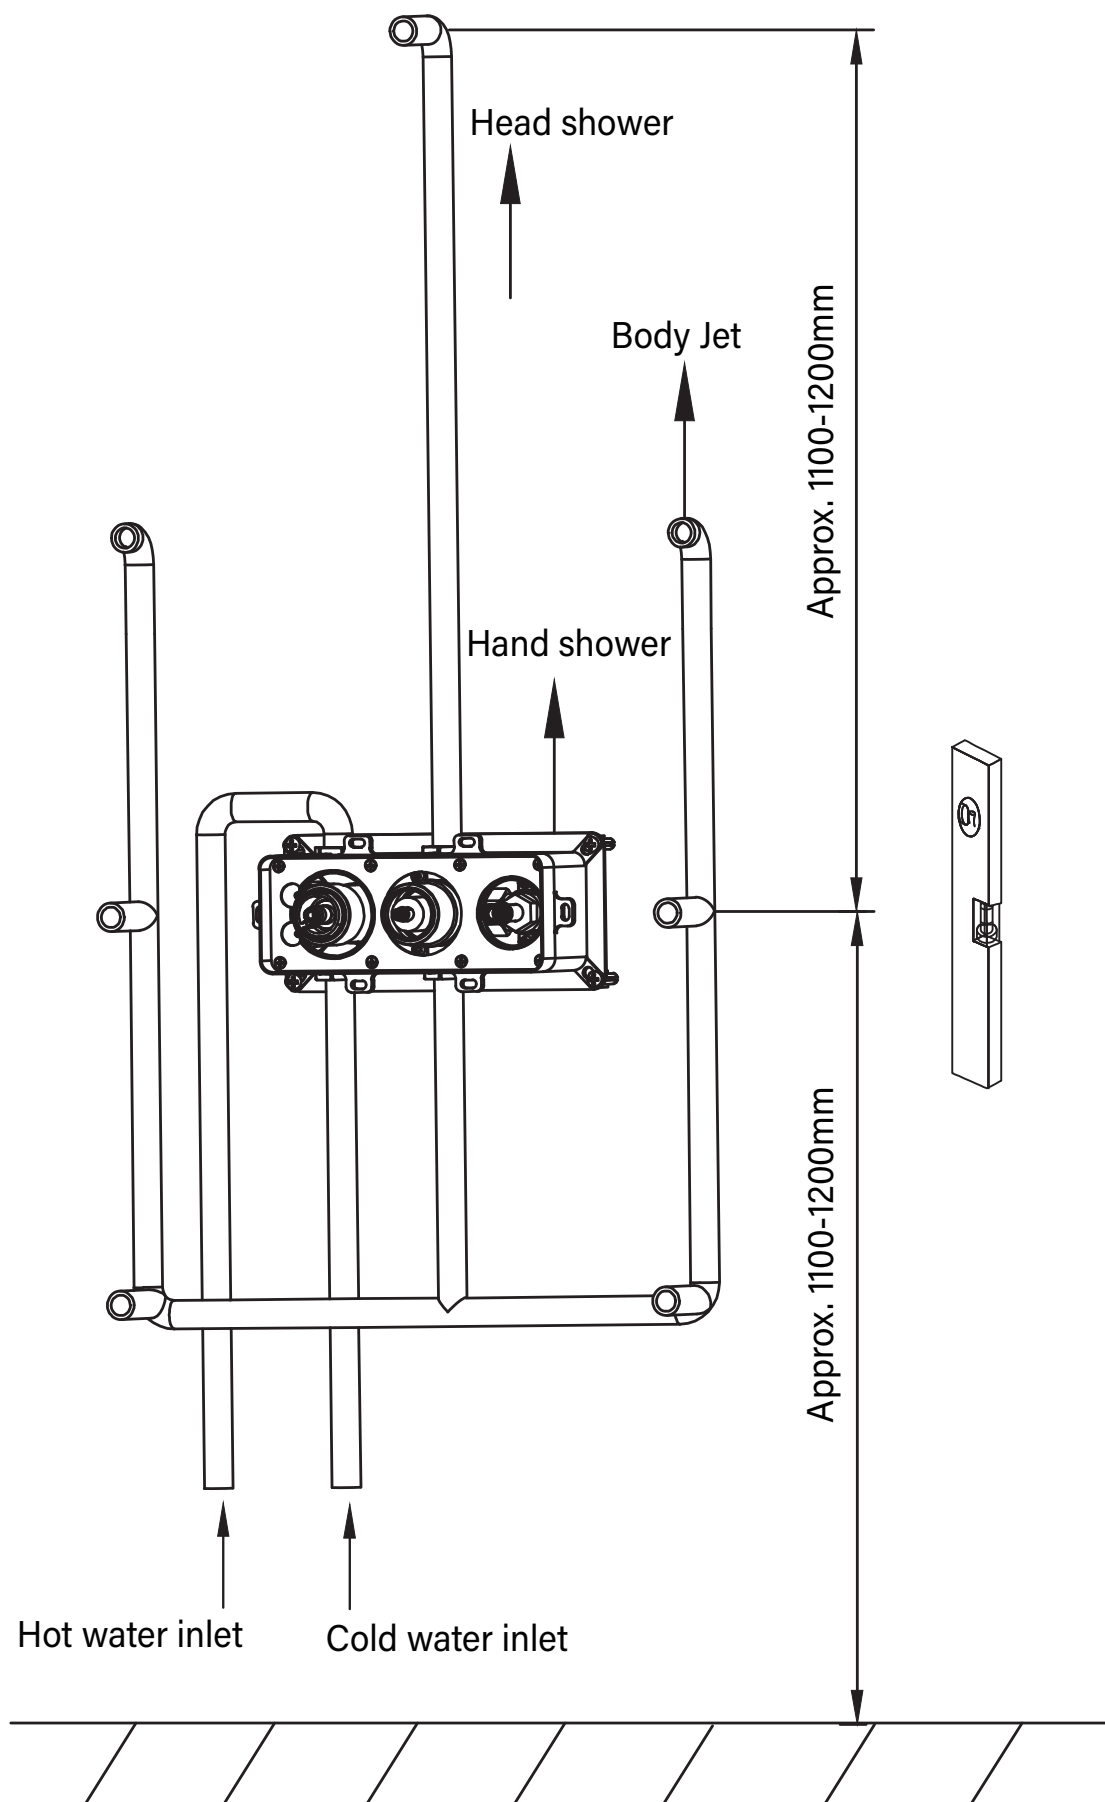


THERMOSTATIC VALVE PIPING

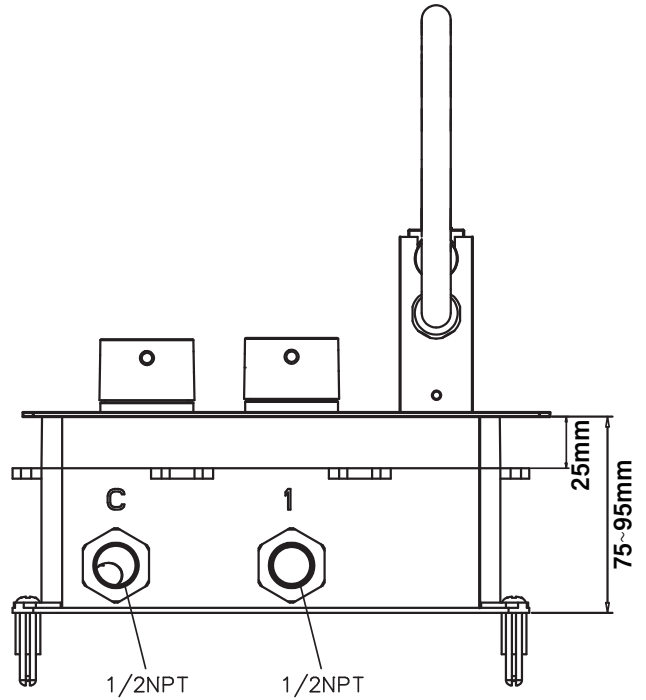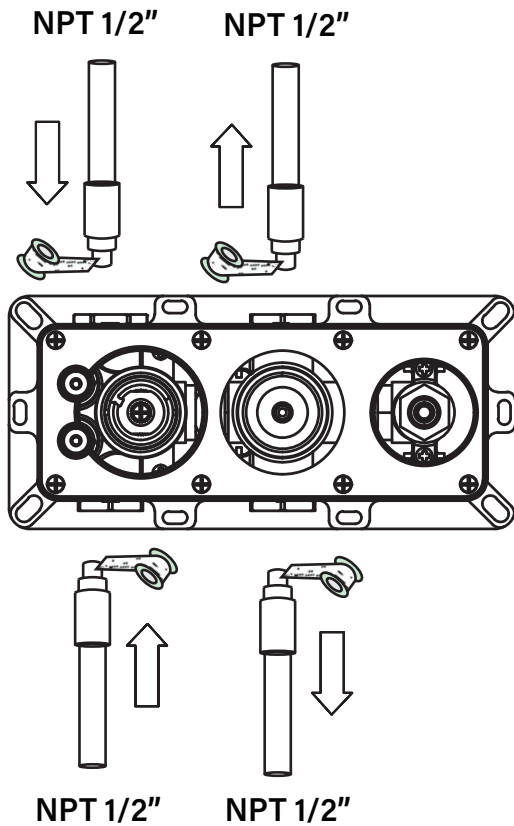


CONCEALED MOUNTING DEPTH

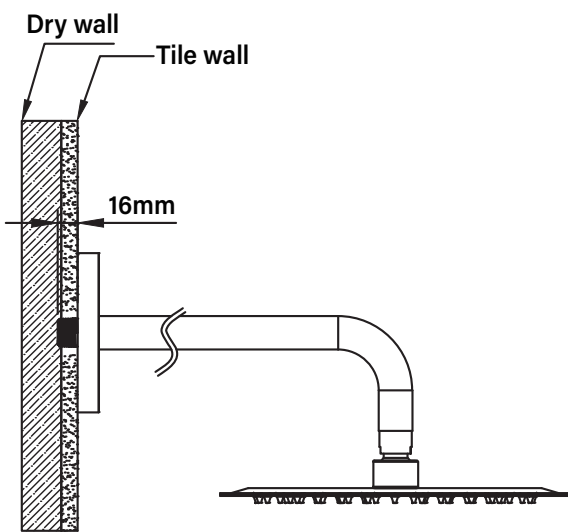

Shower arm

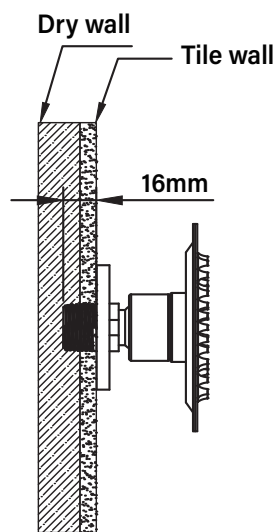

Body jet

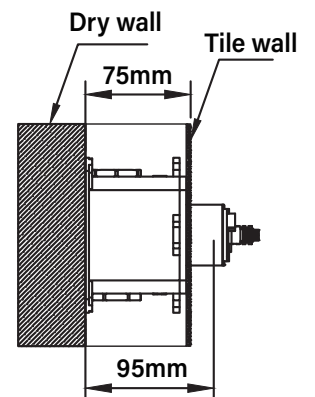

Valve




Note: Male thread is 1/2"-14NPT.

Installation depth for shower valve is between 75--95mm, including the thickness of the tile.


The shower valve opening size shall be smaller than the trim cover plate.

VALVE INSTALLATION

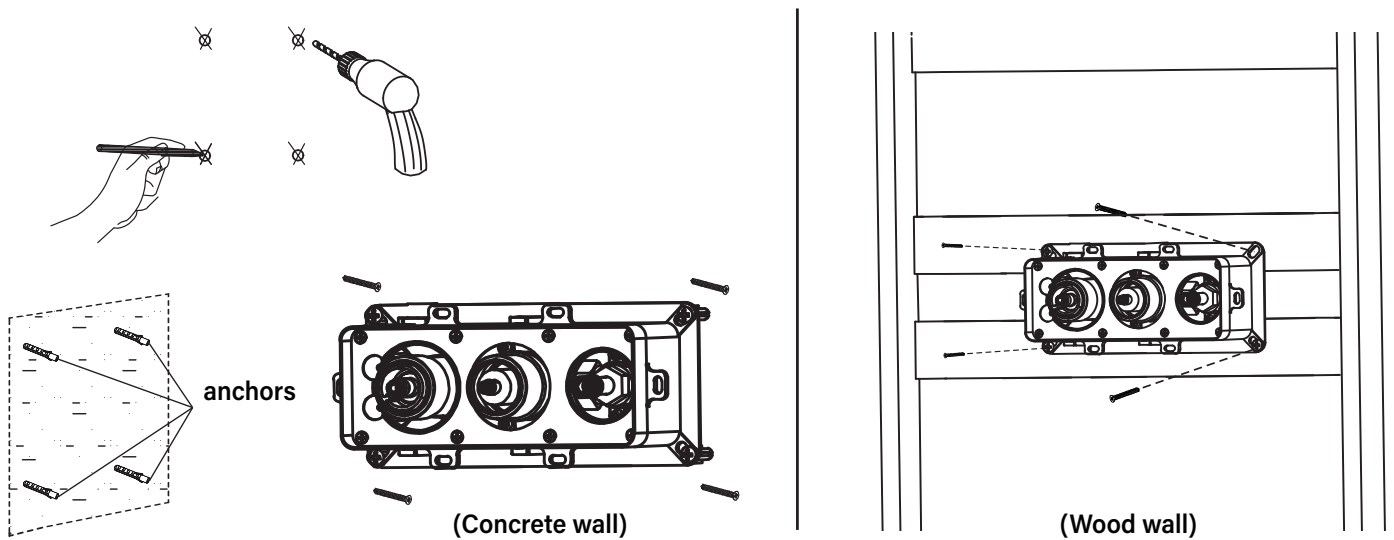


Note: Wood blocking should be installed between the two studs where the valve will mount. Be careful not to set the valve too far back into the wall. Use the sticker on the side of the valve for guidance.

SHOWER HEAD INSTALLATION

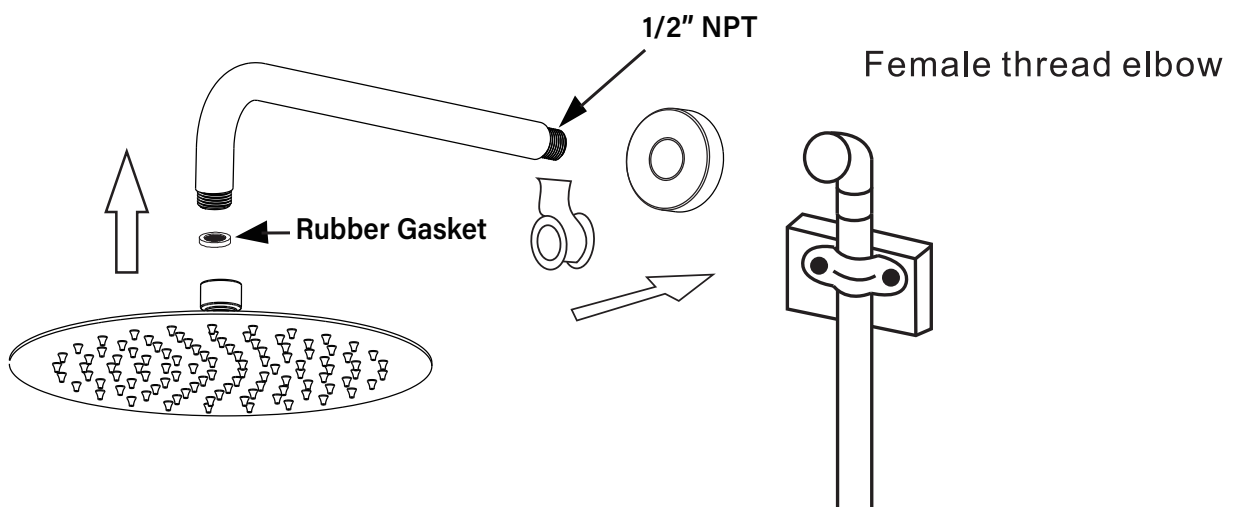


Note: Apply Teflon tape (plumbing tape) to the threads of the shower arm before screwing it into the wall to ensure a tight seal and prevent leaks.


BODY JET INSTALLATION

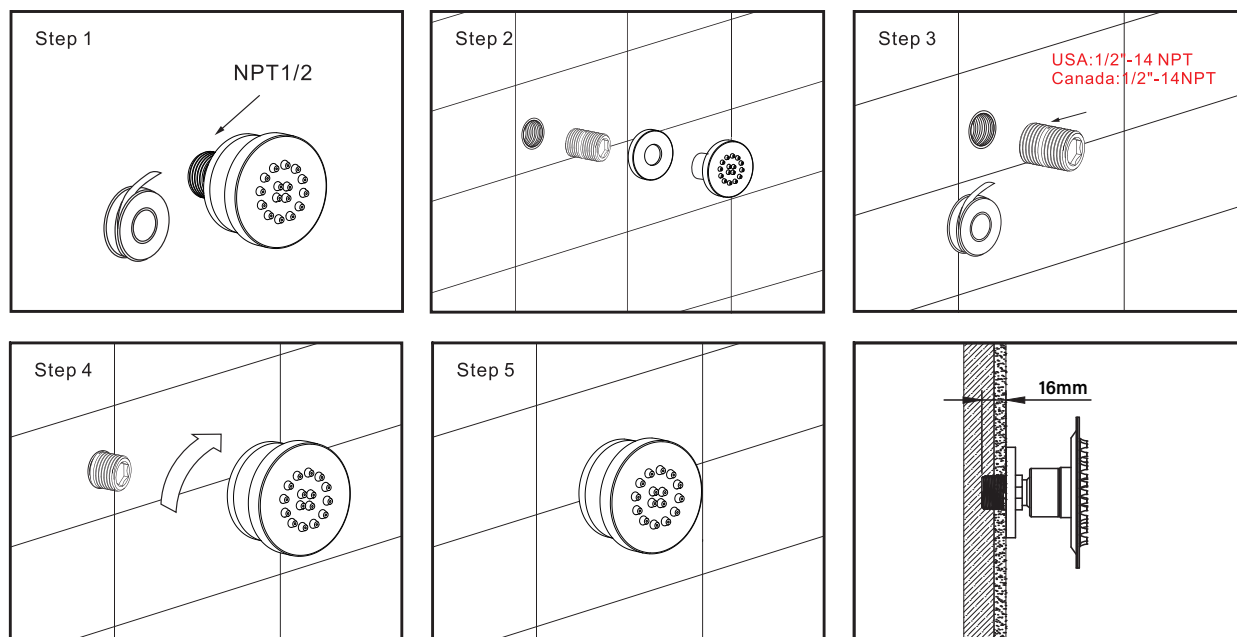

Note: Wrap the threaded pipe of NPT1/2 with Teflon tape and screw it into the wall.

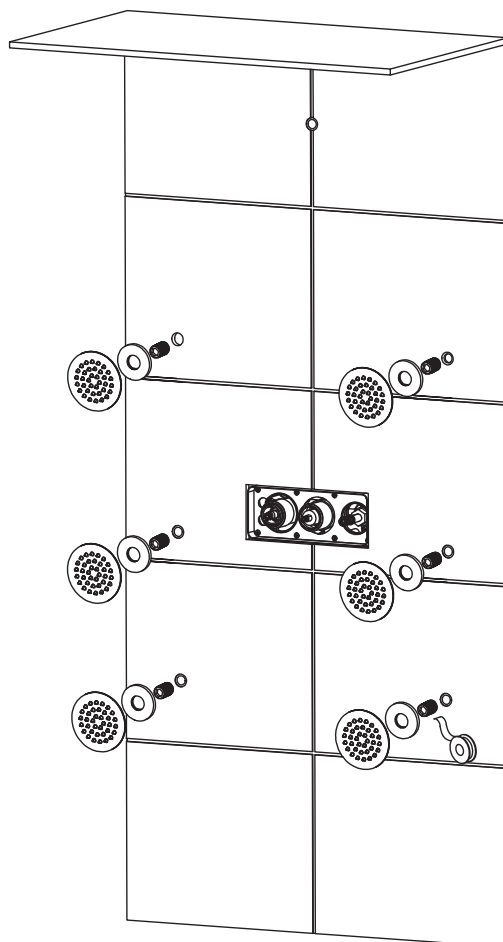

DIVERTER KNOB INSTALLATION

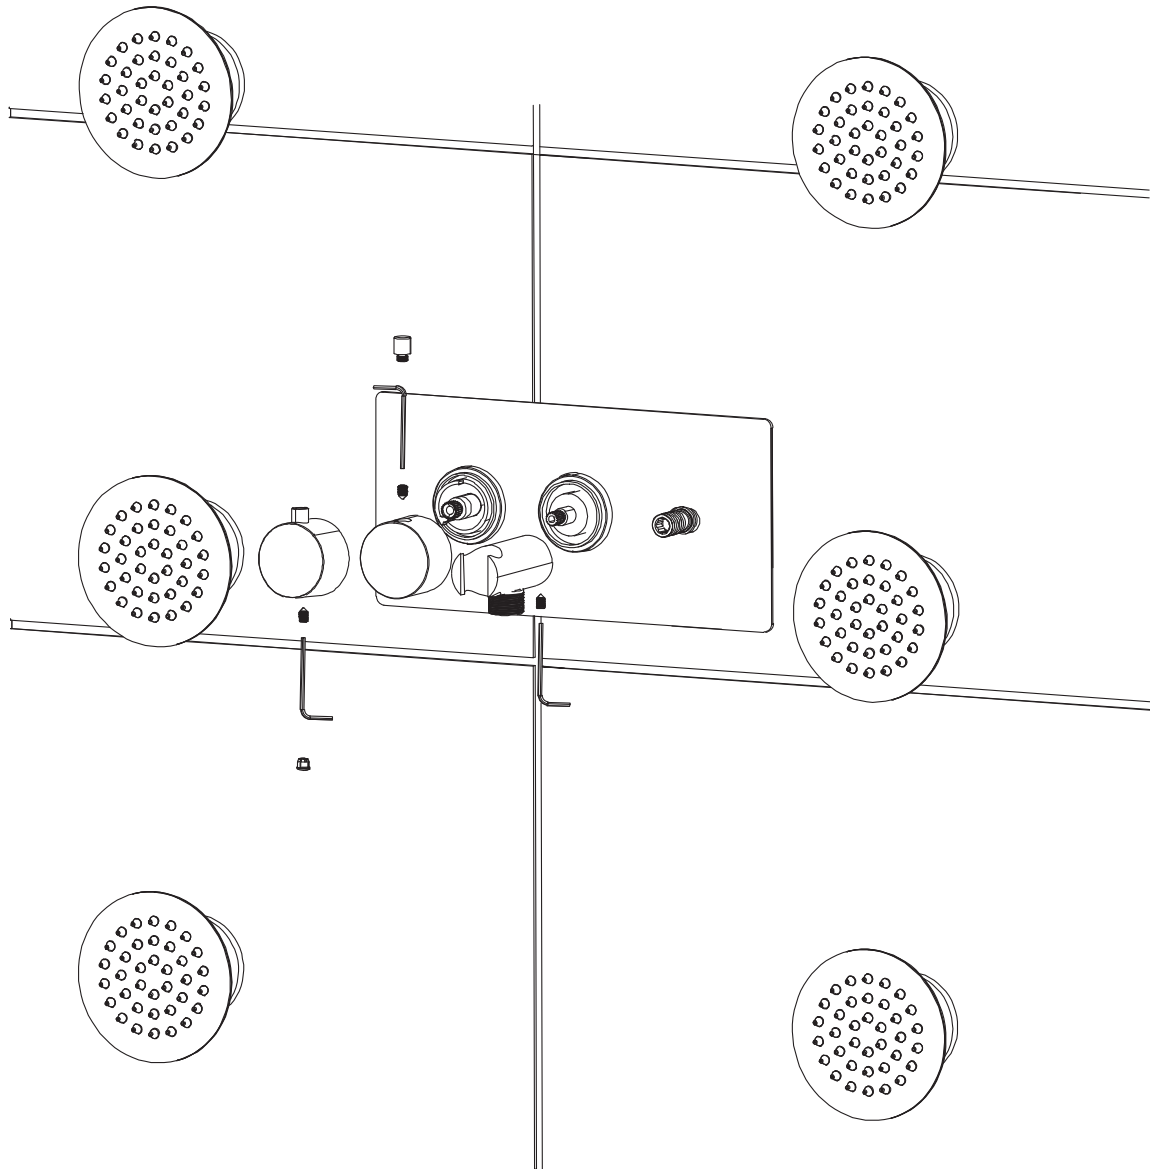


Note:




1. Take off protective cover on the valve, apply bead of quality sealant evenly along the back of metal plate.
2. Install the metal plate, diverter knobs and water temp. knob step by step.
3. Install the handle and knobs with screw and screw caps.

INSTALL THE HAND SHOWER

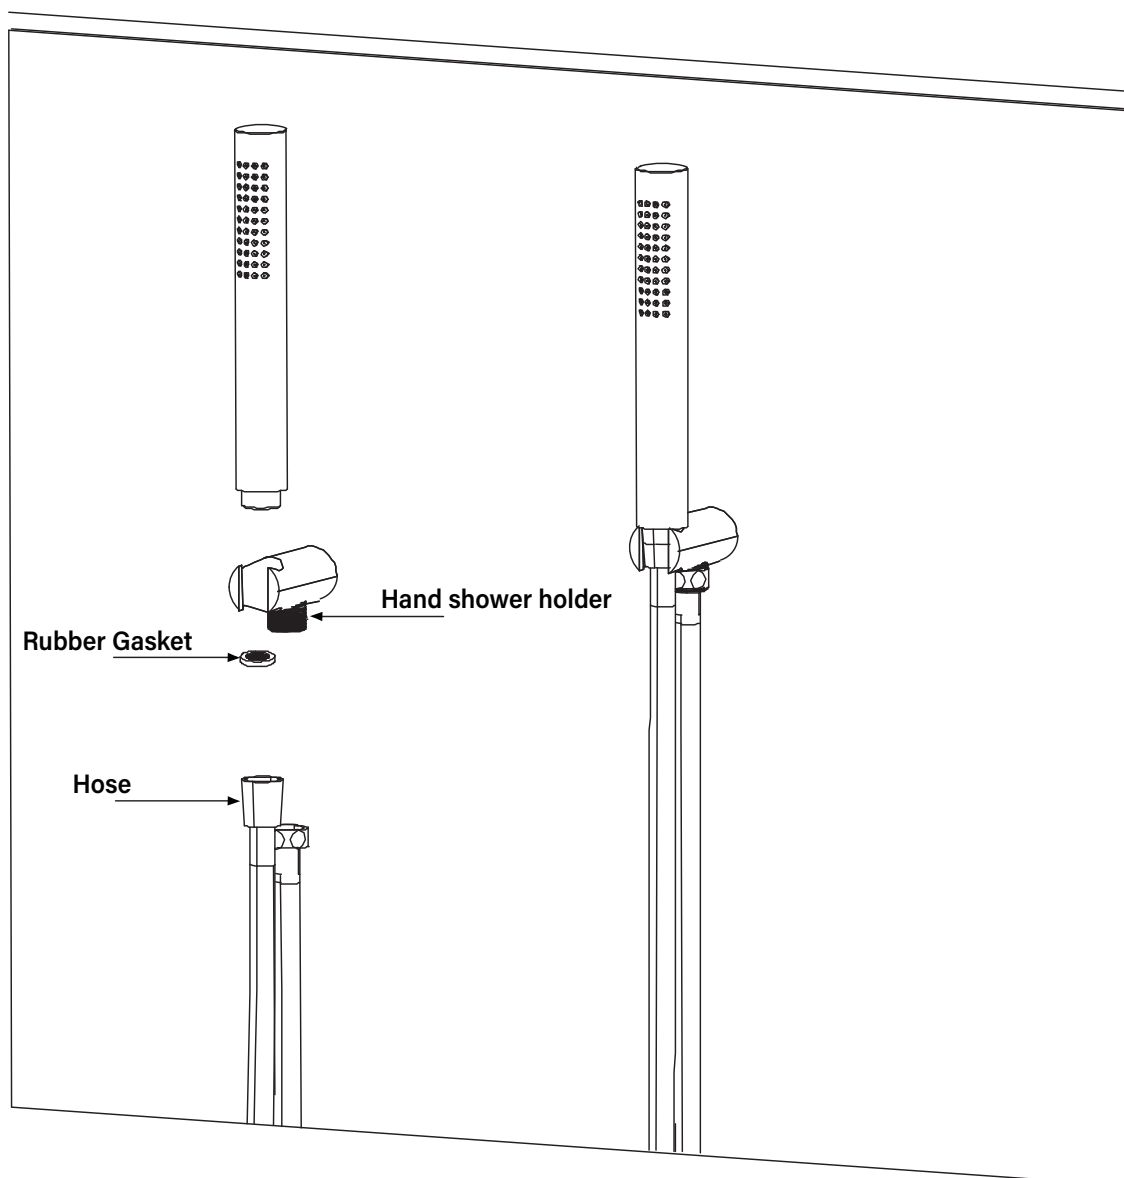

Note: Test the functionality of the hand shower. Check for any leaks.

SHOWER VALVE MAINTENANCE

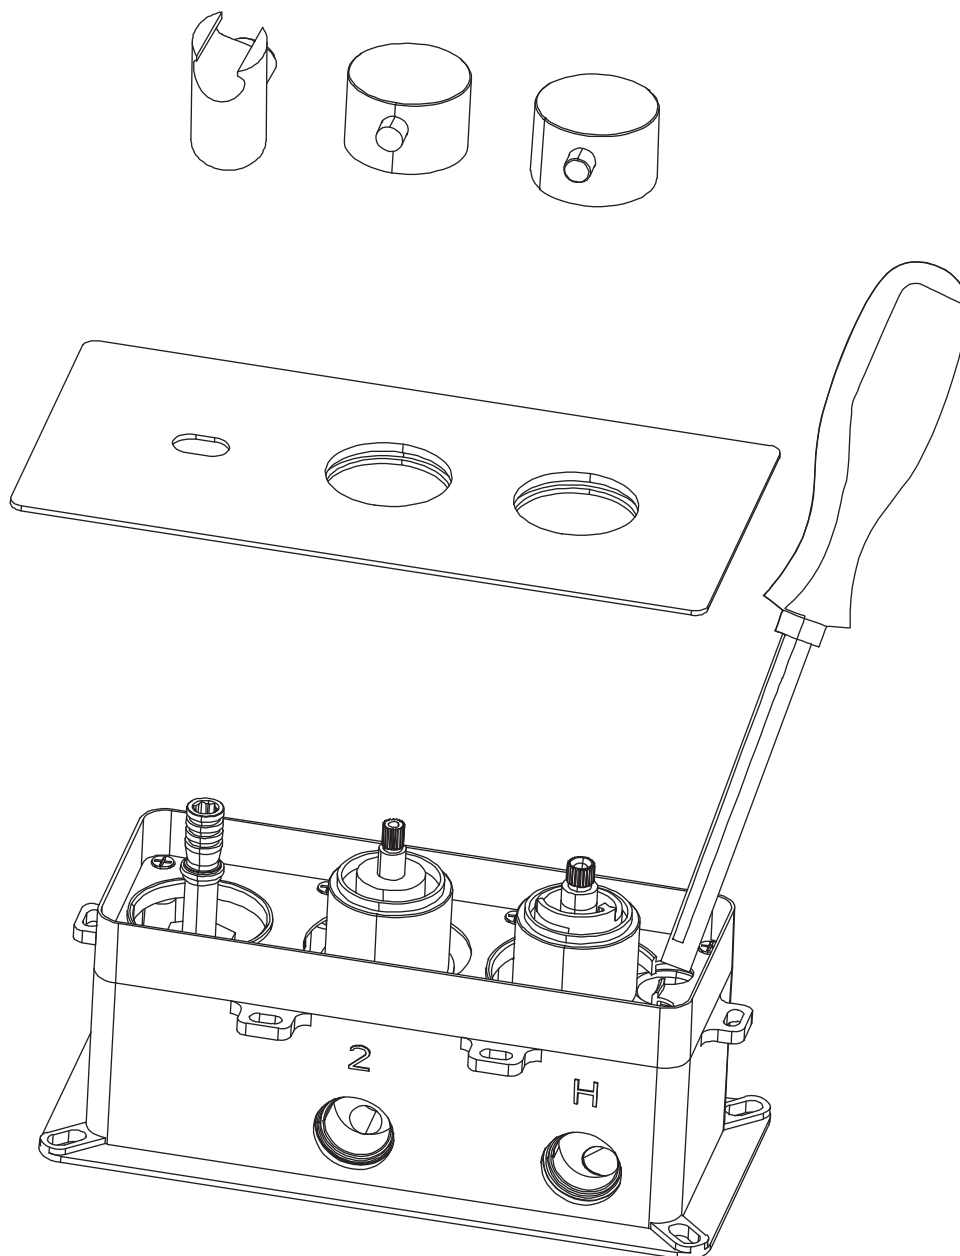

Note: There are two flow regulator on the vlave, to repair or maintain the valve faucet, first turn off the diverter knob. Then, remove the panel and turn the flow regulating valves until the water line is shut off.