

LIMITED LIFETIME WARRANTY

Renin Corp. warrants all components for its pivot doors against defects in workmanship and materials subject to ordinary wear and tear, for the life of these products. This includes panel components, tracks, guides & rollers and hardware.

This warranty does not apply to damage due to abuse, mishandling, improper installation or use, exposure to chemical and/ or abrasive cleaners and foreign matters which includes drippings from ceiling materials or paint. Wood sections should be cleaned only with a 5% mild soap and 95% water solution on a damp soft cloth and dried with a soft cloth. Do not use wax furniture polish, bleach or chlorine based cleaners, alcohol, solvents or other similar agents. Do not clean with sharp or abrasive instruments.

This warranty also excludes materials place on the back or edges of product by others or treatments applied outside the continental United States. This warranty does not extend to any labor charges incurred in the removal, re-installation or replacement of any defective products or parts thereof.

In the event of a defect, malfunction or other failure of the product to which the warranty applies, Renin Corp. will remedy the failure or defect, without charge to the consumer within (30) days from actual receipt of the product, or refund of the purchase price at Renin Corp.'s discretion.

To obtain performance under this warranty, the consumer should contact Renin Corp. Customer Service Department at 1-800-257-4093 between 8am and 6pm EST. Monday through Friday.

This limited warranty is given to the original purchaser only, and is in lieu of all others including the implied warranty merchantability and fitness for a particular purpose and excludes all incidental or consequential damages. Some states do not allow limitations on how long an implied warranty lasts, return of merchandise, or the exclusion or limitation of incidental or consequential damages. Therefore these limitations may not apply to you. Should you have any questions contact Renin Corp. Customer Service at 1-800-257-4093.


NOTES:

- Wear Safety Goggles
- Units are in Inches. Millimeters are shown in brackets.




2-DOOR Set

CONTENTS (2-DOOR Set)

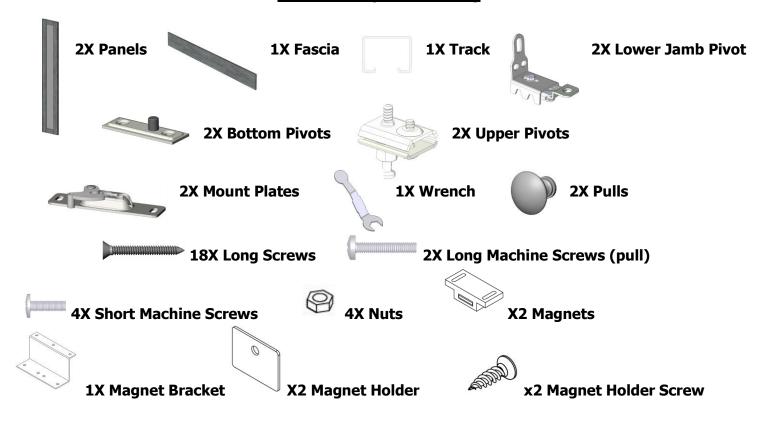


STEP 1 – Prepare Track for Mounting

Insert components as shown in **Figure 1** for **2-Door** set. Tighten *Upper Pivot* with a Phillips screwdriver as shown in **Figure 2**.

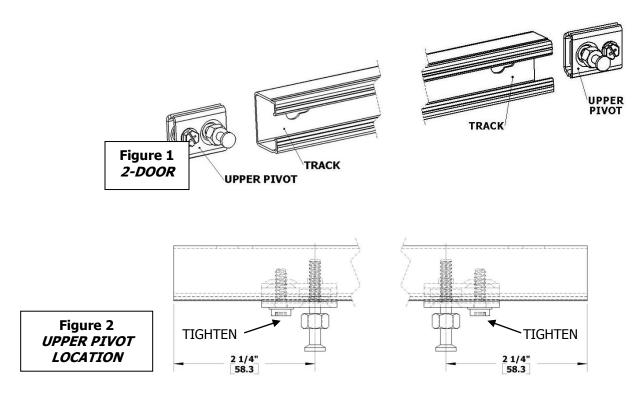


STEP 2 – Mount Track

Mount *Track* to header as shown below for *Fascia* to be flush with front of closet. From side to side, center the *Track* in the opening. Use **5 EA** (Max) *Screws* to mount track.

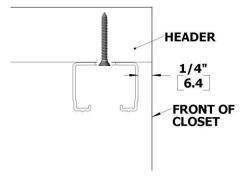


STEP 3 – Fasten Mount Plates

Fasten *Mount Plates* as shown below. Mount *plates* according to the direction of door swing; **right swing** or **left swing**.

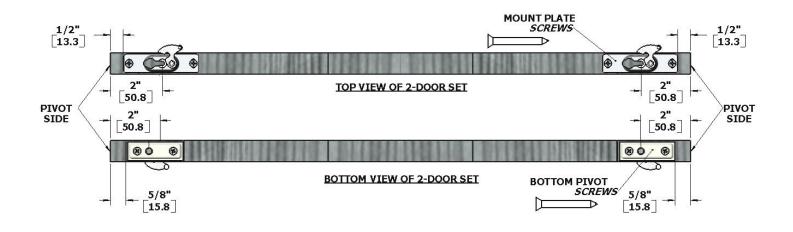


STEP 4 – Mount Lower Jamb Pivot

Mount the *Lower Jamb Pivot* by placing it directly under the *track* on the pivot side as shown in **Figure 3** below. Fasten with one *Screw* in the slot first and adjust up & down to give clearance between *Lower Jamb Pivot* & the bottom of the door as shown. Use a Phillips screwdriver to adjust the *Lower Jamb Pivot* to the position shown.

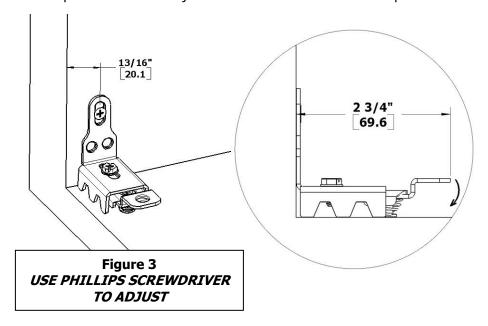

STEP 5 – Hang Doors by Inserting Bolts into Mount Plates

First insert the **bolt** in the **Upper Pivot** into the **Mount Plates** and lock into place by twisting the **nylon arm** as shown in **Figures 4 & 5** below.

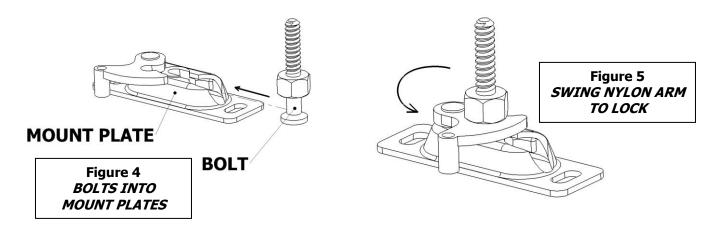

STEP 6 – Attach at Bottom Pivot

Attach **Bottom Pivot** into **Lower Jamb Pivot** as shown in **Figure 6** below.

NOTE: Make sure and leave 1/8" clearance between the top of the **screw head** & the **bottom pivot** for proper operation. (See STEP 7, Check Operation, Make Adjustments to adjust clearance.)


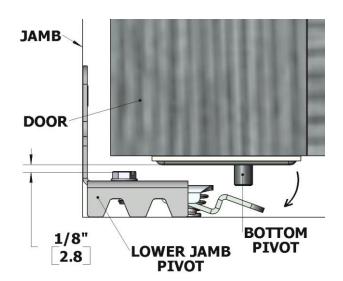


Figure 6
ATTACH AT BOTTOM PIVOT


STEP 7 - Check Operation, Make Adjustments

If necessary use the *Wrench* supplied to adjust the *bolts* in the *Upper Pivot* to assure the pivot door set is hanging square in the opening. The *Lower Jamb Pivot* can be adjusted with a Phillips screwdriver. Arrows in **Figure 7** below show directions of adjustments.

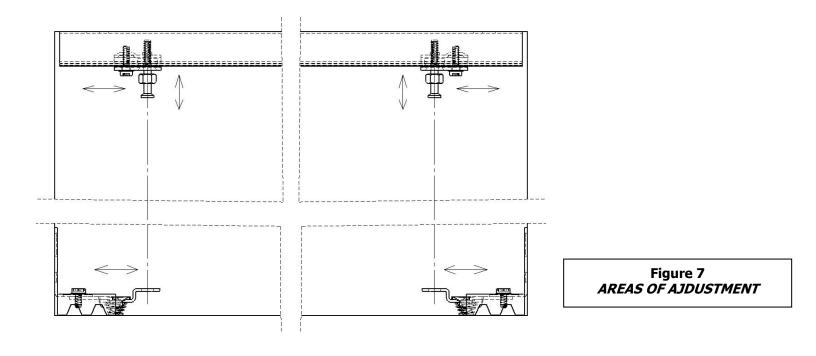

STEP 8 – Magnetic Catches

Assemble *Magnets* to *Bracket* as shown. Locate the magnet and bracket assembly in center of opening located as shown. Affix magnet plate to each door opposite magnet location.

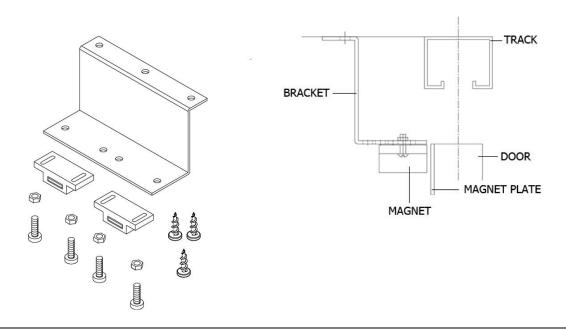

STEP 9 – Attach Fascia

For 2-Door Installs: Attach *Fascia* to *Track* by removing the tape backing and pushing against track. Cut *Fascia* to fit if necessary.


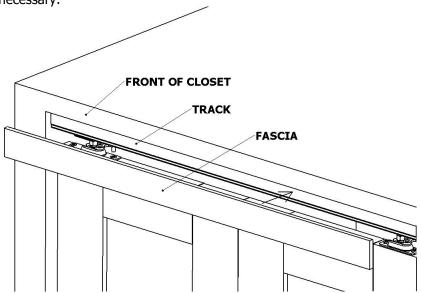


Figure 8
ATTACH 2-DOOR FASCIA

STEP 10 - Attach the Pull

Attach the **Pull** by drilling a **3/16"** [5mm] diameter hole on the inside stile closest to the opening side 36" from the bottom of the door and 1-1/2" from the vertical edge of the stile. Attach the **Pull** with the **Machine Screw** as shown in **Figure 9** below. **NOTE:** It is best to drill from the front of the door to the back.

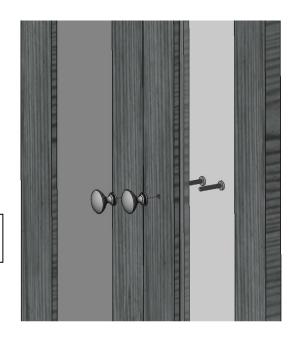

OPENING SIDE

Figure 9
ATTACH PULL