

Installation Guide

Single Handle Tub & Shower Trim Set:


- 4LG100T
- 4LG300T
- 4DM100T
- 4DM200T
- 4DM300T

This product meets the following standards:

- ASMF A112.18.1
- ANSI A117.1
- CUPC / IAPMO LISTED / ADA COMPLIANT

Thank you for purchasing this Pioneer quality product.

Tools Required

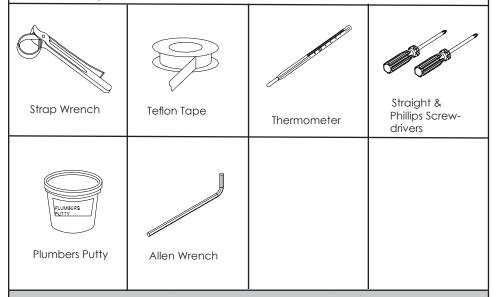


Prior to Installation

- Observe all local plumbing and building codes before you begin installation.
- The finished wall or Tub/Shower Valve (4010B or 4011B) must be installed prior to installing this trim.
- Shut off main water supply.
- Pioneer reserves the right to make changes in the design of faucets without notice as specified in the pricebook.

Caution: (1). These products may cause personal injury due to scalding if the temperature is set too high. We recommend that temperature is set below 120 ° F (49 ° C). (2) Anti scald device or pressure balance spool is not installed in the valve. The spool is included in the trim pack. The valve won't work properly without the pressure balance spool being installed in the valve.


- Remove the temporary nipple.
- For Slip-On Installation:-
- The 1/2" nominal copper tube must be cut with a minimum length of 2-1/2" to maximum length of 2-7/8" from finished face of tub or wall. This length is for tub spout with tub spout escutcheon application. For tub spout without tub spout escutcheon application minimum length should be 2-1/4" to maximum length of 2-5/8".
- The end of copper tube should be chamfered free of burrs to prevent cutting or nicking o-ring inside the tub spout. The outside surface may be sanded free from nicks and scratches.
- For tub spout with the tub spout escutcheon slide the spout escutcheon along the copper pipe. Press and twist the spout over copper tube flush with the spout escutcheon or the finished tub or wall surface.
- Tighten the set screw, do not over-tighten.
- For IPS Installation:-
- The 1/2" nominal copper tube must be kept with the length of 2-1/4" from
 finished face of the tub or wall. This length is for tub spout with tub spout escutcheon application. For tub spout without tub spout escutcheon application
 minimum length should be 2".
- Remove the cylindrical round brass adapter inside the spout by using nose plier.
- For tub spout with tub spout escutcheon slide the spout escutcheon along the copper tube. Apply Teflon Tape at the threaded connection if necessary.
 Screw Tub spout onto the copper tube and tighten by strap wrench.

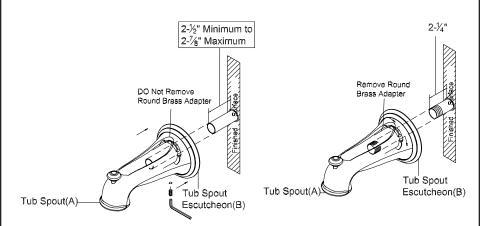


For Slip-Fit Installation

For IPS Installation


- Caution:- To avoid plugging the showerhead spray outlet use sealant tape on the shower arm threads.
- Remove temporary nipple from the shower elbow.
- Use silicon to caulk the back of the shower arm flange(C).
- Slide the shower arm flange(C) over the shower arm(D).
- Apply the thread sealant tape and install the shower arm(D) to the shower elbow.
- Carefully tighten with a clean strap wrench.
- press the shower arm flange(C) against the finished wall.
- Flush out the system.
- Apply thread sealant tape to the shower arm and thread the showerhead(E) to the shower arm(D).

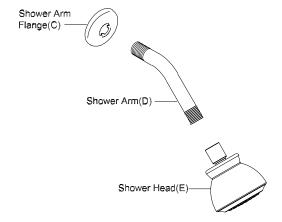

- Remove the black test plug from the valve.
- Install the pressure balance spool (F). Ensure the o-rings on the pressure balance spool does not get cut or nicked. Tighten the pressure balance spool with the help of 21/32" size socket wrench. Do not overtighten.
- Turn the stem counterclockwise to the full open position.
- Allow water to run for some time until the hot water comes out. Check the temperature with thermometer for the hot water.
- If necessary adjust the temperature limit screw (H). Rotate the temperature limit screw (H) counterclockwise to increase the water temperature and clockwise to decrease the water temperature. Adjust to get the desired water temperature.

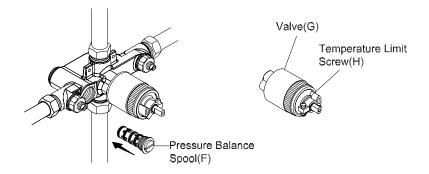

- Remove the Plastic protective dome if installed.
- Slide the face plate(I) on the valve. Ensure the rubber gasket is placed behind the face plate (I) to form water tight seal.
- Secure the face plate(I) with the help of face plate screws (J). Use silicon to caulk around the face plate (I).
- Place the handle (K) on the stem. Secure the handle by tightening the allen screw (L). For 4DM100T,4DM200T & 4DM300t use 3/32" allen wrench and for 4LG100T & 4LG300T use 1/8" allen wrench.

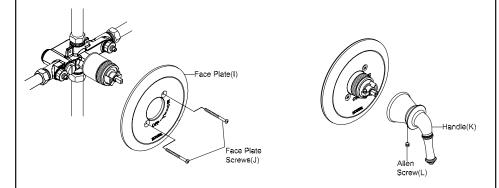

For more care information or trouble shooting inquiries about your Pioneer product, please see the contact information on the back page.

