



OWNER'S MANUAL

P E A R L

Handheld Bidet Sprayer



S-100

Table of Contents

PRODUCT INFORMATION

FeaturesPage 2

Parts List.....Page 3

PRODUCT INSTALLATION

Pre Installation.....Page 4

Installing the Bidet Sprayer.....Page 5

PRODUCT OPERATION

How to use the PEARLPage 7

MAINTENANCE

CleaningPage 7

Short Term Non-UsePage 7

Warranty.....Page 8


CONTACTPage 9

Product Information

FEATURES


- High quality ceramic valve
- Dual Sprayer
- 6" Comfortable handle body
- Easy D.I.Y installation
- Ambient temperature bidet wash
- Adjustable water pressure
- 58" Metal spiral hose
- No electricity or batteries required
- One year warranty

ATTENTION

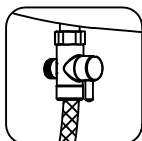


The Pearl S100 is equipped with a dual water pressure system. To ensure the safety of your home, and best performance of your new product, please turn off the water at the T-valve after each use. This function is designed to protect you from possible water damage and is essential for proper use of the product.

PARTS LIST

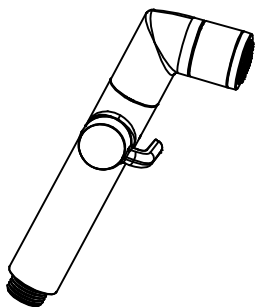


Handheld Bidet

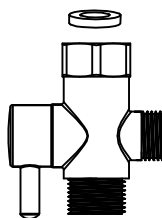


T-Valve Shutoff
(Be sure Flat Washer is
inside end of T-Valve)



Spray Holster

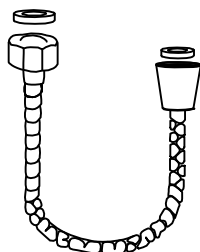

Stainless Steel
Supply Hose

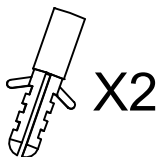

Expanding nut
(use to fix the spray
holster on wall)





Screw
(use to fix the spray
holster on wall)

PRODUCT INSTALLATION

PRE INSTALLATION

CAUTION :Do not over tighten any connections.Over tightening connections can cause damage to the parts and cause ceaking.

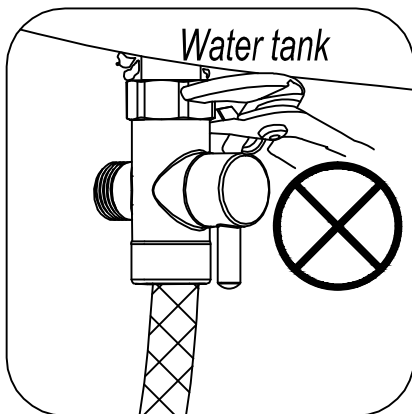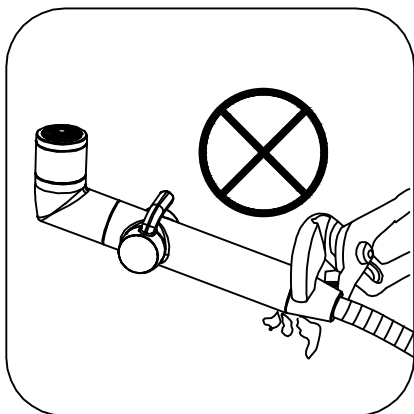


Notice:Observe all local plumbing,electrical and building codes

INSTALLING THE PEARL

When installing this unit,be sure that the water supply valve is fully turned off.Failure to do so can result in flooding and water damage.

- 1.Shut off water supply to toilet. Flush toilet to drain all water inside the tank.

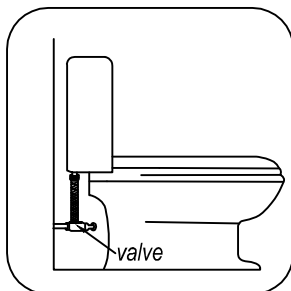


Step 1

PRODUCT INSTALLATION(cont.)


INSTALLING THE PEARL(cont.)

2. Disconnect the supply line from the toilet fill valve. Attach 7/8" T-Valve Shutoff to the threaded fill valve on your toilet. Be sure the 7/8" Flat Washer is in the T-Valve before installing. Position the T-Valve so that the shutoff handle is facing the front of the toilet.

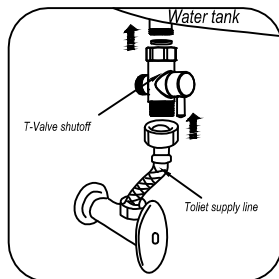


step 2

3. Reattach your existing toilet supply line to the bottom of the T-Valve. Be sure all connections are secure, and no leaking or water is present.

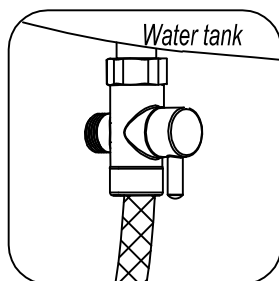

step 3

4. Remove protective plastic covers on threaded caps from ends of 48" Stainless Steel Supply Hose. Attach the hex-head end of the hose to the T-Valve.

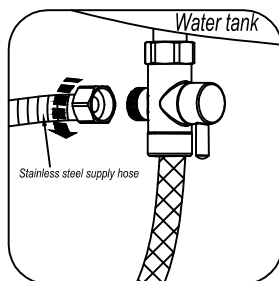


step 4

Notice:

This device is designed for connection to a cold water source with a pressure of 20-80 psi.

INSTALLING THE PEARL(cont)

5. Attach the Handheld Bidet to the other end of the supply hose. As a precaution, slide the level on the handheld bidet sprayer to "off", which is away from the sprayer head.

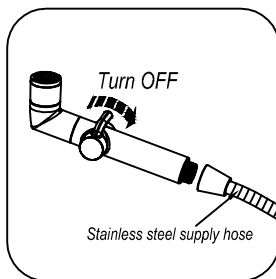


step 5

6. Mounting Spray Holster:

Option1 :

Toilet Mount:


Carefully remove toilet lid and place holder in desired location.

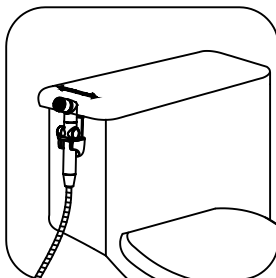

Option2:

Wall Mount: Using a Phillips screwdriver, remove the plastic toilet clip. Find desired location on wall near toilet and use screw (included) to attach the Holster to wall.

• Use expanding nut if attaching to dry wall

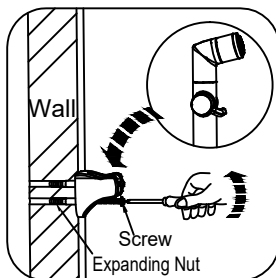

7. Turn on water supply valve on the back wall and check for any leaks. Use common plumbers tape if necessary on any leaking threads, reattach and test again. Carefully remove toilet lid and place holder in desired location.

PRODUCT OPERATION

HOW TO USE THE PEARL

1. Open the T-Valve to allow water to flow to the Handheld Bidet sprayer.
2. Direct the Handheld Bidet to the appropriate area and slide the lever to the “on” position.
3. When finished, slide the lever to the “off” position and close the T-Valve.

NOTE: THE T-VALVE MUST BE SHUT OFF AFTER EACH USE.

Failure to turn off after each use may cause flooding and water damage. BBC Innovation is not responsible for damage that is caused by failure to follow this instruction.

CLEANING THE PEARL

Your Pearl is made with a higher grade fire-retardant ABS resin. Using harsh cleaning chemicals can weaken the material causing it to damage and develop cracks.

Clean the Pearl by wiping the surface area with a damp cloth regularly. Do not use harsh detergents or any cleaning tools with bristles on your bidet. Steam cleaning is the preferred cleaning method for your bidet. For a deep, chemical free clean, consider the BioMist Bidet Cleaner.

SHORT TERM NON-USE

It is highly recommended that the water supply valve is turned off when not in use.

Note: If any leaks occur, check all rubber washers and make sure all connections are tight and secure. If leaking persists, discontinue use of the unit, turn off the water source, and contact support.

E: support@biobidet.com P: 847-458-2334 C: www.biobidet.com

Warranty

Your Bio Bidet is warranted against defects in materials or workmanship for one (1) year from the date of original purchase. Defective parts or a defective product returned to Bio bidet will be repaired with new or comparable rebuilt parts, or exchanged for a refurbished Bio Bidet product as determined by Bio Bidet in their sole discretion.

This limited warranty given by Bio Bidet covers all defects encountered in normal use of this Bio Bidet product, and does not apply in the following cases:

1. Loss or damage of the product due to abuse, misuse, tampering, mishandling, improper packaging by you, alteration, and failure to follow operating instructions.
2. Use of parts or supplies (other than those provided by Bio Bidet dealers) that cause damage to the product.
3. Replacement of discolored or stained parts caused by chlorine, bleach, amonia, and other chemicals, cleaning supplies, oxidation, normal wear and tear.
4. Damage to or malfunction of the unit as a result of improper and negligent installation.
5. Any and all damages to plumbing, walls, floors, ceiling, and personal property resulting from water leaks or breakage. The product must be used at the user's own risk. Therefore, the owner hereby releases the manufacturer and distributor from any and all claims for damages where the above condition exists.

No implied warranty, including any implied warranty of merchantability or fitness or a particular purpose, applies to BBC Innovation products after the applicable period of the express limited warranty or guarantee, except as mentioned above, given by any person or entity with respect to Bio Bidet shall bind Bio Bidet (Some states and provinces do not allow limitations on how long an implied warranty, so the above limitation may not apply to you). BBC Innovation shall not be liable for revenues or profits, inconvenience, expense or substitute equipment or service, or any other special, incidental, or consequential damages caused by the use or misuse of, or inability to use, Bio bidet, regardless of the possibility and foresee-ability of such damages. In no event shall recovery of any kind against BBC Innovation be greater in amount than the purchase price of the product and causing the alleged damage. Without limiting the foregoing, you assume all risk and liability for loss, damage, or injury to you and your property and to others and their property arising out of use or misuse of, or inability to use, the Bio Bidet not caused directly by the negligence or BBC Innovation. This limited warranty shall not extend to anyone other than the original purchase of the Bio Bidet product.

Thank you

Technical Support/Customer Service

Bio Bidet

7900 S IL Route 31 Crystal Lake IL 60014

T: 847-458-2334

Toll Free: 877-339-5214

support@biobidet.com

www.biobidet.com