
Kit Contents

Check the contents of the box with these instructions to verify all parts are present. This will allow you to become familiar with the components of your new handrail.

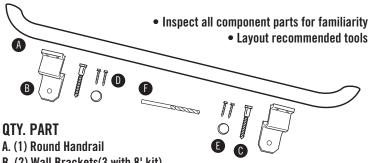


- B. (2) Wall Brackets(3 with 8' kit)
- C. (2) 5/16" x 2 1/2" Stainless Wood Fasteners (3 with 8'kit)
- D. (5) 1" Metal Screws (8 with 8' kit)
- E. (2) Bolt Head Caps (3 with 8' kit)
- F. (1) Drill Bit 5/32"

Required Tools for Handrail Installation

(not included)

- 1- Screw or Impact Gun
- 2- Tape Measure
- 3- Drill Bits: 3/16" wood, 5/32"metal
- 4- Hex Bit Drivers 1/4" & 1/2"
- 5- Pencil
- 6- Masking Tape (or painters tape)
- 7- Safety Glasses

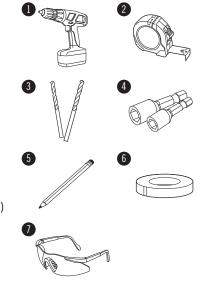


Care and Maintenance

Gently wash with a clean, soft cloth and a mild detergent (e.g. Dawn Liquid Dish Soap) followed by a clean water rinse and dry with a clean towel.

Even though powder coatings are highly resistant, certain solvents can harm them. Avoid contact with all harsh chemicals and salts. If any of these should contact the powder coated surface, immediately wipe the area with a soft, clean cloth, and wash as described above.

THANK YOU FOR YOUR BUSINESS!

For questions or comments contact Madden Manufacturing: 573-365-7085

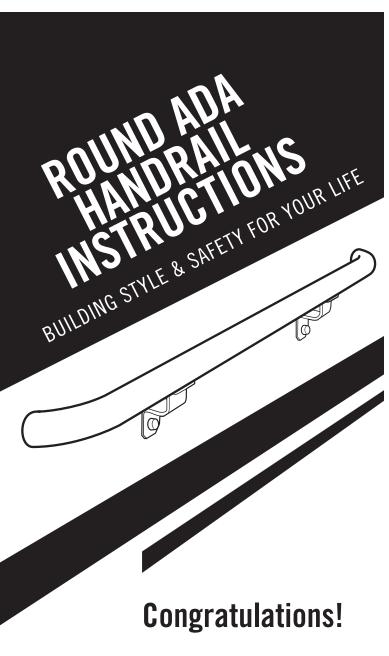

You are on your way to a maintenance free handrail system that is easily assembled and installed.

Please take a moment to read the instructions before you begin assembling your handrail.

Contents

Handrail Wall Installation Kit Contents Required Tools (not included) Care and Maintenance


Inside **Back Cover Back Cover** Back Cover

Handrail Step-by-Step Installation

Note: Check local code requirements prior to installation

This handrail's versatility allows for many different types of interior and exterior installations. The following steps may vary for your application.

You may install your handrail onto most wall surfaces simply by obtaining the appropriate fasteners. If you have any questions on recommended fasteners, please visit our website: www.maddenmetals.com.

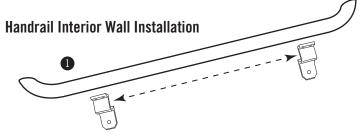

1. On the ground, layout handrail and wall brackets to ensure you will achieve your desired look and symmetry once the handrail is installed.

STUDS

pproximate


ocation of handrail

STUDS


to

- 2. Determine approximate handrail installation location.
- 3. Determine stud or secure mounting location for the wall brackets. For a safe installation, handrail brackets must be anchored securely

to the wood framing behind the



- 5. Starting at the low end of handrail, measure from the nose of your stair tread up the wall 29" or more. Holding the wall bracket in place, make a pencil mark where the wall bracket fastener is to be installed into the stud (in the brackets large fastener hole).
- 6. When using the provided wood lag screw, drill a 3/16" pilot hole into the wall and CENTER OF STUD for the wall bracket fastener. Important: Ensure your pilot hole is hitting a solid mounting surface - i.e. the center of a stud.
- 7. Loosely secure the wall bracket to the wall with the appropriate included fastener.

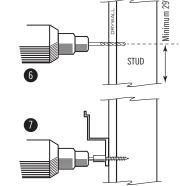


8. Now repeat steps 5-7 for the upper wall bracket.


- 9. Set the handrail on the wall brackets and mark pilot hole locations for the lower bracket to attach to the handrail. Tip: Use the drill (with bit spinning) to make your pilot hole mark
- 10. Place handrail on a gentle surface (ie. carpet) and drill 5/32" pilot holes for the lower bracket only.
- 11. Loosely fasten handrail to the lower wall bracket with provided fasteners and proceed to mark pilot hole locations for upper bracket.
- 12. Complete final assembly by attaching wall brackets to the handrail and then tighten brackets to the wall.
- 13. Apply bolt caps over bolt heads. We highly recommend using a small amount of Super Glue or caulk inside the bolt cap to firmly secure the bolt cap to the bolt head.





Installation complete!


Note: Additional fasteners may be piloted and fastened into the wall brackets for additional support.

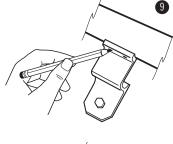



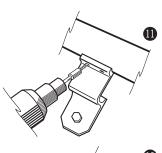

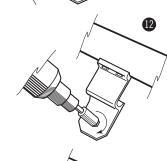

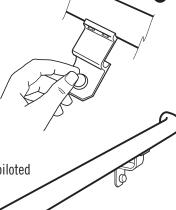

Support Line: 573.365.7085 7:00am to 5:00pm CST Mon-Fri

Support Line: 573.365.7085 7:00am to 5:00pm CST Mon-Fri