




305-V72-WWW Vanity Assembly Instructions


IMPORTANT:

This product may be wall-mounted, or you may use the metal legs (included) for standard installation. If you wish to hang the cabinet on the wall, please read all pages very carefully. if you wish the cabinet sit on the floor, please read page 1 only.

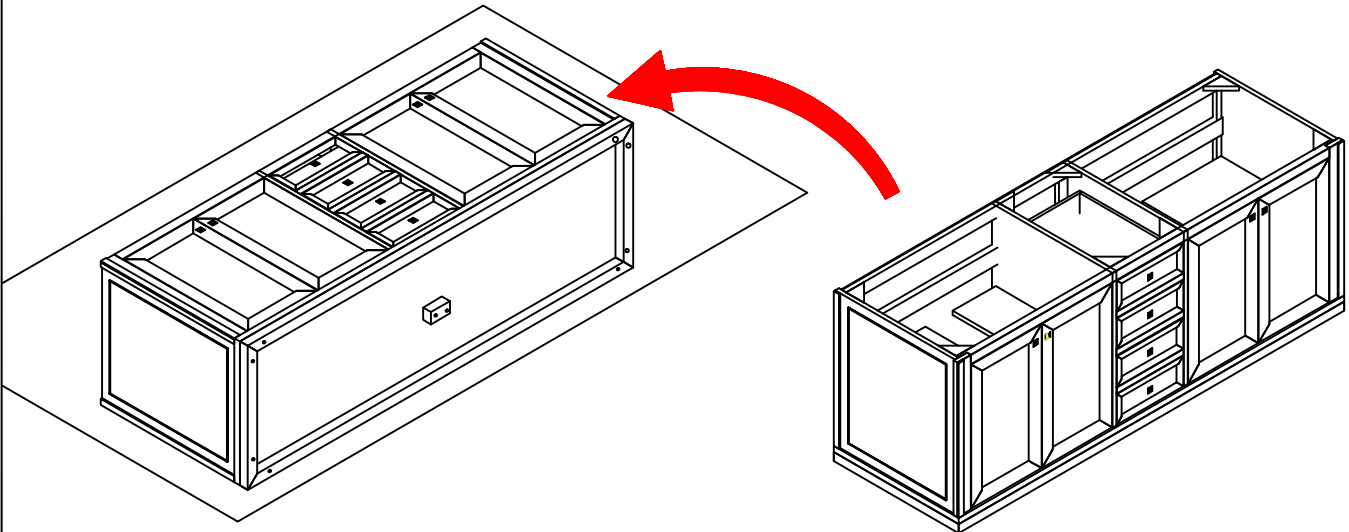

Step 1:

To attach the legs, place the cabinet lay down on a blanket or similar soft material.

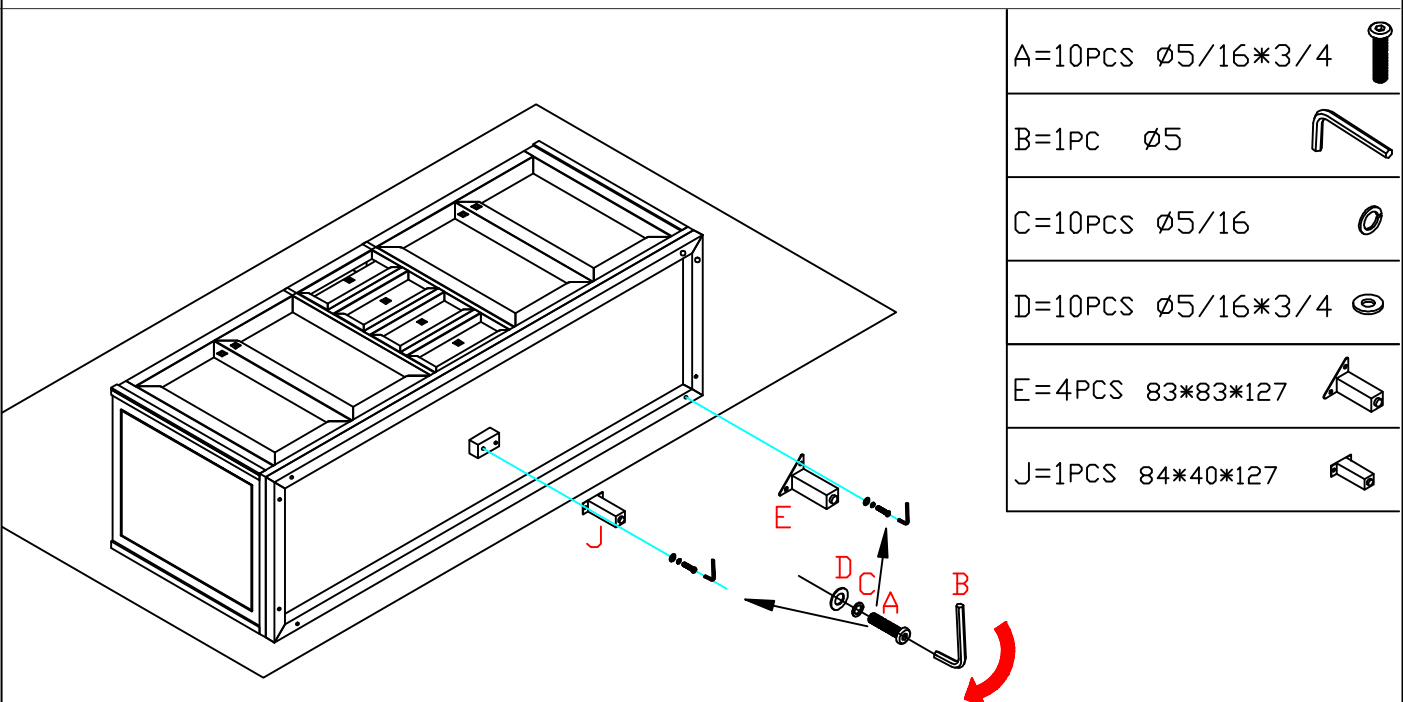

Step 2:



Attach the Legs to the Cabinet, insert the bolt (A) through the Spring Washer (C), Flat Washer (D) through into the pre-drilled holes at the bottom of Cabinet, then tighten the bolts using by Allen Wrench.




305-V72-WWW Vanity Assembly Instructions

Tools required

Screw driver drill with 5/16" bit Pencil Measuring tape Screw driver Leveler Hammer

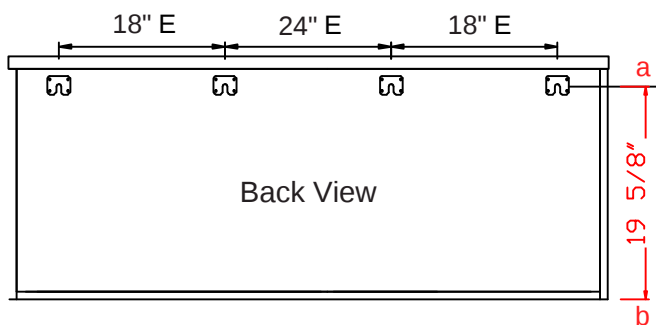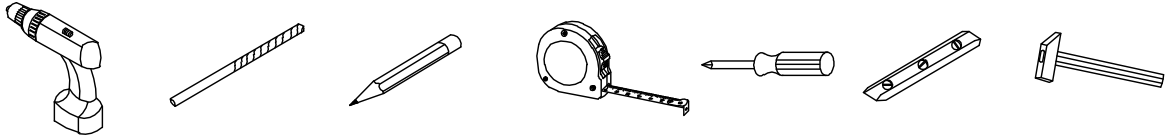

Back View

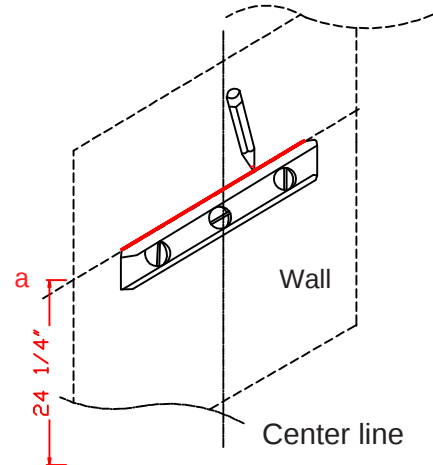

Center line

Step 1:

Metal plates has been pre-installed to the back of cabinet, Measure the distance between the bottom of the cabinet and point a.

Step 2:

Draw a horizontal line from the point a by using a leveler.
(suggested H24 1/4" from floor to "a" line)


F=16PCS $\varnothing 8 \times 38$



G=4PCS 58*48*7



H=16PCS $\varnothing 4 \times 40$

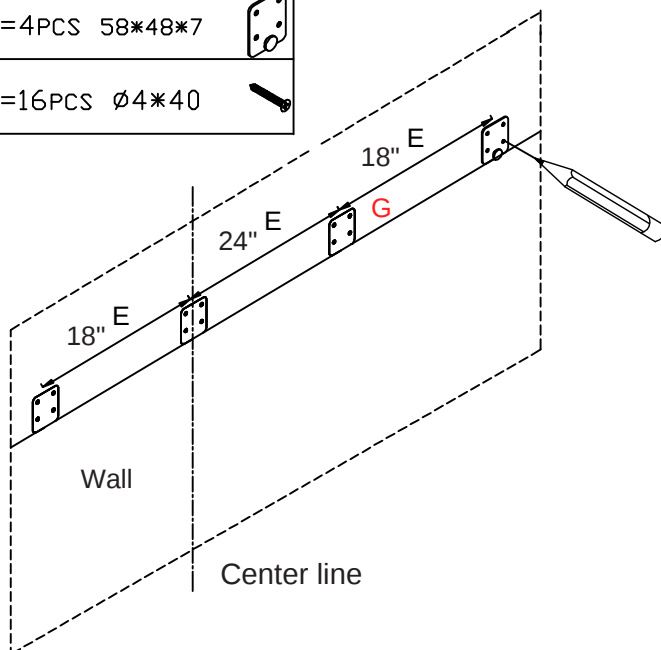


Wall

Center line

Step 3:

Draw the points according to the hole of the mounting bracket

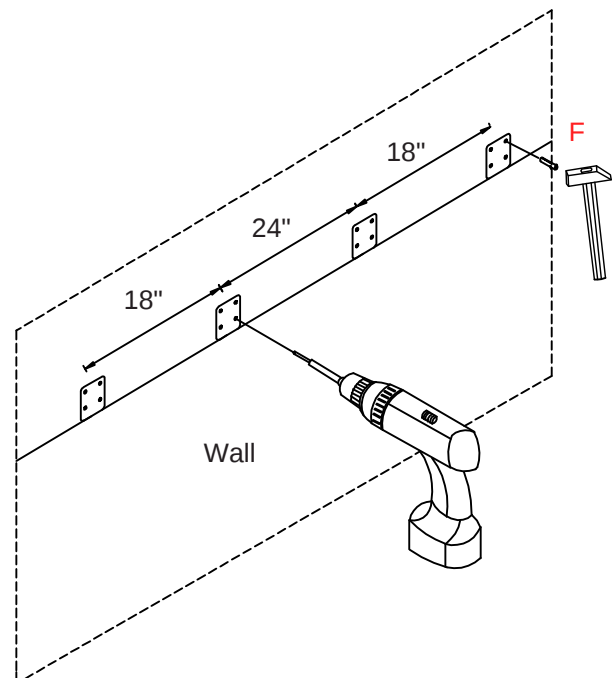


Wall

Step 4:

Drill the holes' depth no less than 40mm, and insert "F" to the holes by using hammer.



305-V72-WWW Vanity Assembly Instructions

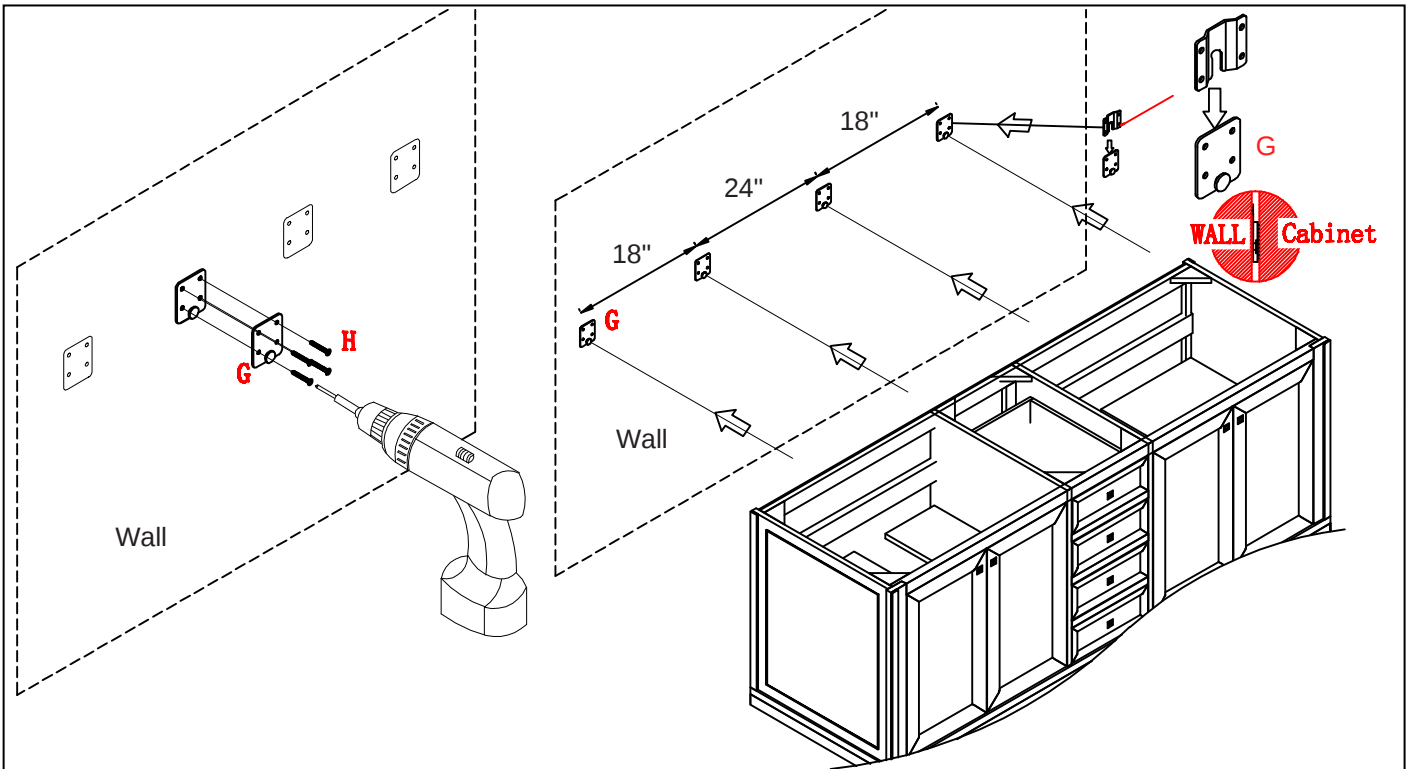

Step 5: Attach the mounting bracket to the wall.

Step 6: Hang the cabinet on the mounting bracket.

Note: Always use two or more people when hanging cabinet.

